
MuxLab Pro Digital Network Controller (MNC)
(Model: 500811)



Operation Manual

Copyright Notice:

Copyright © 2014 MuxLab Inc. All rights reserved.

Printed in Canada. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without prior written permission of the author.

Trademarks:

MuxLab is a registered trademark of MuxLab Inc.

Table of Contents

1. Overview	4
1.1. Description	4
1.2. Features	5
2. Technical Specifications	6
3. Installation and Use	7
3.1. Part List	7
3.2. Product Overview	8
3.3. Installation Procedure	9
3.4. Ethernet Web Interface – Device Management	19
Extender Model 500752	21
Extender Model 500753	39
Extender Model 500754	58
Extender Model 500755	81
Extender Model 500756	100
Extender Model 500757	119
Extender Model 500758	135
Extender Model 500759	152
Extender Model 500770	173
Extender Model 500771	189
Extender Model 500773	204
Extender Model 500777	218
Extender Model 500755-AMP	233
Extender Model 500762	252
Extender Model 500763	277
Controller Model 500816-IP	294
4. Troubleshooting	303
5. Appendix – IP Command API	304
6. Product Warranty Policy	305

1. Overview

1.1. Description

The MuxLab Pro Digital Network Controller is a Linux-based PC that allows users to control hub-installed MuxLab products.

When installed on a local area network (LAN), the MuxLab Pro Digital Network Controller can scan the LAN for MuxLab products and allows the user to auto-discover, configure and control these products through an Ethernet Web interface.

An Application Program Interface (API) is available supporting a number of third party partner control applications running on smartphones and tables.

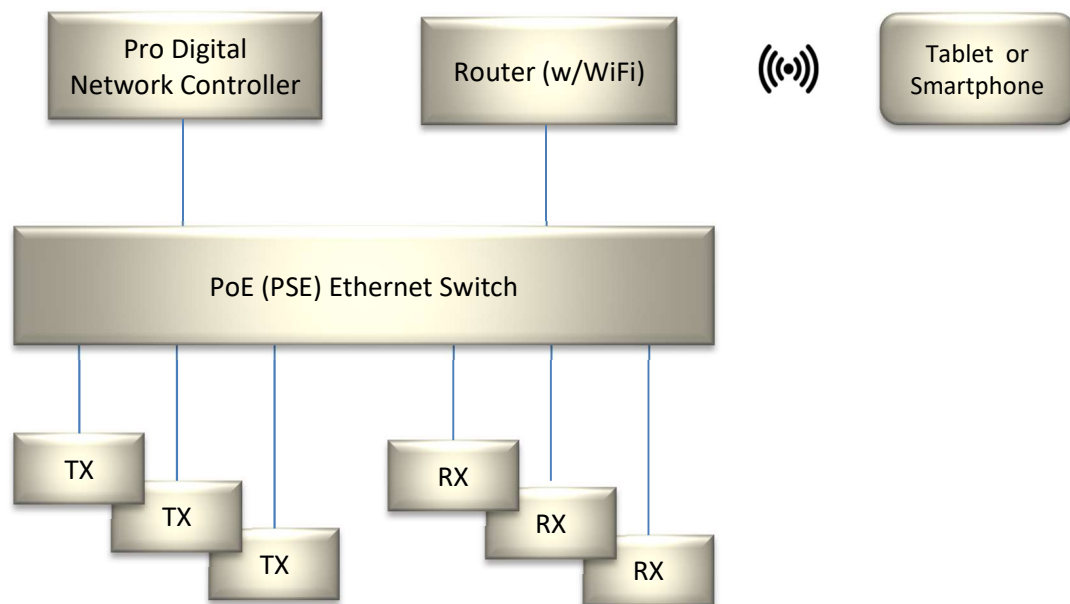


Figure 1: System Overview

Applications include but are not limited to commercial and residential AV systems, classroom projector systems, digital signage, video wall systems, boardroom systems, multi-room systems, classroom training, retail systems, collaborative PC systems, and medical information systems.

1.2. Features



Figure 1: Pro Digital Network Controller

Front Panel

- Power LED
- Power button

Back Panel

- VGA video out port
- HDMI video out port
- LAN port (RJ-45 jack)
- Audio in (3.5 mm)
- Audio out (3.5 mm)
- Micro SD memory slot
- K lock
- Power connector

Side Panel

- Three (3) USB 2.0 ports

2. Technical Specifications

MuxLab ProDigital Network Controller	
CPU	Intel Z3735F
Memory	2GB DDR3
BIOS	AMI BIOS
VGA	Resolution up to 1920 x 1200
Keyboard and Mouse	USB keyboard and mouse (sold separately)
Peripherals	<ul style="list-style-type: none"> • USB 2.0 ports (3x) • micro SD slot (1x) • Network interface (1x) • VGA Video out port (1x) • HDMI Video out port (1x) • Audio in via 3.5mm port (1x) • Audio out via 3.5mm port (1x)
Operating System	Ubuntu 14.04 LTS
Operating Temperature	5 °C to 50 °C
Dimensions	4.52 x 4.52 x 1.4 inch (115 x 115 x 35 mm)
Weight	1.1lbs (0.5kg)
Accessories Included	External Power Adaptor
Regulatory	FCC, CE, RoHS, WEEE
Order Information	500811 Pro Digital Network Controller

Table 1: Technical Specifications

3. Installation and Use

3.1. Part List

The MuxLab Pro Digital Network Controller comes with the following parts:

- Base unit (1x)
- External Power Adapter (1x)



Please verify that both parts are present before proceeding.

Figure 2: Base Unit



Figure 3: External Power Adaptor

3.2. Product Overview

The external connections and connection indicators of the MuxLab Pro Digital Network Controller are detailed in Figure 4 and Figure 5. Please familiarize yourself with them before installing the unit.

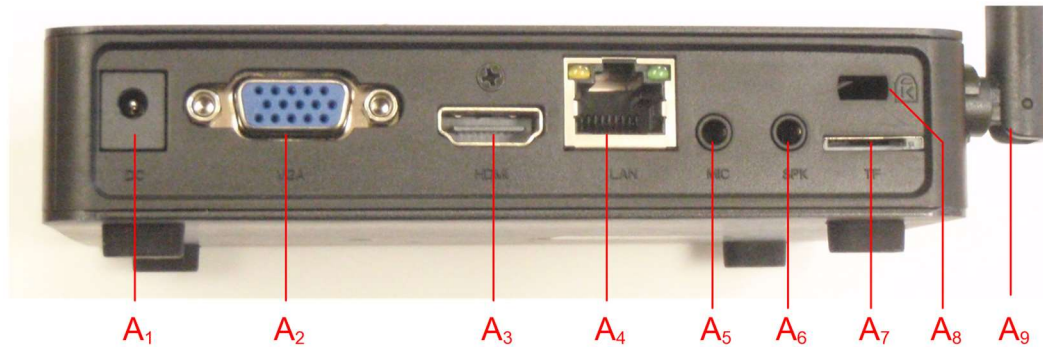


Figure 4: Rear Panel

- A₁ = DC Power
- A₂ = VGA video out
- A₃ = HDMI video out
- A₄ = RJ45 Ethernet
- A₅ = Audio in
- A₆ = Audio out
- A₇ = Micro SD Memory Slot
- A₈ = K Lock
- A₉ = Wifi antenna (not supported in current software release)

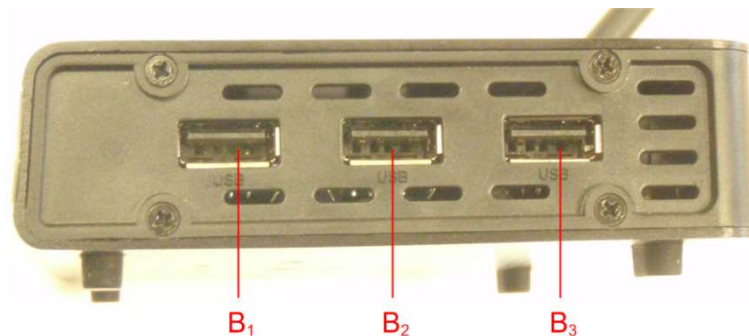


Figure 5: Side Panel

- B₁ = USB 2.0 #1
- B₂ = USB 2.0 #2
- B₃ = USB 2.0 #3

3.3. Installation Procedure

Note that the examples below assume that the Ethernet Switch used does not support WiFi, and a Router with WiFi capability is required in order to communicate with smartphones and tablets for control purposes. Note that the WiFi antenna on the MuxLab Controller is not supported in the current software release.

Setting the Ethernet Switch & Router to the same Subnet as MuxLab Devices:

The MuxLab Pro Digital Network Controller comes with a default static IP address of 192.168.168.50 (with DHCP disabled). The MuxLab AV over IP Transmitters and Receivers are set to support DHCP by default. When no DHCP server is available the AV over IP Transmitters and Receivers fallback to a static IP address of:

- 192.168.168.54 (for the 500816-IP)
- 192.168.168.55 (for the 500752, 500753, 500754, 500755, 500755-AMP and 500756 Transmitters)
- 192.168.168.56 (for the 500752, 500753, 500754, 500755, 500755-AMP and 500756 Receivers)
- 192.168.168.58 (for the 500758, 500759, 500770, 500771, 500773 and 500777) Transmitters)
- 192.168.168.59 (for the 500758, 500759, 500770 and 500771 Receivers)
- 192.168.168.62 (for both the 500762 and 500763 Transmitters)
- 192.168.168.63 (for the 500762 Receiver)

These MuxLab products (MNC, and the AV over IP Transmitters & Receivers) work in conjunction with a PoE (PSE) Ethernet Switch (MuxLab recommends the Cisco SG300 Series) and a Router of your choice with WiFi capability to be able to communicate with a smartphone or tablet. The use of a smartphone or tablet to manage the MuxLab devices with third party software applications is optional but is the most common method of control and generally preferred, however MuxLab devices may also be managed via the Pro Digital Network Controller web interface.

In order for the DHCP server within the Ethernet Switch to support the MuxLab device subnet, set the static IP of the Ethernet Switch to **192.168.168.1** (recommended setting). Refer to the Ethernet Switch manual for instructions on how to accomplish this. MuxLab also has a guide specific to the Cisco SG300 Series, see document SE-000819-A (Configuring Network Setting of the Ethernet Switch & MuxLab AV over IP Devices), which can be found on MuxLab's website under any of the AV over IP product pages (as a download under the Operation Manual sub-category).

The Router with WiFi capability, must also be placed on the same subnet as the MuxLab devices and it should be set with a Static IP address, we recommend using a Static IP address of **192.168.168.2**. Refer to your Router documentation on how to accomplish this.

Setting MuxLab Devices, Ethernet Switch and Router to an Existing Subnet:

If the MuxLab AV over IP devices are being installed in an existing environment that has a working subnet already configured that cannot be easily changed, then the subnet of the MuxLab devices, the Ethernet Switch (if a new Ethernet Switch is required), and the Router with Wifi (if a new Router is required) must be changed in

order to match the existing subnet. For this case we will use **192.168.2.x** as an example subnet already in place and which must be supported. Note that this is only an example and may not necessarily reflect your actual subnet address.

If the Ethernet Switch does not already reside in the example subnet of 192.168.2.x, then set the static IP of the Ethernet Switch to a free static IP address (for the sake of this example we will use an IP address of **192.168.2.1**). Refer to the Ethernet Switch manual for instructions on how to accomplish this. MuxLab also has a guide specific to the Cisco SG300 Series, see document SE-000819-A (Configuring Network Setting of the Ethernet Switch & MuxLab AV over IP Devices), which can be found on MuxLab's website under any of the AV over IP product pages (as a download under the Operation Manual sub-category).

If the Router with WiFi does not already reside in the example subnet of 192.168.2.x, then set the static IP of the Router to a free static IP address (for the sake of this example we will use an IP address of **192.168.2.2**). Refer to your Router documentation on how to accomplish this.

The MuxLab AV over IP Transmitters and Receivers are set by default to support DHCP, and will automatically be set to the subnet specified by the DHCP Server. These units need only be physically connected into the network as described in their respective Installation Guides and by using the 500811 Pro Digital Network Controller to discover them. But before the MNC can be used, the new MNC subnet must also be set.

To change the subnet of the MNC requires a two-step process:

Process 1: Configuring the IP address of the MNC

Process 2: Physically installing the MNC in the network

Note:

- An example subnet address of 192.168.2.x of the existing network on which the MNC will be installed is assumed for this example process.
- The MNC comes with a static IP address of **192.168.168.50** and with DHCP disabled. This process explains how to change it to the example subnet of 192.168.2.x.

Process 1: Configuring the IP address of the MNC

Refer to Figure 4 and Figure 5.

1. On the back panel of the MNC:
 - A. Plug the supplied power adaptor into the DC power jack. Ensure that the other end of the power adaptor is plugged into a power socket.
 - B. Ensure that the power switch on the front of the unit is in the ON position (front button • pressed in).
 - C. Connect one end of an Ethernet cable to the Ethernet port. Ensure that the other end of the Ethernet cable is connected to a computer.

Refer to Figure 6.

2. On the computer to which the MNC is connected, open up an Internet browser (Explorer, Chrome, Firefox, etc.) and type the following address in the address bar near the top of the screen:

<http://192.168.168.50/mnc/>

NOTE: **mnc** must be written in lower case


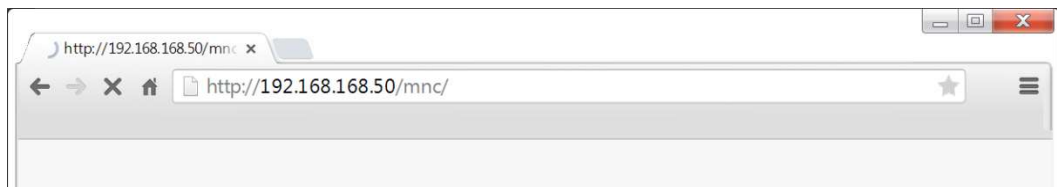


Figure 6: Internet Browser Entry


3. Press **Enter** on the keyboard. If the browser connects to the MNC, go to Step 7.
4. If the browser fails to connect to the MNC, a failure message will appear. Perform the following steps (Steps 4 through 6) in order to set the computer to the same subnet as the MNC, to be able to then change the MNC subnet (from Step 7 onward) to match the subnet of the existing installation (refer to Figure 7):
 - A. Move the mouse to the bottom of the screen and click on the **Start** button at the lower left.
 - B. Click into the *Search programs and files* field just above the **Start** button and type `cmd`. Press **Enter** on the keyboard.
 - C. A DOS window will appear. Type `ipconfig` and press **Enter** on the keyboard.



Step 4A

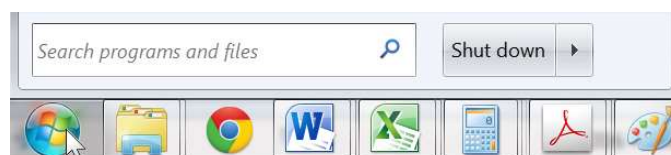


Step 4B

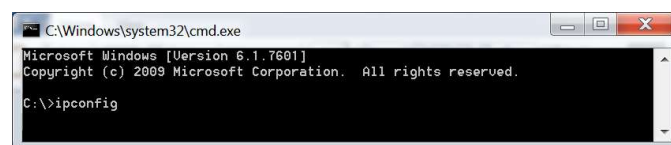

Step 4C

Figure 7: Determining Computer IP Address

The following screen will appear (Figure 8).

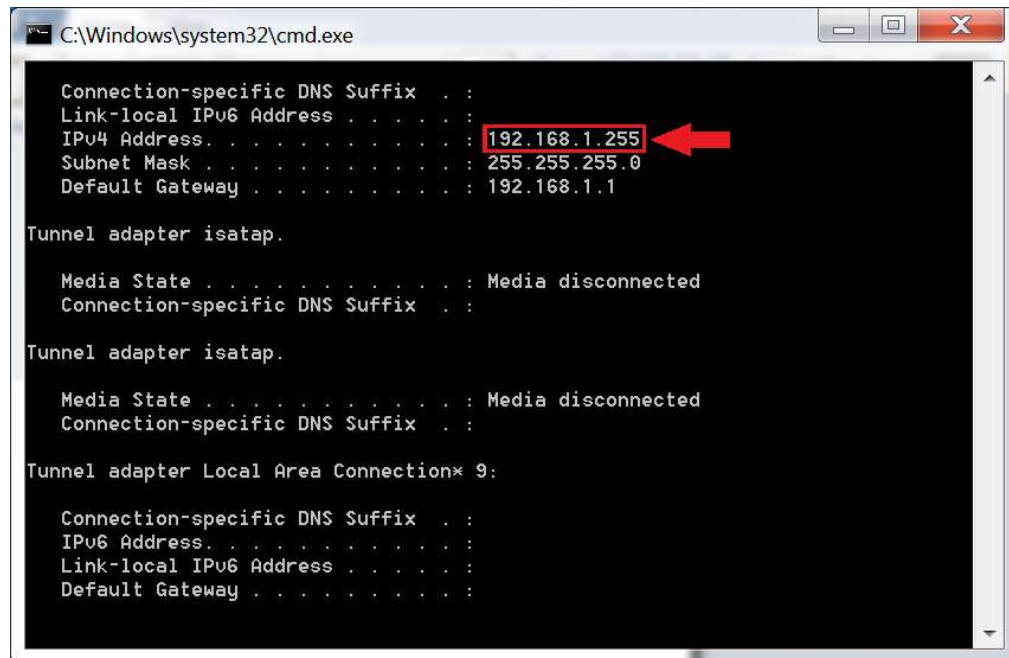

```
C:\Windows\system32\cmd.exe
Connection-specific DNS Suffix . :
Link-local IPv6 Address . . . . . :
IPv4 Address. . . . . : 192.168.1.255
Subnet Mask . . . . . : 255.255.255.0
Default Gateway . . . . . : 192.168.1.1

Tunnel adapter isatap.

Media State . . . . . : Media disconnected
Connection-specific DNS Suffix . :

Tunnel adapter isatap.

Media State . . . . . : Media disconnected
Connection-specific DNS Suffix . :

Tunnel adapter Local Area Connection* 9:

Connection-specific DNS Suffix . :
IPv6 Address. . . . . :
Link-local IPv6 Address . . . . . :
Default Gateway . . . . . :
```

Figure 8: Computer IP Address

5. If the IPv4 Address (shown in the red box of Figure 8) does NOT begin with the numbers 192.168.168.x, then perform the following steps (refer to **Figure 9** through **Figure 12**):
 - A. Type `exit` and press **Enter** on the keyboard.
 - B. Move the mouse to the bottom of the screen and click on the **Start** button at the lower left.
 - C. Click on **Control Panel**
 - D. Click on **Network and Internet**
 - E. Click on **Network and Sharing Center**
 - F. Click on **Local Area Connection**
 - G. Click on **Properties**
 - H. Click on **Internet Protocol Version 4 (TCP/IPv4)**. It will turn blue.
 - I. Click on **Properties**
 - J. Click the **Use the following IP address** radio button.
 - K. In the **IP address** field, type the following:


192.168.168.x

Where *x* can be any number from 2 to 254 except for 50 (since 50 is the MNC address). The example in Figure 12 has the PC set to a Static IP address of **192.168.168.12**


L. In the **Subnet mask** field, type the following:

255.255.255.0

M. Click on **OK**.

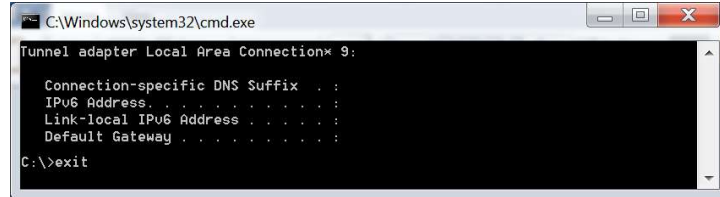


Step 5A

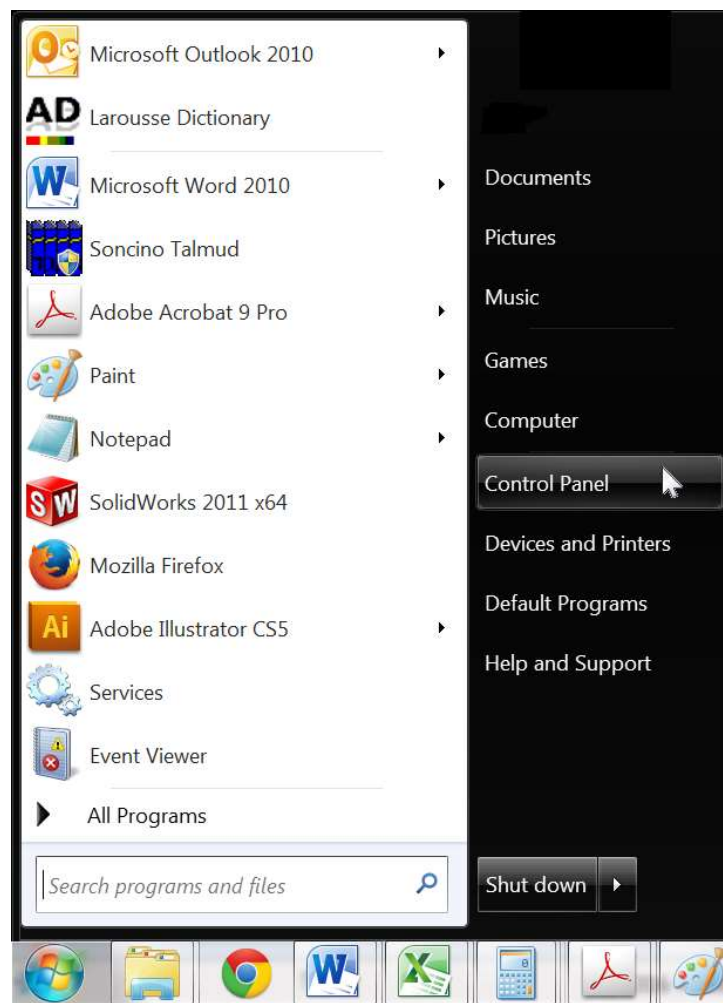


Steps 5B-5C


Figure 9

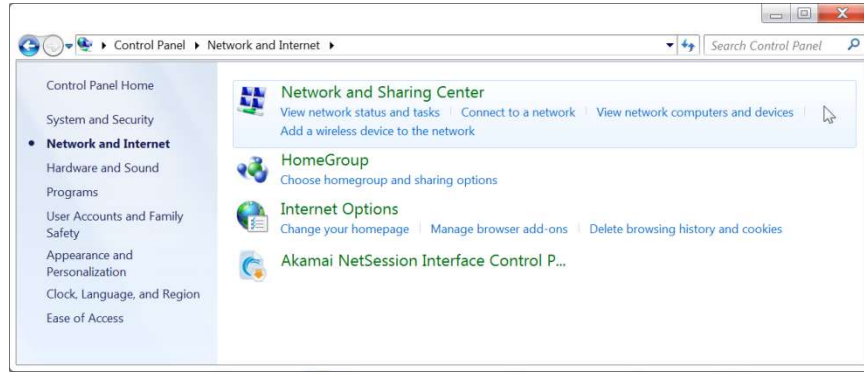

Step 5D

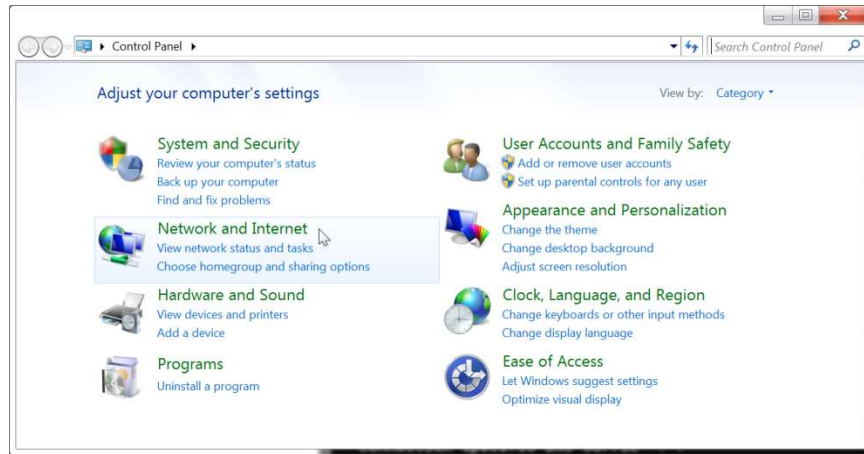


Step 5E

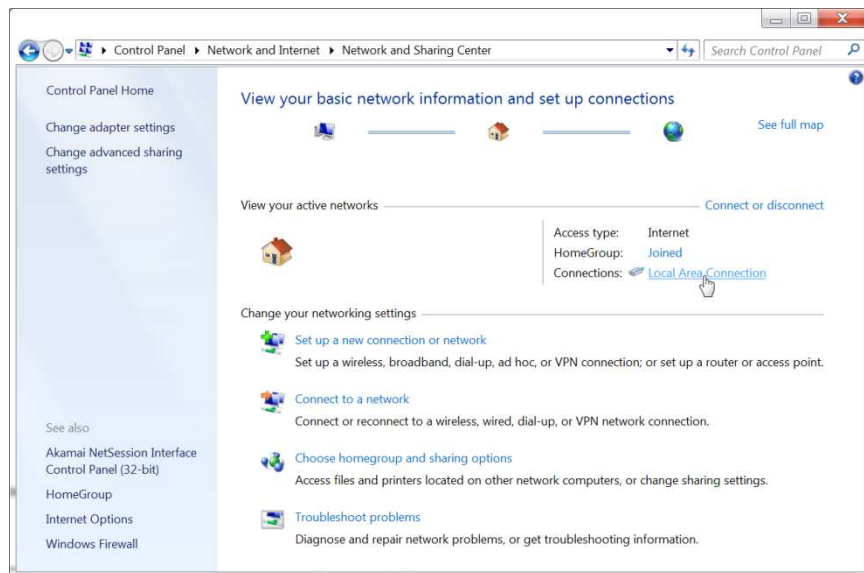


Step 5F

Figure 10

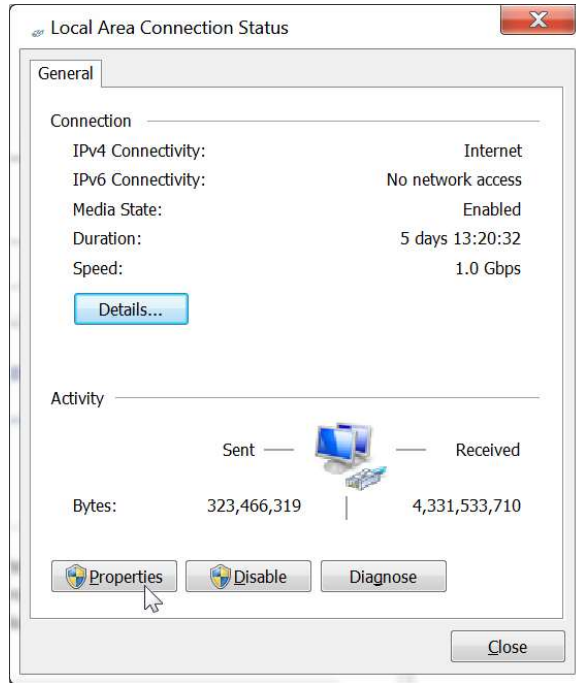


Step 5G

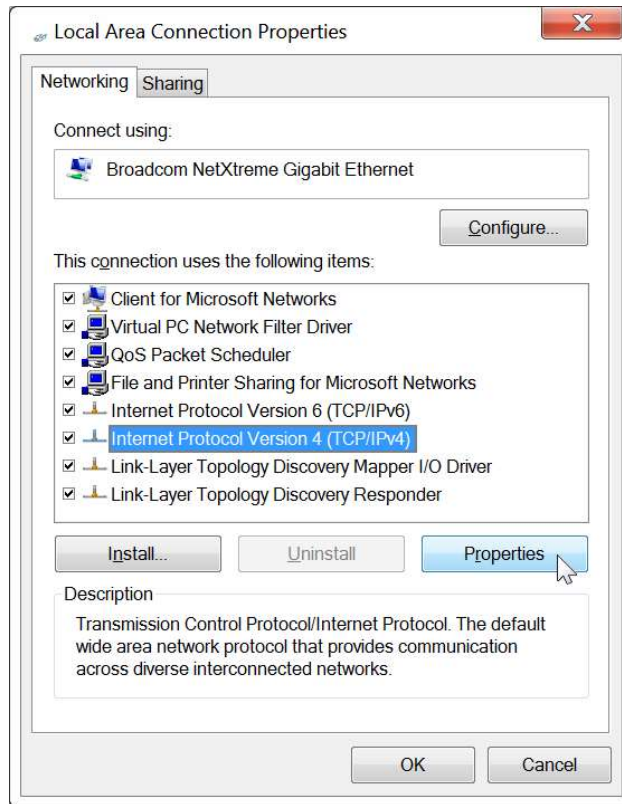

Steps 5H-5I

Figure 11

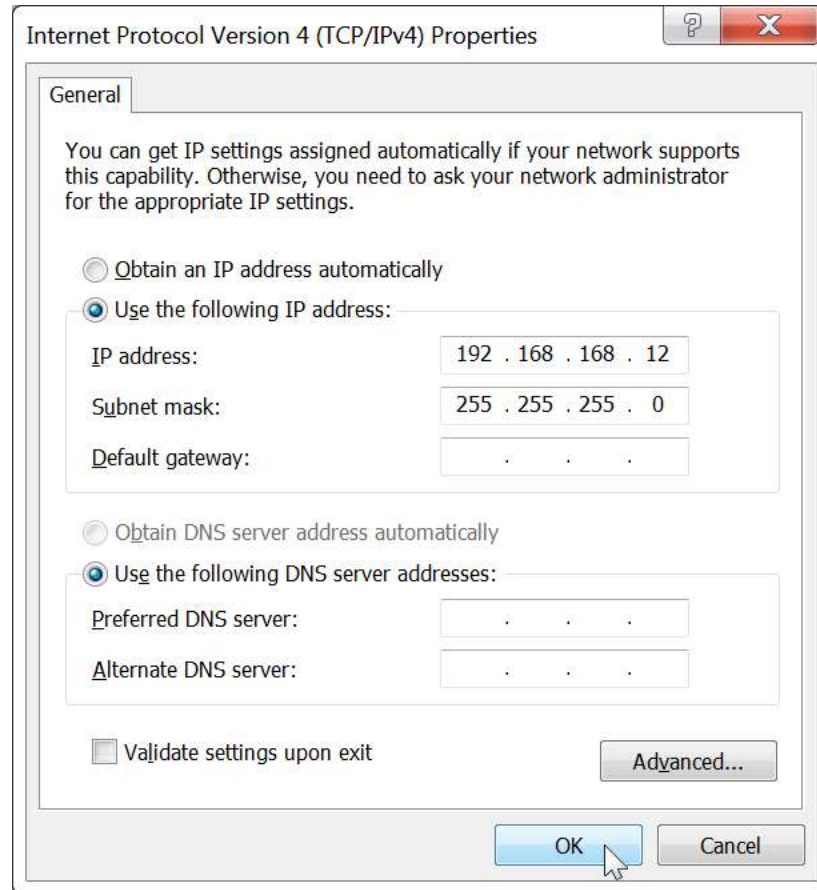

Steps 5J-5K-5L-5M

Figure 12

The computer is now ready to communicate with the MNC.

Refer to Figure 13.

6. Open up an Internet browser (Explorer, Chrome, Firefox, etc.) and type the following address in the address bar near the top of the screen:

<http://192.168.168.50/mnc/>

NOTE: **mnc** must be written in lower case

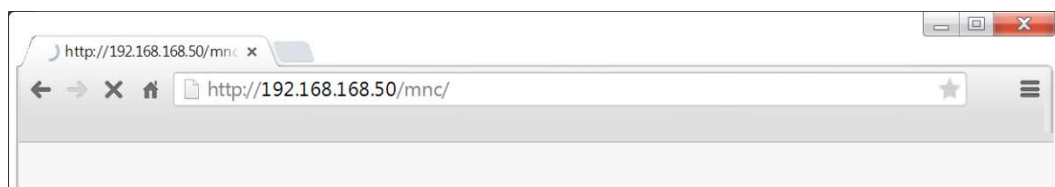


Figure 13: Internet Browser Entry

Refer to Figure 14.

7. The MuxLab Pro Digital Network Controller Web interface **Login Screen** will appear.

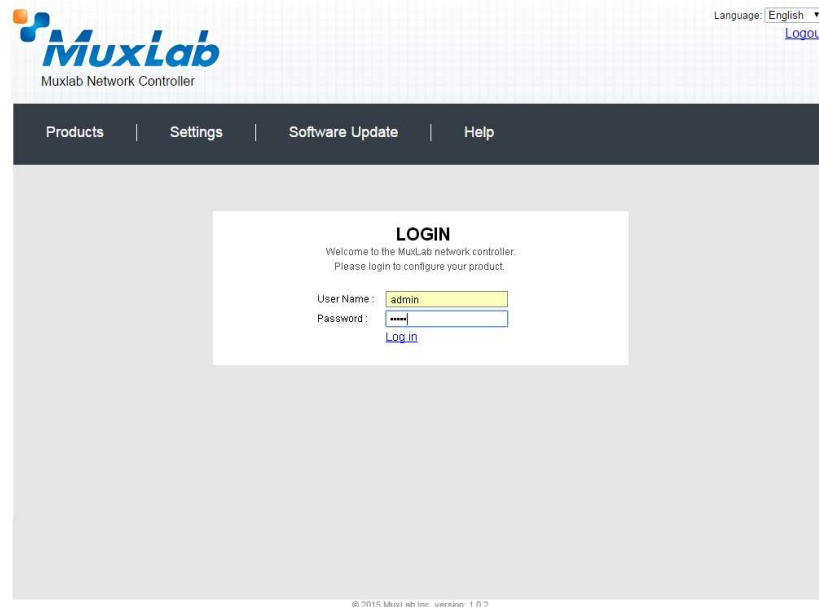


Figure 14 Login Screen

8. In the **User Name** field, type admin. Use lower case.
9. In the **Password** field, type admin. Use lower case.
10. Click **Log in**.

Refer to Figure 15

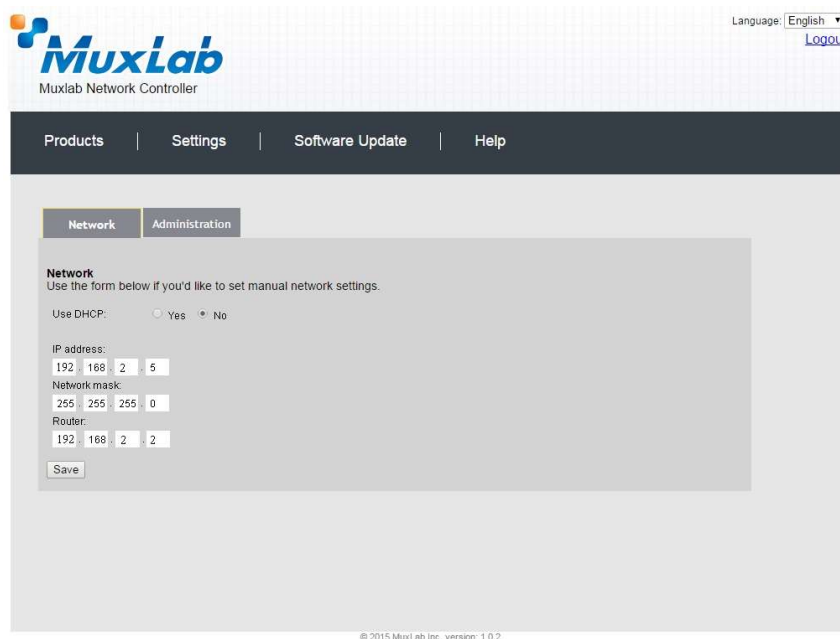


Figure 15 Network Settings Screen

11. Click the **Settings** tab. The Network Settings screen will appear.
12. Next to **Use DHCP**, ensure that the **No** radio button is selected.
13. In the **IP address** field, type the first 3 entries of the IP address of the network subnet on which the MNC will be installed, which in our example is 192.168.2.x.
For example, type the following in the MNC **IP address** field:
192.168.2.x
Where *x* in our example can be any number from 3 to 254, and since “1” was used above for the Ethernet Switch and “2” was used for the Router, then for this example we will select “5” for a Static IP address of **192.168.2.5**, see Figure 15. **Error! Reference source not found.** Just make sure the Static IP address for the MNC does conflict with the Static IP address of the Ethernet Switch and the Router or any other Static IP address already pre-assigned in the given network.
14. In the **Network mask** field, type **255.255.255.0**
15. In the **Router** field, type the IP address of the network Router (which in our example is **192.168.2.2**).
16. Click on **Save**. The MNC will reboot (Figure 16).

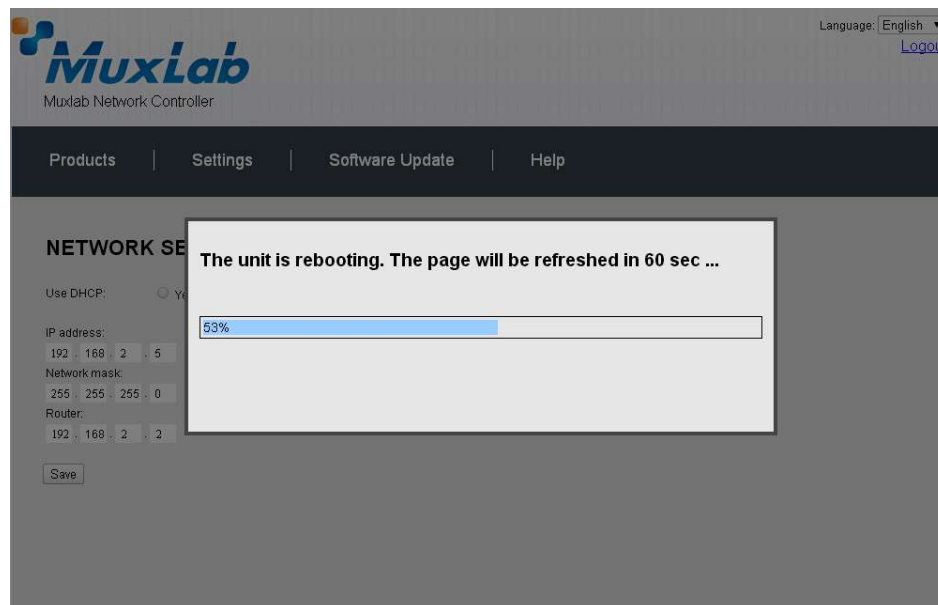


Figure 16 MNC Reboot Screen

The MNC is now configured to work with your network router.

Process 2: Physically installing the MNC to the network

1. Disconnect the Ethernet cable from the computer and connect it to either the Router or the Ethernet Switch. Ensure that the other end is still connected to the MNC. Also make sure that the Router is connected to the Ethernet Switch.

3.4. Ethernet Web Interface – Device Management

The Ethernet Web interface allows the user to manage the MNC and the AV over IP product family of extenders remotely from a Windows based computer. Make sure the computer is set to a Static IP address in the same subnet, which in our example is **192.168.2.x**. Follow steps 4, 5 & 6 in section 3.3 on how to accomplish this, but set using the subnet 192.168.2.x

Ensure that the computer is connected by an Ethernet cable to the network router on which the MNC is physically installed. Open up an Internet browser (Explorer, Chrome, Firefox, etc.) and type in the MNC IP address in the address bar near the top of the screen, such as, which in our example is 192.168.2.5:

192.168.2.5/mnc/

NOTE: **192.168.2.x** represents the first three IP address entries of the network subnet on which the MNC is physically installed.

The MuxLab Network Controller Web interface **Login Screen** will appear (**Figure 17**).

The screenshot shows the MuxLab Network Controller web interface. At the top left is the MuxLab logo and the text 'Muxlab Network Controller'. In the top right corner, there is a 'Language: English' dropdown menu and a 'Logout' link. Below this is a dark navigation bar with the following menu items: 'Products', 'Settings', 'Software Update', and 'Help'. The main content area is a white box titled 'LOGIN'. Inside this box, it says 'Welcome to the MuxLab network controller. Please login to configure your product.' Below this, there are two input fields: 'User Name : admin' and 'Password : *****'. A 'Log in' button is located below the password field. At the bottom of the page, there is a small copyright notice: '© 2015 MuxLab Inc. version: 1.0.2'.

Figure 17 Login Screen

In the **User Name** field, type admin. Use lower case.

In the **Password** field, type admin. Use lower case.

Click **Log in**.

You are now ready to manage the MuxLab Pro Digital Network Controller.

Extender Models

The MuxLab Pro Digital Network Controller is designed to work with various MuxLab Extender models (refer to Table 2).

All Extender models are controlled using MuxLab's Network Controller software, although the setup for each differs from model to model.

NOTE: On the following pages, the controls for each Extender model are presented separately. Please locate your Extender model in Table 2 and refer to the pages that describe its operation. There is no need to read the remainder of this manual in its entirety, each Extender section is complete and self-contained.

Model	Type	Resolution	Features	Page
500752	HDMI	1080p/60	IR + PoE	21
500753	HDMI	1080p/60	RS232+IR+PoE	39
500754	HDMI (Video Wall Capable)	1080p/60	RS232+IR+PoE	58
500755	Audio	2 Ch Audio	RS232+IR+PoE	81
500756	SDI	3G-SDI	RS232+IR+PoE	100
500757	HDMI	1080p/30	RS232+IR+PoE	119
500758	HDMI	4K/30	Audio+RS232+IR+PoE	135
500759	HDMI (Video Wall Capable)	4K/30	Audio+RS232+IR+PoE	152
500770	HDMI	1080p60	KVM+Audio+PoE	173
500771	DVI	1080p60	KVM+Audio+PoE	189
500773	HDMI/VGA Wall Plate	1920x1200 60Hz (VGA) & 4K/60	Audio+PoE	204
500777	HDMI/VGA Wall Plate	1920x1200 60Hz (VGA) & 4K/60	Audio+USB+PoE	218
500755- AMP	Audio	2 Ch Audio w/AMP	RS232+IR+PoE(TX)	233
500762	HDMI	1080p/60 & 4K/60	USB+RS232+IR+PoE	252
500763 TX	HDMI	4K/30	USB+RS232+IR+PoE	277
500816-IP	Controller	n/a	Controllers 500811	294

Table 2: Extender Models

Extender Model 500752

Products Screen

Once the user has logged in, the **Products** screen will appear (Figure 18).

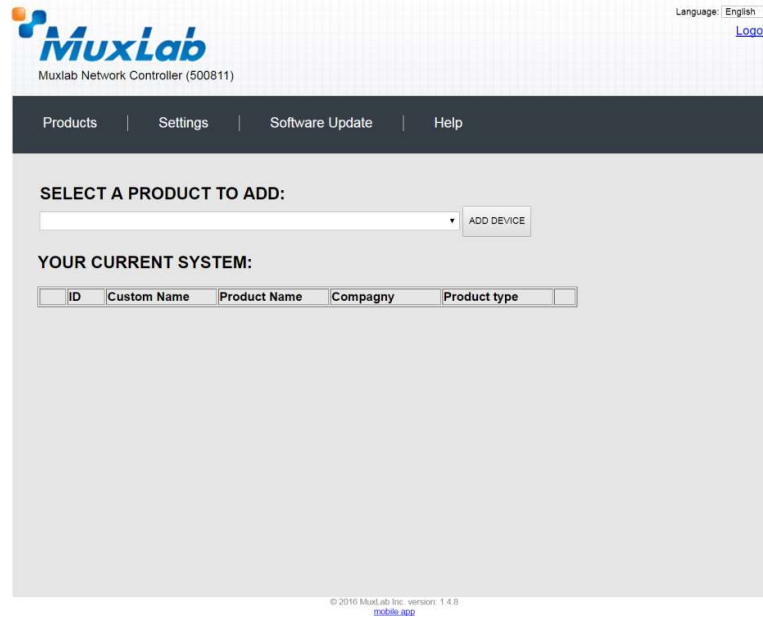


Figure 18: Products Screen – Initial View

In the **SELECT A PRODUCT TO ADD:** drop down box, select **Hdmi Over IP (500752/753/754/755/756)** and then click on **ADD DEVICE** (Figure 19).

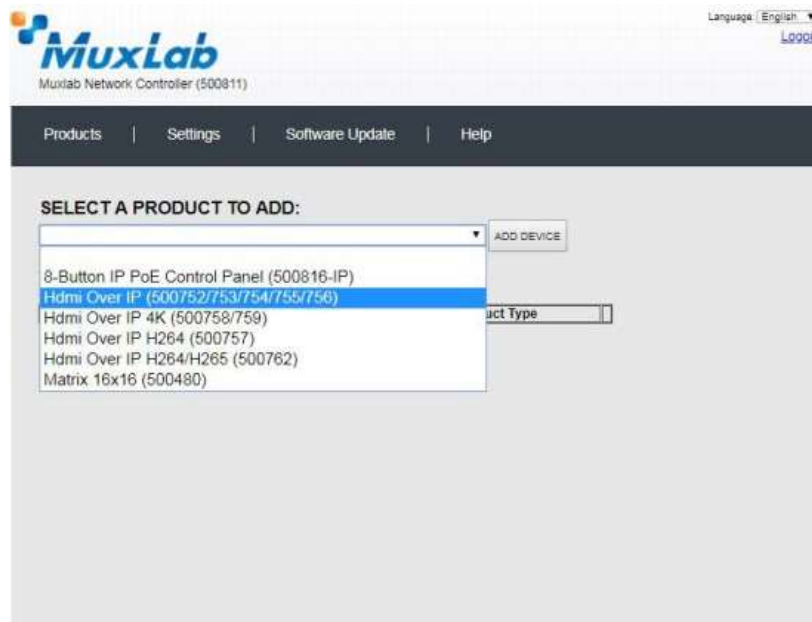


Figure 19: Products Screen – Selecting a Product

A dialog box appears asking the user to provide a custom name for the selected product (Figure 20). The user then types a name in the **Custom Name:** field and clicks on **OK**. Note that if the user decides to click on **CANCEL**, the previous screen appears (Figure 19), without a product being added.

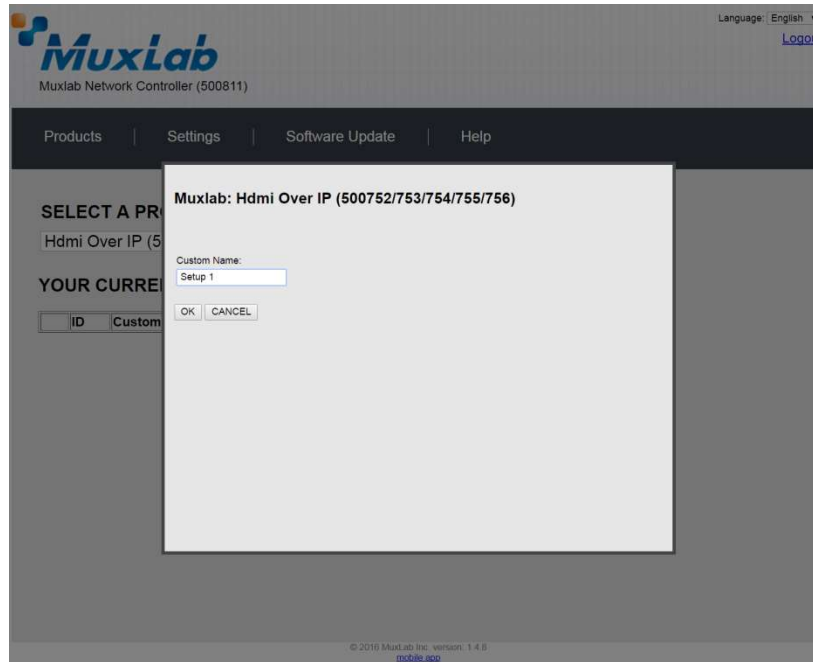


Figure 20: Products Screen – Naming a Product

The custom name has been added to **YOUR CURRENT SYSTEM** (Figure 21).

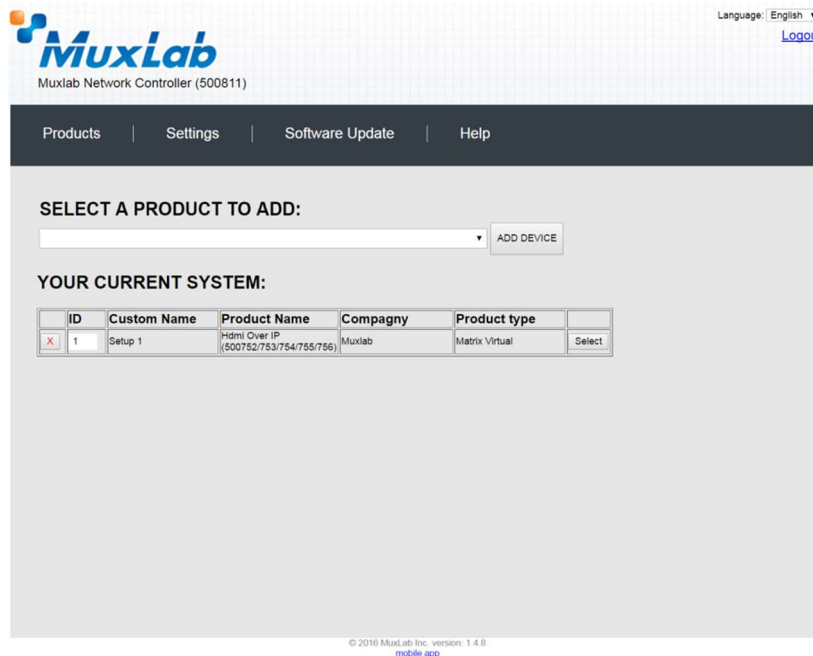


Figure 21: Products Screen – Your Current System Selection

The user can change the ID of each row by modifying the **ID** field. The user can also delete the entire row completely by clicking the **X** next to it.

To configure a given product, the user clicks on **Select**, which brings up a multi-tabbed screen (Figure 22).

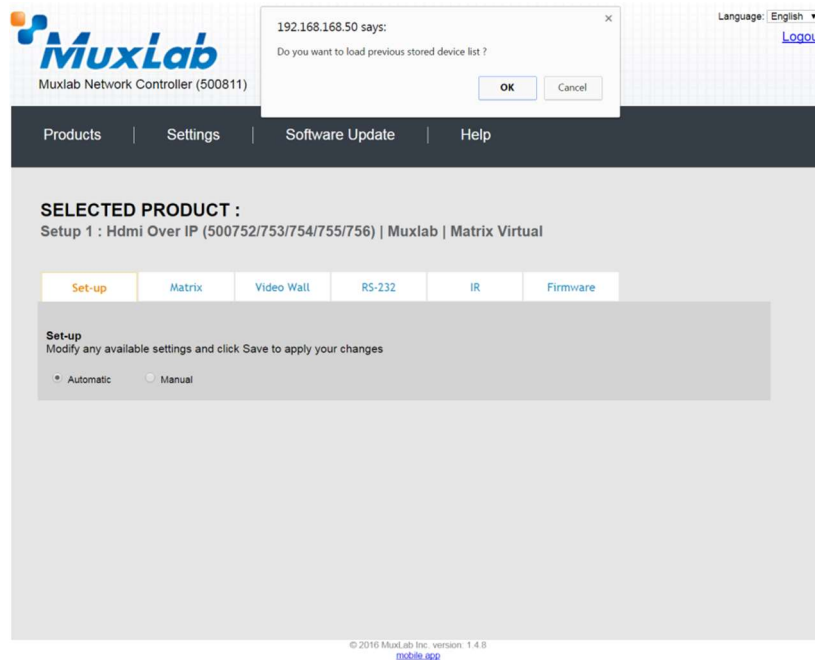


Figure 22: Products Screen – Load Dialog

By default, a dialog appears asking the user to load a previously saved device list (in case such a list has already been stored). This dialog will appear even if no device list has been previously saved.

Six tabs appear within the **Products** screen:

1. Set-up
2. Matrix
3. Video Wall
4. RS-232
5. IR
6. Firmware

1. Products Screen - Set-up Tab

The **Set-up** tab offers the user two options for the type of set-up allowed: **Automatic** or **Manual**.

Automatic means that the software will scan the system for every dip-switch enabled device. The software will then override its manual dip-switch address settings and place these units under software address control. (Automatic is recommended).

Manual means that the software will allow the manual dip-switch address settings of any found device to remain active.

After selecting **Automatic** or **Manual**, click on **Launch discovery** (Figure 23).

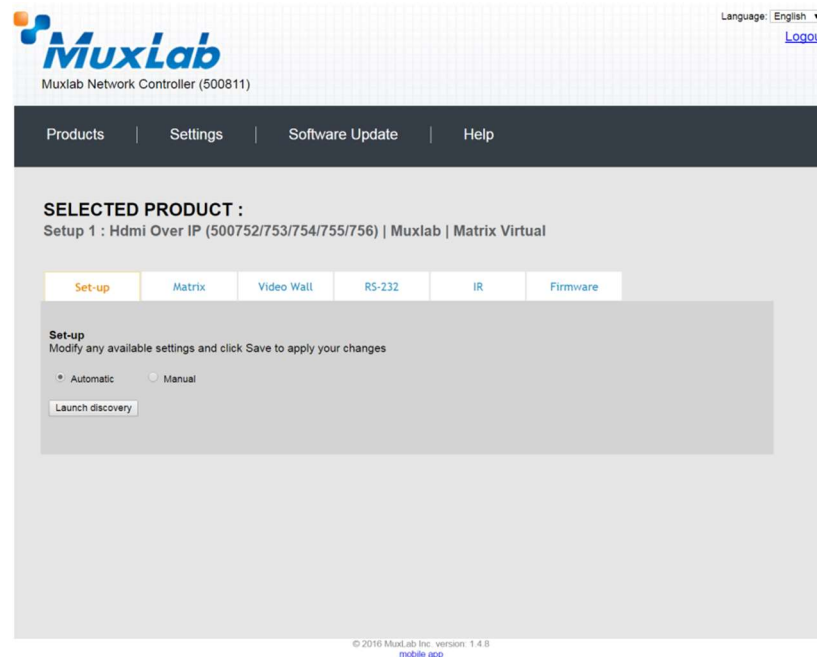


Figure 23: Products Screen – Set-up Tab

The system will scan the network for all source side devices (500752 transmitters) and display side devices (500752 receivers), and will display the scan results in tabular form (Figure 24).

Each 500752 transmitter and receiver can be assigned an arbitrary descriptive name, normally reflecting the end device that it is terminated to. To change the name of any Display (RX) or Source (TX) device, click the **Name** field to edit its contents. Several **Name** fields can be edited before saving changes, as shown in Figure 25 (orange highlighted fields).

Language: English [Logout](#)

MuxLab
Muxlab Network Controller (500811)

Products | Settings | Software Update | Help

SELECTED PRODUCT :
Setup 1 : Hdmi Over IP (500752/753/754/755/756) | Muxlab | Matrix Virtual

Set-up Matrix Video Wall RS-232 IR Firmware

Set-up
Modify any available settings and click Save to apply your changes

Automatic Manual

[Launch discovery](#)

Display (4 RX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP		
0	RX-00-0B-78-00-7D-E2	00-0B-78-00-7D-E2	192.168.168.64	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-00-0B-78-00-7E-59	00-0B-78-00-7E-59	192.168.168.60	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-00-0B-78-00-7E-5E	00-0B-78-00-7E-5E	192.168.168.65	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-00-0B-78-00-7E-63	00-0B-78-00-7E-63	192.168.168.63	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

Source (2 TX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP		
0	DVD-1	00-0B-78-00-7D-D9	192.168.168.62	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	DVD-2	00-0B-78-00-7D-0B	192.168.168.66	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

[Save](#)

© 2016 MuxLab Inc. version: 1.4.8 [mobile app](#)

Figure 24: Products Screen – Set-up Tab

Language: English [Logout](#)

MuxLab
Muxlab Network Controller (500811)

Products | Settings | Software Update | Help

SELECTED PRODUCT :
Setup 1 : Hdmi Over IP (500752/753/754/755/756) | Muxlab | Matrix Virtual

Set-up Matrix Video Wall RS-232 IR Firmware

Set-up
Modify any available settings and click Save to apply your changes

Automatic Manual

[Launch discovery](#)

Display (4 RX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP		
0	RX-1	00-0B-78-00-7D-E2	192.168.168.64	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-2	00-0B-78-00-7E-59	192.168.168.60	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-3	00-0B-78-00-7E-5E	192.168.168.65	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-4	00-0B-78-00-7E-63	192.168.168.63	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

Source (2 TX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP		
0	DVD-1	00-0B-78-00-7D-D9	192.168.168.62	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	DVD-2	00-0B-78-00-7D-0B	192.168.168.66	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

[Save](#)

© 2016 MuxLab Inc. version: 1.4.8 [mobile app](#)

Figure 25: Name Editing

To save all name changes, click on **Save**. A green UPDATED tag will appear next to newly changed names (Figure 26).

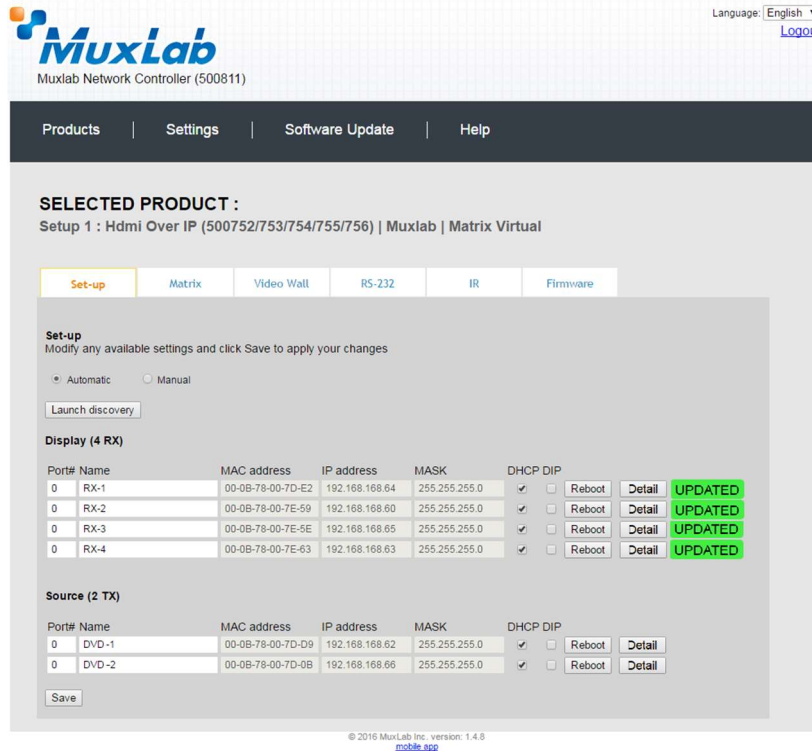


Figure 26: Saving Name Changes

To view and modify component parameters, click on the **Detail** button next to the given component. A dialog appears (Figure 27).

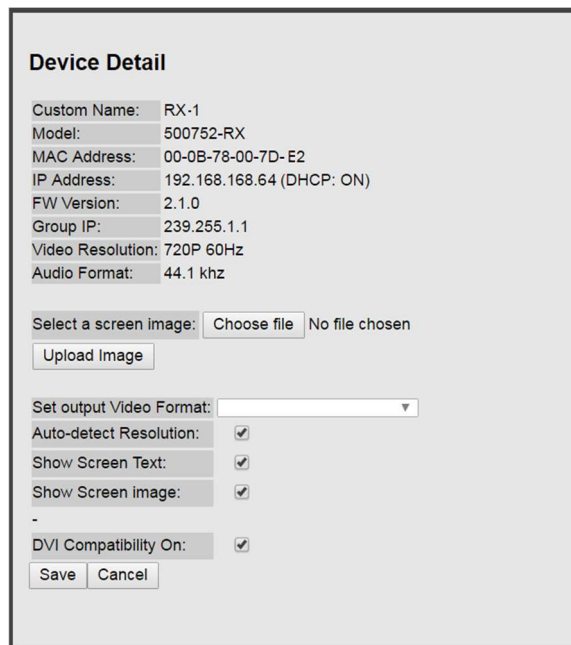


Figure 27: Device Detail Dialog

2. Products Screen - Matrix Tab

The **Matrix** tab of the **Products** screen allows the user to connect any Display to any Source. The user also has the option of using **Presets** to save connection schemes (“Presets”), as well as to edit and delete existing presets (Figure 28).

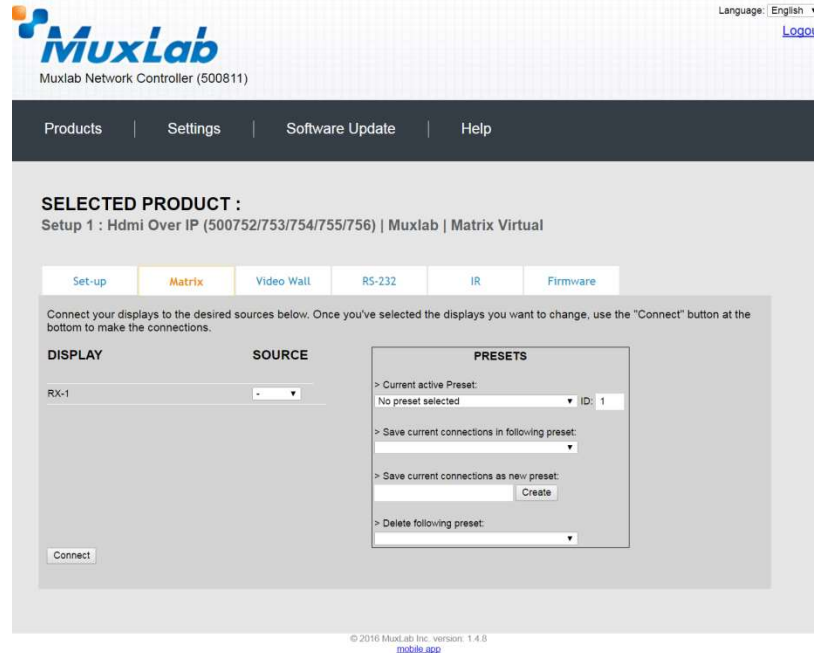


Figure 28: Matrix Tab

To connect a display to a source, the user first clicks on the drop-down list next to the given display (for example “RX-1”) and selects which source to connect it to (Figure 29).

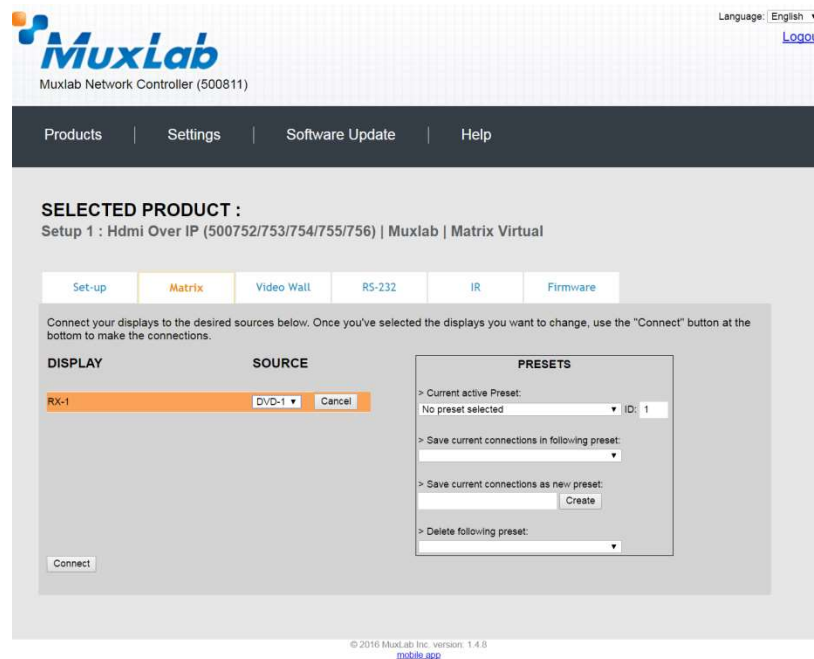


Figure 29: Change Connection

Once the selection is made (the user can change any or all connections between displays and sources), the user clicks on **Connect** to finalize the change. A green **SUCCESS** tag will appear next to the new or changed connection (Figure 30).

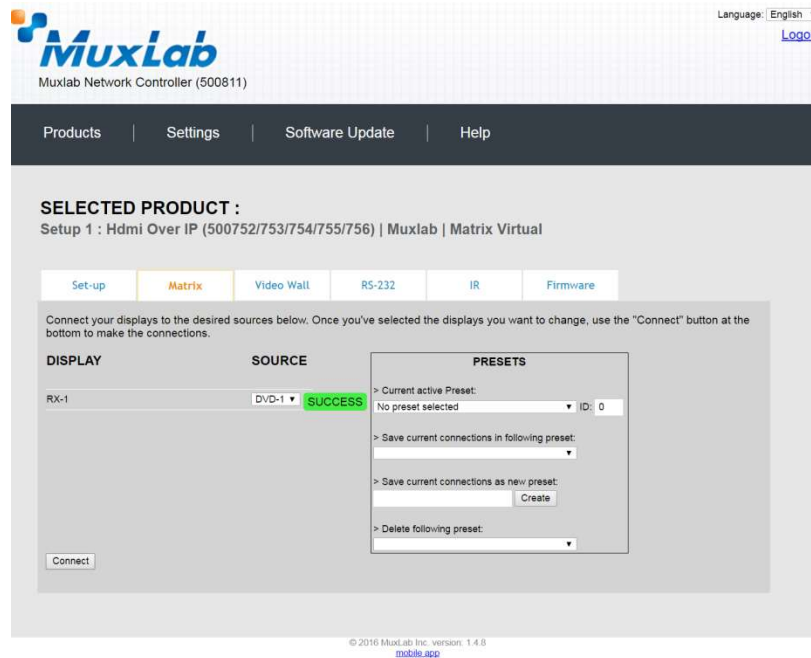


Figure 30: Change Successful

To create a new preset, the user clicks the **> Save current connections as new preset** field (Figure 31) and types a name. This assigned preset name will be linked to the existing connection scheme being shown within the **Matrix** tab.

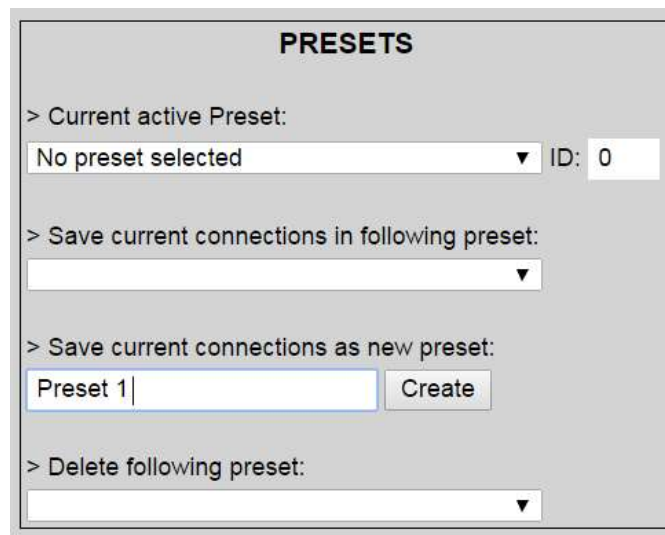


Figure 31: Create New Preset

To save this preset, the user clicks on **Create**. A green SUCCESS tag will appear next to the > **Save current connections as new preset** field and the newly created preset becomes the **Current active Preset** (Figure 32).

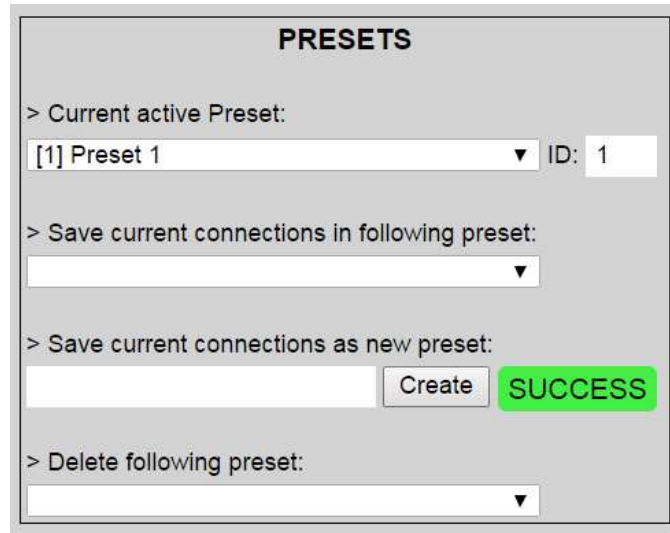


Figure 32: Confirmation of New Preset

To delete a preset, the user clicks the > **Delete following preset** drop-down box and selects a preset name from the list shown (Figure 33).

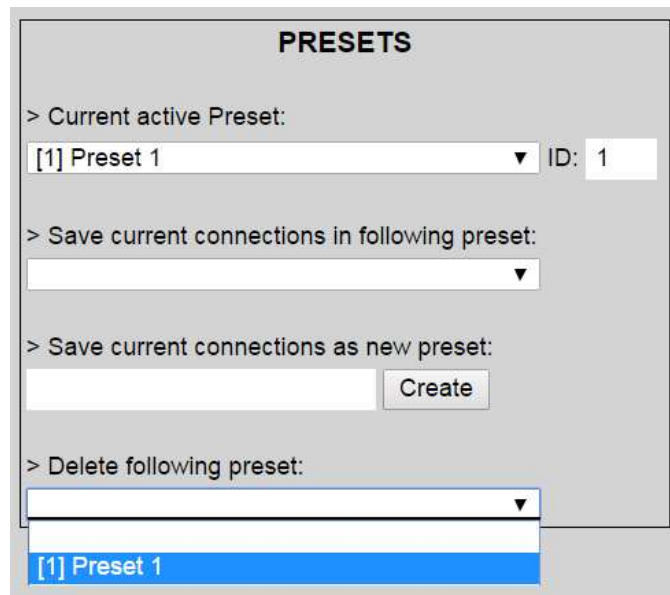


Figure 33: Delete Preset

Once selected, a dialog will appear asking the user to confirm the deletion request (Figure 34).

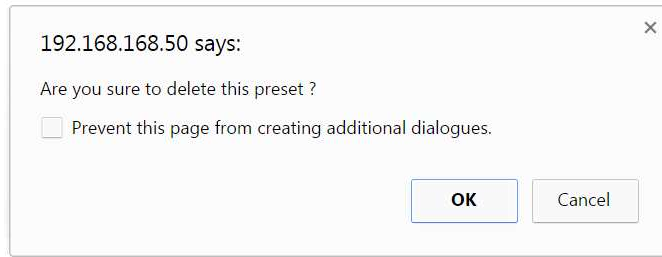


Figure 34: Confirmation of Deleted Preset

Click on **OK**. The preset will be deleted and a green SUCCESS tag will appear next to the **> Delete following preset** field (Figure 35).


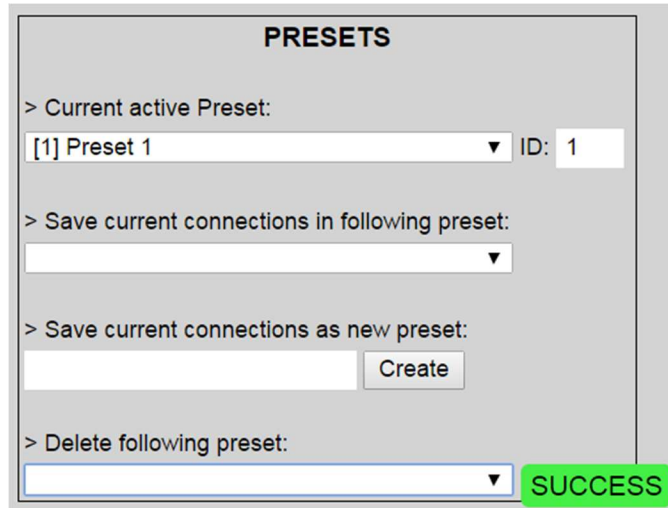


Figure 35: Confirmation of Deleted Preset

To save the current matrix configuration under an existing **Preset** name, click on > **Save current connection in following preset** drop-down box and selects a preset name (Figure 36).

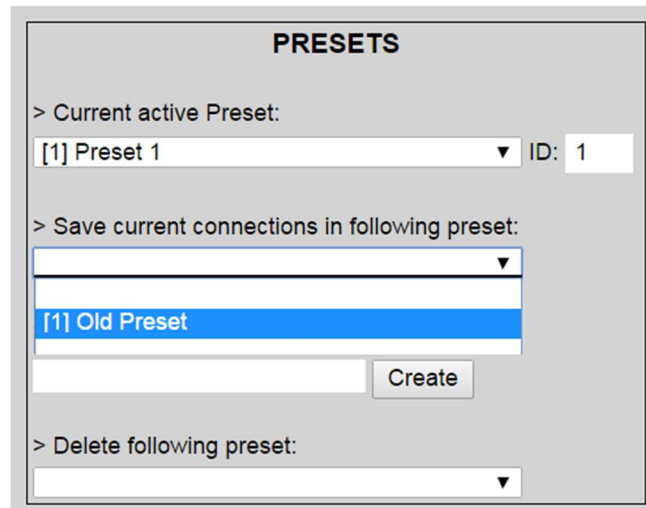


The screenshot shows a window titled "PRESETS". It contains three main sections:

- > Current active Preset:** A dropdown menu showing "[1] Preset 1" and an "ID: 1" field.
- > Save current connections in following preset:** A dropdown menu is open, showing a list of options. "[1] Old Preset" is highlighted in blue. Below the dropdown is a "Create" button.
- > Delete following preset:** A dropdown menu.

Figure 36: Change Current Active Preset

Once selected, the **Preset** will be saved and a green SUCCESS tag will appear next to the > **Save current connections in following preset** field (Figure 37).

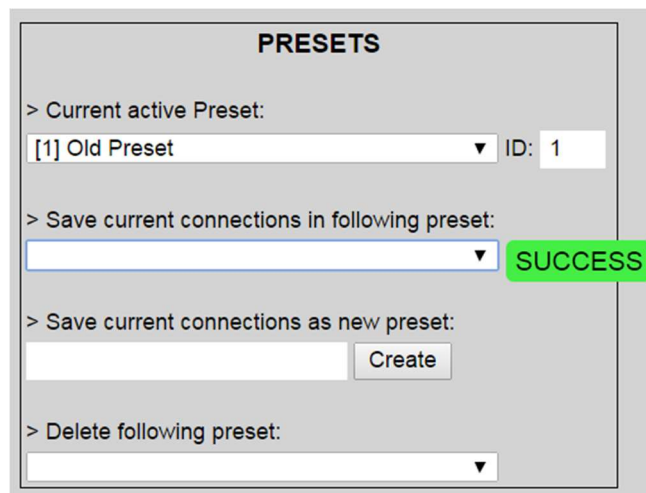

The screenshot shows the same "PRESETS" window as Figure 36, but with the following changes:

- > Current active Preset:** The dropdown menu now shows "[1] Old Preset".
- > Save current connections in following preset:** The dropdown menu is now empty. A green "SUCCESS" tag is displayed to the right of the dropdown.
- > Save current connections as new preset:** A new section with an empty dropdown menu and a "Create" button.
- > Delete following preset:** The dropdown menu.

Figure 37: Confirmation of Changed Preset Name

In order to activate an existing **Preset**, select > **Current active Preset**, and select the **Preset** name from the drop-down box and the **Preset** will become active. The active **Preset** will also be displayed in the **Current active Preset** field.

3. Products Screen - Video Wall Tab

MuxLab's Extender 500752 does not support the Video Wall feature. Clicking on this tab will display the following screen (Figure 38).

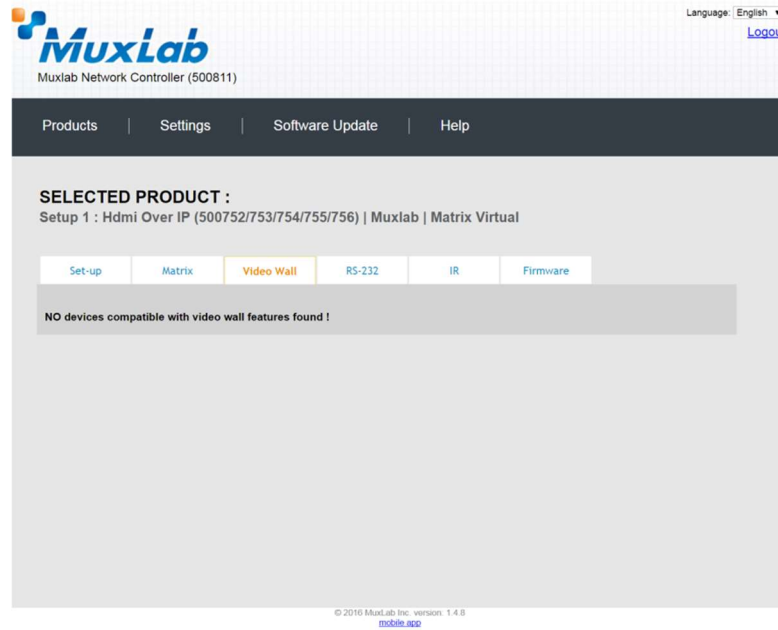


Figure 38: Video Wall Tab

For more information on the Video Wall tab and its features, refer to the section of this manual dealing with MuxLab Extender 500754 and MuxLab Extender 500759.

4. Products Screen - RS-232 Tab

MuxLab's Extender 500752 does not support the RS-232 feature. Clicking on this tab will display the following screen (Figure 39).

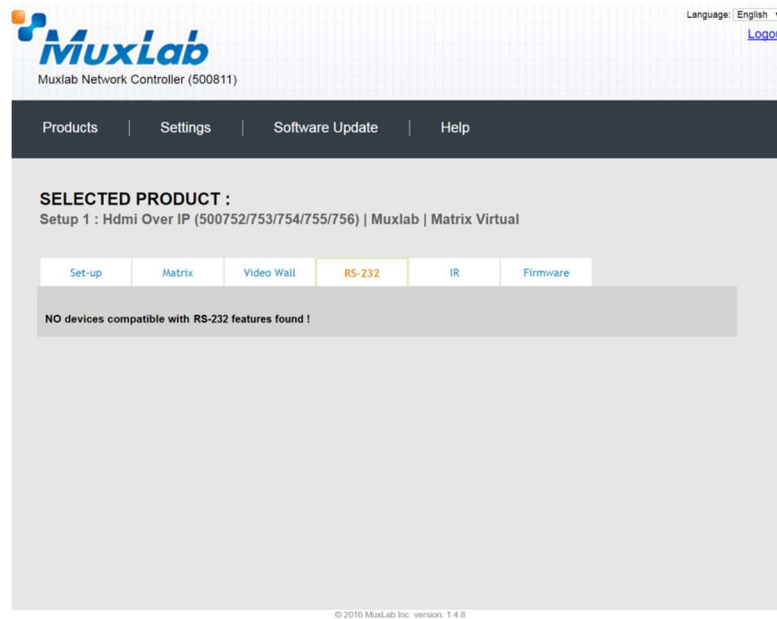


Figure 39: RS-232 Tab

For more information on the RS-232 tab and its features, refer to the section of this manual dealing with MuxLab Extender 500753 and 500754.

5. Products Screen - IR Tab

The **IR** tab of the **Products** screen enables the user to send IR commands to a MuxLab transmitter or receiver IR port (Figure 40) via the Network Controller. IR pass-through mode is also supported using an IR handheld remote as the control source.

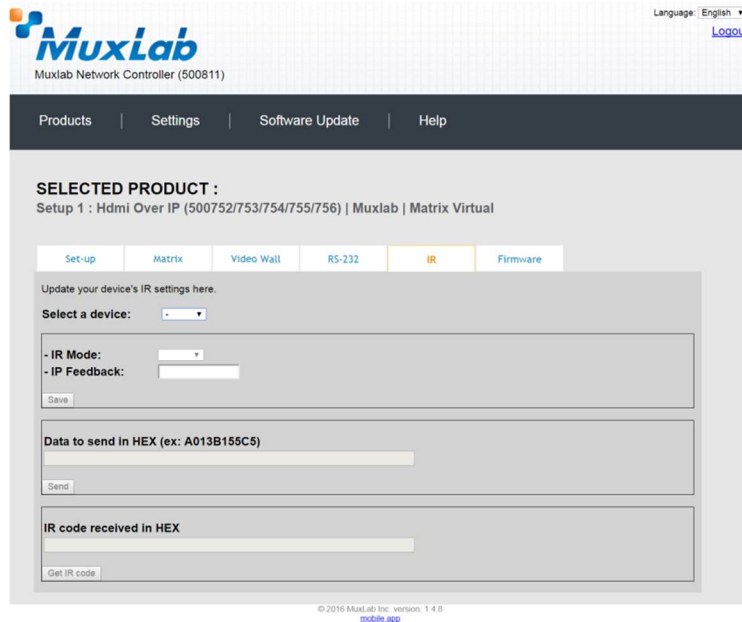


Figure 40: IR Tab

When sending IR commands through the Network Controller, the user first selects the device that the IR commands will be sent to. This is done by clicking on the **Select a device** drop-down list and making a selection (Figure 41).

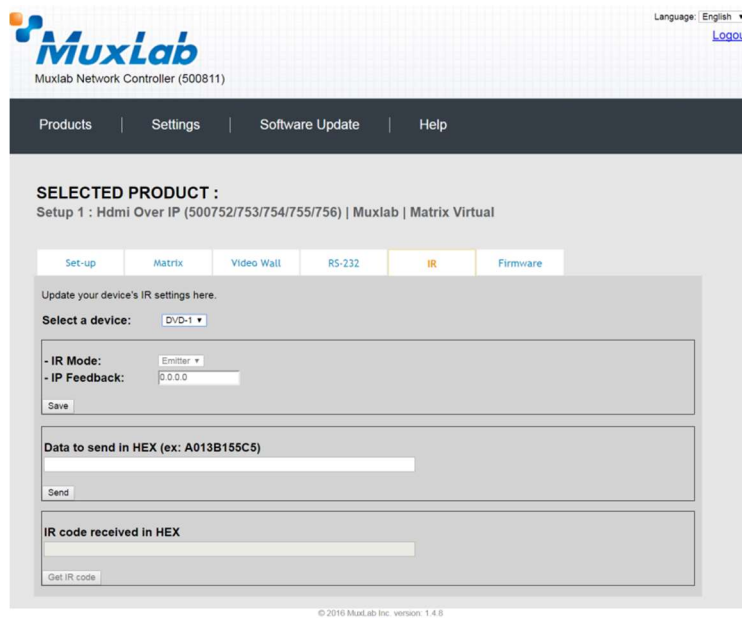


Figure 41: IR Tab – Selecting a Device

Once a device is selected, the **Data to send in HEX** field becomes enabled. In the above example, DVD-1 was chosen as the selected device, meaning that a command sent to DVD-1 will travel from the Network Controller to the Ethernet Switch, then from the Ethernet Switch to the transmitter connected to DVD-1. That transmitter will then send the specified IR data command to DVD-1 via the IR Emitter connected to the transmitter IR out port.

The **IR code received in HEX** field displays the HEX version of an IR command send from a handheld remote to an IR receiver IR In port and attached IR Sensor.

When sending IR commands directly from an IR Source device, such as an IR handheld remote, from 500752 receiver through to a transmitter, the user must set up a pass-through for IR signals to be sent to and from devices. This requires the following step:

The user must tell the 500752 receiver (the device near the IR handheld remote with an attached IR Sensor) the IP address of the 500752 transmitter (where the IR commands are being sent, which has an attached IR Emitter). This is done by first clicking on the **Select a device** drop-down list and selecting the local device from the list, and then inputting the IP address of the far device in the **IP Feedback** field. The user then clicks on **Save**.

6. Products Screen - Firmware Tab

The **Firmware** tab of the Products screen enables the user to update the firmware for MuxLab transmitters and receiver (Figure 42).

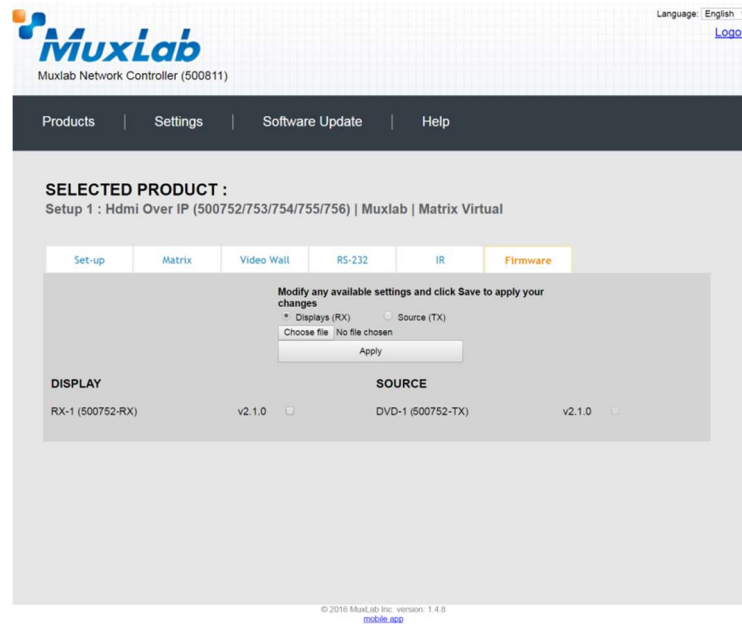



Figure 42: Firmware Tab

The user first selects either **Display (RX)** or **Source (TX)**, then chooses the firmware update file to upload to the given device. Once the file is selected, the user checks the box next to the given device (listed under **DISPLAY** and **SOURCE**) targeted for firmware upgrade, and then clicks **Apply**.

Settings Screen

The **Settings** screen contains two tabs: **Network** and **Administration**.

The **Network** tab (Figure 43) is used to change the IP address of the MuxLab Network Controller (MNC), the network mask, as well as the router IP address. It also allows the user to enable or disable DHCP.

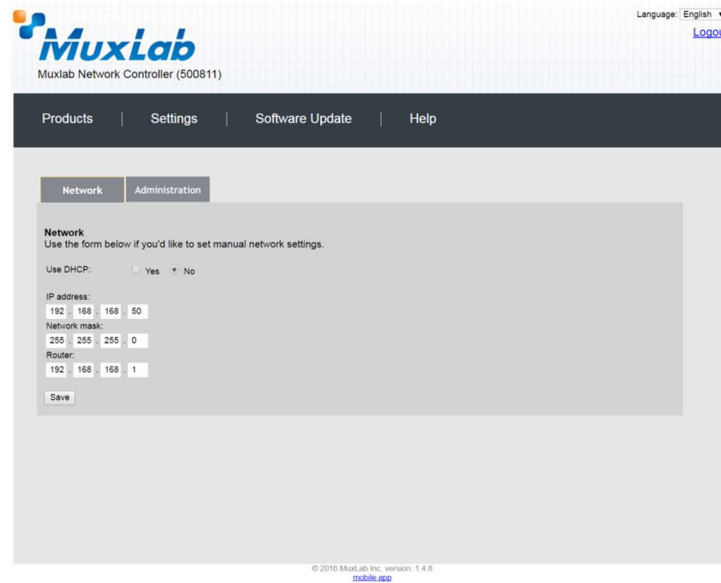

The screenshot shows the MuxLab Network Controller (500811) interface. The top navigation bar includes 'Products', 'Settings', 'Software Update', and 'Help'. The 'Settings' tab is active, and the 'Network' sub-tab is selected. The 'Network' section contains a form for manual network settings. It includes a 'Use DHCP' toggle set to 'No'. Below this are input fields for 'IP address' (192, 168, 168, 50), 'Network mask' (255, 255, 255, 0), and 'Router' (192, 168, 168, 1). A 'Save' button is located at the bottom of the form. The footer indicates the version is 1.4.8 and provides a link to the mobile app.

Figure 43: Settings Screen: Network Tab

The **Administration** tab is used to create or delete user accounts, change passwords, restore data, backup data, and retrieve logs (Figure 44).



The screenshot shows the MuxLab Network Controller (500811) interface with the 'Administration' sub-tab selected. It features three main sections: 'User Accounts', 'Restore data', and 'Backup data'. The 'User Accounts' section has a dropdown for 'Create a new User Account Or select a User to edit:', followed by input fields for 'User Name', 'new password', and 'Confirm new password', and a 'User Type' dropdown. Below are 'Create', 'Update', and 'Delete' buttons. The 'Restore data' section includes a 'Specify file:' field with a 'Choose file' button and a 'Restore' button. A warning message states: 'WARNING ! You MUST FIRST set the IP address of this controller using the same as the controller this backup file come from !!!'. The 'Backup data' section has a 'Backup' button. The 'Get Logs' section has 'Download Logs' and 'Delete Logs' buttons. The footer shows version 1.4.8 and a mobile app link.

Figure 44: Settings Screen: Administration Tab

Software Update Screen

The **Software Update** enables the user to update MuxLab Network Controller software (Figure 45). This software is available on MuxLab's website (www.muxlab.com). Download the software to the local PC before performing the update.

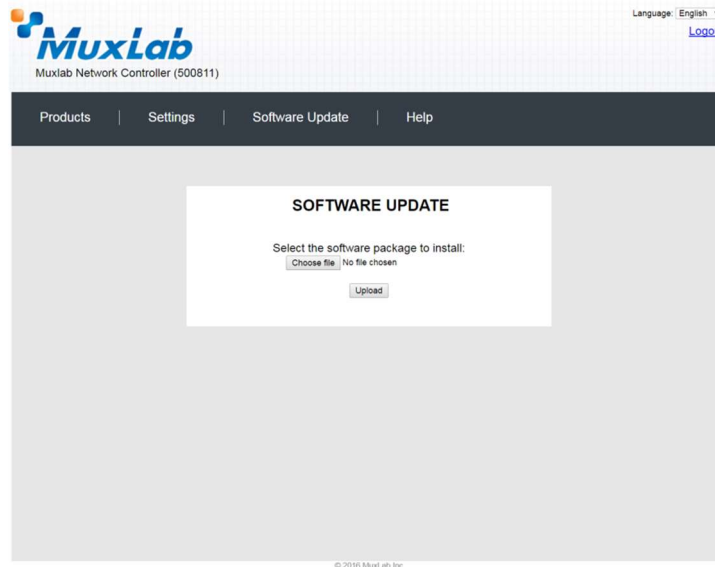


Figure 45: Software Update Screen

Help Screen

The **Help** screen offers quick contact information for customer support and all other inquiries (Figure 46).

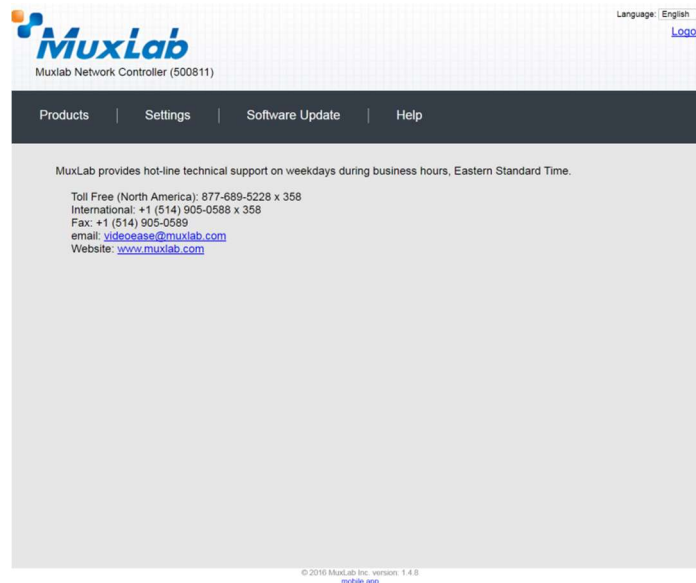


Figure 46: Help Screen

Extender Model 500753

Products Screen

Once the user has logged in, the **Products** screen will appear (Figure 47).

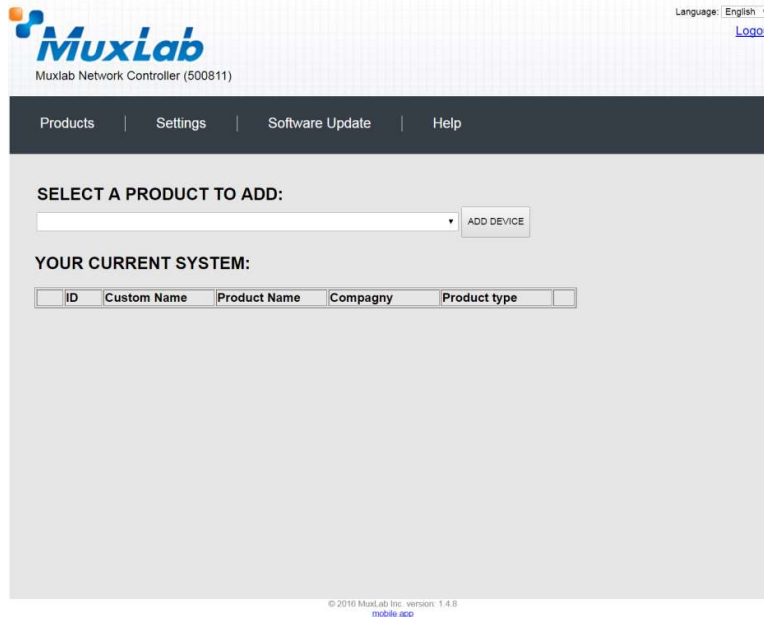


Figure 47: Products Screen – Initial View

In the **SELECT A PRODUCT TO ADD:** drop down box, select **Hdmi Over IP (500752/753/754/755/756)** and then click on **ADD DEVICE** (Figure 48).

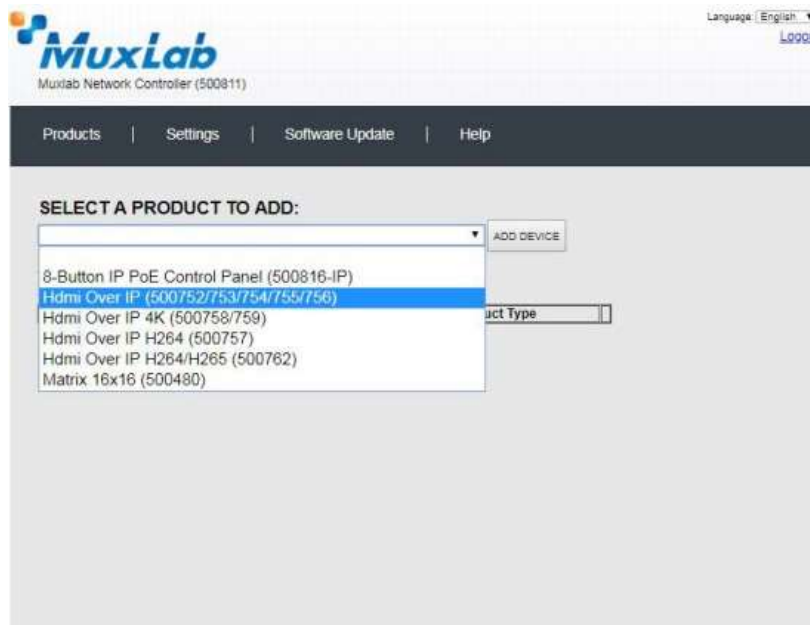


Figure 48: Products Screen – Selecting a Product

A dialog box appears asking the user to provide a custom name for the selected product (Figure 49). The user then types a name in the **Custom Name:** field and clicks on **OK**. Note that if the user decides to click on **CANCEL**, the previous screen appears (Figure 48), without a product being added.

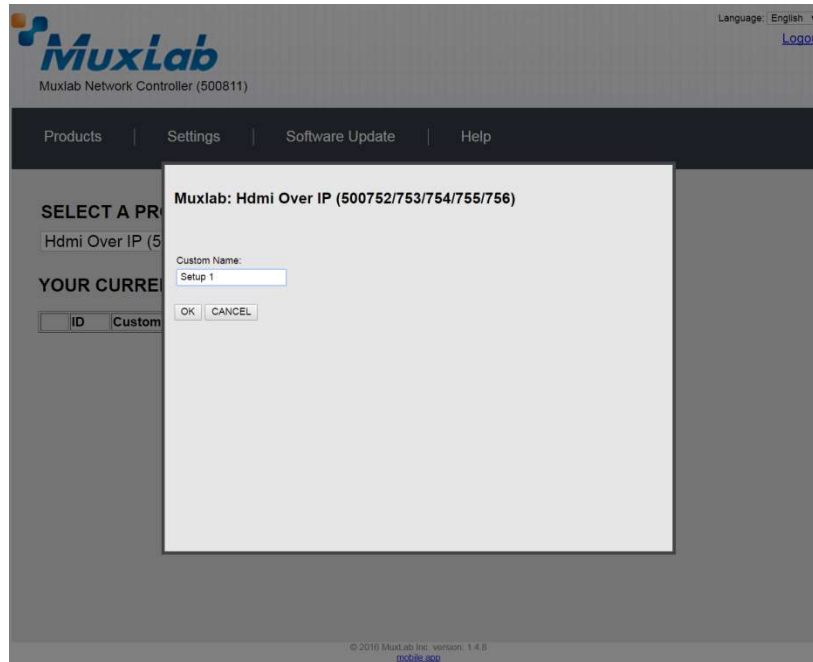


Figure 49: Products Screen – Naming a Product

The custom name has been added to **YOUR CURRENT SYSTEM** (Figure 50).

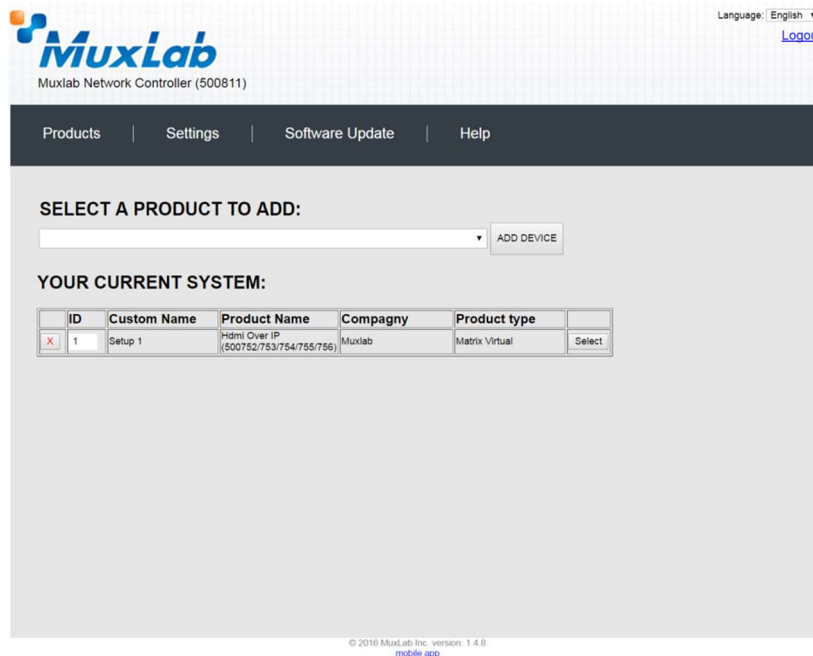


Figure 50: Products Screen – Your Current System Selection

The user can change the ID of each row by modifying the **ID** field. The user can also delete the entire row completely by clicking the **X** next to it.

To configure a given product, the user clicks on **Select**, which brings up a multi-tabbed screen (Figure 51).

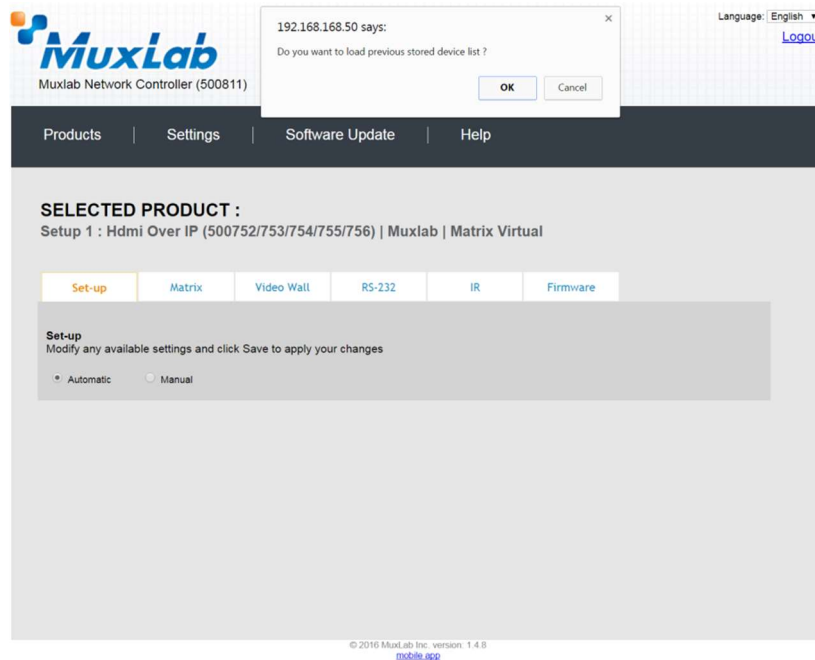


Figure 51: Products Screen – Load Dialog

By default, a dialog appears asking the user to load a previously saved device list (in case such a list has already been stored). This dialog will appear even if no device list has been previously saved.

Six tabs appear within the **Products** screen:

1. Set-up
2. Matrix
3. Video Wall
4. RS-232
5. IR
6. Firmware

1. Products Screen - Set-up Tab

The **Set-up** tab offers the user two options for the type of set-up allowed: **Automatic** or **Manual**.

Automatic means that the software will scan the system for every dip-switch enabled device. The software will then override its manual dip-switch address settings and place these units under software address control. (Automatic is recommended).

Manual means that the software will allow the manual dip-switch address settings of any found device to remain active.

After selecting **Automatic** or **Manual**, click on **Launch discovery** (Figure 52).

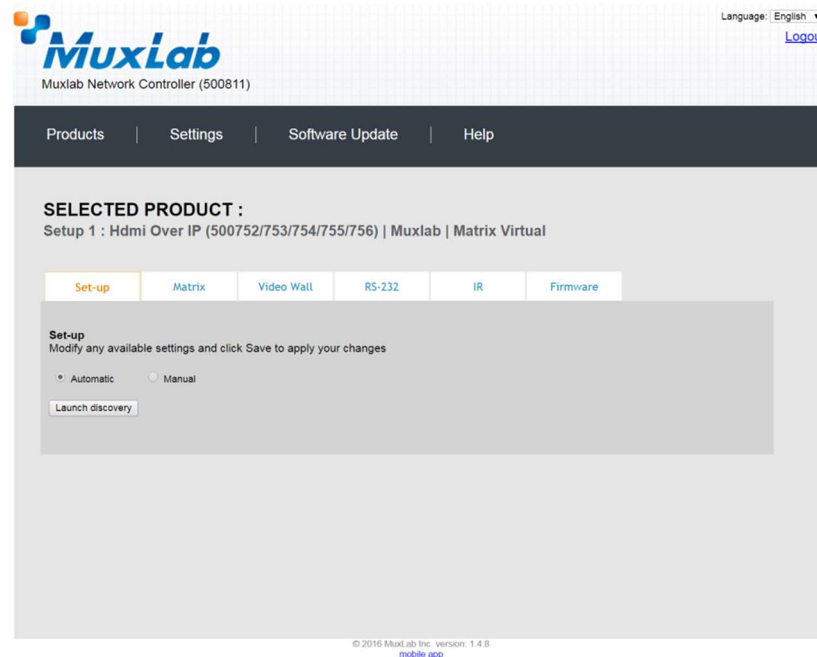


Figure 52: Products Screen – Set-up Tab

The system will scan the network for all source side devices (500753 transmitters) and display side devices (500753 receivers), and will display the scan results in tabular form (Figure 53).

Each 500753 transmitter and receiver can be assigned an arbitrary descriptive name, normally reflecting the end device that it is terminated to. To change the name of any Display (RX) or Source (TX) device, click the **Name** field to edit its contents. Several **Name** fields can be edited before saving changes, as shown in Figure 54 (orange highlighted fields).

Language: English [Logout](#)

MuxLab
Muxlab Network Controller (500811)

Products | Settings | Software Update | Help

SELECTED PRODUCT :
Setup 1 : Hdmi Over IP (500752/753/754/755/756) | Muxlab | Matrix Virtual

Set-up Matrix Video Wall RS-232 IR Firmware

Set-up
Modify any available settings and click Save to apply your changes

Automatic Manual

[Launch discovery](#)

Display (4 RX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP		
0	RX-00-0B-78-00-7D-E2	00-0B-78-00-7D-E2	192.168.168.64	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-00-0B-78-00-7E-59	00-0B-78-00-7E-59	192.168.168.60	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-00-0B-78-00-7E-5E	00-0B-78-00-7E-5E	192.168.168.65	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-00-0B-78-00-7E-63	00-0B-78-00-7E-63	192.168.168.63	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

Source (2 TX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP		
0	DVD-1	00-0B-78-00-7D-D9	192.168.168.62	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	DVD-2	00-0B-78-00-7D-0B	192.168.168.66	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

[Save](#)

© 2016 MuxLab Inc. version: 1.4.8 [mobile app](#)

Figure 53: Products Screen – Set-up Tab

Language: English [Logout](#)

MuxLab
Muxlab Network Controller (500811)

Products | Settings | Software Update | Help

SELECTED PRODUCT :
Setup 1 : Hdmi Over IP (500752/753/754/755/756) | Muxlab | Matrix Virtual

Set-up Matrix Video Wall RS-232 IR Firmware

Set-up
Modify any available settings and click Save to apply your changes

Automatic Manual

[Launch discovery](#)

Display (4 RX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP		
0	RX-1	00-0B-78-00-7D-E2	192.168.168.64	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-2	00-0B-78-00-7E-59	192.168.168.60	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-3	00-0B-78-00-7E-5E	192.168.168.65	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-4	00-0B-78-00-7E-63	192.168.168.63	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

Source (2 TX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP		
0	DVD-1	00-0B-78-00-7D-D9	192.168.168.62	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	DVD-2	00-0B-78-00-7D-0B	192.168.168.66	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

[Save](#)

© 2016 MuxLab Inc. version: 1.4.8 [mobile app](#)

Figure 54: Name Editing

To save all name changes, click on **Save**. A green UPDATED tag will appear next to newly changed names (Figure 55).

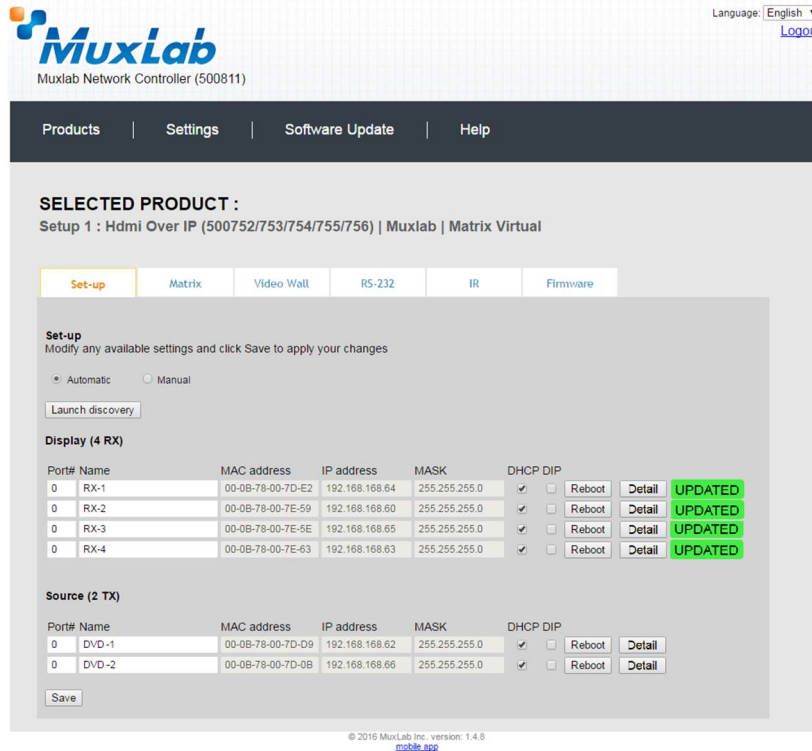


Figure 55: Saving Name Changes

To view and modify component parameters, click on the **Detail** button next to the given component. A dialog appears (Figure 56).

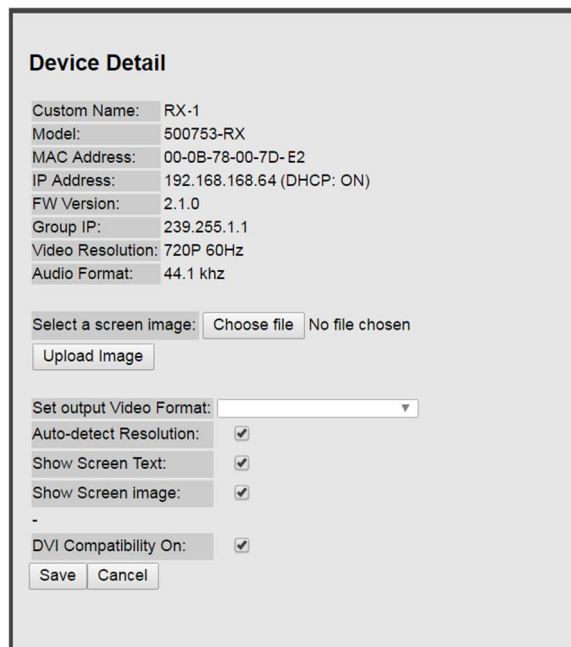


Figure 56: Device Detail Dialog

2. Products Screen - Matrix Tab

The **Matrix** tab of the **Products** screen allows the user to connect any Display to any Source. The user also has the option of using **Presets** to save connection schemes (“Presets”), as well as to edit and delete existing presets (Figure 57).

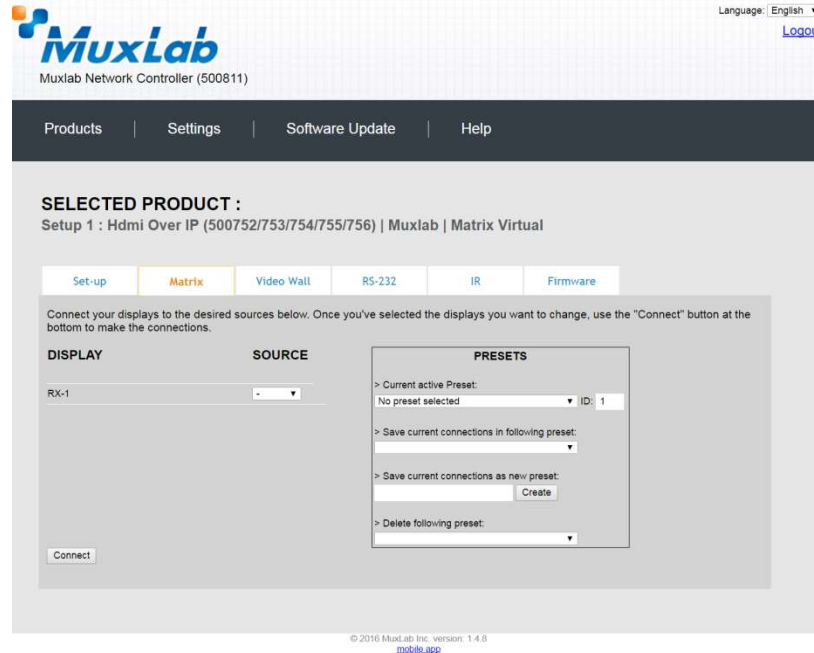


Figure 57: Matrix Tab

To connect a display to a source, the user first clicks on the drop-down list next to the given display (for example “RX-1”) and selects which source to connect it to (Figure 58).

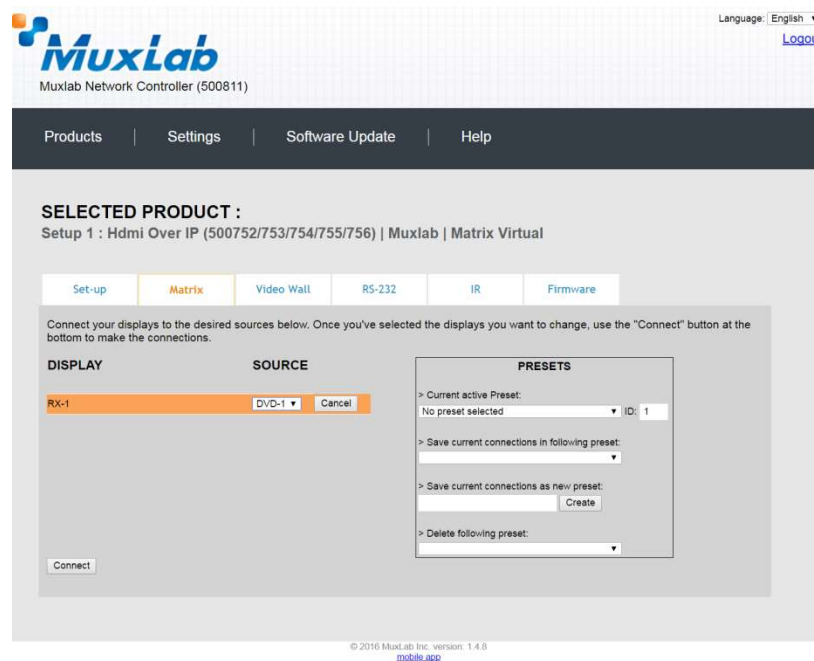


Figure 58: Change Connection

Once the selection is made (the user can change any or all connections between displays and sources), the user clicks on **Connect** to finalize the change. A green **SUCCESS** tag will appear next to the new or changed connection (Figure 59).

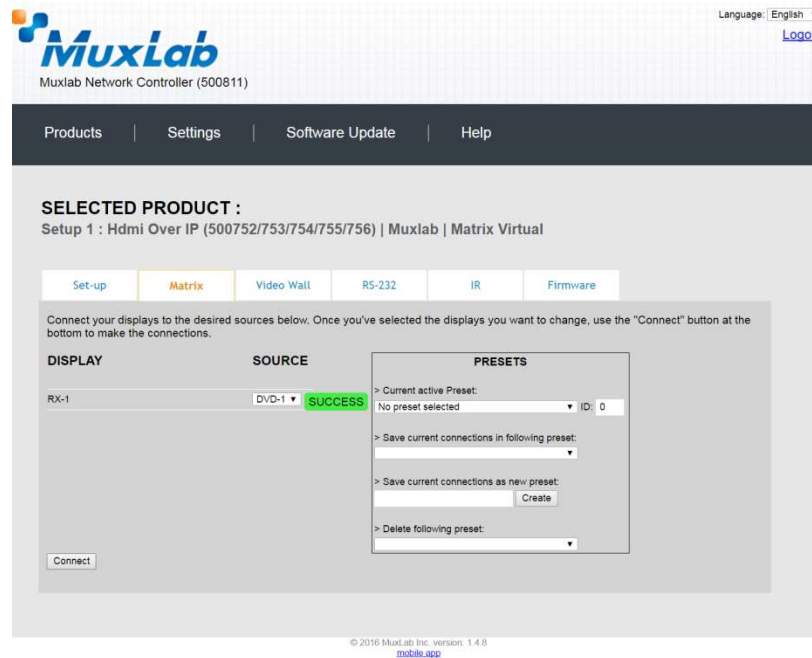


Figure 59: Change Successful

To create a new preset, the user clicks the **> Save current connections as new preset** field (Figure 60) and types a name. This assigned preset name will be linked to the existing connection scheme being shown within the **Matrix** tab.


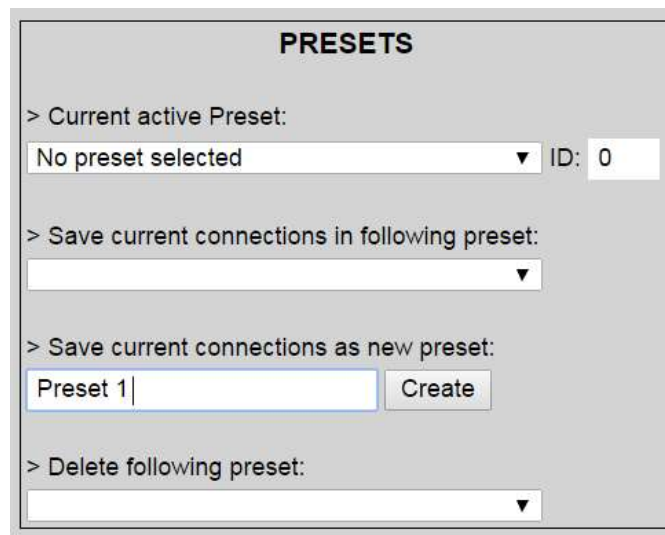


Figure 60: Create New Preset

To save this preset, the user clicks on **Create**. A green SUCCESS tag will appear next to the > **Save current connections as new preset** field and the newly created preset becomes the **Current active Preset** (Figure 61).

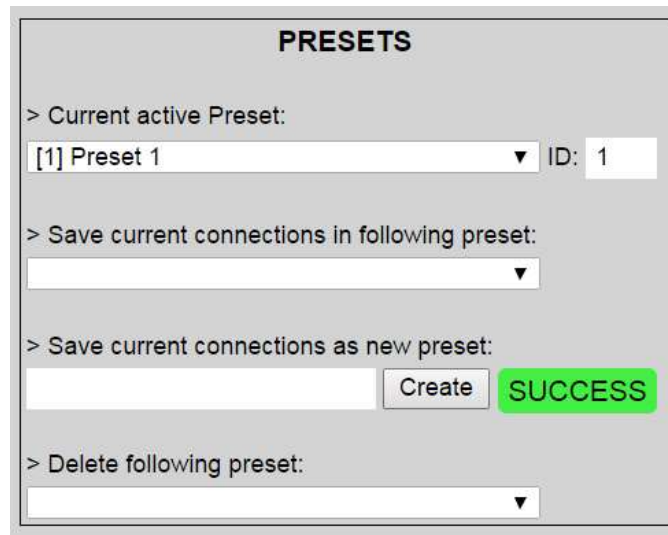


The screenshot shows a window titled "PRESETS" with the following elements:

- > Current active Preset: A dropdown menu showing "[1] Preset 1" and "ID: 1".
- > Save current connections in following preset: An empty dropdown menu.
- > Save current connections as new preset: An empty text input field, a "Create" button, and a green "SUCCESS" tag.
- > Delete following preset: An empty dropdown menu.

Figure 61: Confirmation of New Preset

To delete a preset, the user clicks the > **Delete following preset** drop-down box and selects a preset name from the list shown (Figure 62).

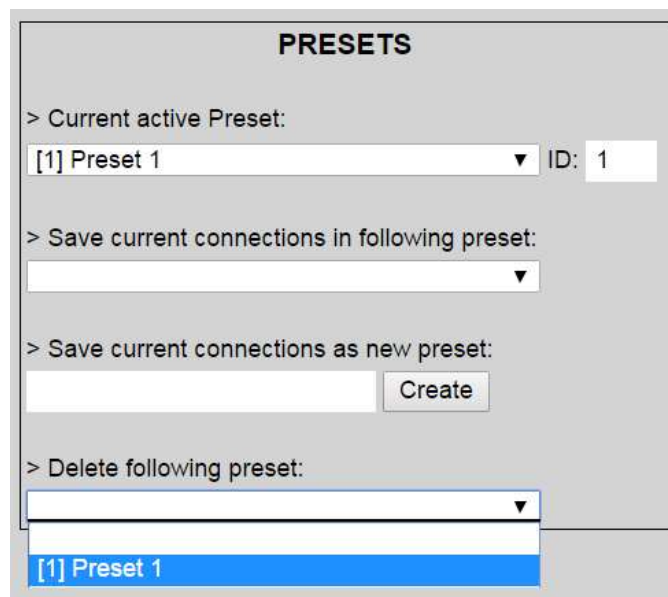

The screenshot shows the same "PRESETS" window as Figure 61, but with the "Delete following preset" dropdown menu open. The menu is currently empty, and the option "[1] Preset 1" is highlighted in blue at the bottom of the list. The "Create" button is visible but not active.

Figure 62: Delete Preset

Once selected, a dialog will appear asking the user to confirm the deletion request (Figure 63).

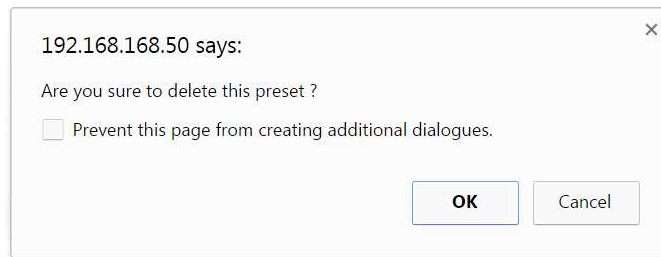


Figure 63: Confirmation of Deleted Preset

Click on **OK**. The preset will be deleted and a green SUCCESS tag will appear next to the **> Delete following preset** field (Figure 64).


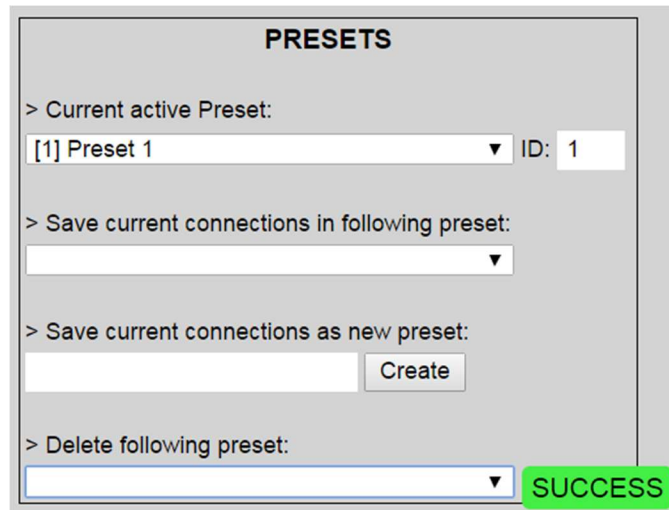


Figure 64: Confirmation of Deleted Preset

To save the current matrix configuration under an existing **Preset** name, click on > **Save current connection in following preset** drop-down box and selects a preset name (Figure 65).

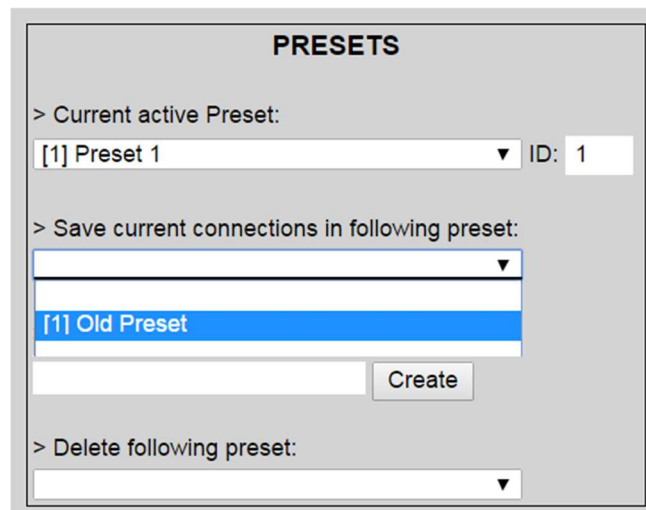


The screenshot shows a window titled "PRESETS". It contains three main sections:

- > Current active Preset:** A dropdown menu showing "[1] Preset 1" and an "ID: 1" field.
- > Save current connections in following preset:** A dropdown menu is open, showing a list of options. "[1] Old Preset" is highlighted in blue. Below the dropdown is a "Create" button.
- > Delete following preset:** A dropdown menu.

Figure 65: Change Current Active Preset

Once selected, the **Preset** will be saved and a green SUCCESS tag will appear next to the > **Save current connections in following preset** field (Figure 66).

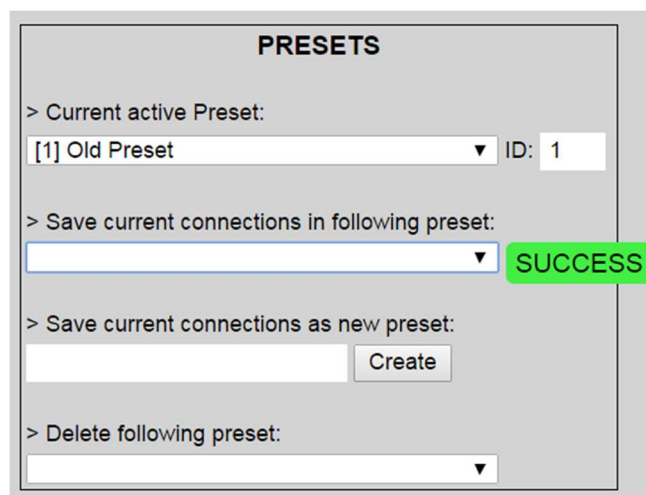

The screenshot shows the same "PRESETS" window as Figure 65, but with the following changes:

- > Current active Preset:** The dropdown menu now shows "[1] Old Preset".
- > Save current connections in following preset:** The dropdown menu is now empty. A green "SUCCESS" tag is displayed to the right of the dropdown.
- > Save current connections as new preset:** A new section with an empty dropdown menu and a "Create" button.
- > Delete following preset:** The dropdown menu is empty.

Figure 66: Confirmation of Changed Preset Name

In order to activate an existing **Preset**, select > **Current active Preset**, and select the **Preset** name from the drop-down box and the **Preset** will become active. The active **Preset** will also be displayed in the **Current active Preset** field.

3. Products Screen - Video Wall Tab

MuxLab's Extender 500753 does not support the Video Wall feature. Clicking on this tab will display the following screen (Figure 67).

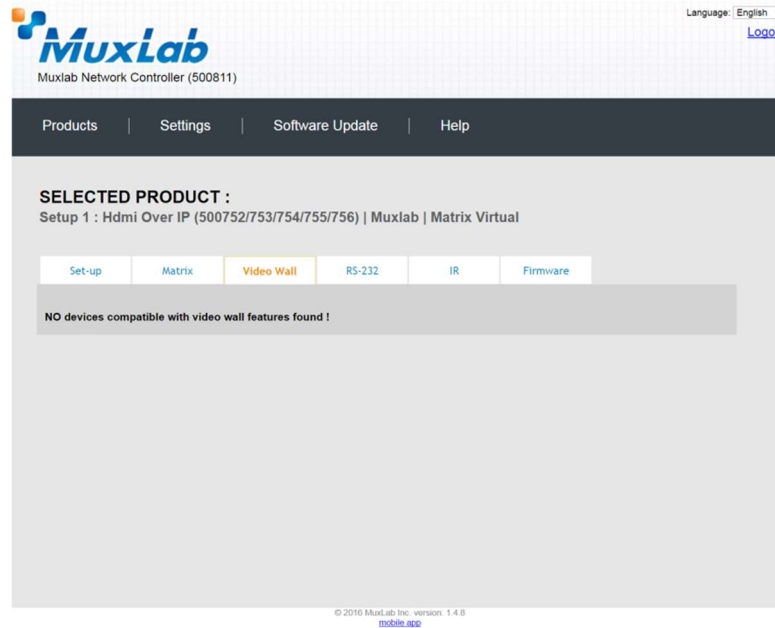


Figure 67: Video Wall Tab

For more information on the Video Wall tab and its features, refer to the section of this manual dealing with MuxLab Extender 500754 and MuxLab Extender 500759.

4. Products Screen - RS-232 Tab

The **RS-232** tab of the **Products** screen enables the user to send RS-232 commands to any MuxLab transmitter or receiver (Figure 68). This is done either through the Network Controller or directly by connecting a PC to the RS-232 port of any transmitter or receiver.

Language: English [Logout](#)

MuxLab
Muxlab Network Controller (500811)

Products | Settings | Software Update | Help

SELECTED PRODUCT :
Setup 1 : Hdmi Over IP (500752/753/754/755/756) | Muxlab | Matrix Virtual

Set-up | Matrix | Video Wall | **RS-232** | IR | Firmware

Update your device's RS-232 connection settings here.

Select a device:

- Baud rate: [Data bits: 8 | Stop bits: 1 | Parity: NONE]

- IP header in data:

- Feedback ON:

- IP Feedback:

Save

Data to send in HEX (ex: A013B155C5)

Data feedback received in HEX

Send

© 2016 MuxLab Inc. version: 1.4.8
[mobile app](#)

Figure 68: RS-232 Tab

When sending RS-232 commands through the Network Controller, the user first selects the device that the RS-232 commands will be sent to. This is done by clicking on the **Select a device** drop-down list and making a selection (Figure 69). The IP Feedback field should also contain the IP address of the Network Controller.

Language: English [Logout](#)

MuxLab
Muxlab Network Controller (500811)

Products | Settings | Software Update | Help

SELECTED PRODUCT :
Setup 1 : Hdmi Over IP (500752/753/754/755/756) | Muxlab | Matrix Virtual

Set-up | Matrix | Video Wall | **RS-232** | IR | Firmware

Update your device's RS-232 connection settings here.

Select a device: DVD-1

- Baud rate: 9600 [Data bits: 8 | Stop bits: 1 | Parity: NONE]

- IP header in data:

- Feedback ON:

- IP Feedback: 192.168.168.56

Save

Data to send in HEX (ex: A013B155C5)

Data feedback received in HEX

Send

© 2016 MuxLab Inc. version: 1.4.8
[mobile app](#)

Figure 69: RS-232 Tab - Selecting a Device

Once a device is selected, the **Data to send in HEX** field becomes enabled. In the above example, DVD-1 was chosen as the selected device (but a receiver connected to sink equipment could have also been selected), meaning that a command sent to DVD-1 will travel from the Network Controller to the Ethernet Switch, and from the Ethernet Switch to the transmitter connected to DVD-1. That transmitter will then send the specified data command to DVD-1.

The **Data feedback received in HEX** field displays the HEX version the feedback sent to the Network Controller by DVD-1.

When sending RS-232 commands directly from a PC to any transmitter or receiver, the user must set up a pass-through system for RS-232 signals to be sent to and from devices. This requires two steps:

- (1) The user first tells the local device (the device connected directly to the PC) the IP address of the far device (where the RS-232 commands are being sent). This is done by first clicking on the **Select a device** drop-down list and selecting the local device from the list, and then inputting the IP address of the far device in the **IP Feedback** field. The user then clicks on **Save**.
- (2) The user then tells the far device the IP address of the local device (if feedback from the far device is required). This is done by first clicking on the **Select a device** drop-down list and selecting the far device from the list, and then inputting the IP address of the near device in the **IP Feedback** field. The user then clicks on **Save**.

5. Products Screen - IR Tab

The **IR** tab of the **Products** screen enables the user to send IR commands to a MuxLab transmitter or receiver IR port (Figure 70) via the Network Controller. IR pass-through mode is also supported using an IR handheld remote as the control source.

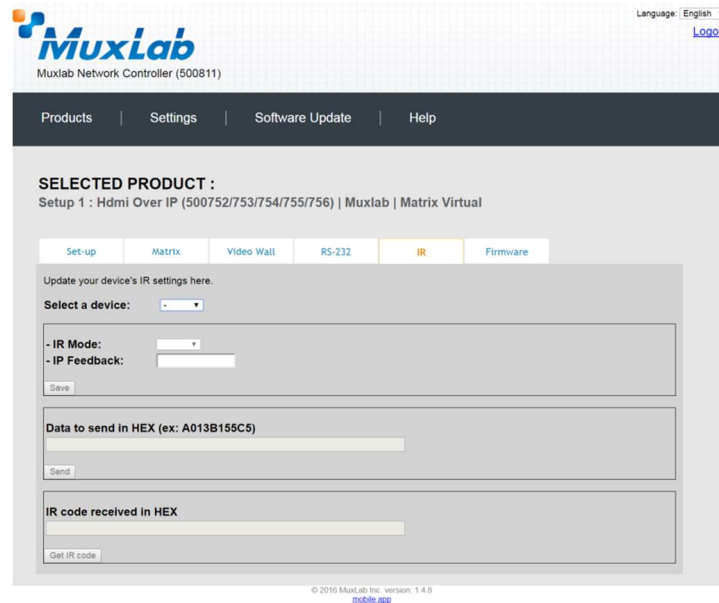


Figure 70: IR Tab

When sending IR commands through the Network Controller, the user first selects the device that the IR commands will be sent to. This is done by clicking on the **Select a device** drop-down list and making a selection (Figure 71).

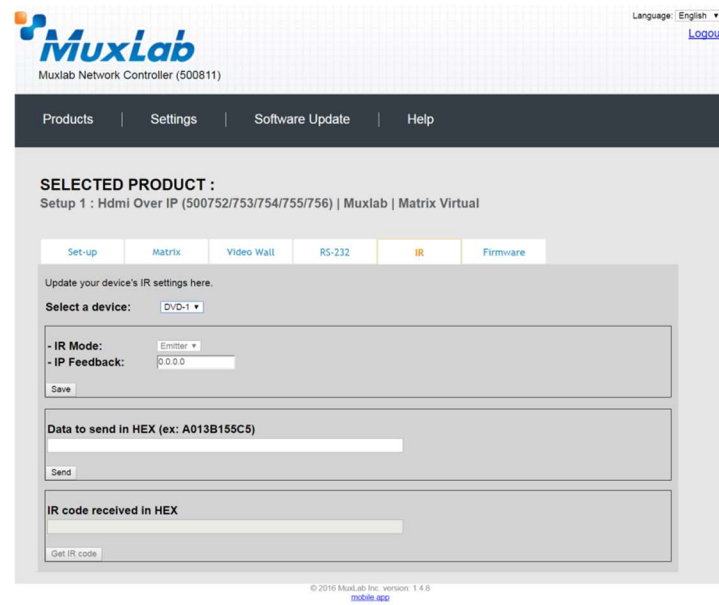


Figure 71: IR Tab – Selecting a Device

Once a device is selected, the **Data to send in HEX** field becomes enabled. In the above example, DVD-1 was chosen as the selected device, meaning that a command sent to DVD-1 will travel from the Network Controller to the Ethernet Switch, then from the Ethernet Switch to the transmitter connected to DVD-1. That transmitter will then send the specified IR data command to DVD-1 via the IR Emitter connected to the transmitter IR out port.

The **IR code received in HEX** field displays the HEX version of an IR command send from a handheld remote to an IR receiver IR In port and attached IR Sensor.

When sending IR commands directly from an IR Source device, such as an IR handheld remote, from 500753 receiver through to a transmitter, the user must set up a pass-through for IR signals to be sent to and from devices. This requires the following step:

The user must tell the 500753 receiver (the device near the IR handheld remote with an attached IR Sensor) the IP address of the 500753 transmitter (where the IR commands are being sent, which has an attached IR Emitter). This is done by first clicking on the **Select a device** drop-down list and selecting the local device from the list, and then inputting the IP address of the far device in the **IP Feedback** field. The user then clicks on **Save**.

6. Products Screen - Firmware Tab

The **Firmware** tab of the Products screen enables the user to update the firmware for MuxLab transmitters and receiver (Figure 72).

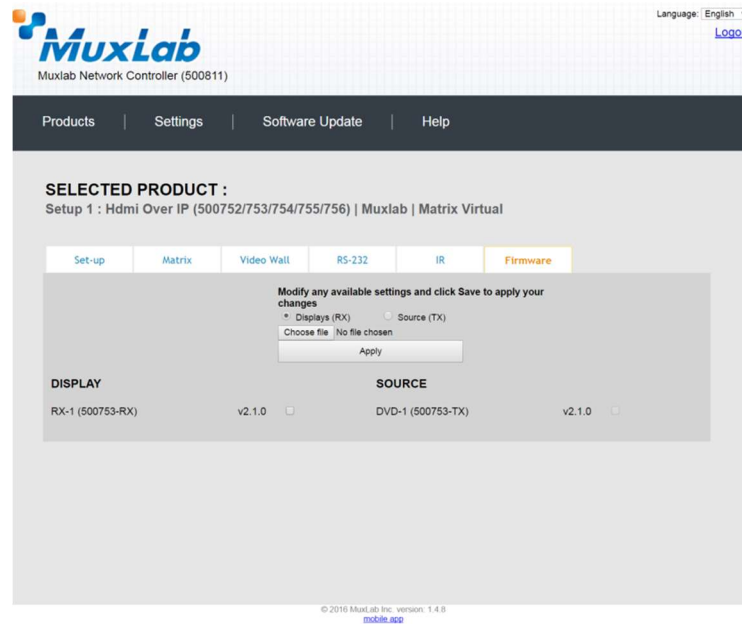


Figure 72: Firmware Tab

The user first selects either **Display (RX)** or **Source (TX)**, then chooses the firmware update file to upload to the given device. Once the file is selected, the user checks the box next to the given device (listed under **DISPLAY** and **SOURCE**) targeted for firmware upgrade, and then clicks **Apply**.

Settings Screen

The **Settings** screen contains two tabs: **Network** and **Administration**.

The **Network** tab (Figure 73) is used to change the IP address of the MuxLab Network Controller, the network mask, as well as the router IP address. It also allows the user to enable or disable DHCP.

The screenshot shows the MuxLab Network Controller (500811) interface. The top navigation bar includes 'Products', 'Settings', 'Software Update', and 'Help'. The 'Settings' tab is active, and the 'Network' sub-tab is selected. The 'Network' section contains a form for manual network settings. It includes a 'Use DHCP' toggle set to 'No'. Below this are input fields for 'IP address' (192, 168, 168, 50), 'Network mask' (255, 255, 255, 0), and 'Router' (192, 168, 168, 1). A 'Save' button is located at the bottom of the form. The footer indicates '© 2016 MuxLab Inc. version: 1.4.8 mobile.asp'.

Figure 73: Settings Screen: Network Tab

The **Administration** tab is used to create or delete user accounts, change passwords, restore data, backup data, and retrieve logs (Figure 74).

The screenshot shows the MuxLab Network Controller (500811) interface. The top navigation bar includes 'Products', 'Settings', 'Software Update', and 'Help'. The 'Settings' tab is active, and the 'Administration' sub-tab is selected. The 'Administration' section contains several functional areas: 'User Accounts' with a dropdown for 'Create a new User Account Or select a User to edit:', fields for 'User Name', 'new password', 'Confirm new password', and 'User Type', and buttons for 'Create', 'Update', and 'Delete'; 'Restore data' with a 'Specify file:' field and a 'Restore' button, accompanied by a warning: 'WARNING ! You MUST FIRST set the IP address of this controller using the same as the controller this backup file come from !!!'; 'Backup data' with a 'Backup' button; and 'Get Logs' with 'Download Logs' and 'Delete Logs' buttons. The footer indicates '© 2016 MuxLab Inc. version: 1.4.8 mobile.asp'.

Figure 74: Settings Screen: Administration Tab

Software Update Screen

The **Software Update** enables the user to update MuxLab Network Controller software (Figure 75). This software is available on MuxLab's website (www.muxlab.com). Download the software to the local PC before performing the update.

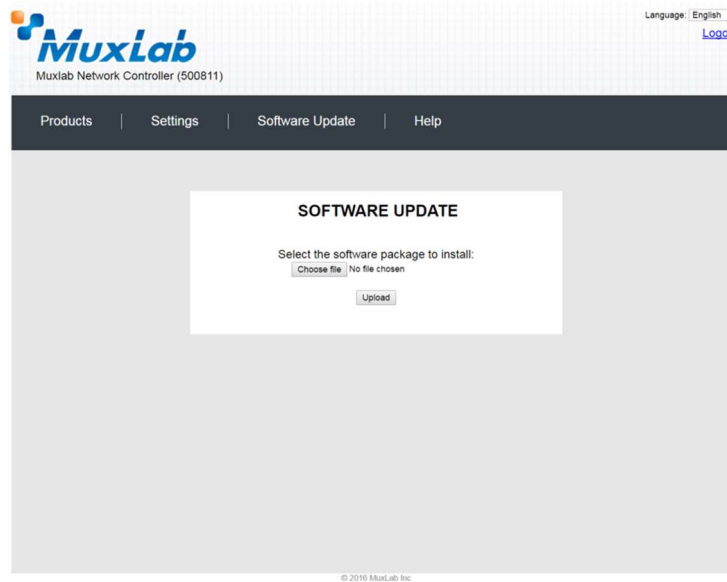


Figure 75: Software Update Screen

Help Screen

The **Help** screen offers quick contact information for customer support and all other inquiries (Figure 76).



Figure 76: Help Screen

Extender Model 500754

Products Screen

Once the user has logged in, the **Products** screen will appear (Figure 77).

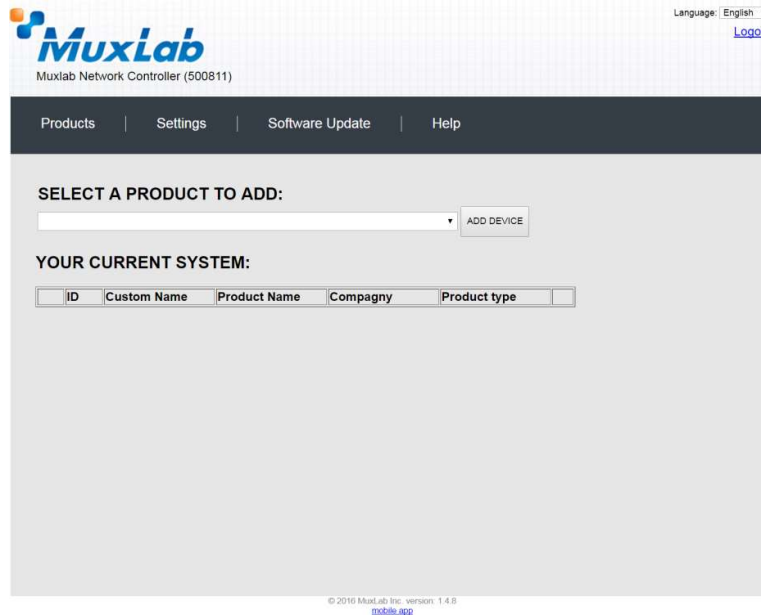


Figure 77: Products Screen – Initial View

In the **SELECT A PRODUCT TO ADD:** drop down box, select **Hdmi Over IP (500752/753/754/755/756)** and then click on **ADD DEVICE** (Figure 78).

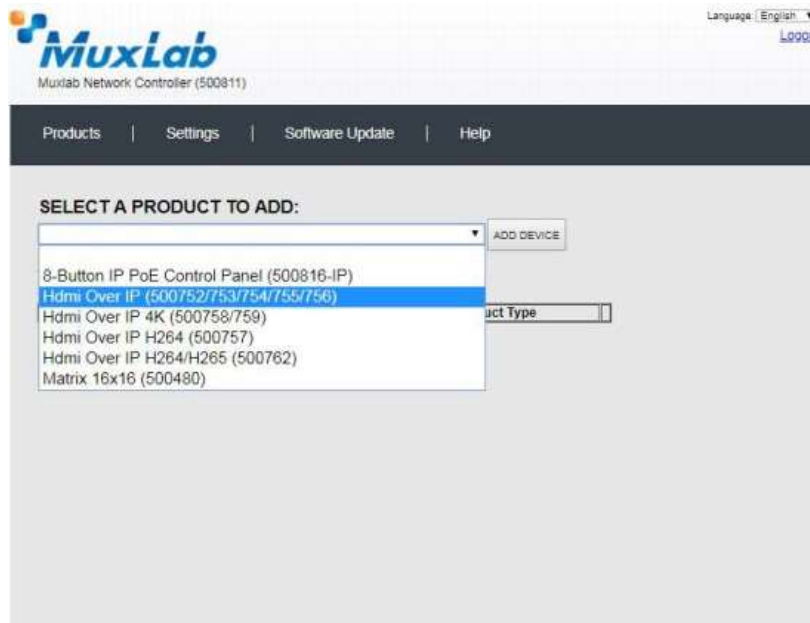


Figure 78: Products Screen – Selecting a Product

A dialog box appears asking the user to provide a custom name for the selected product (Figure 79). The user then types a name in the **Custom Name:** field and clicks on **OK**. Note that if the user decides to click on **CANCEL**, the previous screen appears (Figure 78), without a product being added.

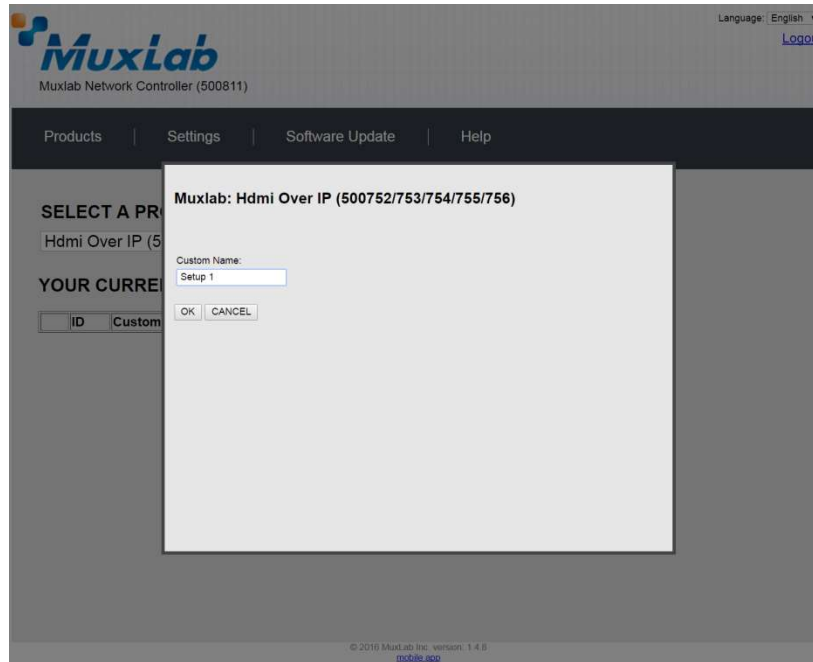


Figure 79: Products Screen – Naming a Product

The custom name has been added to **YOUR CURRENT SYSTEM** (Figure 80).

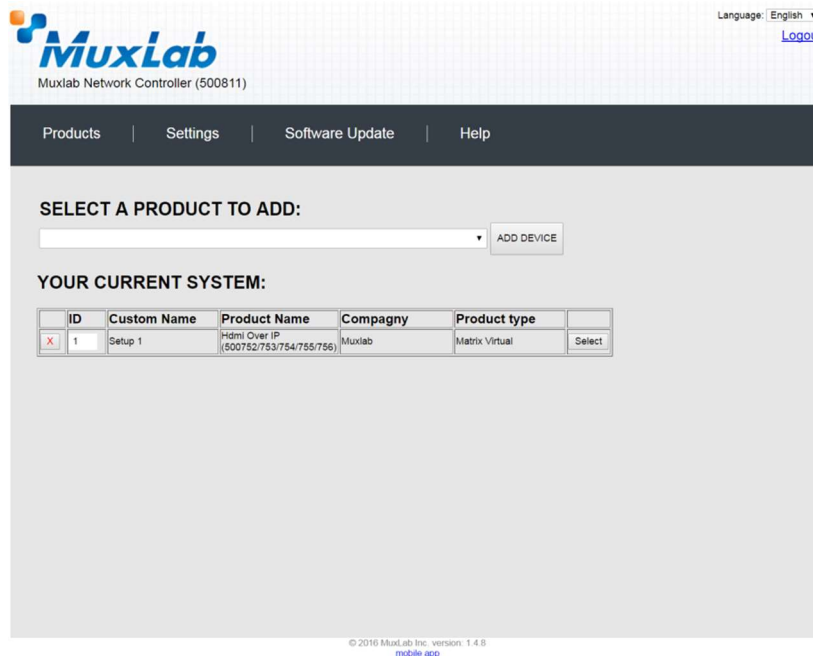


Figure 80: Products Screen – Your Current System Selection

The user can change the ID of each row by modifying the **ID** field. The user can also delete the entire row completely by clicking the **X** next to it.

To configure a given product, the user clicks on **Select**, which brings up a multi-tabbed screen (Figure 81).

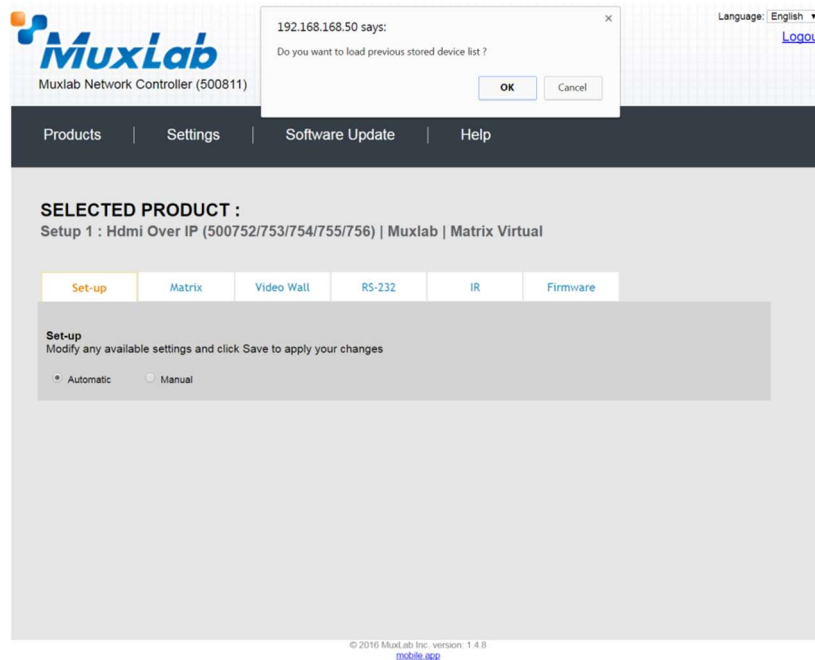


Figure 81: Products Screen – Load Dialog

By default, a dialog appears asking the user to load a previously saved device list (in case such a list has already been stored). This dialog will appear even if no device list has been previously saved.

Six tabs appear within the **Products** screen:

1. Set-up
2. Matrix
3. Video Wall
4. RS-232
5. IR
6. Firmware

1. Products Screen - Set-up Tab

The **Set-up** tab offers the user two options for the type of set-up allowed: **Automatic** or **Manual**.

Automatic means that the software will scan the system for every dip-switch enabled device. The software will then override its manual dip-switch address settings and place these units under software address control. (Automatic is recommended).

Manual means that the software will allow the manual dip-switch address settings of any found device to remain active.

After selecting **Automatic** or **Manual**, click on **Launch discovery** (Figure 82).

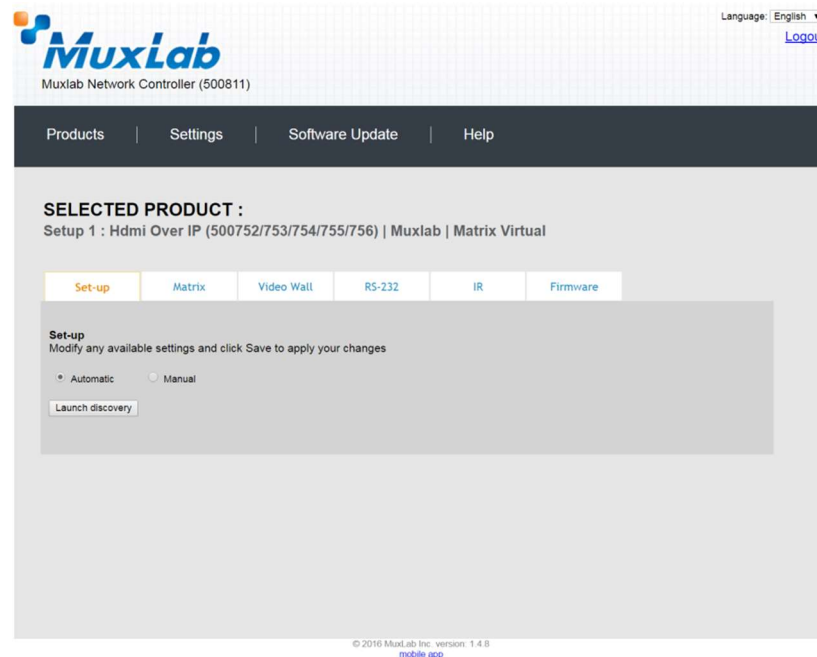


Figure 82: Products Screen – Set-up Tab

The system will scan the network for all source side devices (500754 transmitters) and display side devices (500754 receivers), and will display the scan results in tabular form (Figure 83).

Each 500754 transmitter and receiver can be assigned an arbitrary descriptive name, normally reflecting the end device that it is terminated to. To change the name of any Display (RX) or Source (TX) device, click the **Name** field to edit its contents. Several **Name** fields can be edited before saving changes, as shown in Figure 84 (orange highlighted fields).

Language: English [Logout](#)

MuxLab
Muxlab Network Controller (500811)

Products | Settings | Software Update | Help

SELECTED PRODUCT :
Setup 1 : Hdmi Over IP (500752/753/754/755/756) | Muxlab | Matrix Virtual

Set-up | Matrix | Video Wall | RS-232 | IR | Firmware

Set-up
Modify any available settings and click Save to apply your changes

Automatic Manual

[Launch discovery](#)

Display (4 RX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP		
0	RX-00-0B-78-00-7D-E2	00-0B-78-00-7D-E2	192.168.168.64	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-00-0B-78-00-7E-59	00-0B-78-00-7E-59	192.168.168.60	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-00-0B-78-00-7E-5E	00-0B-78-00-7E-5E	192.168.168.65	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-00-0B-78-00-7E-63	00-0B-78-00-7E-63	192.168.168.63	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

Source (2 TX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP		
0	DVD-1	00-0B-78-00-7D-D9	192.168.168.62	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	DVD-2	00-0B-78-00-7D-0B	192.168.168.66	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

[Save](#)

© 2016 MuxLab Inc. version: 1.4.8 [mobile app](#)

Figure 83: Products Screen – Set-up Tab

Language: English [Logout](#)

MuxLab
Muxlab Network Controller (500811)

Products | Settings | Software Update | Help

SELECTED PRODUCT :
Setup 1 : Hdmi Over IP (500752/753/754/755/756) | Muxlab | Matrix Virtual

Set-up | Matrix | Video Wall | RS-232 | IR | Firmware

Set-up
Modify any available settings and click Save to apply your changes

Automatic Manual

[Launch discovery](#)

Display (4 RX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP		
0	RX-1	00-0B-78-00-7D-E2	192.168.168.64	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-2	00-0B-78-00-7E-59	192.168.168.60	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-3	00-0B-78-00-7E-5E	192.168.168.65	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-4	00-0B-78-00-7E-63	192.168.168.63	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

Source (2 TX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP		
0	DVD-1	00-0B-78-00-7D-D9	192.168.168.62	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	DVD-2	00-0B-78-00-7D-0B	192.168.168.66	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

[Save](#)

© 2016 MuxLab Inc. version: 1.4.8 [mobile app](#)

Figure 84: Name Editing

To save all name changes, click on **Save**. A green UPDATED tag will appear next to newly changed names (Figure 85).

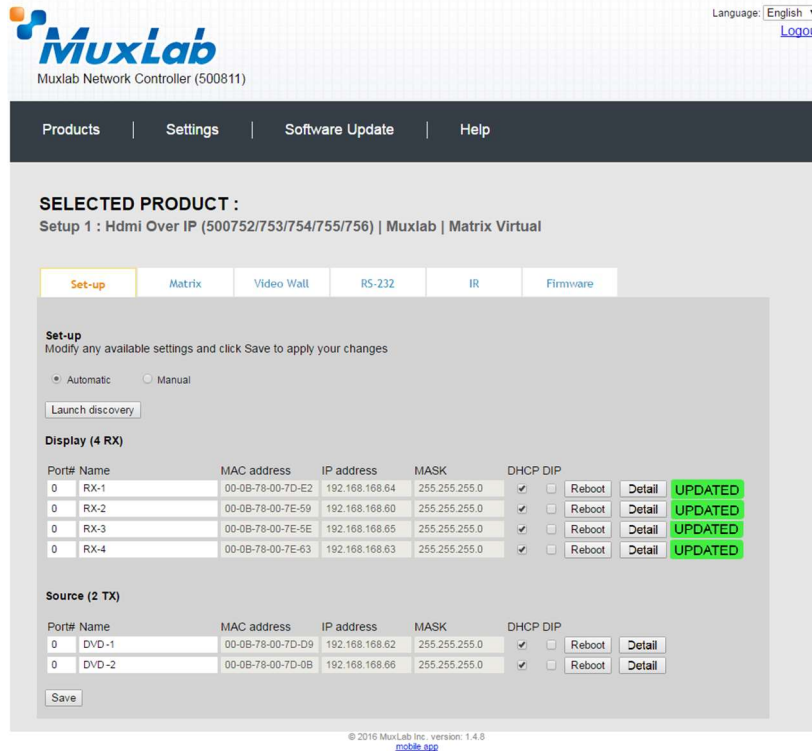


Figure 85: Saving Name Changes

To view and modify component parameters, click on the **Detail** button next to the given component. A dialog appears (Figure 86).



Figure 86: Device Detail Dialog

2. Products Screen - Matrix Tab

The **Matrix** tab of the **Products** screen allows the user to connect any Display to any Source. The user also has the option of using **Presets** to save connection schemes (“Presets”), as well as to edit and delete existing presets (Figure 87).

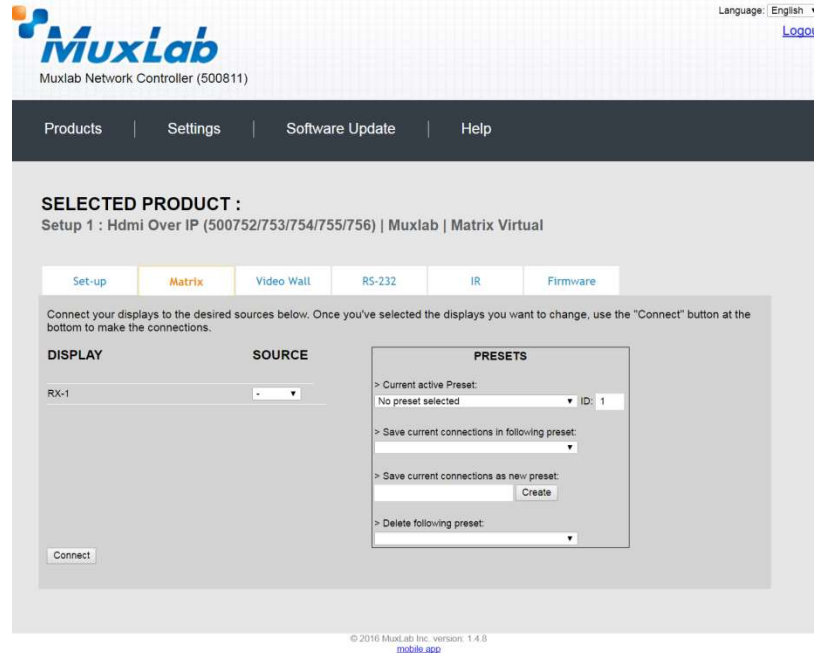


Figure 87: Matrix Tab

To connect a display to a source, the user first clicks on the drop-down list next to the given display (for example “RX-1”) and selects which source to connect it to (Figure 88).

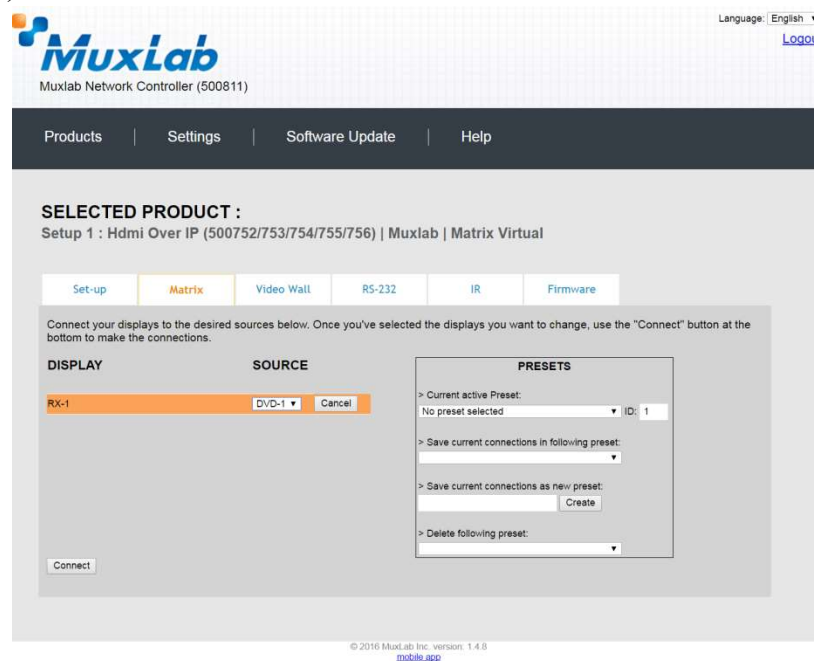


Figure 88: Change Connection

Once the selection is made (the user can change any or all connections between displays and sources), the user clicks on **Connect** to finalize the change. A green **SUCCESS** tag will appear next to the new or changed connection (Figure 89).

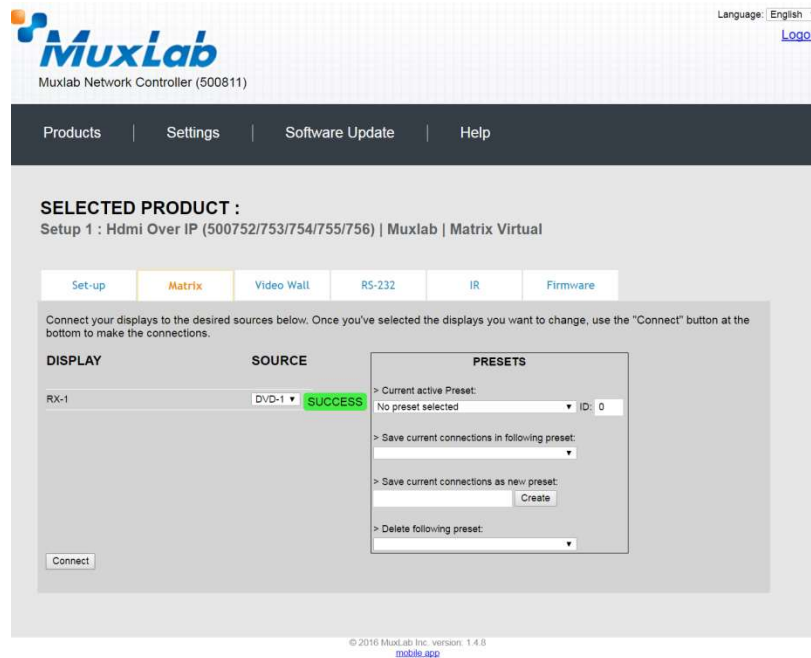


Figure 89: Change Successful

To create a new preset, the user clicks the **> Save current connections as new preset** field (Figure 90) and types a name. This assigned preset name will be linked to the existing connection scheme being shown within the **Matrix** tab.

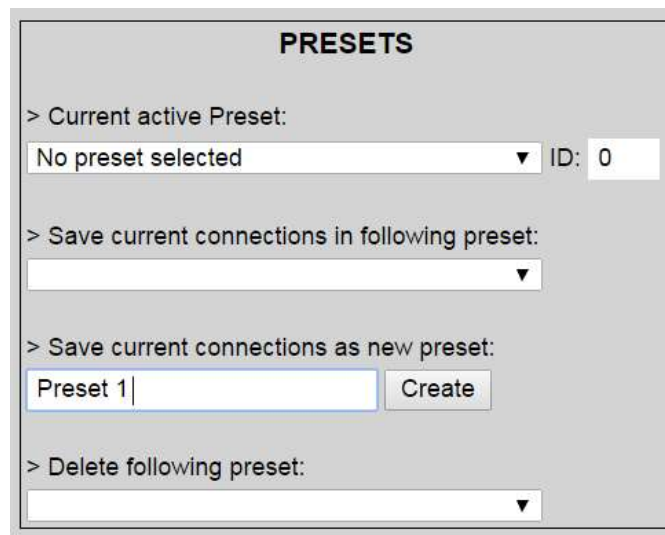


Figure 90: Create New Preset

To save this preset, the user clicks on **Create**. A green SUCCESS tag will appear next to the > **Save current connections as new preset** field and the newly created preset becomes the **Current active Preset** (Figure 91).

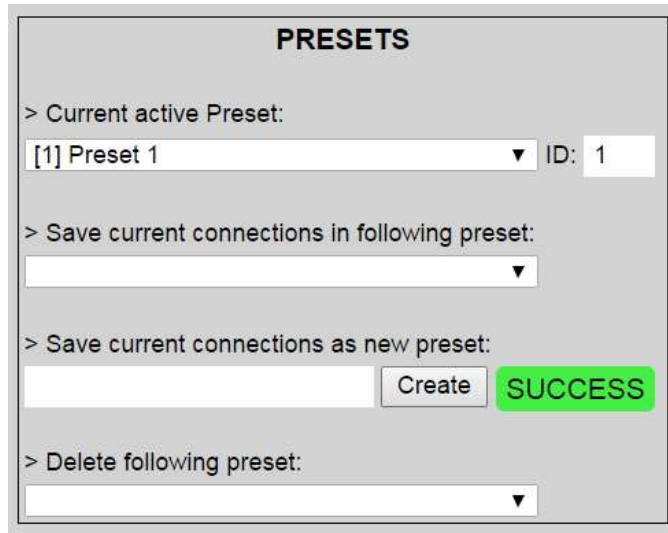


Figure 91: Confirmation of New Preset

To delete a preset, the user clicks the > **Delete following preset** drop-down box and selects a preset name from the list shown (Figure 92).

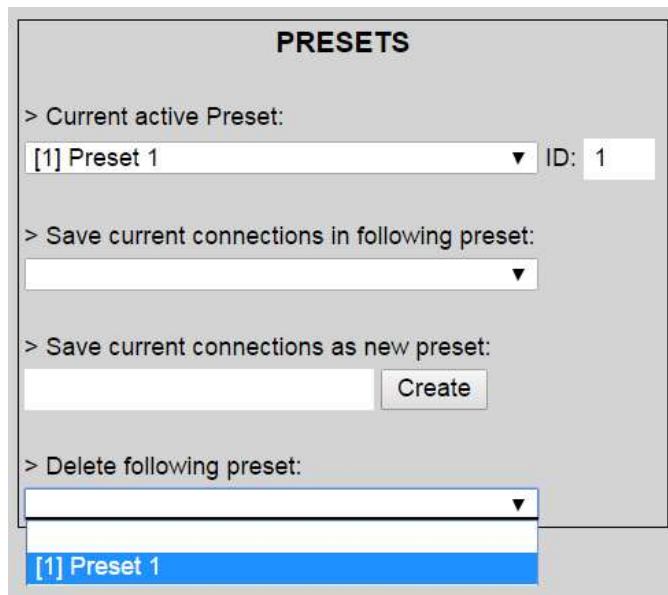


Figure 92: Delete Preset

Once selected, a dialog will appear asking the user to confirm the deletion request (Figure 93).

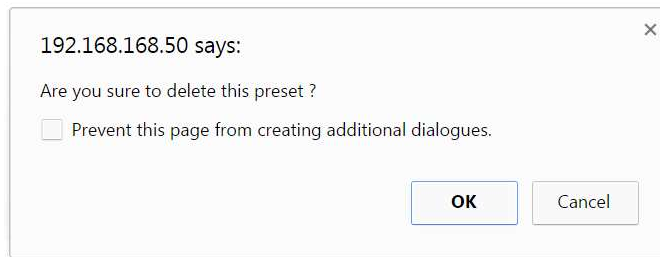


Figure 93: Confirmation of Deleted Preset

Click on **OK**. The preset will be deleted and a green SUCCESS tag will appear next to the **> Delete following preset** field (Figure 94).


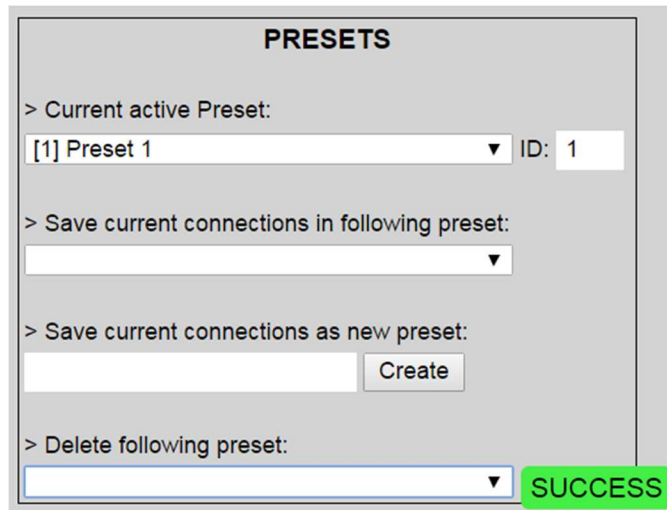


Figure 94: Confirmation of Deleted Preset

To save the current matrix configuration under an existing **Preset** name, click on > **Save current connection in following preset** drop-down box and selects a preset name (Figure 95).

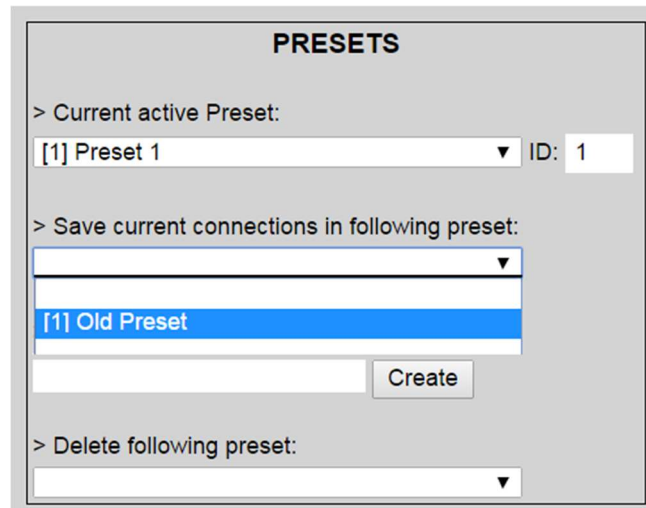


The screenshot shows a window titled "PRESETS". It contains three main sections:

- > Current active Preset:** A dropdown menu showing "[1] Preset 1" and an "ID: 1" field.
- > Save current connections in following preset:** A dropdown menu is open, showing a list of options. "[1] Old Preset" is highlighted in blue. Below the dropdown is a "Create" button.
- > Delete following preset:** A dropdown menu.

Figure 95: Change Current Active Preset

Once selected, the **Preset** will be saved and a green SUCCESS tag will appear next to the > **Save current connections in following preset** field (Figure 96).

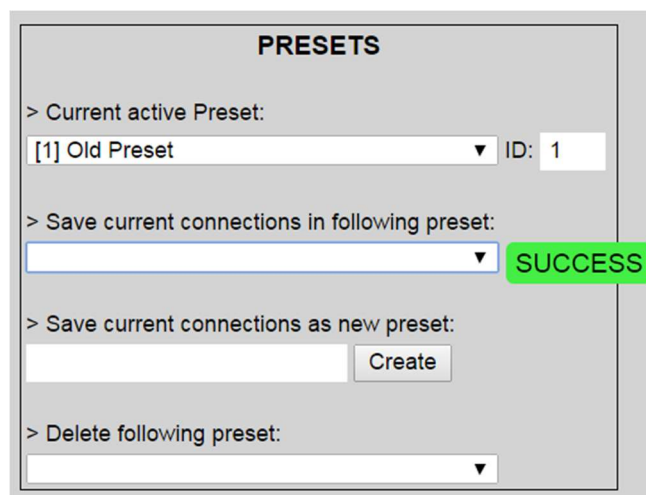

The screenshot shows the same "PRESETS" window as Figure 95, but with the following changes:

- > Current active Preset:** The dropdown menu now shows "[1] Old Preset".
- > Save current connections in following preset:** The dropdown menu is now empty. A green "SUCCESS" tag is displayed to the right of the dropdown.
- > Save current connections as new preset:** A new section with an empty dropdown menu and a "Create" button.
- > Delete following preset:** The dropdown menu.

Figure 96: Confirmation of Changed Preset Name

In order to activate an existing **Preset**, select > **Current active Preset**, and select the **Preset** name from the drop-down box and the **Preset** will become active. The active **Preset** will also be displayed in the **Current active Preset** field.

3. Products Screen - Video Wall Tab

The **Video Wall** tab enables the user to configure an NxM video wall consisting of NxM monitors, all of the same size (Figure 97).

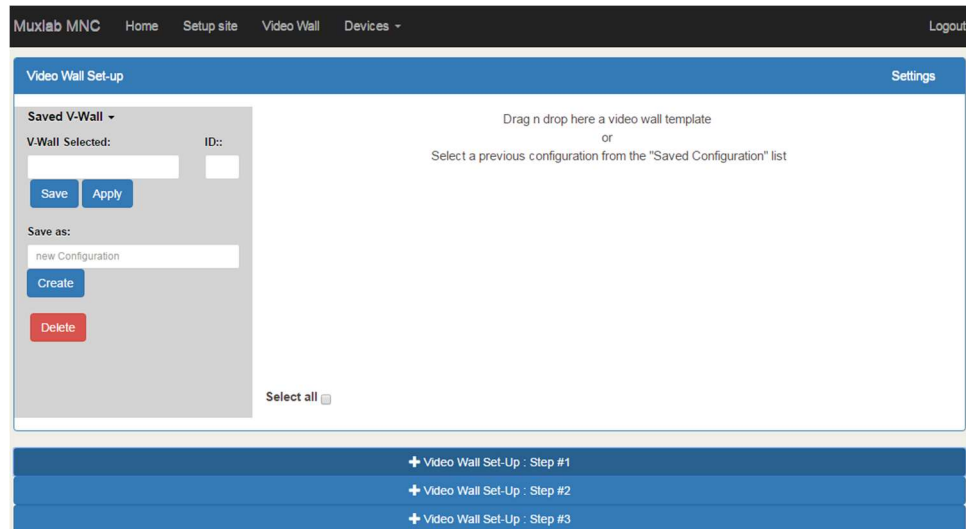


Figure 97: Video Wall Tab

This screen is laid-out in a 3-step pattern, with a display pane that shows the NxM video wall setup:

1. The user clicks on **+Video Wall Set-Up: Step #1**, which expands to provide the user with video wall size options (Figure 98).

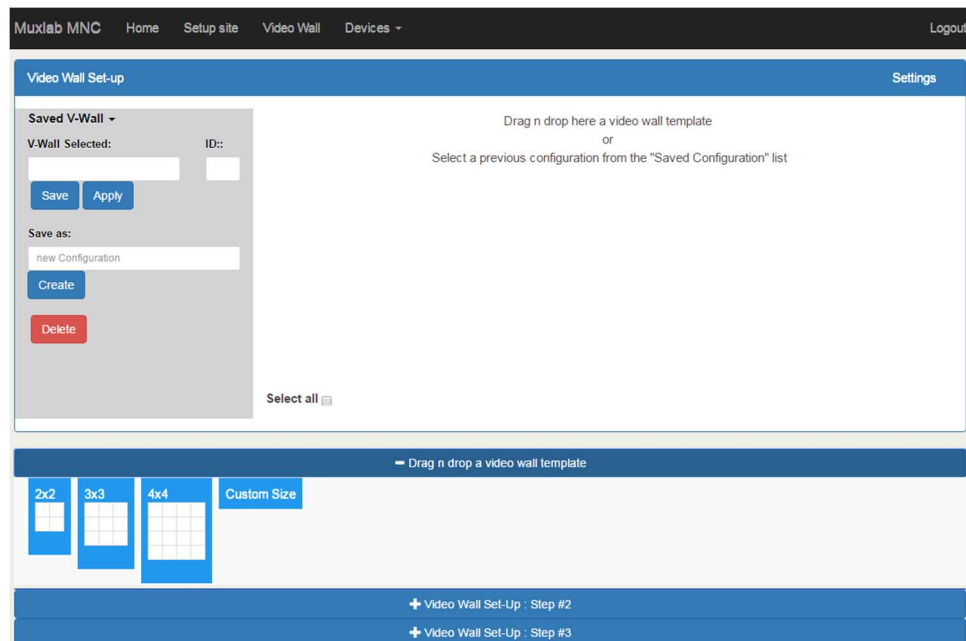


Figure 98: Video Wall Tab

- a. By clicking on and dragging any of the NxN preconfigured boxes into the display pane, the user creates a video matrix of the same size. In the example shown in Figure 99, a 2x2 video wall consisting of 4 monitors is created. Custom video wall sizes may also be created.

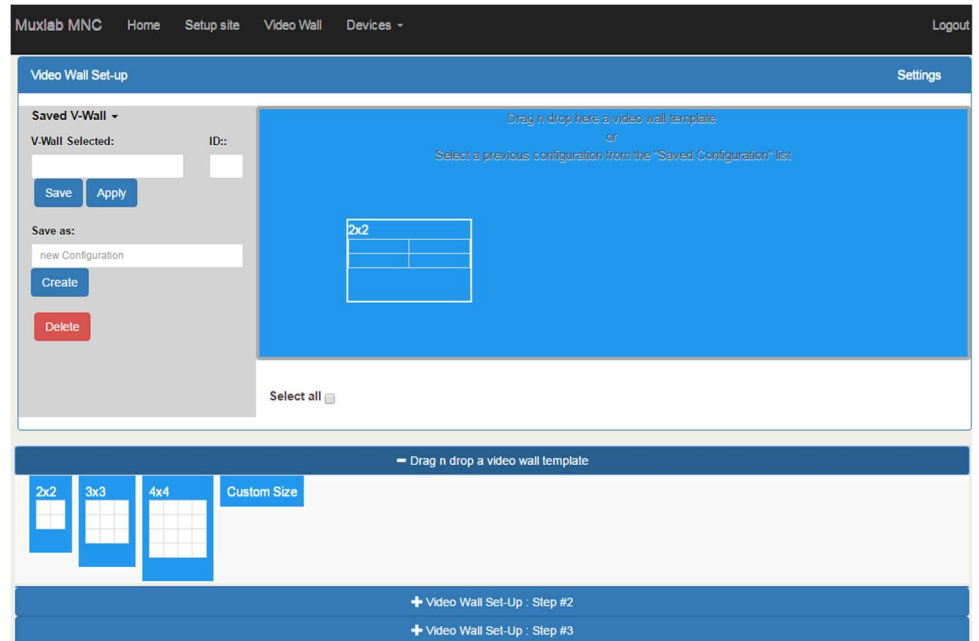


Figure 99: Video Wall Tab – Dragging to Create a 2x2 Video Wall

- b. Once dragged into the display pane, the user is asked for display dimensions (Figure 100). Fill-in the requested information.

 The screenshot shows a 'Display dimension' dialog box with a close button (X) in the top right corner. It contains two input fields: 'Unit of measure:' with a dropdown menu currently set to 'inch', and 'Screen diagonal length:' with a text input field containing 'diagonal length'. An 'OK' button is located at the bottom center of the dialog.

Figure 100: Video Wall Tab – Newly Created 2x2 Video Wall

- c. Once created, the display pane shows an empty (unpopulated) video wall consisting of 4 monitors (Figure 101).

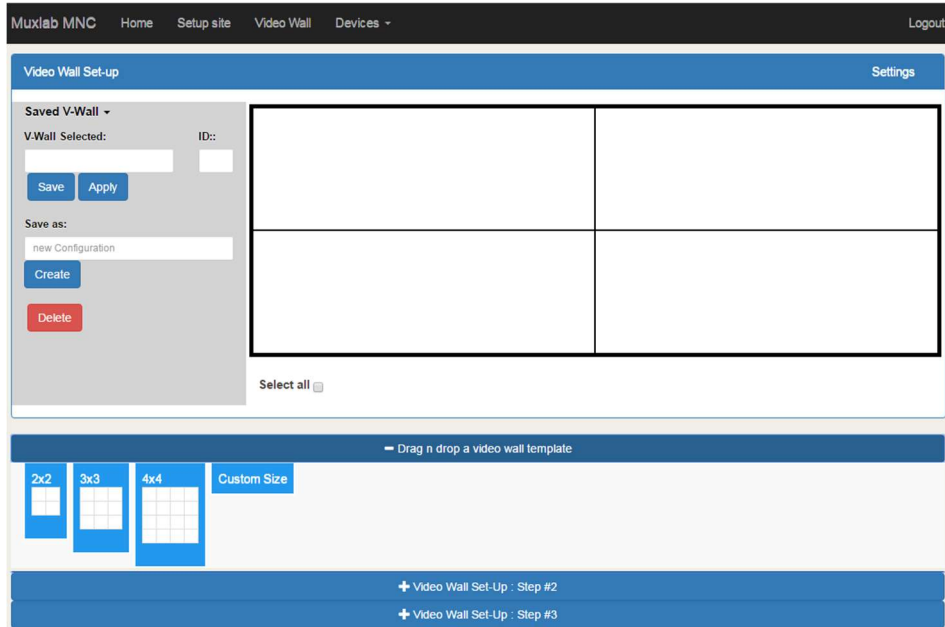


Figure 101: Video Wall Tab – Newly Created 2x2 Video Wall

- 2. The user clicks on **+Video Wall Set-Up: Step #2**, which expands to provide the user with display mapping options (Figure 102).

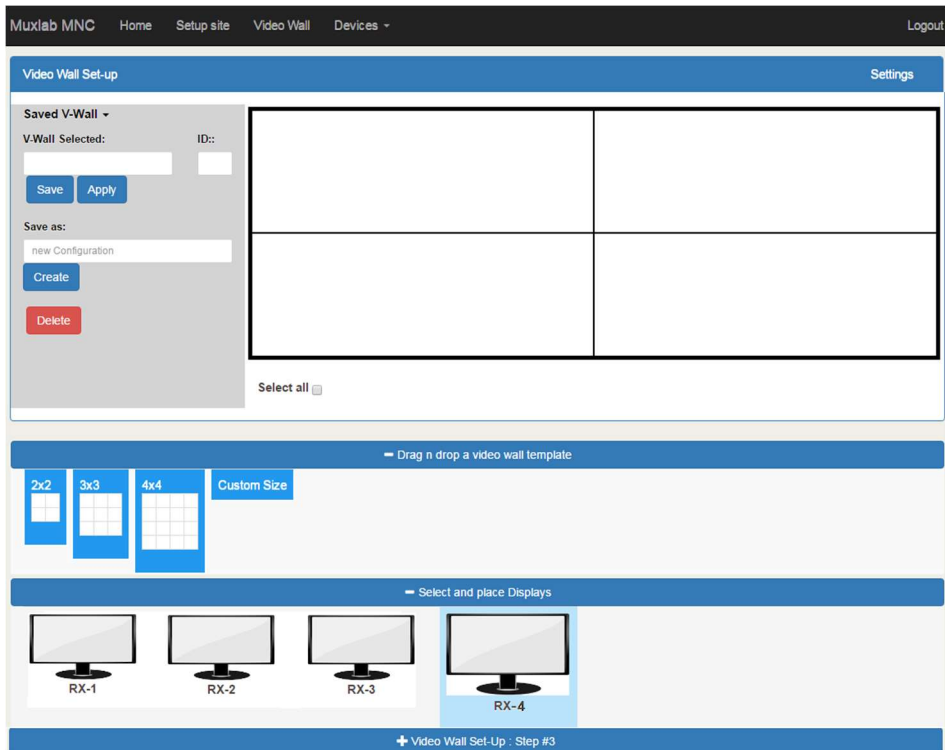


Figure 102: Video Wall Tab – Newly Created 2x2 Video Wall

- a. The user clicks on a given display in the lower section of the screen. This highlights the display in a light blue box. (Note that dragging and dropping displays into the display pane is not allowed.)
- b. The user clicks on any one of the cells in the display pane.
- c. The clicked cell in the display pane is now mapped to the given display.
- d. The user must continue mapping the remaining displays to the remaining cells. The display pane then becomes fully display mapped (Figure 103).

RX-3 Sh H:0,V:0 Sc H:0,V:0	RX-2 Sh H:0,V:0 Sc H:0,V:0
RX-1 Sh H:0,V:0 Sc H:0,V:0	RX-4 Sh H:0,V:0 Sc H:0,V:0

Figure 103: Video Wall Tab – Fully Display Mapped Video Wall

3. The user clicks on **+Video Wall Set-Up: Step #3**, which expands to provide the user with source mapping options (Figure 104).

The screenshot shows the 'Video Wall Set-up' interface. At the top, there is a navigation bar with 'Muxlab MNC', 'Home', 'Setup site', 'Video Wall', and 'Devices'. A 'Logout' link is in the top right. The main content area is titled 'Video Wall Set-up' and includes a 'Settings' link. On the left, there is a 'Saved V-Wall' section with a dropdown menu, an 'ID:' field, and buttons for 'Save', 'Apply', 'Create', and 'Delete'. The main display area shows a 2x2 grid of receiver cells, each labeled with an RX number (RX-1 to RX-4) and its Sh and Sc coordinates. Below the grid, there is a 'Select all' checkbox. Underneath, there are three tabs for video wall templates: '2x2', '3x3', and '4x4', along with a 'Custom Size' option. Below the templates, there is a section for 'Select and place Displays' showing four monitor icons labeled RX-1, RX-2, RX-3, and RX-4. At the bottom, there is a section for 'Select Source to connect' showing two source icons labeled 'DVD' and 'TX-00-0B-78-00-7D-0B'.

Figure 104: Video Wall Tab – Connecting Sources to Receivers

- The user clicks on one or more cells in the display pane. Once clicked, the panes will change to blue to indicate that they are now actively selected.
- The user clicks on any single source shown in the lower part of the screen.
- The clicked cell(s) in the display pane is (are) now mapped to the given source.
- The user maps some or all sources to all cells. The display pane then becomes fully source mapped (Figure 105).

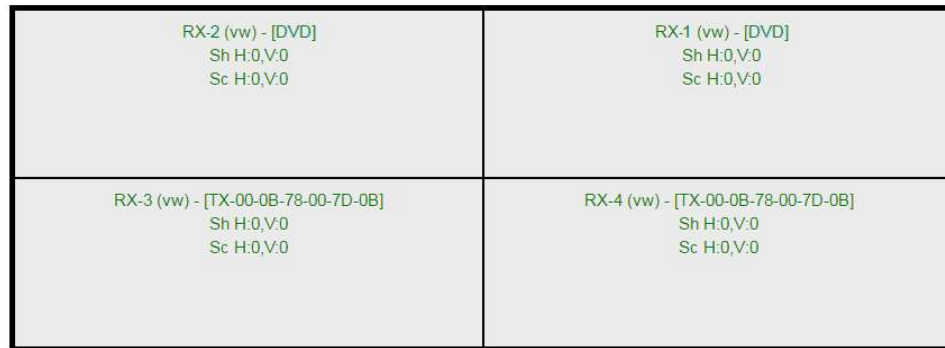


Figure 105: Video Wall Tab – Fully Source Mapped Video Wall

To configure the display size and bezel dimensions of all the displays (assumed to be all equal) comprising the video wall, the user clicks on **Settings** in the top right hand side of the **Video Wall** tab. This brings up the display setting options (Figure 106).



Figure 106: Video Wall Tab – Display Setting Options

Since the video wall consists of only one type of display (all displays are the same), the user only needs to modify the dimensions for only one representative display.

Note that **Unit**, **screen width**, and **screen height** values are derived from the information provided by the user when first creating the video wall (Figure 100). Also, **Bezel top**, **bezel bottom**, **bezel left**, and **bezel right** are all set to 0.1 inch by default, but these values may be changed.

Display settings options also allow the user to scale or shift the image of one or several displays at the same time. The user must first select the display(s) to be modified in the display plane, and then clicks on any of the eight buttons (Scale/Shift) in the display setting options. Clicking on **Reset** resets any changes made to these eight buttons, but not to **Unit**, **screen width**, **screen height**, or **bezel** values.

The settings of any video wall can be saved as a named configuration by using the options shown in the left hand side of the **Video Wall** tab. Video wall configurations can be named, saved, deleted, or activated.

Note that not all displays in an actual video wall need to be included in a given saved configuration, simply start the three steps mentioned above, but only include the required subset of the displays to define as a given configuration, and save this configuration. For example, if the actual video wall consists of four (4) horizontal displays by four (4) vertical displays (4x4 video wall), a 2x2 configuration can be created consisting of only the upper-left corner four displays. To do so create a 2x2 video wall configuration in Step #1 above, then assign the corresponding four displays in the upper-left corner in Step #2 above, then in Step #3 assign the initial source, and save this configuration. Tip, use a configuration name that is representative of the actual setup, such as “Upper Left 2x2” in this case.

Any saved configuration can be activated and displayed on the video wall with the initial assigned source by simply loading it. Once activated, the initial source can easily be changed by repeating Step #3 above with a different source selected, after which you can either save this change or choose not to save it so the next time this configuration is activated the initial source remains unchanged.

4. Products Screen - RS-232 Tab

The **RS-232** tab of the **Products** screen enables the user to send RS-232 commands to any MuxLab transmitter or receiver (Figure 107). This is done either through the Network Controller or directly by connecting a PC to the RS-232 port of any transmitter or receiver.

The screenshot shows the MuxLab Network Controller interface. At the top, there is a logo for MuxLab and the text 'Muxlab Network Controller (500811)'. A navigation bar contains 'Products', 'Settings', 'Software Update', and 'Help'. Below this, the 'SELECTED PRODUCT' section is titled 'Setup 1 : Hdmi Over IP (500752/753/754/755/756) | Muxlab | Matrix Virtual'. A tabbed interface shows 'Set-up', 'Matrix', 'Video Wall', 'RS-232', 'IR', and 'Firmware'. The 'RS-232' tab is active, with the instruction 'Update your device's RS-232 connection settings here.' Below this is a 'Select a device:' dropdown menu. A form contains the following fields: '- Baud rate:' with a dropdown menu, '[Data bits: 8 | Stop bits: 1] Parity: NONE', '- IP header in data:' with a checked checkbox, '- Feedback ON:' with a checked checkbox, and '- IP Feedback:' with a text input field. A 'Save' button is located below these fields. At the bottom, there are two text input fields: 'Data to send in HEX (ex: A013B155C5)' and 'Data feedback received in HEX', with a 'Send' button below them. The footer of the interface reads '© 2016 MuxLab Inc. version: 1.4.8' and 'muxlab.app'.

Figure 107: RS-232 Tab

When sending RS-232 commands through the Network Controller, the user first selects the device that the RS-232 commands will be sent to. This is done by clicking on the **Select a device** drop-down list and making a selection (Figure 108). The IP Feedback field should also contain the IP address of the Network Controller.

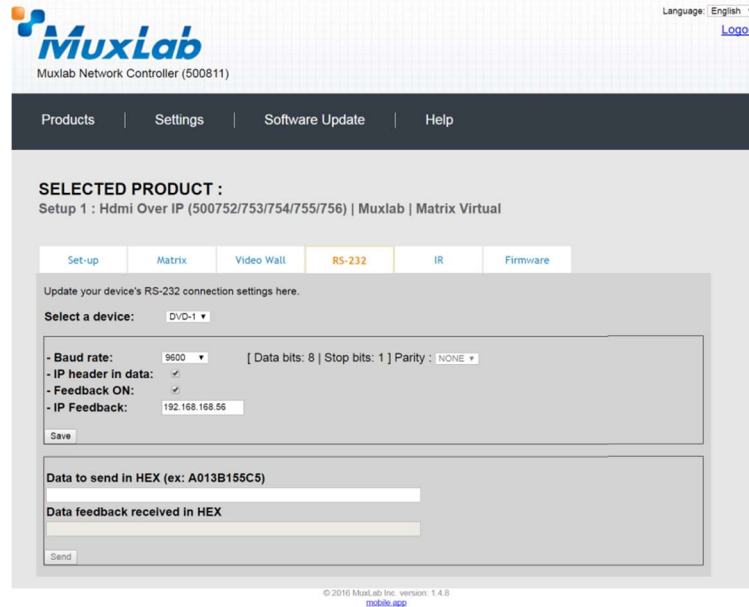


Figure 108: RS-232 Tab - Selecting a Device

Once a device is selected, the **Data to send in HEX** field becomes enabled. In the above example, DVD-1 was chosen as the selected device (but a receiver connected to sink equipment could have also been selected), meaning that a command sent to DVD-1 will travel from the Network Controller to the Ethernet Switch, and from the Ethernet Switch to the transmitter connected to DVD-1. That transmitter will then send the specified data command to DVD-1.

The **Data feedback received in HEX** field displays the HEX version the feedback sent to the Network Controller by DVD-1.

When sending RS-232 commands directly from a PC to any transmitter or receiver, the user must set up a pass-through system for RS-232 signals to be sent to and from devices. This requires two steps:

- (1) The user first tells the local device (the device connected directly to the PC) the IP address of the far device (where the RS-232 commands are being sent). This is done by first clicking on the **Select a device** drop-down list and selecting the local device from the list, and then inputting the IP address of the far device in the **IP Feedback** field. The user then clicks on **Save**.
- (2) The user then tells the far device the IP address of the local device (if feedback from the far device is required). This is done by first clicking on the **Select a device** drop-down list and selecting the far device from the list, and then inputting the IP address of the near device in the **IP Feedback** field. The user then clicks on **Save**.

5. Products Screen - IR Tab

The **IR** tab of the **Products** screen enables the user to send IR commands to a MuxLab transmitter or receiver IR port (Figure 109) via the Network Controller. IR pass-through mode is also supported using an IR handheld remote as the control source.

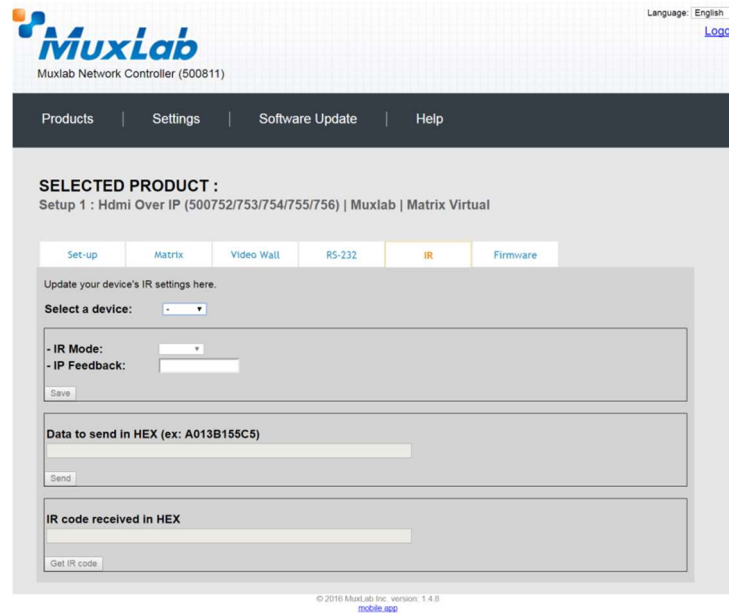


Figure 109: IR Tab

When sending IR commands through the Network Controller, the user first selects the device that the IR commands will be sent to. This is done by clicking on the **Select a device** drop-down list and making a selection (Figure 110).

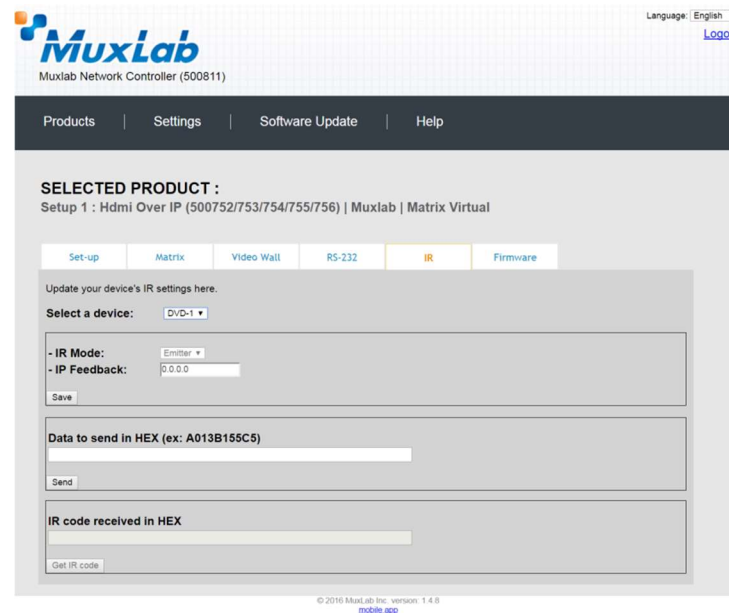


Figure 110: IR Tab – Selecting a Device

Once a device is selected, the **Data to send in HEX** field becomes enabled. In the above example, DVD-1 was chosen as the selected device, meaning that a command sent to DVD-1 will travel from the Network Controller to the Ethernet Switch, then from the Ethernet Switch to the transmitter connected to DVD-1. That transmitter will then send the specified IR data command to DVD-1 via the IR Emitter connected to the transmitter IR out port.

The **IR code received in HEX** field displays the HEX version of an IR command send from a handheld remote to an IR receiver IR In port and attached IR Sensor.

When sending IR commands directly from an IR Source device, such as an IR handheld remote, from 500754 receiver through to a transmitter, the user must set up a pass-through for IR signals to be sent to and from devices. This requires the following step:

The user must tell the 500754 receiver (the device near the IR handheld remote with an attached IR Sensor) the IP address of the 500754 transmitter (where the IR commands are being sent, which has an attached IR Emitter). This is done by first clicking on the **Select a device** drop-down list and selecting the local device from the list, and then inputting the IP address of the far device in the **IP Feedback** field. The user then clicks on **Save**.

6. Products Screen - Firmware Tab

The **Firmware** tab of the Products screen enables the user to update the firmware for MuxLab transmitters and receiver (Figure 111).

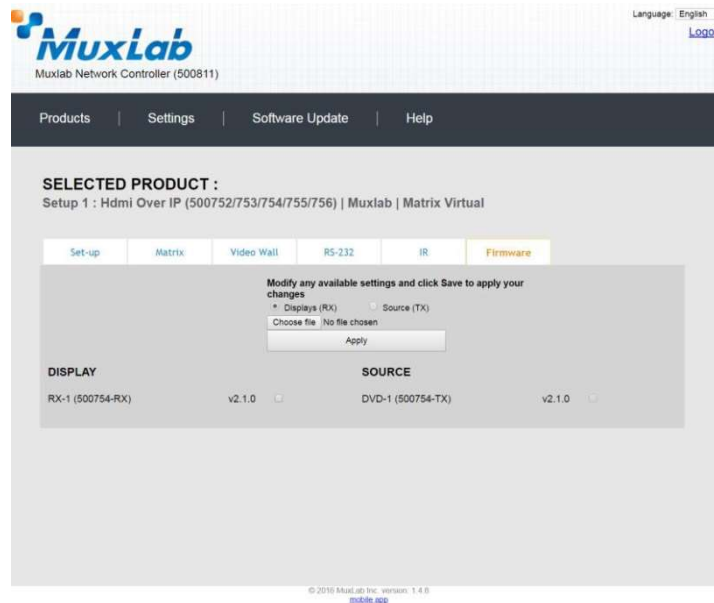


Figure 111: Firmware Tab

The user first selects either **Display (RX)** or **Source (TX)**, then chooses the firmware update file to upload to the given device. Once the file is selected, the user checks the box next to the given device (listed under **DISPLAY** and **SOURCE**) targeted for firmware upgrade, and then clicks **Apply**.

Settings Screen

The **Settings** screen contains two tabs: **Network** and **Administration**.

The **Network** tab (Figure 112) is used to change the IP address of the MuxLab Network Controller, the network mask, as well as the router IP address. It also allows the user to enable or disable DHCP.

The screenshot shows the MuxLab Network Controller (500811) interface. The top navigation bar includes 'Products', 'Settings', 'Software Update', and 'Help'. The 'Settings' tab is active, and the 'Network' sub-tab is selected. The 'Network' section contains a form for manual network settings. It includes a 'Use DHCP' toggle set to 'No'. Below this are input fields for 'IP address' (192.168.168.50), 'Network mask' (255.255.255.0), and 'Router' (192.168.168.1). A 'Save' button is located at the bottom of the form. The footer indicates the version is 1.4.8.

Figure 112: Settings Screen: Network Tab

The **Administration** tab is used to create or delete user accounts, change passwords, restore data, backup data, and retrieve logs (Figure 113).

The screenshot shows the MuxLab Network Controller (500811) interface with the 'Administration' sub-tab selected. The 'User Accounts' section has a dropdown for 'Create a new User Account Or select a User to edit:' and fields for 'User Name', 'new password', 'Confirm new password', and 'User Type'. Below this are 'Create', 'Update', and 'Delete' buttons. The 'Restore data' section includes a 'Specify file:' field and a 'Restore' button, with a warning: 'WARNING ! You MUST FIRST set the IP address of this controller using the same as the controller this backup file come from !!!'. The 'Backup data' section has a 'Backup' button. The 'Get Logs' section has 'Download Logs' and 'Delete Logs' buttons. The footer indicates the version is 1.4.8.

Figure 113: Settings Screen: Administration Tab

Software Update Screen

The **Software Update** enables the user to update MuxLab Network Controller software (Figure 114). This software is available on MuxLab's website (www.muxlab.com). Download the software to the local PC before performing the update.

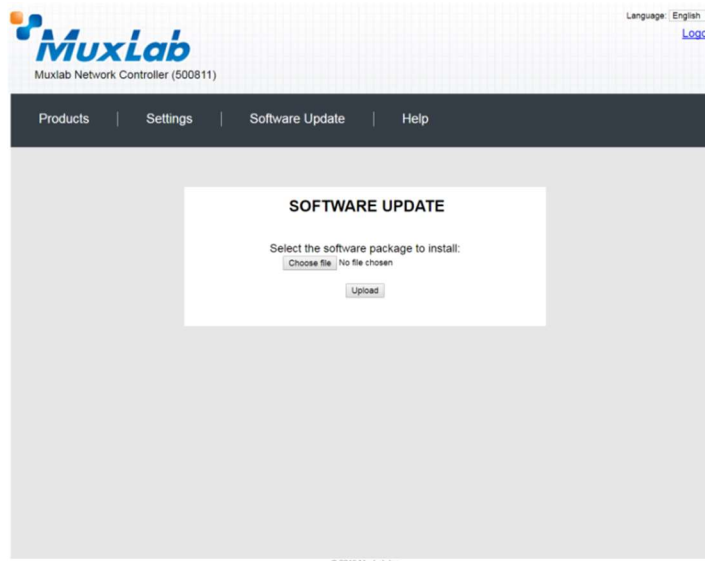


Figure 114: Software Update Screen

Help Screen

The **Help** screen offers quick contact information for customer support and all other inquiries (Figure 115).

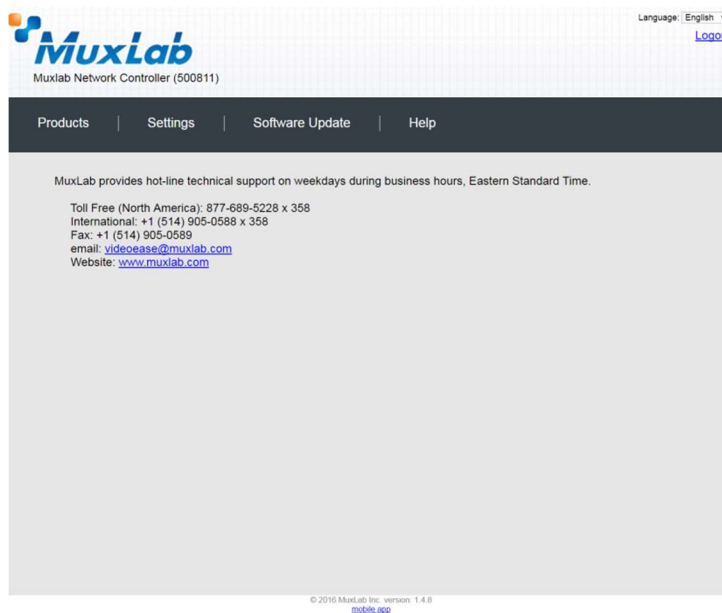


Figure 115: Help Screen

Extender Model 500755

Product Screen

Once the user has logged in, the **Products** screen will appear (Figure 116).

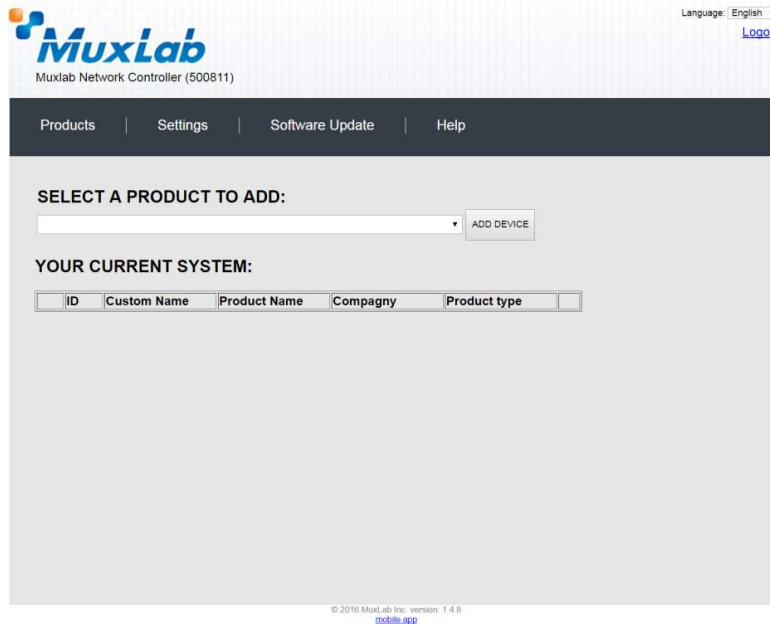


Figure 116: Products Screen – Initial View

In the **SELECT A PRODUCT TO ADD:** drop down box, select **Hdmi Over IP (500752/753/754/755/756)** and then click on **ADD DEVICE** (Figure 117).

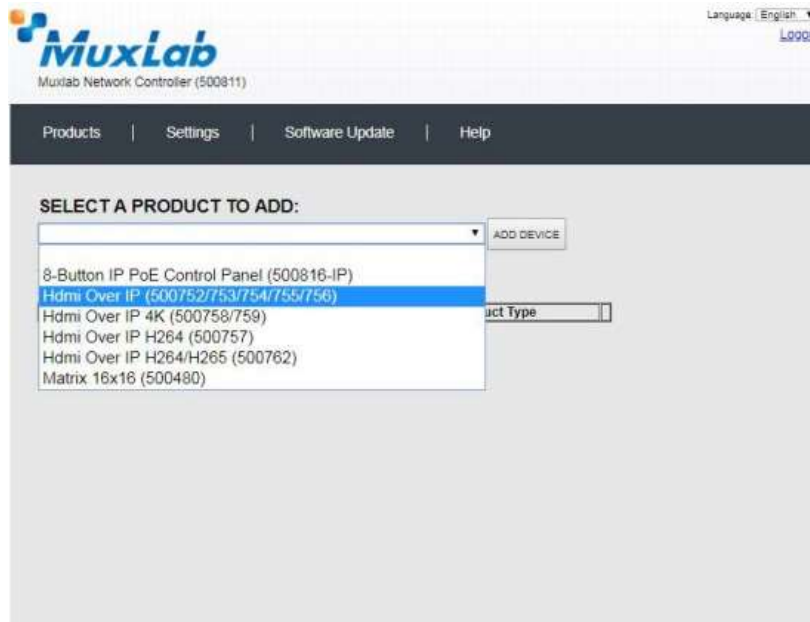


Figure 117: Products Screen – Selecting a Product

A dialog box appears asking the user to provide a custom name for the selected product (Figure 118). The user then types a name in the **Custom Name:** field and clicks on **OK**. Note that if the user decides to click on **CANCEL**, the previous screen appears (Figure 117), without a product being added.

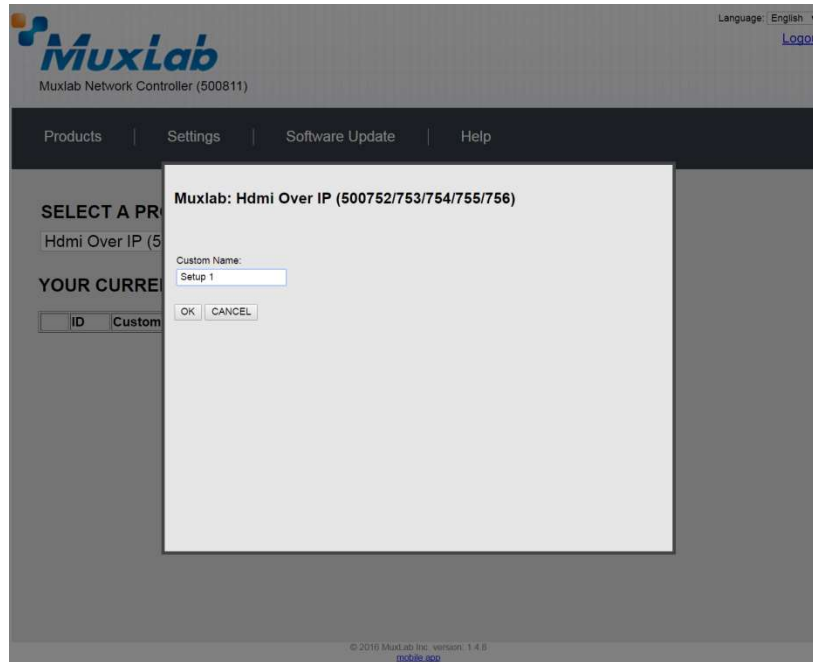


Figure 118: Products Screen – Naming a Product

The custom name has been added to **YOUR CURRENT SYSTEM** (Figure 119).

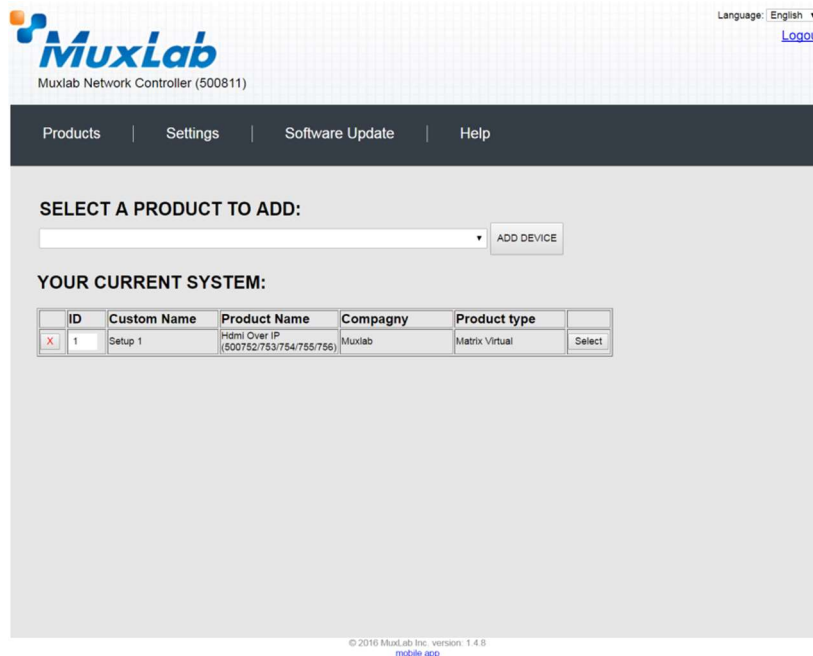


Figure 119: Products Screen – Your Current System Selection

The user can change the ID of each row by modifying the **ID** field. The user can also delete the entire row completely by clicking the **X** next to it.

To configure a given product, the user clicks on **Select**, which brings up a multi-tabbed screen (Figure 120).

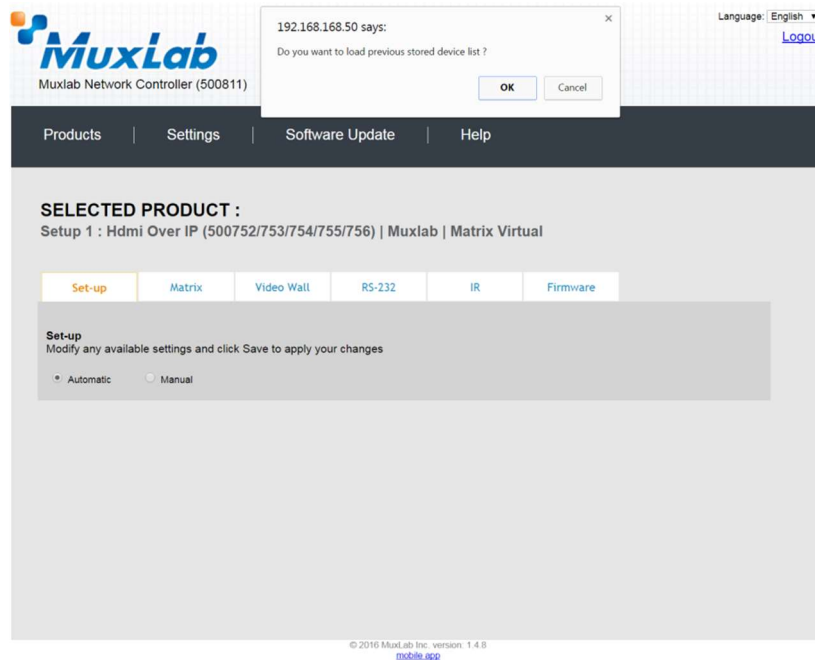


Figure 120: Products Screen – Load Dialog

By default, a dialog appears asking the user to load a previously saved device list (in case such a list has already been stored). This dialog will appear even if no device list has been previously saved.

Six tabs appear within the **Products** screen:

1. Set-up
2. Matrix
3. Video Wall
4. RS-232
5. IR
6. Firmware

1. Products Screen - Set-up Tab

The **Set-up** tab offers the user two options for the type of set-up allowed: **Automatic** or **Manual**.

Automatic means that the software will scan the system for every dip-switch enabled device. The software will then override its manual dip-switch address settings and place these units under software address control. (Automatic is recommended).

Manual means that the software will allow the manual dip-switch address settings of any found device to remain active.

After selecting **Automatic** or **Manual**, click on **Launch discovery** (Figure 121).

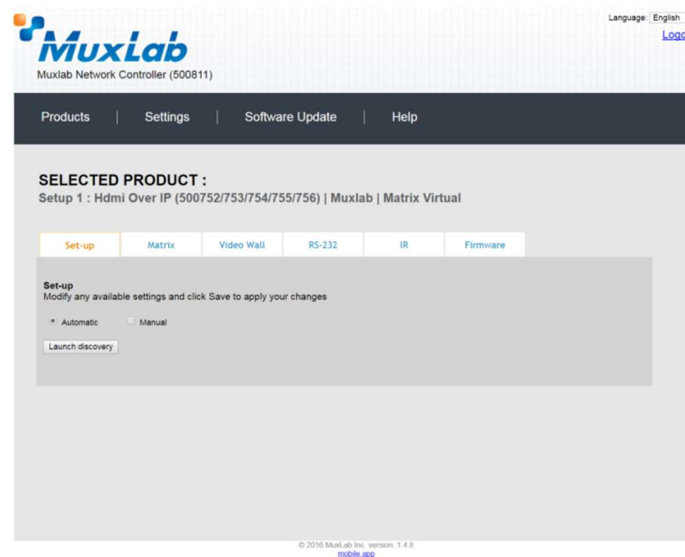


Figure 121: Products Screen – Set-up Tab

Note: The term “Display” is used in this 500755 section to reference the sink side (RX), the actual sink devices are powered speakers or an amplifier.

The system will scan the network for all source side devices (500755 “transmitters”) and display side devices (500755 “receivers”), and will display the scan results in tabular form (Figure 122). Note that there is only one type of 500755 Extender, which is a *Transceiver*. Each 500755 Transceiver is configured either as a transmitter or a receiver. This is done by toggling Dip Switch 4 on each Transceiver to either the Tx (transmitter) or Rx (receiver) position.

Each 500755 transmitter/receiver can be assigned an arbitrary descriptive name, normally reflecting the end device that it is terminated to. To change the name of any speaker/amplifier sink (RX) or audio source (TX) device, click the **Name** field to edit its contents. Several **Name** fields can be edited before saving changes, as shown in Figure 123 (orange highlighted fields).

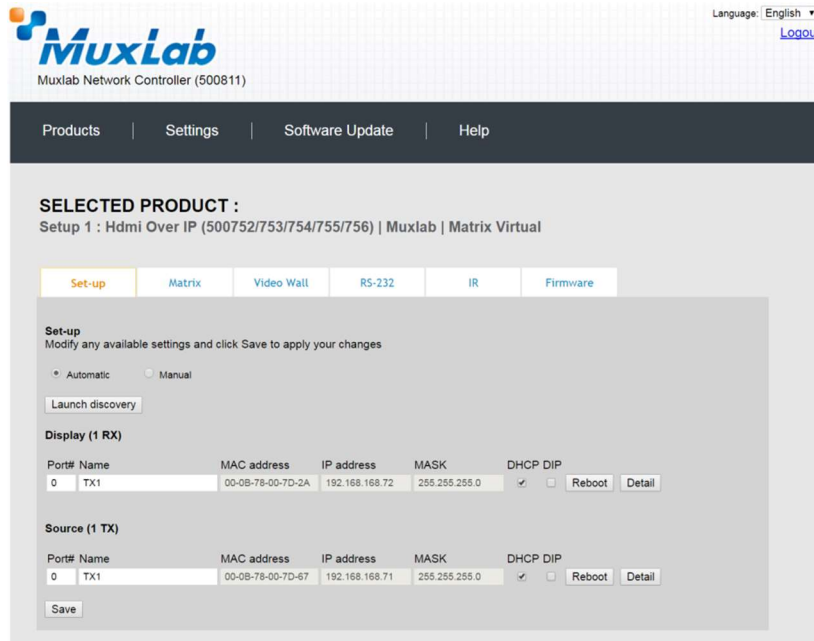


Figure 122: Products Screen – Set-up Tab

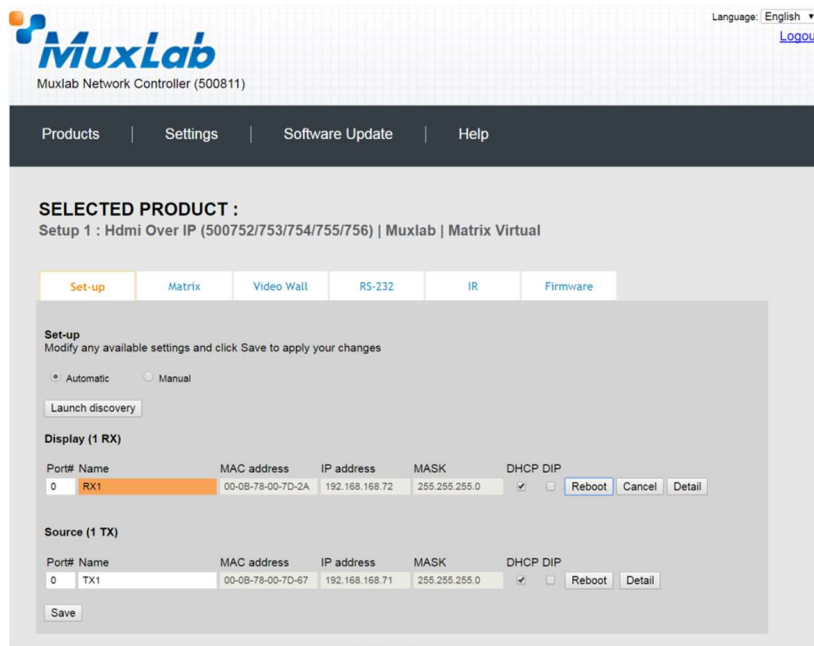


Figure 123: Name Editing

To save all name changes, click on **Save**. A green UPDATED tag will appear next to newly changed names (Figure 124).

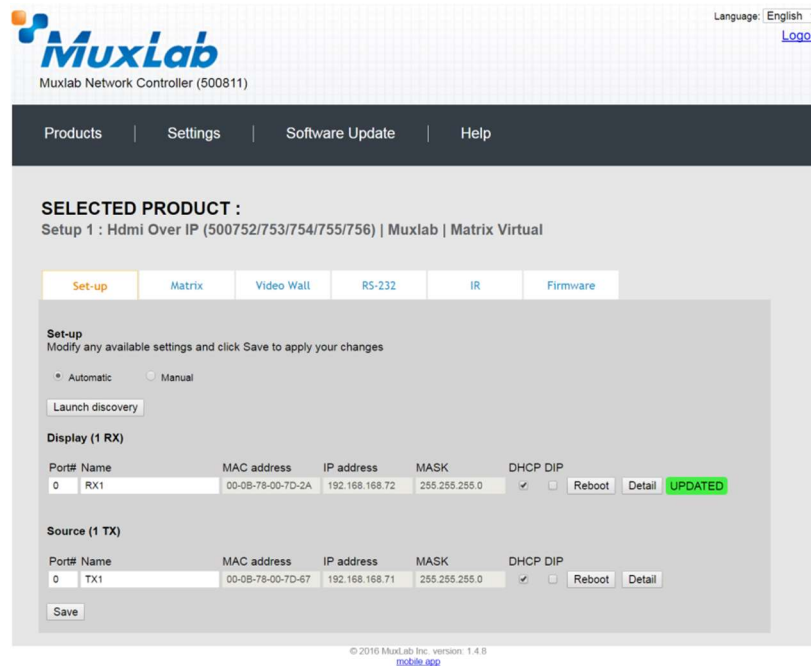


Figure 124: Saving Name Changes

To view and modify component parameters, click on the **Detail** button next to the given component. A dialog appears (Figure 125).



Figure 125: Device Detail Dialog

2. Products Screen - Matrix Tab

The **Matrix** tab of the **Products** screen allows the user to connect any Display (sink device) to any source. The user has the option of using **Presets** to save connection schemes (“Presets”), as well as to edit and delete existing presets (Figure 126).

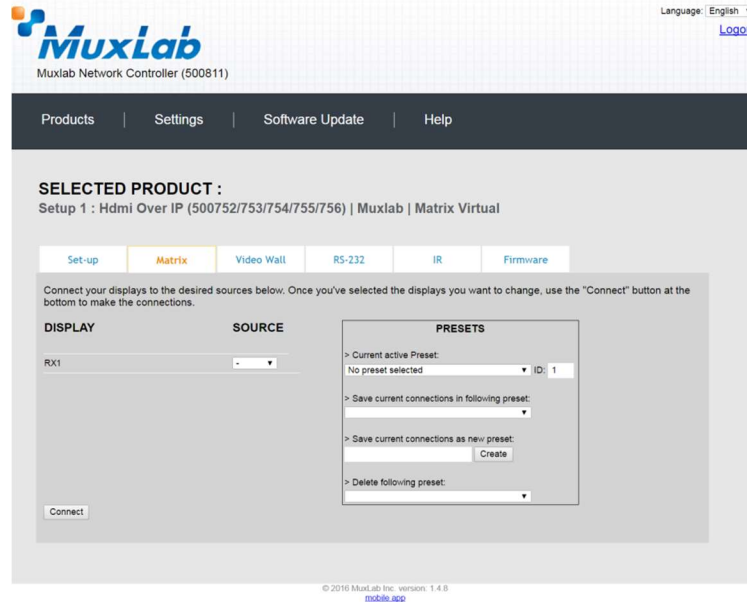


Figure 126: Matrix Tab

To connect a sink to a source, the user first clicks on the drop-down list next to the given sink (for example “RX1”) and selects which source to connect it to, such as “Audio 1” (Figure 127).

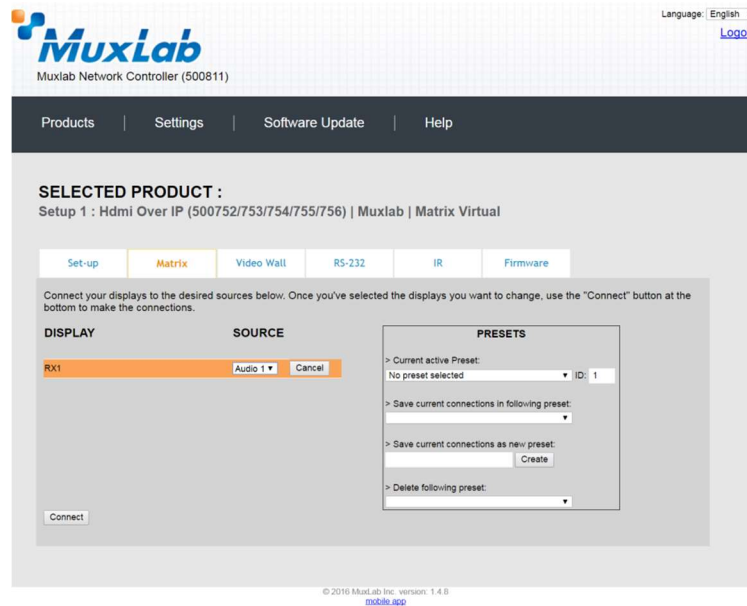


Figure 127: Change Connection

Once the selection is made (the user can change any or all connections between sinks and sources), the user clicks on **Connect** to finalize the change. A green SUCCESS tag will appear next to the new or changed connection (Figure 128).

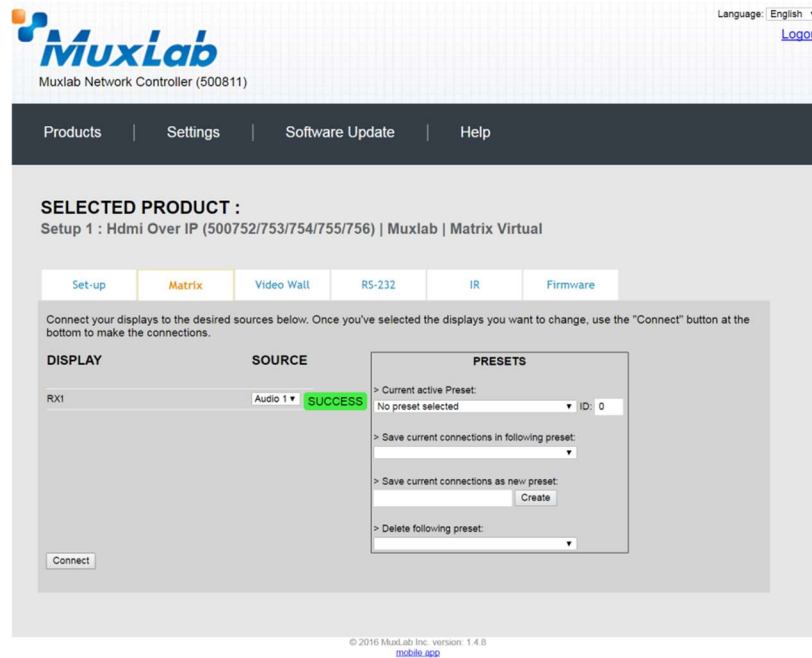


Figure 128: Change Successful

To create a new preset, the user clicks the > **Save current connections as new preset** field (Figure 129) and types a name. This assigned preset name will be linked to the existing connection scheme being shown within the **Matrix** tab.

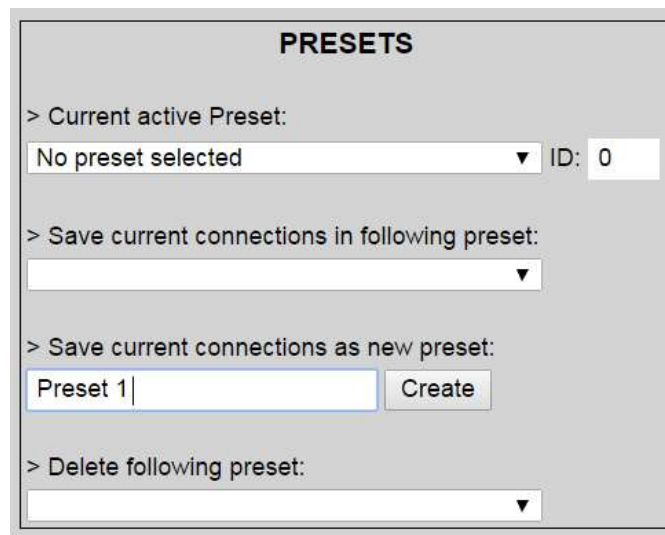


Figure 129: Create New Preset

To save this preset, the user clicks on **Create**. A green SUCCESS tag will appear next to the > **Save current connections as new preset** field and the newly created preset becomes the **Current active Preset** (Figure 130).

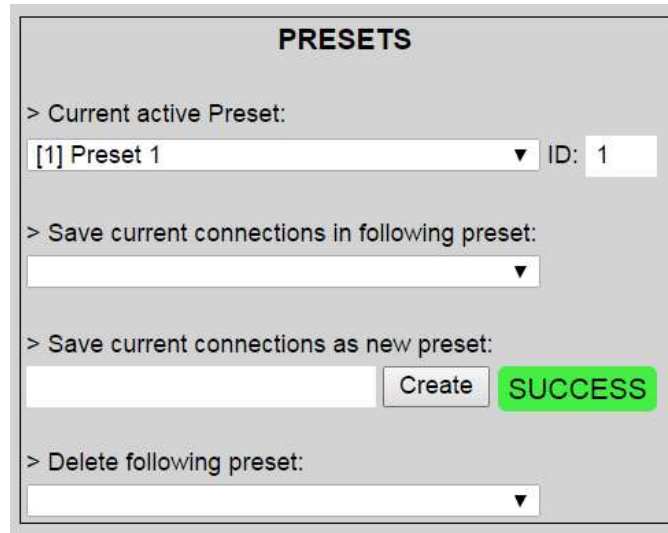


Figure 130: Confirmation of New Preset

To delete a preset, the user clicks the > **Delete following preset** drop-down box and selects a preset name from the list shown (Figure 131).

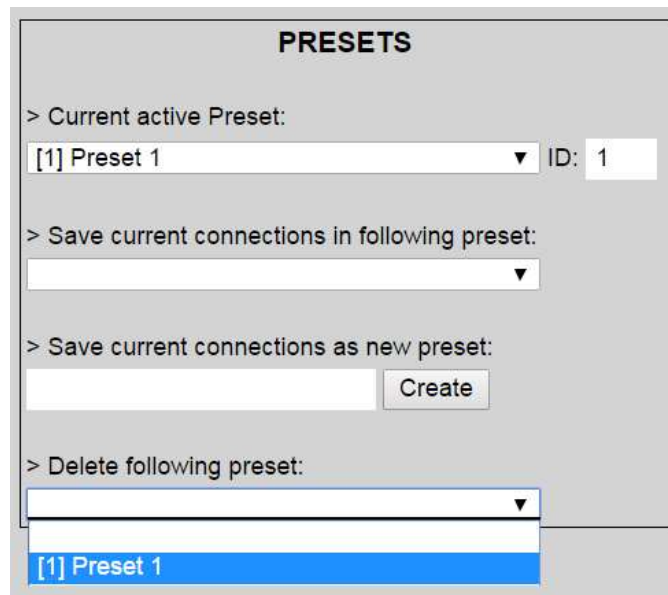


Figure 131: Delete Preset

Once selected, a dialog will appear asking the user to confirm the deletion request (Figure 132).

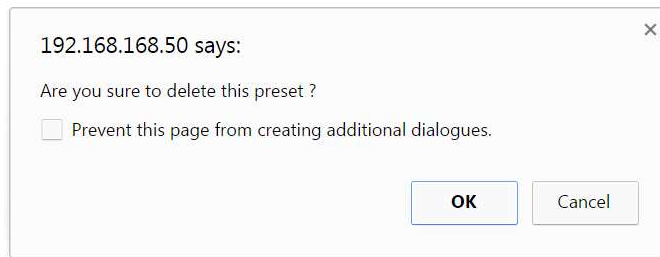


Figure 132: Confirmation of Deleted Preset

Click on **OK**. The preset will be deleted and a green SUCCESS tag will appear next to the **> Delete following preset** field (Figure 133).


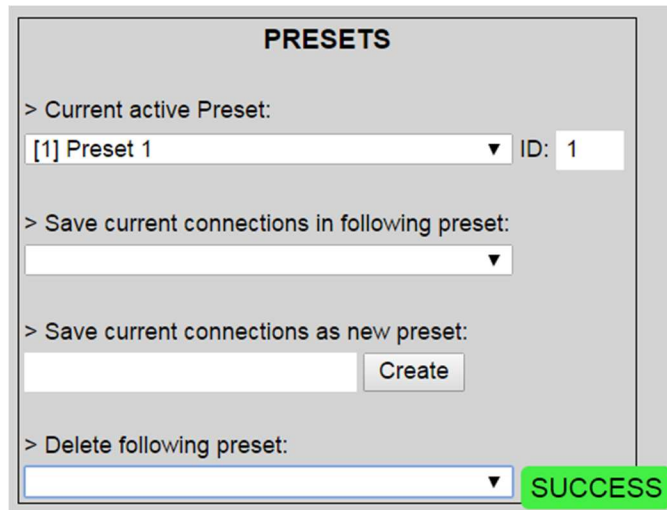


Figure 133: Confirmation of Deleted Preset

To save the current matrix configuration under an existing **Preset** name, click on > **Save current connection in following preset** drop-down box and selects a preset name (Figure 134).

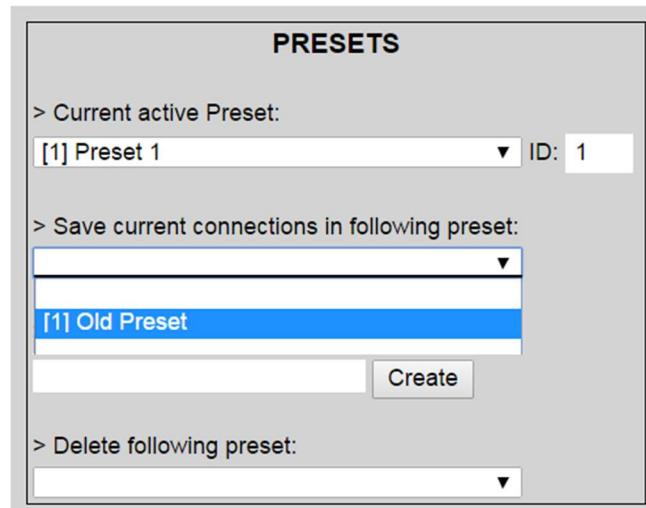


The screenshot shows a window titled "PRESETS". It contains three main sections:

- > Current active Preset:** A dropdown menu showing "[1] Preset 1" and an "ID: 1" field.
- > Save current connections in following preset:** A dropdown menu is open, showing a list of options. "[1] Old Preset" is highlighted in blue. Below the dropdown is a "Create" button.
- > Delete following preset:** A dropdown menu.

Figure 134: Change Current Active Preset

Once selected, the **Preset** will be saved and a green SUCCESS tag will appear next to the > **Save current connections in following preset** field (Figure 135).

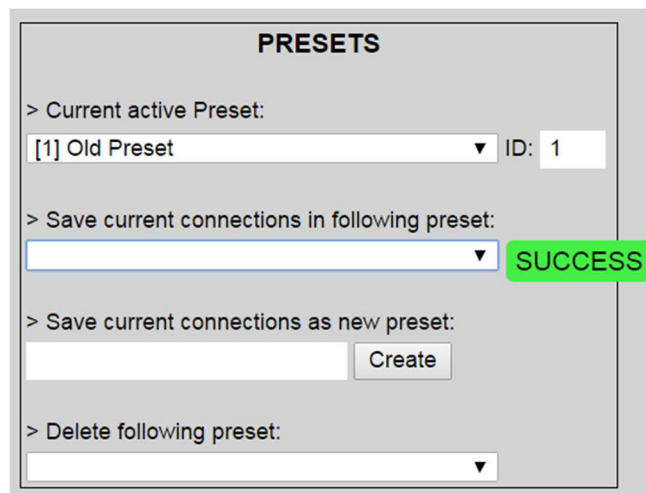

The screenshot shows the same "PRESETS" window as Figure 134, but with the following changes:

- > Current active Preset:** The dropdown menu now shows "[1] Old Preset".
- > Save current connections in following preset:** The dropdown menu is now empty. A green "SUCCESS" tag is displayed to the right of the dropdown.
- > Save current connections as new preset:** A new section with an empty dropdown menu and a "Create" button.
- > Delete following preset:** The dropdown menu is empty.

Figure 135: Confirmation of Changed Preset Name

In order to activate an existing **Preset**, select > **Current active Preset**, and select the **Preset** name from the drop-down box and the **Preset** will become active. The active **Preset** will also be displayed in the **Current active Preset** field.

3. Products Screen - Video Wall Tab

MuxLab's Extender 500755 does not support the Video Wall feature. Clicking on this tab will display the following screen (Figure 136).

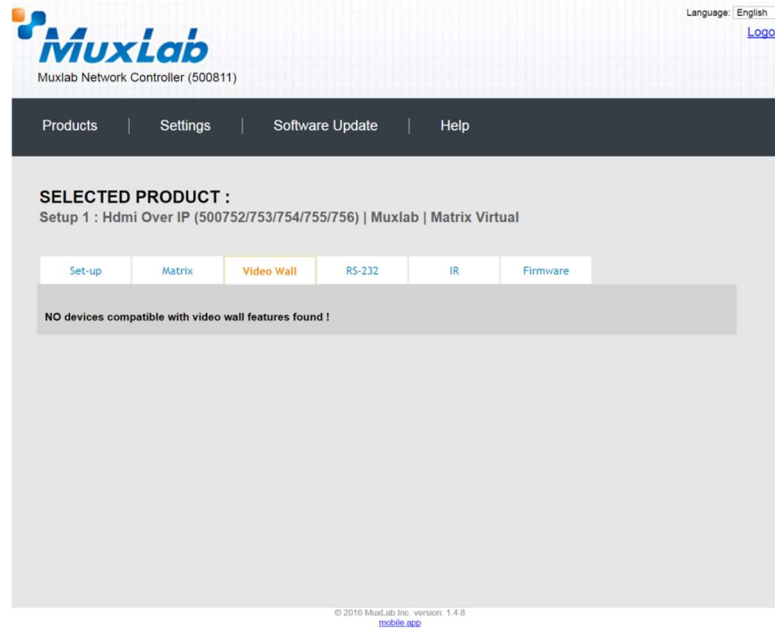


Figure 136: Video Wall Tab

For more information on the Video Wall tab and its features, refer to the section of this manual dealing with MuxLab Extender 500754 and MuxLab Extender 500759.

4. Products Screen - RS-232 Tab

The **RS-232** tab of the **Products** screen enables the user to send RS-232 commands to any MuxLab transceiver (transmitter or receiver) (Figure 137). This is done either through the Network Controller or directly by connecting a PC to the RS-232 port of any transmitter or receiver.

Figure 137: RS-232 Tab

When sending RS-232 commands through the Network Controller, the user first selects the device that the RS-232 commands will be sent to. This is done by clicking on the **Select a device** drop-down list and making a selection (Figure 138). The IP Feedback field should also contain the IP address of the Network Controller.

Figure 138: RS-232 Tab - Selecting a Device

Once a device is selected, the **Data to send in HEX** field becomes enabled. In the above example, source “Audio 1” was chosen as the selected device (but a transceiver set as a receiver connected to sink equipment could have also been selected), meaning that a command sent to source “Audio 1” will travel from the Network Controller to the Ethernet Switch, and from the Ethernet Switch to the transceiver (set as a transmitter) connected to the “Audio 1” source. The transceiver (set as a transmitter) will then send the specified data command to source “Audio 1”.

The **Data feedback received in HEX** field displays the HEX version the feedback sent to the Network Controller by source “Audio 1”.

When sending RS-232 commands directly from a PC to any transceiver (transmitter or receiver), the user must set up a pass-through system for RS-232 signals to be sent to and from devices. This requires two steps:

- (1) The user first tells the local device (the device connected directly to the PC) the IP address of the far device (where the RS-232 commands are being sent). This is done by first clicking on the **Select a device** drop-down list and selecting the local device from the list, and then inputting the IP address of the far device in the **IP Feedback** field. The user then clicks on **Save**.
- (2) The user then tells the far device the IP address of the local device (if feedback from the far device is required). This is done by first clicking on the **Select a device** drop-down list and selecting the far device from the list, and then inputting the IP address of the near device in the **IP Feedback** field. The user then clicks on **Save**.

5. Products Screen - IR Tab

The **IR** tab of the **Products** screen enables the user to send IR commands to a MuxLab transceiver (transmitter or receiver) IR port (Figure 139) via the Network Controller. IR pass-through mode is also supported using an IR handheld remote as the control source.

MuxLab
Muxlab Network Controller (500811)

Language: English [Logout](#)

Products | Settings | Software Update | Help

SELECTED PRODUCT :
Setup 1 : Hdmi Over IP (500752/753/754/755/756) | Muxlab | Matrix Virtual

Set-up | Matrix | Video Wall | RS-232 | **IR** | Firmware

Update your device's IR settings here.

Select a device:

- IR Mode:
- IP Feedback:

Save

Data to send in HEX (ex: A013B155C5)

Send

IR code received in HEX

Get IR code

© 2016 MuxLab Inc. version 1.4.8
[mobile app](#)

Figure 139: IR Tab

When sending IR commands through the Network Controller, the user first selects the device that the IR commands will be sent to. This is done by clicking on the **Select a device** drop-down list and making a selection (Figure 140).

MuxLab
Muxlab Network Controller (500811)

Language: English [Logout](#)

Products | Settings | Software Update | Help

SELECTED PRODUCT :
Setup 1 : Hdmi Over IP (500752/753/754/755/756) | Muxlab | Matrix Virtual

Set-up | Matrix | Video Wall | RS-232 | **IR** | Firmware

Update your device's IR settings here.

Select a device:

- IR Mode:
- IP Feedback:

Save

Data to send in HEX (ex: A013B155C5)

Send

IR code received in HEX

Get IR code

© 2016 MuxLab Inc. version 1.4.8
[mobile app](#)

Figure 140: IR Tab – Selecting a Device

The 500755 transceiver can be configured as a transmitter or receiver and supports a bi-directional IR port. The below example is for transmitting IR from the sink side (display/powered speaker-amplifier side) to the source side, but the 500755 can be configured to transmit IR from the source to the sink side as well.

Once a device is selected, the **Data to send in HEX** field becomes enabled. In the above example, source “Audio 1” was chosen as the selected device, meaning that a command sent to source “Audio 1” will travel from the Network Controller to the Ethernet Switch, then from the Ethernet Switch to the transceiver (set as a transmitter) connected to source “Audio 1”. The transceiver (set as a transmitter) will then send the specified IR data command to source “Audio 1” via the IR Emitter connected to the transceiver (set as a transmitter) IR out port.

The **IR code received in HEX** field displays the HEX version of an IR command send from a handheld remote to an IR transceiver (set as a receiver) IR In port and attached IR Sensor.

When sending IR commands directly from an IR Source device, such as an IR handheld remote, from 500755 transceiver (set as a receiver) through to a transceiver (set as a transmitter), the user must set up a pass-through for IR signals to be sent to and from devices. This requires the following step:

The user must tell the 500755 transceiver (set as a receiver, and being the device near the IR handheld remote with an attached IR Sensor) the IP address of the 500755 transceiver (set as a transmitter, and where the IR commands are being sent, which has an attached IR Emitter). This is done by first clicking on the **Select a device** drop-down list and selecting the local device from the list, and then inputting the IP address of the far device in the **IP Feedback** field. The user then clicks on **Save**.

6. Products Screen - Firmware Tab

The **Firmware** tab of the Products screen enables the user to update the firmware for MuxLab transmitters and receiver (Figure 141).

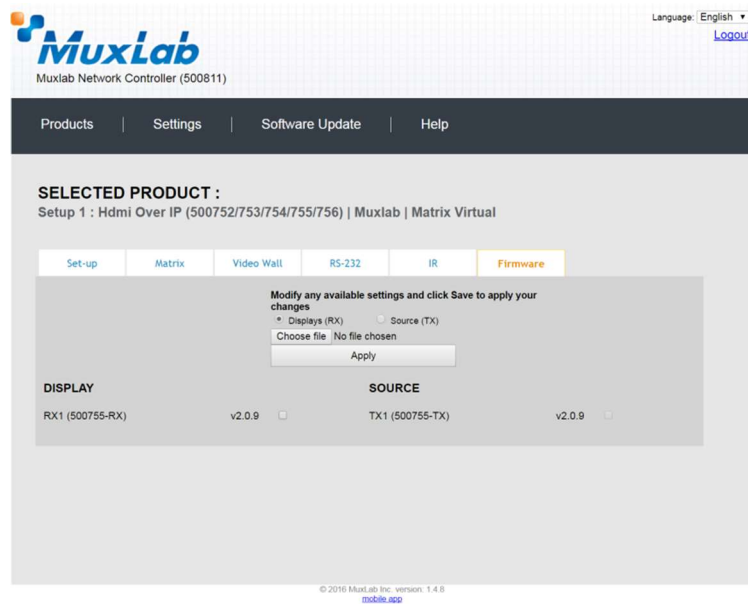



Figure 141: Firmware Tab

The user first selects either **Display (RX)** which is the sink unit (connected to powered speakers or an amplifier), or **Source (TX)**, then chooses the firmware update file to upload to the given device. Once the file is selected, the user checks the box next to the given device (listed under **DISPLAY** and **SOURCE**) targeted for firmware upgrade, and then clicks **Apply**.

Settings Screen

The **Settings** screen contains two tabs: **Network** and **Administration**.

The **Network** tab (Figure 142) is used to change the IP address of the MuxLab Network Controller, the network mask, as well as the router IP address. It also allows the user to enable or disable DHCP.

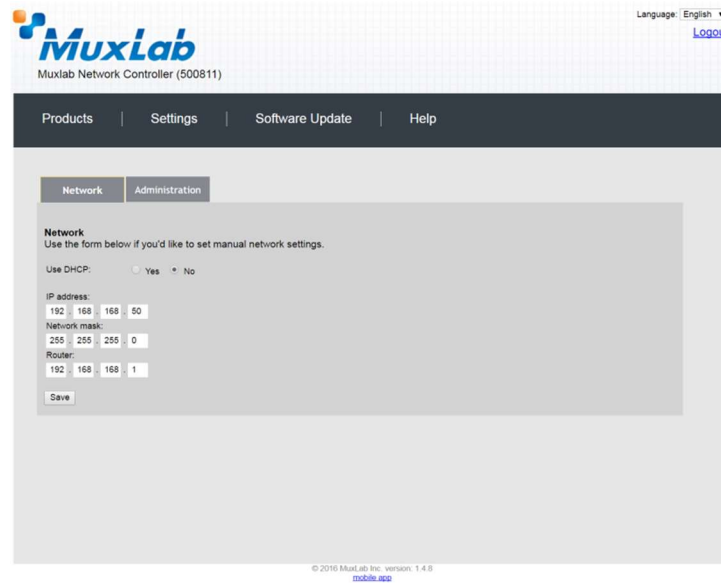

The screenshot shows the MuxLab Network Controller (500811) interface. The top navigation bar includes 'Products', 'Settings', 'Software Update', and 'Help'. The 'Settings' tab is active, and the 'Network' sub-tab is selected. The 'Network' section contains a form for manual network settings. It includes a 'Use DHCP' toggle set to 'No'. Below this are input fields for 'IP address' (192, 168, 168, 50), 'Network mask' (255, 255, 255, 0), and 'Router' (192, 168, 168, 1). A 'Save' button is located at the bottom of the form. The footer indicates the version is 1.4.8 and provides a link to the mobile app.

Figure 142: Settings Screen: Network Tab

The **Administration** tab is used to create or delete user accounts, change passwords, restore data, backup data, and retrieve logs (Figure 143).



The screenshot shows the MuxLab Network Controller (500811) interface. The top navigation bar includes 'Products', 'Settings', 'Software Update', and 'Help'. The 'Settings' tab is active, and the 'Administration' sub-tab is selected. The 'Administration' section contains several functional areas: 'User Accounts' with a dropdown to 'Create a new User Account Or select a User to edit:', fields for 'User Name', 'new password', 'Confirm new password', and 'User Type', and buttons for 'Create', 'Update', and 'Delete'; 'Restore data' with a 'Specify file:' field and a 'Restore' button, accompanied by a warning: 'WARNING ! You MUST FIRST set the IP address of this controller using the same as the controller this backup file come from !!!'; 'Backup data' with a 'Backup' button; and 'Get Logs' with 'Download Logs' and 'Delete Logs' buttons. The footer indicates the version is 1.4.8 and provides a link to the mobile app.

Figure 143: Settings Screen: Administration Tab

Software Update Screen

The **Software Update** enables the user to update MuxLab Network Controller software (Figure 144). This software is available on MuxLab's website (www.muxlab.com). Download the software to the local PC before performing the update.

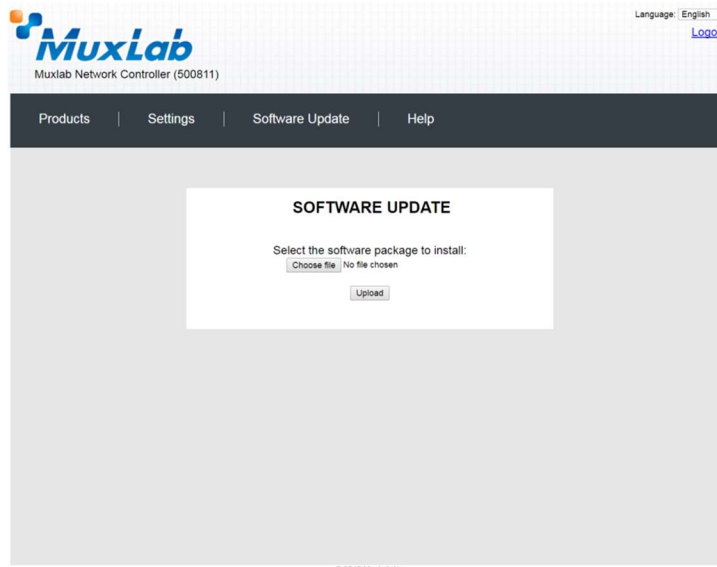


Figure 144: Software Update Screen

Help Screen

The **Help** screen offers quick contact information for customer support and all other inquiries (Figure 145).



Figure 145: Help Screen

Extender Model 500756

Product Screen

Once the user has logged in, the **Products** screen will appear (Figure 146).

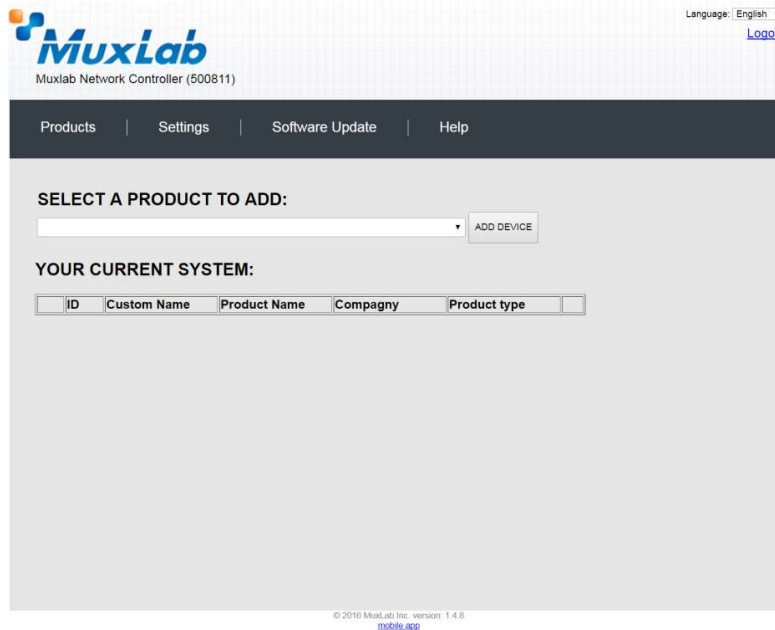


Figure 146: Products Screen – Initial View

In the **SELECT A PRODUCT TO ADD:** drop down box, select **Hdmi Over IP (500752/753/754/755/756)** and then click on **ADD DEVICE** (Figure 147).

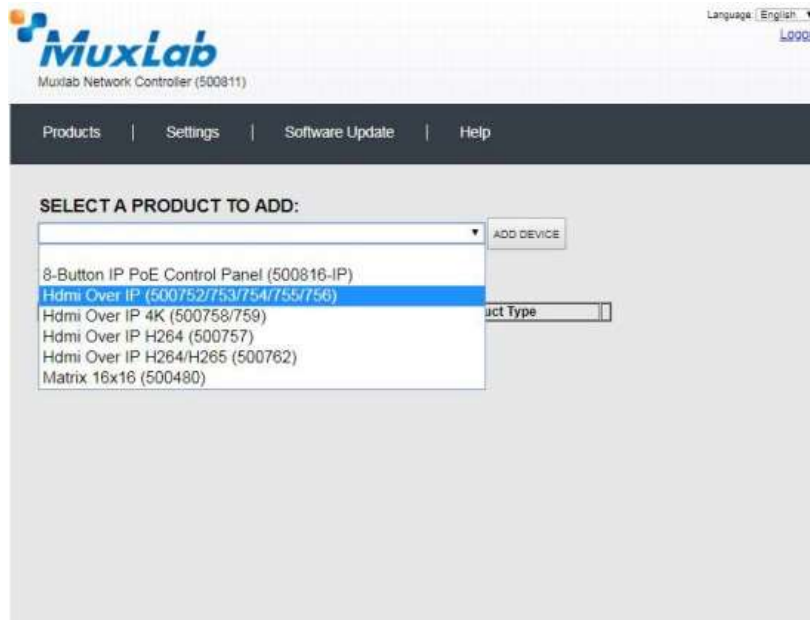


Figure 147: Products Screen – Selecting a Product

A dialog box appears asking the user to provide a custom name for the selected product (Figure 148). The user then types a name in the **Custom Name:** field and clicks on **OK**. Note that if the user decides to click on **CANCEL**, the previous screen appears (Figure 147), without a product being added.

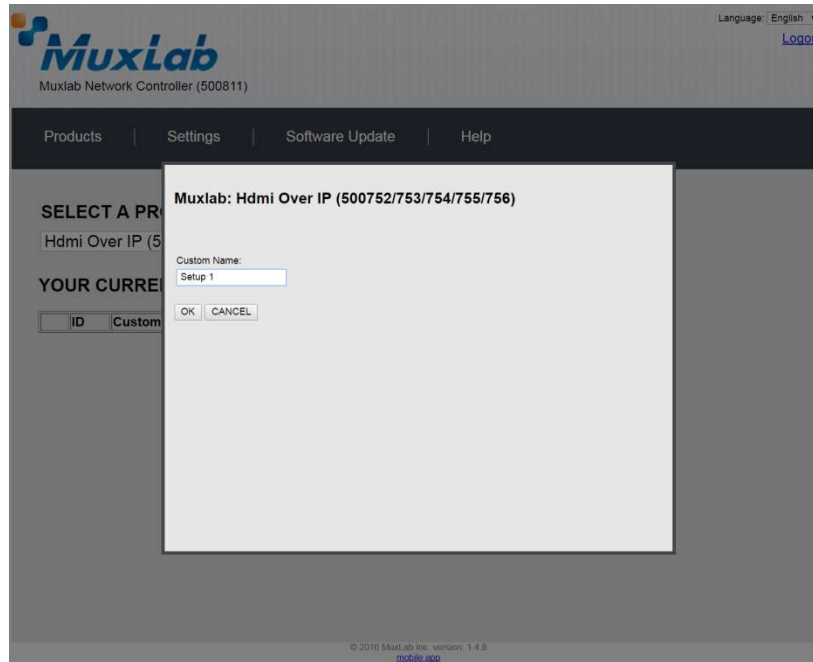


Figure 148: Products Screen – Naming a Product

The custom name has been added to **YOUR CURRENT SYSTEM** (Figure 149).

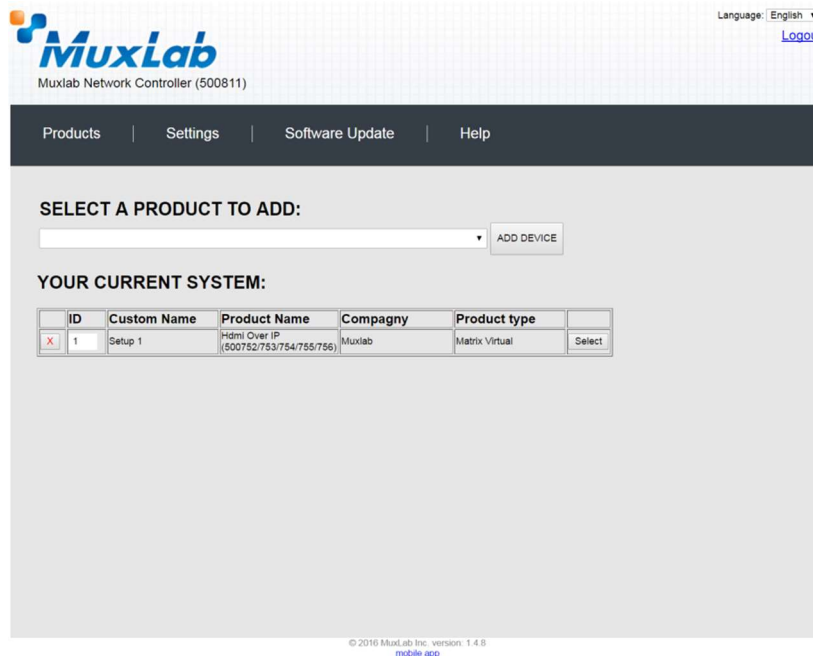


Figure 149: Products Screen – Your Current System Selection

The user can change the ID of each row by modifying the **ID** field. The user can also delete the entire row completely by clicking the **X** next to it.

To configure a given product, the user clicks on **Select**, which brings up a multi-tabbed screen (Figure 150).

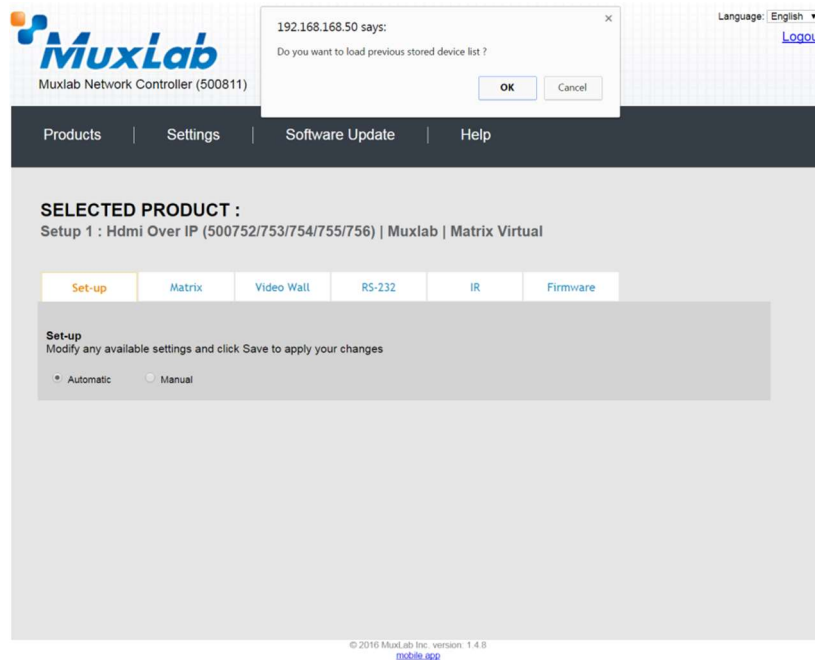


Figure 150: Products Screen – Load Dialog

By default, a dialog appears asking the user to load a previously saved device list (in case such a list has already been stored). This dialog will appear even if no device list has been previously saved.

Six tabs appear within the **Products** screen:

1. Set-up
2. Matrix
3. Video Wall
4. RS-232
5. IR
6. Firmware

1. Products Screen - Set-up Tab

The **Set-up** tab offers the user two options for the type of set-up allowed: **Automatic** or **Manual**.

Automatic means that the software will scan the system for every dip-switch enabled device. The software will then override its manual dip-switch address settings and place these units under software address control. (Automatic is recommended).

Manual means that the software will allow the manual dip-switch address settings of any found device to remain active.

After selecting **Automatic** or **Manual**, click on **Launch discovery** (Figure 151).

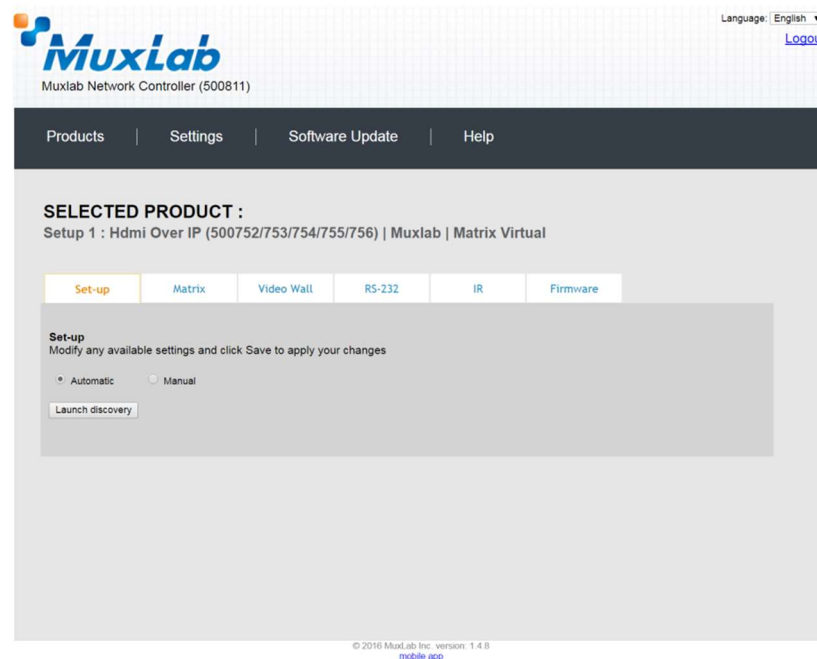


Figure 151: Products Screen – Set-up Tab

The system will scan the network for all source side devices (500756 transmitters) and display side devices (500756 receivers), and will display the scan results in tabular form (Figure 152).

Each 500756 transmitter and receiver can be assigned an arbitrary descriptive name, normally reflecting the end device that it is terminated to. To change the name of any Display (RX) or Source (TX) device, click the **Name** field to edit its contents. Several **Name** fields can be edited before saving changes, as shown in Figure 153 (orange highlighted fields).

MuxLab Network Controller (500811)

Language: English [Logout](#)

Products | Settings | Software Update | Help

SELECTED PRODUCT :
Setup 1 : Hdmi Over IP (500752/753/754/755/756) | Muxlab | Matrix Virtual

Set-up | Matrix | Video Wall | RS-232 | IR | Firmware

Set-up
Modify any available settings and click Save to apply your changes

Automatic Manual

[Launch discovery](#)

Display (4 RX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP		
0	RX-00-0B-78-00-7D-E2	00-0B-78-00-7D-E2	192.168.168.64	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-00-0B-78-00-7E-59	00-0B-78-00-7E-59	192.168.168.60	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-00-0B-78-00-7E-5E	00-0B-78-00-7E-5E	192.168.168.65	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-00-0B-78-00-7E-63	00-0B-78-00-7E-63	192.168.168.63	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

Source (2 TX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP		
0	SDI Cam 1	00-0B-78-00-7D-D9	192.168.168.62	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	SDI Cam 2	00-0B-78-00-7D-0B	192.168.168.66	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

[Save](#)

© 2016 MuxLab Inc. version: 1.4.6 [mobile app](#)

Figure 152: Products Screen – Set-up Tab

MuxLab Network Controller (500811)

Language: English [Logout](#)

Products | Settings | Software Update | Help

SELECTED PRODUCT :
Setup 1 : Hdmi Over IP (500752/753/754/755/756) | Muxlab | Matrix Virtual

Set-up | Matrix | Video Wall | RS-232 | IR | Firmware

Set-up
Modify any available settings and click Save to apply your changes

Automatic Manual

[Launch discovery](#)

Display (4 RX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP		
0	RX-1	00-0B-78-00-7D-E2	192.168.168.64	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-2	00-0B-78-00-7E-59	192.168.168.60	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-3	00-0B-78-00-7E-5E	192.168.168.65	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-4	00-0B-78-00-7E-63	192.168.168.63	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

Source (2 TX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP		
0	SDI Cam 1	00-0B-78-00-7D-D9	192.168.168.62	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	SDI Cam 2	00-0B-78-00-7D-0B	192.168.168.66	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

[Save](#)

© 2016 MuxLab Inc. version: 1.4.6 [mobile app](#)

Figure 153: Name Editing

To save all name changes, click on **Save**. A green UPDATED tag will appear next to newly changed names (Figure 154).

MuxLab
Muxlab Network Controller (500811)

Language: English ▼
[Logout](#)

Products | Settings | Software Update | Help

SELECTED PRODUCT :
Setup 1 : Hdmi Over IP (500752/753/754/755/756) | Muxlab | Matrix Virtual

Set-up | Matrix | Video Wall | RS-232 | IR | Firmware

Set-up
Modify any available settings and click Save to apply your changes

Automatic Manual

Display (4 RX)

Port#	Name	MAC address	IP address	MASK	DHCP DIP		
0	RX-1	00-0B-78-00-7D-E2	192.168.168.64	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot Detail UPDATED
0	RX-2	00-0B-78-00-7E-59	192.168.168.60	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot Detail UPDATED
0	RX-3	00-0B-78-00-7E-5E	192.168.168.65	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot Detail UPDATED
0	RX-4	00-0B-78-00-7E-63	192.168.168.63	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot Detail UPDATED

Source (2 TX)

Port#	Name	MAC address	IP address	MASK	DHCP DIP		
0	SDI Cam 1	00-0B-78-00-7D-D9	192.168.168.82	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot Detail
0	SDI Cam 2	00-0B-78-00-7D-0B	192.168.168.66	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot Detail

© 2016 MuxLab Inc. version: 1.4.8
[mobile app](#)

Figure 154: Saving Name Changes

To view and modify component parameters, click on the **Detail** button next to the given component. A dialog appears (Figure 155).

Device Detail

Custom Name: RX-1
Model: 500756-RX
MAC Address: 00-0B-78-00-7D-E2
IP Address: 192.168.168.64 (DHCP: ON)
FW Version: 2.0.8
Group IP: 239.255.1.1
Video Resolution: 720P 60Hz
Audio Format: 44.1 khz

Select a screen image: No file chosen

Set output Video Format:

Auto-detect Resolution:
Show Screen Text:
Show Screen image:
-
DVI Compatibility On:

Figure 155: Device Detail Dialog

2. Products Screen - Matrix Tab

The **Matrix** tab of the **Products** screen allows the user to connect any Display to any Source. The user also has the option of using **Presets** to save connection schemes (“Presets”), as well as to edit and delete existing presets (Figure 156).

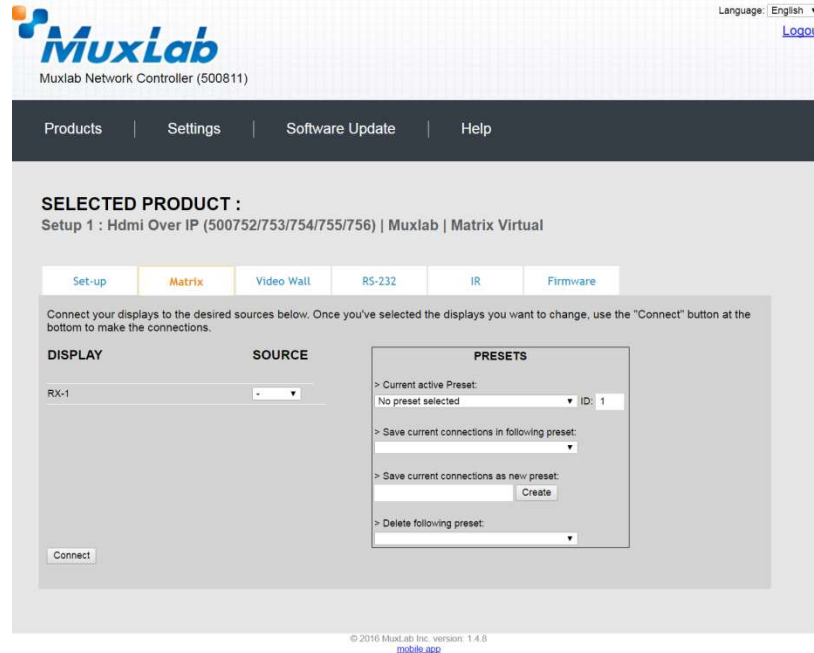


Figure 156: Matrix Tab

To connect a display to a source, the user first clicks on the drop-down list next to the given display (for example “RX-1”) and selects which source to connect it to (Figure 157).

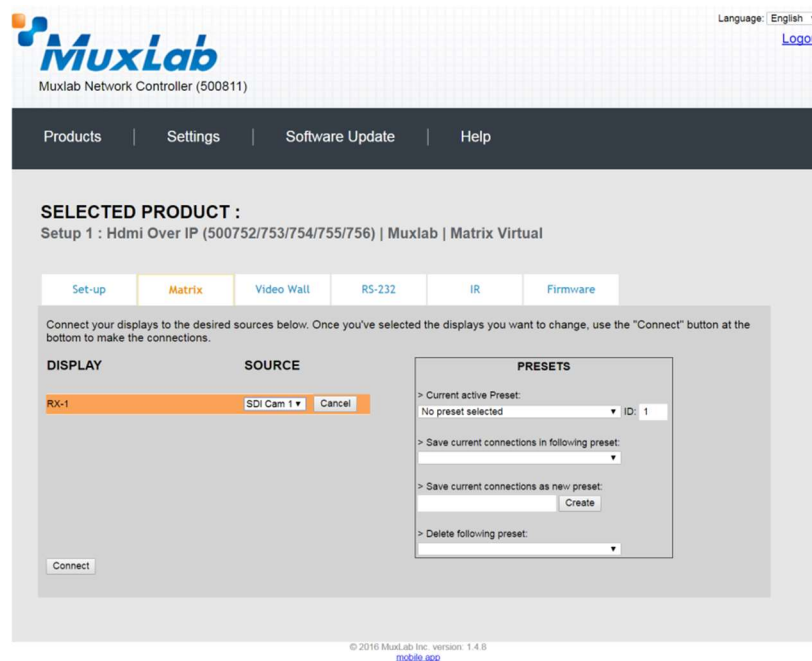


Figure 157: Change Connection

Once the selection is made (the user can change any or all connections between displays and sources), the user clicks on **Connect** to finalize the change. A green **SUCCESS** tag will appear next to the new or changed connection (Figure 158).

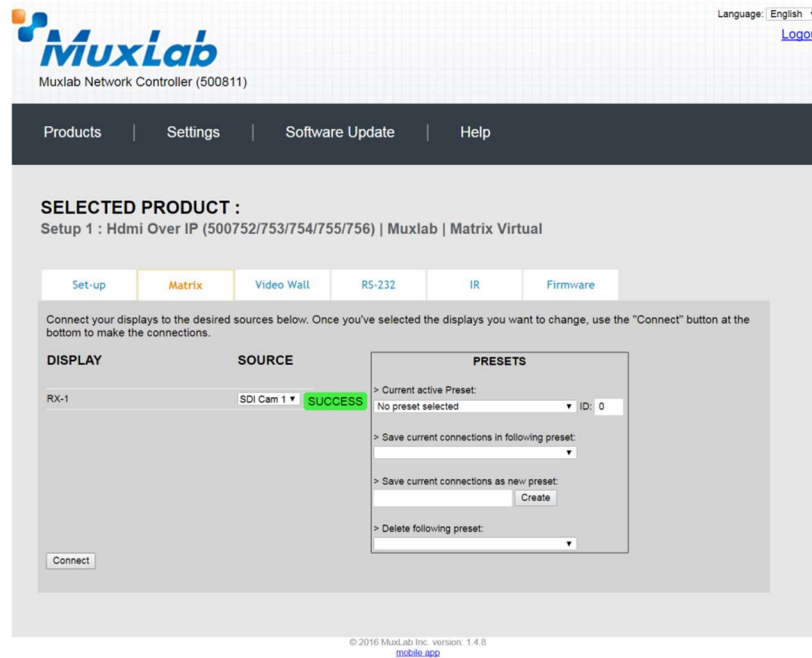


Figure 158: Change Successful

To create a new preset, the user clicks the > **Save current connections as new preset** field (Figure 159) and types a name. This assigned preset name will be linked to the existing connection scheme being shown within the **Matrix** tab.


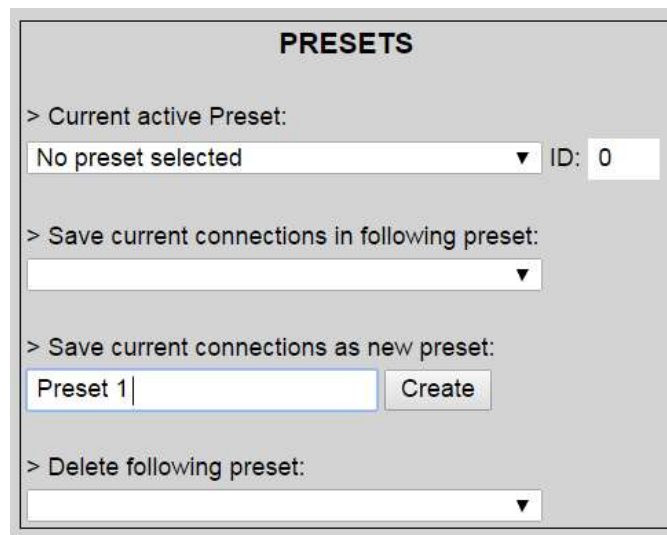


Figure 159: Create New Preset

To save this preset, the user clicks on **Create**. A green SUCCESS tag will appear next to the > **Save current connections as new preset** field and the newly created preset becomes the **Current active Preset** (Figure 160).

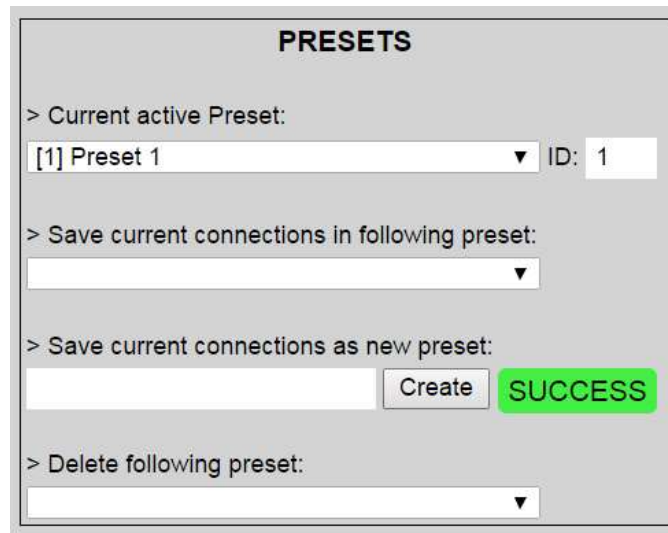


The screenshot shows a window titled "PRESETS" with the following elements:

- > Current active Preset: A dropdown menu showing "[1] Preset 1" and an "ID: 1" field.
- > Save current connections in following preset: An empty dropdown menu.
- > Save current connections as new preset: An empty text input field, a "Create" button, and a green "SUCCESS" tag.
- > Delete following preset: An empty dropdown menu.

Figure 160: Confirmation of New Preset

To delete a preset, the user clicks the > **Delete following preset** drop-down box and selects a preset name from the list shown (Figure 161).

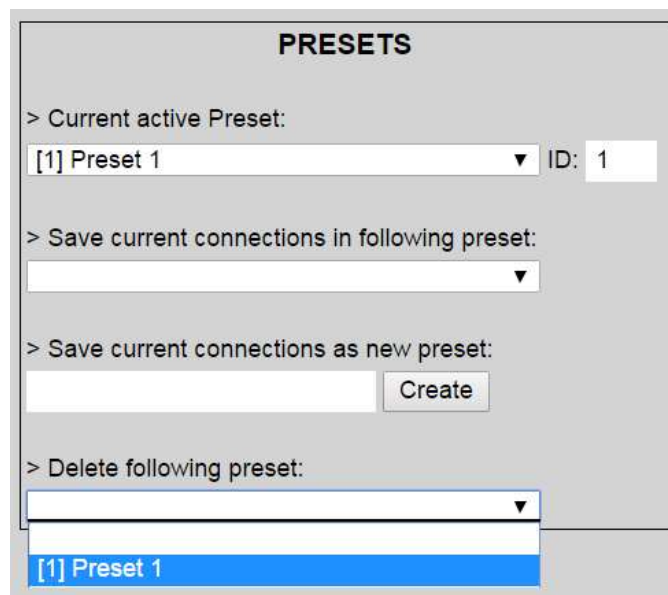

The screenshot shows the same "PRESETS" window as Figure 160, but with the "Delete following preset" dropdown menu open. The menu is currently empty, and the option "[1] Preset 1" is highlighted in blue at the bottom of the list. The "Create" button is visible but not active.

Figure 161: Delete Preset

Once selected, a dialog will appear asking the user to confirm the deletion request (Figure 162).

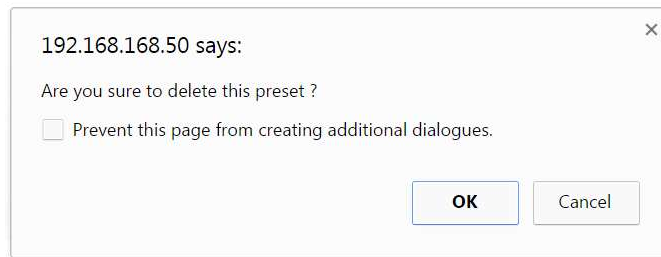


Figure 162: Confirmation of Deleted Preset

Click on **OK**. The preset will be deleted and a green SUCCESS tag will appear next to the **> Delete following preset** field (Figure 163).


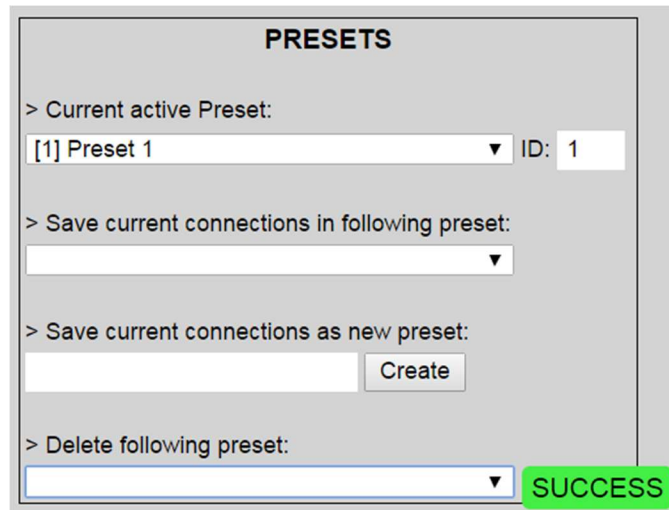


Figure 163: Confirmation of Deleted Preset

To save the current matrix configuration under an existing **Preset** name, click on > **Save current connection in following preset** drop-down box and selects a preset name (Figure 164).

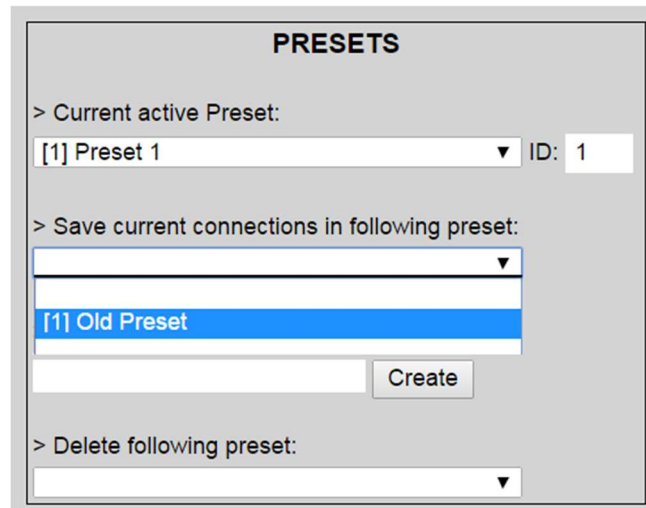


The screenshot shows a window titled "PRESETS". It contains three main sections:

- > Current active Preset:** A dropdown menu showing "[1] Preset 1" and an "ID: 1" field.
- > Save current connections in following preset:** A dropdown menu is open, showing a list of options. "[1] Old Preset" is highlighted in blue. Below the dropdown is a "Create" button.
- > Delete following preset:** A dropdown menu.

Figure 164: Change Current Active Preset

Once selected, the **Preset** will be saved and a green SUCCESS tag will appear next to the > **Save current connections in following preset** field (Figure 165).

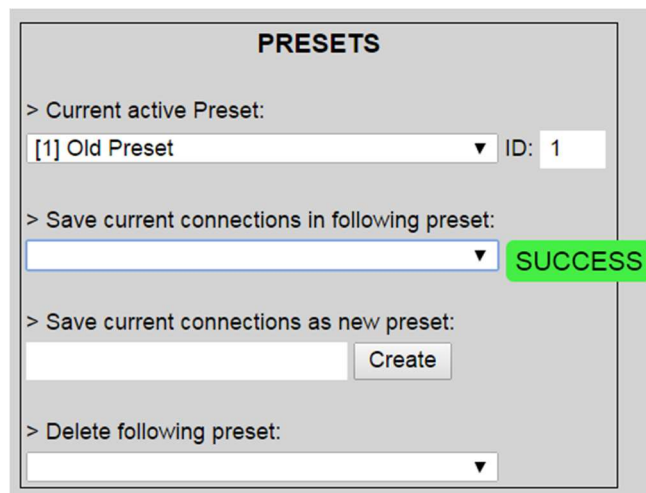

The screenshot shows the same "PRESETS" window as Figure 164, but with the following changes:

- > Current active Preset:** The dropdown menu now shows "[1] Old Preset".
- > Save current connections in following preset:** The dropdown menu is now empty. A green "SUCCESS" tag is displayed to the right of the dropdown.
- > Save current connections as new preset:** A new section with an empty dropdown menu and a "Create" button.
- > Delete following preset:** The dropdown menu is empty.

Figure 165: Confirmation of Changed Preset Name

In order to activate an existing **Preset**, select > **Current active Preset**, and select the **Preset** name from the drop-down box and the **Preset** will become active. The active **Preset** will also be displayed in the **Current active Preset** field.

3. Products Screen - Video Wall Tab

MuxLab's Extender 500756 does not support the Video Wall feature. Clicking on this tab will display the following screen (Figure 166).

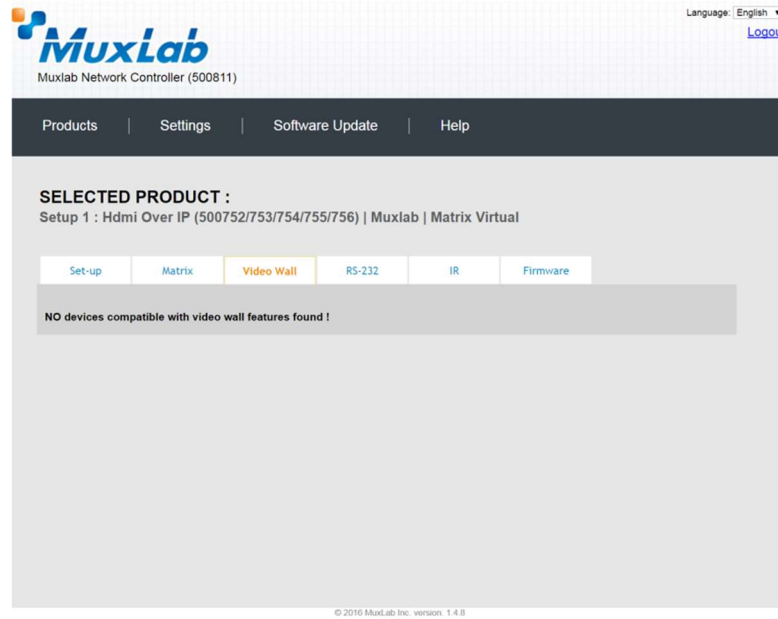


Figure 166: Video Wall Tab

For more information on the Video Wall tab and its features, refer to the section of this manual dealing with MuxLab Extender 500754 and MuxLab Extender 500759.

4. Products Screen - RS-232 Tab

The **RS-232** tab of the **Products** screen enables the user to send RS-232 commands to any MuxLab transmitter or receiver (Figure 167). This is done either through the Network Controller or directly by connecting a PC to the RS-232 port of any transmitter or receiver.

Figure 167: RS-232 Tab

When sending RS-232 commands through the Network Controller, the user first selects the device that the RS-232 commands will be sent to. This is done by clicking on the **Select a device** drop-down list and making a selection (Figure 168). The IP Feedback field should also contain the IP address of the Network Controller.

Figure 168: RS-232 Tab - Selecting a Device

Once a device is selected, the **Data to send in HEX** field becomes enabled. In the above example, SDI Cam 1 was chosen as the selected device (but a receiver connected to sink equipment could have also been selected), meaning that a command sent to SDI Cam 1 will travel from the Network Controller to the Ethernet Switch, and from the Ethernet Switch to the transmitter connected to SDI Cam 1. That transmitter will then send the specified data command to SDI Cam 1.

The **Data feedback received in HEX** field displays the HEX version the feedback sent to the Network Controller by SDI Cam 1.

When sending RS-232 commands directly from a PC to any transmitter or receiver, the user must set up a pass-through system for RS-232 signals to be sent to and from devices. This requires two steps:

- (1) The user first tells the local device (the device connected directly to the PC) the IP address of the far device (where the RS-232 commands are being sent). This is done by first clicking on the **Select a device** drop-down list and selecting the local device from the list, and then inputting the IP address of the far device in the **IP Feedback** field. The user then clicks on **Save**.
- (2) The user then tells the far device the IP address of the local device (if feedback from the far device is required). This is done by first clicking on the **Select a device** drop-down list and selecting the far device from the list, and then inputting the IP address of the near device in the **IP Feedback** field. The user then clicks on **Save**.

5. Products Screen - IR Tab

The **IR** tab of the **Products** screen enables the user to send IR commands to a MuxLab transmitter or receiver IR port (Figure 169) via the Network Controller. IR pass-through mode is also supported using an IR handheld remote as the control source.

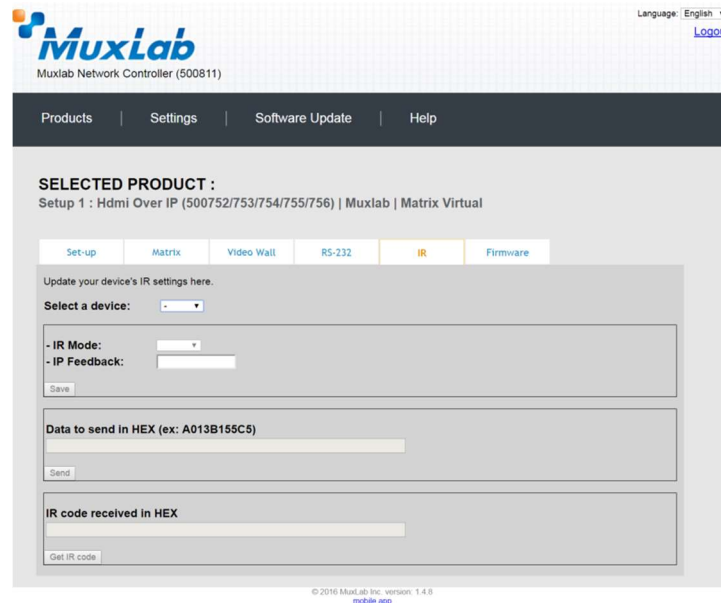


Figure 169: IR Tab

When sending IR commands through the Network Controller, the user first selects the device that the IR commands will be sent to. This is done by clicking on the **Select a device** drop-down list and making a selection (Figure 170).

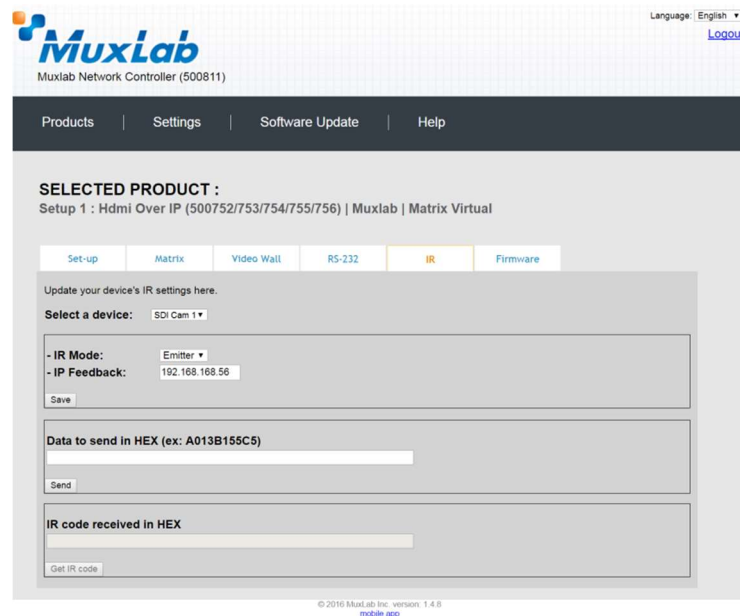


Figure 170: IR Tab – Selecting a Device

The 500756 supports a bi-directional IR port. The below example is for transmitting IR from the sink side (display side) to the source side, but the 500756 can be configured to transmit IR from the source to the sink side as well.

Once a device is selected, the **Data to send in HEX** field becomes enabled. In the above example, SDI Cam 1 was chosen as the selected device, meaning that a command sent to SDI Cam 1 will travel from the Network Controller to the Ethernet Switch, then from the Ethernet Switch to the transmitter connected to SDI Cam 1. That transmitter will then send the specified IR data command to SDI Cam 1 via the IR Emitter connected to the transmitter IR out port.

The **IR code received in HEX** field displays the HEX version of an IR command send from a handheld remote to an IR receiver IR In port and attached IR Sensor.

When sending IR commands directly from an IR Source device, such as an IR handheld remote, from 500756 receiver through to a transmitter, the user must set up a pass-through for IR signals to be sent to and from devices. This requires the following step:

The user must tell the 500756 receiver (being the device near the IR handheld remote with an attached IR Sensor) the IP address of the 500756 transmitter (where the IR commands are being sent, which has an attached IR Emitter). This is done by first clicking on the **Select a device** drop-down list and selecting the local device from the list, and then inputting the IP address of the far device in the **IP Feedback** field. The user then clicks on **Save**.

6. Products Screen - Firmware Tab

The **Firmware** tab of the Products screen enables the user to update the firmware for MuxLab transmitters and receiver (Figure 171).

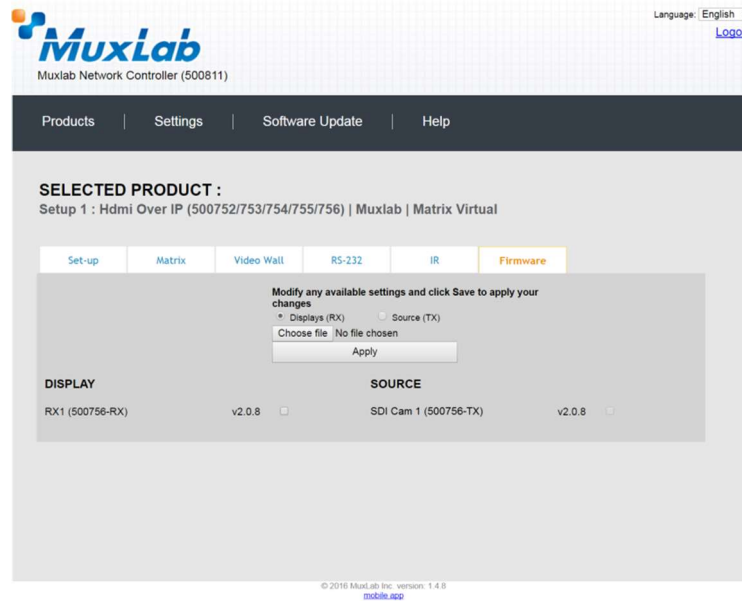


Figure 171: Firmware Tab

The user first selects either **Display (RX)** or **Source (TX)**, then chooses the firmware update file to upload to the given device. Once the file is selected, the user checks the box next to the given device (listed under **DISPLAY** and **SOURCE**) targeted for firmware upgrade, and then clicks **Apply**.

Settings Screen

The **Settings** screen contains two tabs: **Network** and **Administration**.

The **Network** tab (Figure 172) is used to change the IP address of the MuxLab Network Controller, the network mask, as well as the router IP address. It also allows the user to enable or disable DHCP.

The screenshot shows the MuxLab Network Controller (500811) interface. The top navigation bar includes 'Products', 'Settings', 'Software Update', and 'Help'. The 'Settings' tab is active, and the 'Network' sub-tab is selected. The 'Network' section contains a form for manual network settings. It includes a 'Use DHCP' toggle set to 'No'. Below this are input fields for 'IP address' (192, 168, 168, 50), 'Network mask' (255, 255, 255, 0), and 'Router' (192, 168, 168, 1). A 'Save' button is located at the bottom of the form. The footer indicates the version is 1.4.8 and provides a link to the mobile app.

Figure 172: Settings Screen: Network Tab

The **Administration** tab is used to create or delete user accounts, change passwords, restore data, backup data, and retrieve logs (Figure 173).

The screenshot shows the MuxLab Network Controller (500811) interface. The top navigation bar includes 'Products', 'Settings', 'Software Update', and 'Help'. The 'Settings' tab is active, and the 'Administration' sub-tab is selected. The 'Administration' section contains several functional areas: 'User Accounts' with a dropdown to 'Create a new User Account Or select a User to edit:', fields for 'User Name', 'new password', 'Confirm new password', and 'User Type', and buttons for 'Create', 'Update', and 'Delete'; 'Restore data' with a 'Specify file:' field and a 'Restore' button, accompanied by a warning: 'WARNING ! You MUST FIRST set the IP address of this controller using the same as the controller this backup file come from !!!'; 'Backup data' with a 'Backup' button; and 'Get Logs' with 'Download Logs' and 'Delete Logs' buttons. The footer indicates the version is 1.4.8 and provides a link to the mobile app.

Figure 173: Settings Screen: Administration Tab

Software Update Screen

The **Software Update** enables the user to update MuxLab Network Controller software (Figure 174). This software is available on MuxLab's website (www.muxlab.com). Download the software to the local PC before performing the update.

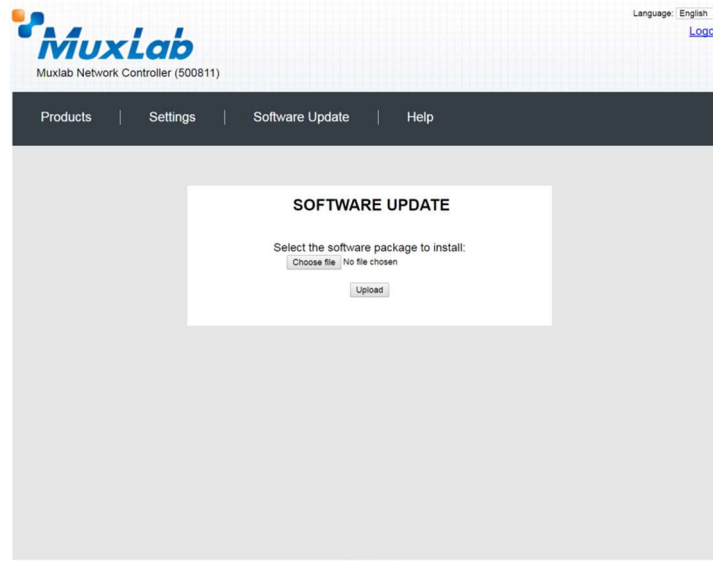


Figure 174: Software Update Screen

Help Screen

The **Help** screen offers quick contact information for customer support and all other inquiries (Figure 175).

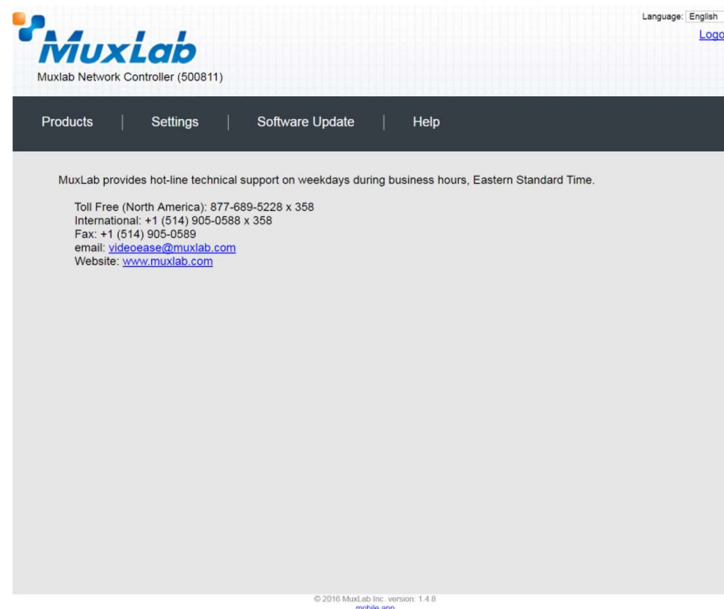


Figure 175: Help Screen

Extender Model 500757

Products Screen

Once the user has logged in, the **Products** screen will appear (Figure 176).

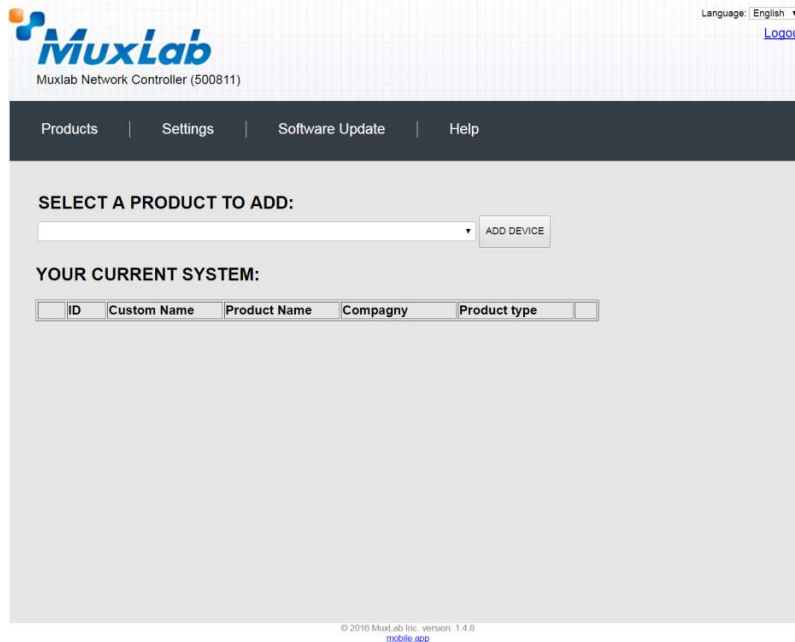


Figure 176: Products Screen – Initial View

In the **SELECT A PRODUCT TO ADD:** drop down box, select **Hdmi Over IP H264 (500757)** and then click on **ADD DEVICE** (Figure 177).

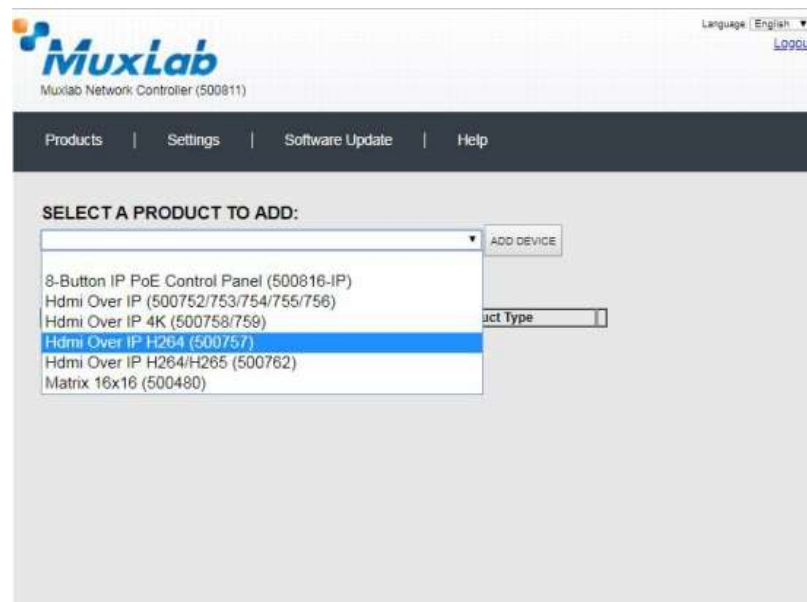


Figure 177: Products Screen – Selecting a Product

A dialog box appears asking the user to provide a custom name for the selected product (Figure 178). The user then types a name in the **Custom Name:** field and clicks on **OK**. Note that if the user decides to click on **CANCEL**, the previous screen appears (Figure 177), without a product being added.

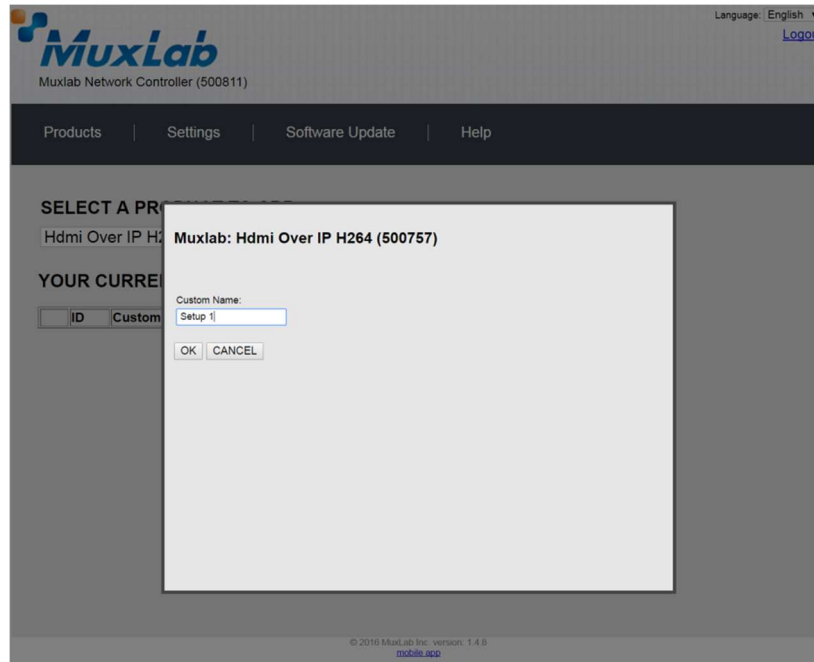


Figure 178: Products Screen – Naming a Product

The custom name has been added to **YOUR CURRENT SYSTEM** (Figure 179).

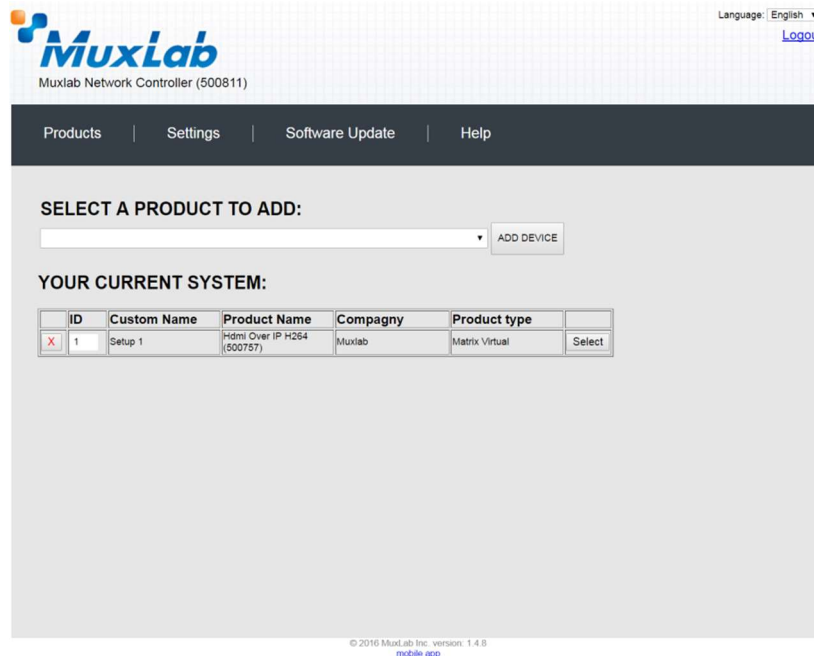


Figure 179: Products Screen – Your Current System Selection

The user can change the ID of each row by modifying the **ID** field. The user can also delete the entire row completely by clicking the **X** next to it.

To configure a given product, the user clicks on **Select**, which brings up a multi-tabbed screen (Figure 180).

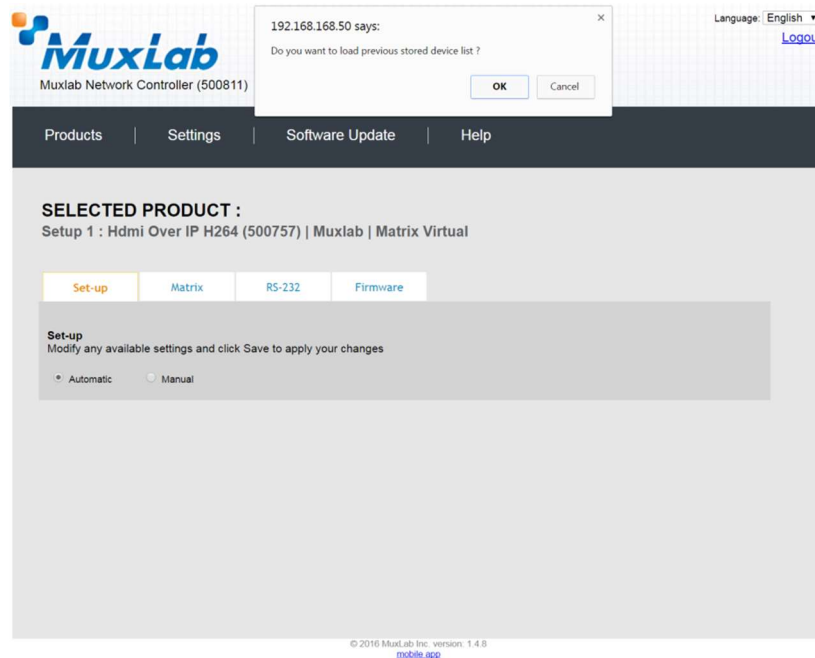


Figure 180: Products Screen – Load Dialog

By default, a dialog appears asking the user to load a previously saved device list (in case such a list has already been stored). This dialog will appear even if no device list has been previously saved.

Four tabs appear within the **Products** screen:

1. Set-up
2. Matrix
3. RS-232
4. Firmware

1. Products Screen - Set-up Tab

The **Set-up** tab offers the user two options for the type of set-up allowed: **Automatic** or **Manual**.

Automatic means that the software will scan the system for every dip-switch enabled device. The software will then override its manual dip-switch address settings and place these units under software address control. (Automatic is recommended).

Manual means that the software will allow the manual dip-switch address settings of any found device to remain active.

After selecting **Automatic** or **Manual**, click on **Launch discovery** (Figure 181).

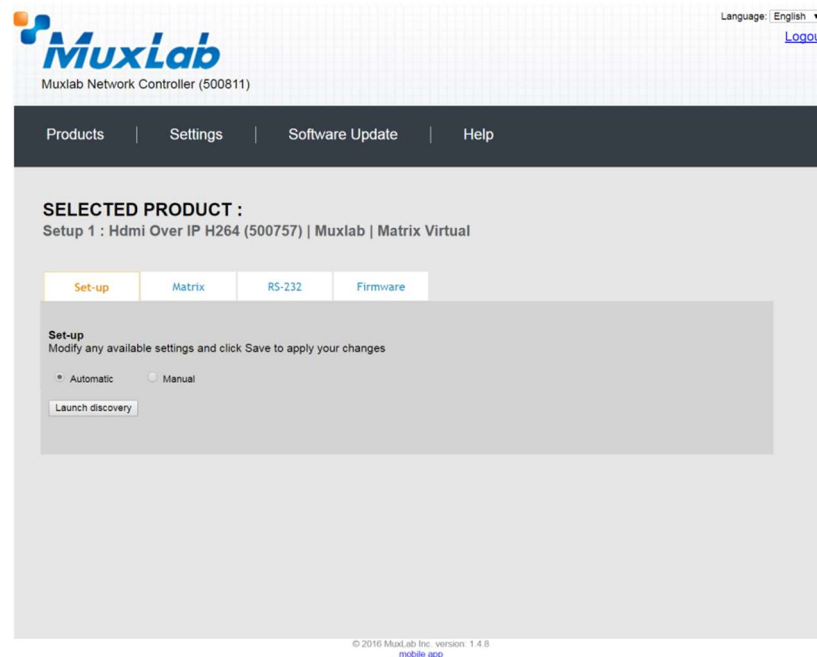


Figure 181: Products Screen – Set-up Tab

The system will scan the network for all source side devices (500757 transmitters) and display side devices (500757 receivers), and will display the scan results in tabular form (Figure 182).

Each 500757 transmitter and receiver can be assigned an arbitrary descriptive name, normally reflecting the end device that it is terminated to. To change the name of any Display (RX) or Source (TX) device, click the **Name** field to edit its contents. Several **Name** fields can be edited before saving changes, as shown in Figure 183 (orange highlighted fields).

Language: English [Logout](#)

MuxLab
Muxlab Network Controller (500811)

Products | Settings | Software Update | Help

SELECTED PRODUCT :
Setup 1 : Hdmi Over IP H264 (500757) | Muxlab | Matrix Virtual

Set-up | Matrix | RS-232 | Firmware

Set-up
Modify any available settings and click Save to apply your changes

Automatic Manual

[Launch discovery](#)

Display (4 RX)

Port#	Name	MAC address	IP address	MASK	DHCP DIP		
0	RX-00-0B-78-00-7D-E2	00-0B-78-00-7D-E2	192.168.168.84	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/> Reboot	Detail
0	RX-00-0B-78-00-7E-59	00-0B-78-00-7E-59	192.168.168.60	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/> Reboot	Detail
0	RX-00-0B-78-00-7E-5E	00-0B-78-00-7E-5E	192.168.168.65	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/> Reboot	Detail
0	RX-00-0B-78-00-7E-63	00-0B-78-00-7E-63	192.168.168.63	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/> Reboot	Detail

Source (2 TX)

Port#	Name	MAC address	IP address	MASK	DHCP DIP		
0	DVD-1	00-0B-78-00-7D-D9	192.168.168.62	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/> Reboot	Detail
0	DVD-2	00-0B-78-00-7D-0B	192.168.168.66	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/> Reboot	Detail

[Save](#)

© 2016 MuxLab Inc. version: 1.4.8
[mobile app](#)

Figure 182: Products Screen – Set-up Tab

Language: English [Logout](#)

MuxLab
Muxlab Network Controller (500811)

Products | Settings | Software Update | Help

SELECTED PRODUCT :
Setup 1 : Hdmi Over IP H264 (500757) | Muxlab | Matrix Virtual

Set-up | Matrix | RS-232 | Firmware

Set-up
Modify any available settings and click Save to apply your changes

Automatic Manual

[Launch discovery](#)

Display (4 RX)

Port#	Name	MAC address	IP address	MASK	DHCP DIP		
0	RX-1	00-0B-78-00-7D-E2	192.168.168.64	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/> Reboot	Detail
0	RX-2	00-0B-78-00-7E-59	192.168.168.60	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/> Reboot	Detail
0	RX-3	00-0B-78-00-7E-5E	192.168.168.65	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/> Reboot	Detail
0	RX-4	00-0B-78-00-7E-63	192.168.168.63	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/> Reboot	Detail

Source (2 TX)

Port#	Name	MAC address	IP address	MASK	DHCP DIP		
0	DVD-1	00-0B-78-00-7D-D9	192.168.168.62	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/> Reboot	Detail
0	DVD-2	00-0B-78-00-7D-0B	192.168.168.66	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/> Reboot	Detail

[Save](#)

© 2016 MuxLab Inc. version: 1.4.8
[mobile app](#)

Figure 183: Name Editing

To save all name changes, click on **Save**. A green UPDATED tag will appear next to newly changed names (Figure 184).

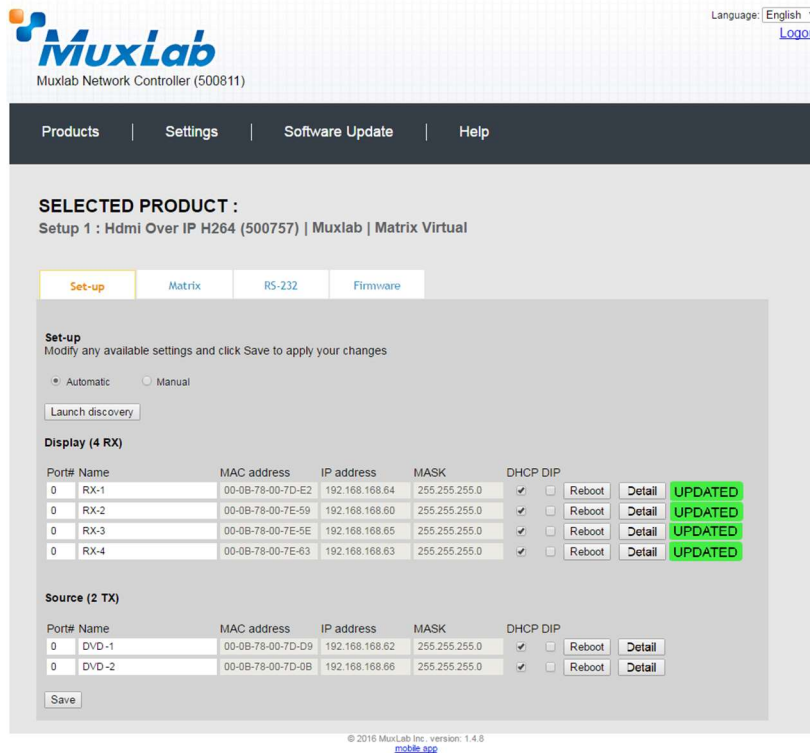


Figure 184: Saving Name Changes

To view and modify component parameters, click on the **Detail** button next to the given component. A dialog appears (Figure 185).

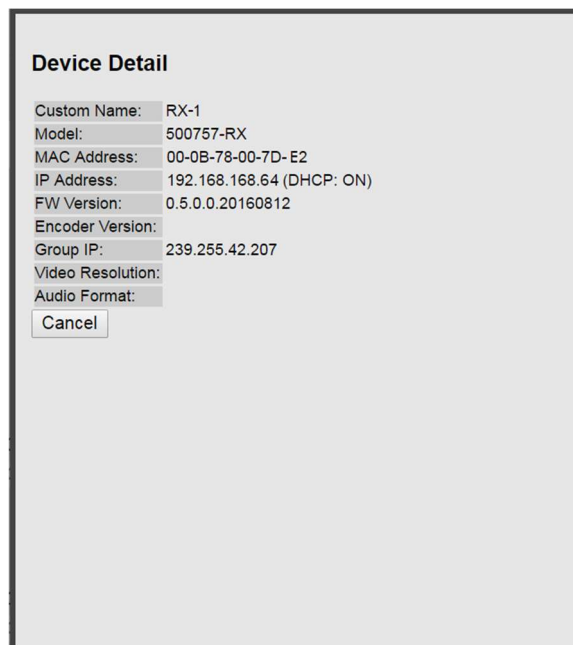


Figure 185: Device Detail Dialog

2. Products Screen - Matrix Tab

The **Matrix** tab of the **Products** screen allows the user to connect any Display to any Source. The user also has the option of using **Presets** to save connection schemes (“Presets”), as well as to edit and delete existing presets (Figure 186).

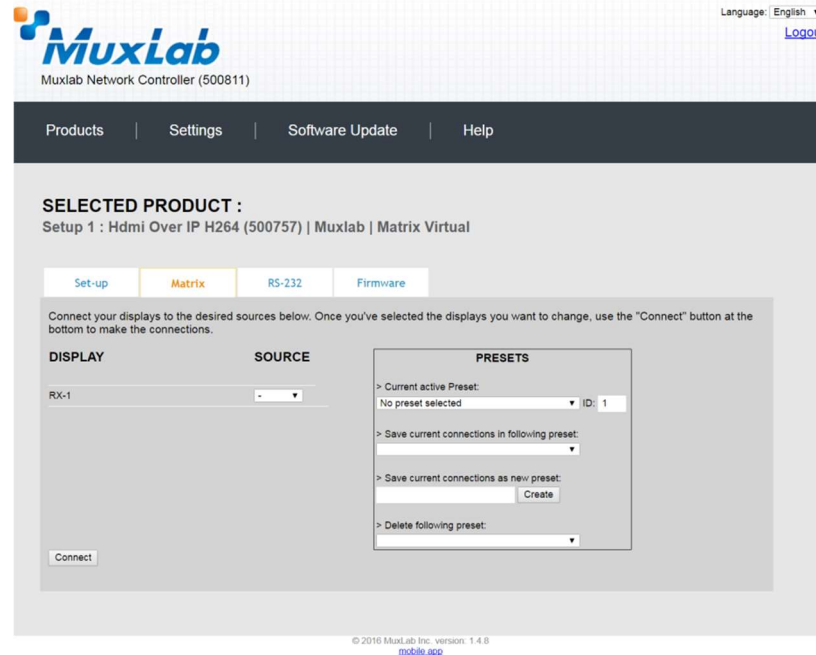


Figure 186: Matrix Tab

To connect a display to a source, the user first clicks on the drop-down list next to the given display (for example “RX-1”) and selects which source to connect it to (Figure 187).

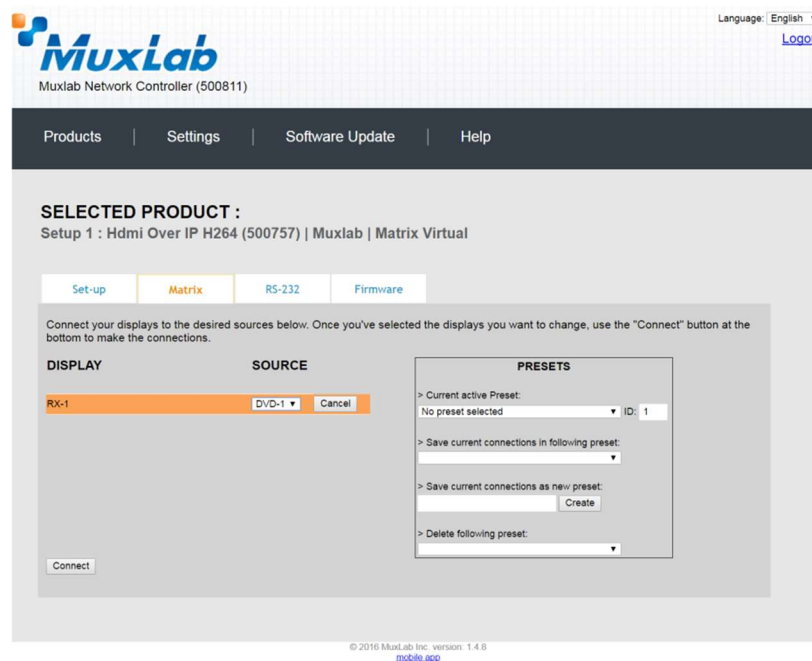


Figure 187: Change Connection

Once the selection is made (the user can change any or all connections between displays and sources), the user clicks on **Connect** to finalize the change. A green **SUCCESS** tag will appear next to the new or changed connection (Figure 188).

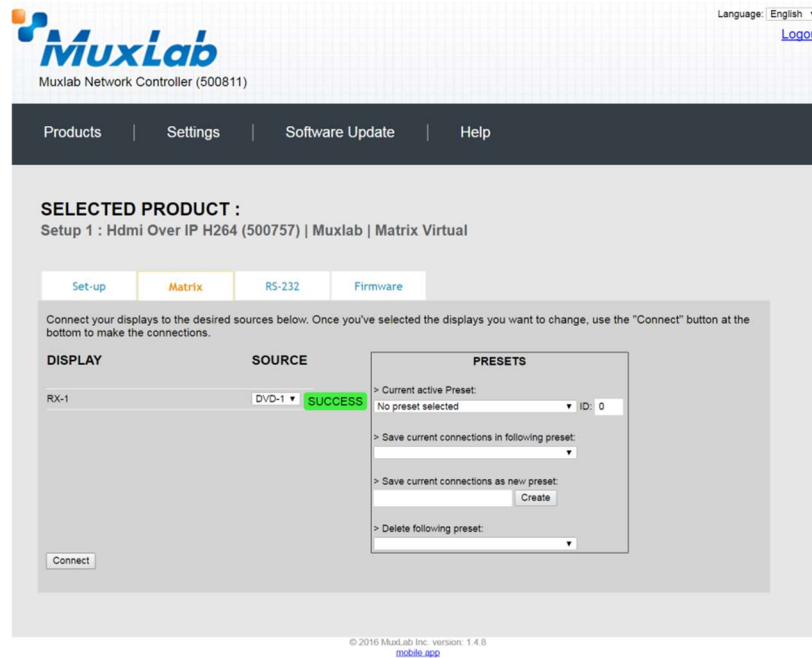


Figure 188: Change Successful

To create a new preset, the user clicks the **> Save current connections as new preset** field (Figure 189) and types a name. This assigned preset name will be linked to the existing connection scheme being shown within the **Matrix** tab.


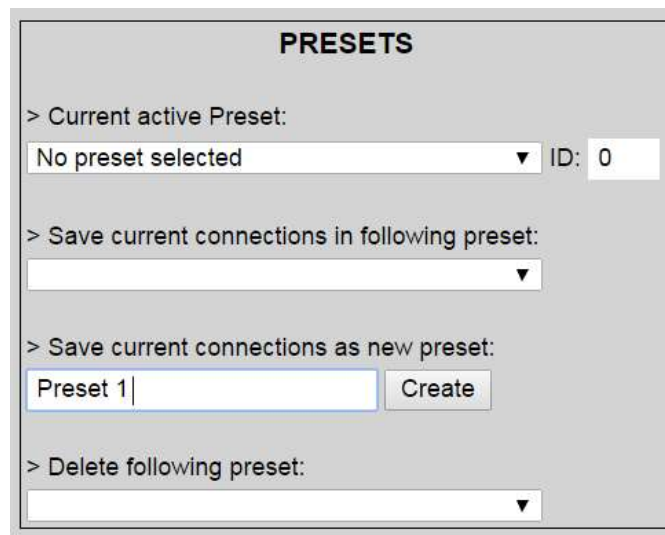


Figure 189: Create New Preset

To save this preset, the user clicks on **Create**. A green SUCCESS tag will appear next to the > **Save current connections as new preset** field and the newly created preset becomes the **Current active Preset** (Figure 190).

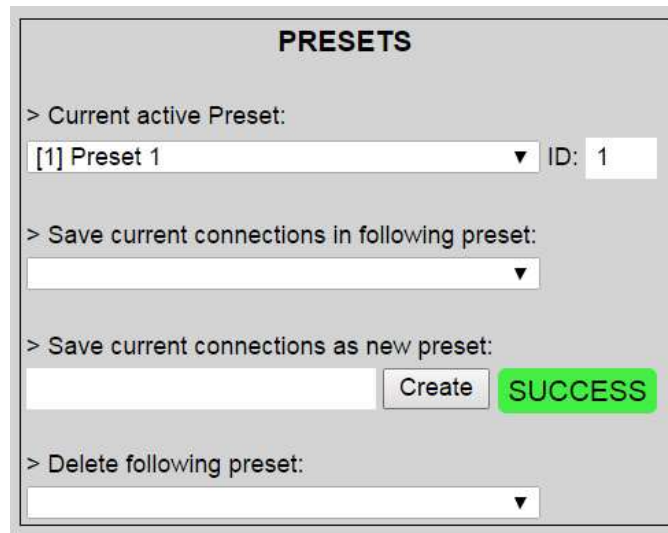


The screenshot shows a window titled "PRESETS" with the following elements:

- > Current active Preset: A dropdown menu showing "[1] Preset 1" and "ID: 1".
- > Save current connections in following preset: An empty dropdown menu.
- > Save current connections as new preset: An empty text input field, a "Create" button, and a green "SUCCESS" tag.
- > Delete following preset: An empty dropdown menu.

Figure 190: Confirmation of New Preset

To delete a preset, the user clicks the > **Delete following preset** drop-down box and selects a preset name from the list shown (Figure 191).

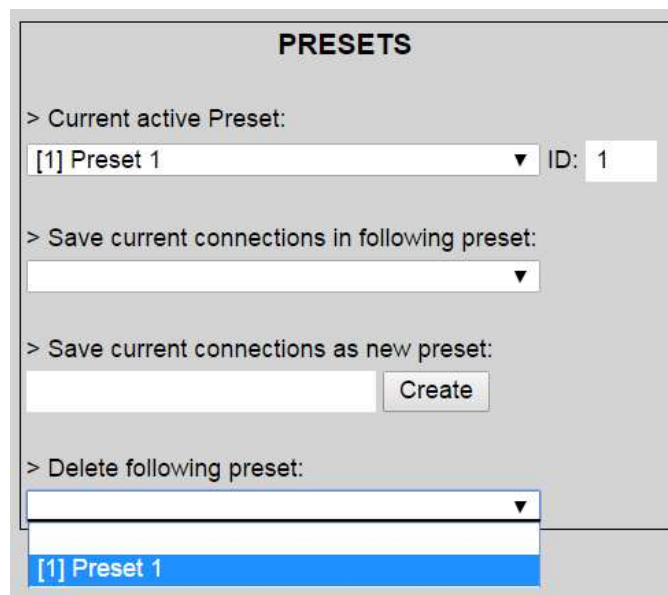

The screenshot shows the same "PRESETS" window as Figure 190, but with the following changes:

- The "Delete following preset:" dropdown menu is open, showing a list with "[1] Preset 1" selected and highlighted in blue.
- The "Create" button is visible, but the "SUCCESS" tag is no longer present.

Figure 191: Delete Preset

Once selected, a dialog will appear asking the user to confirm the deletion request (Figure 192).

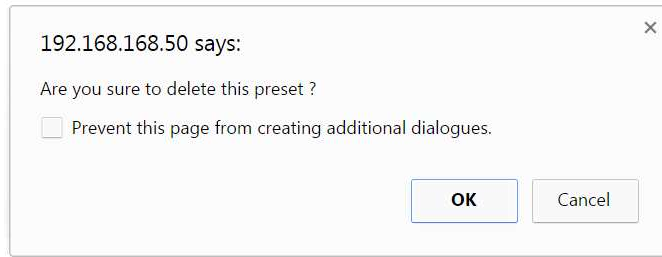


Figure 192: Confirmation of Deleted Preset

Click on **OK**. The preset will be deleted and a green SUCCESS tag will appear next to the **> Delete following preset** field (Figure 193).


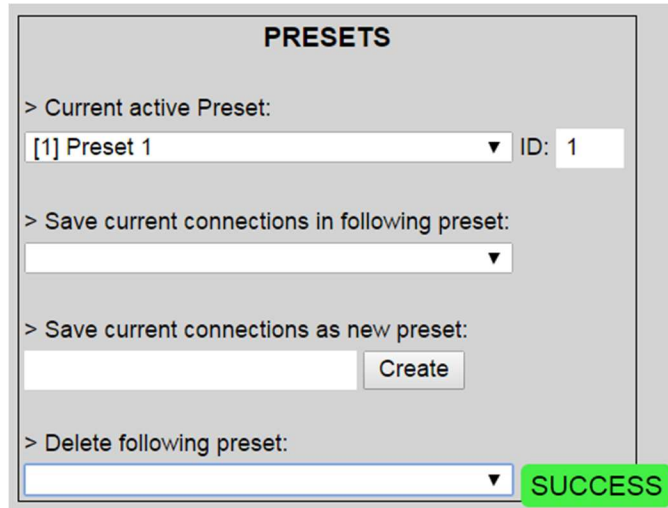


Figure 193: Confirmation of Deleted Preset

To save the current matrix configuration under an existing **Preset** name, click on > **Save current connection in following preset** drop-down box and selects a preset name (Figure 194).

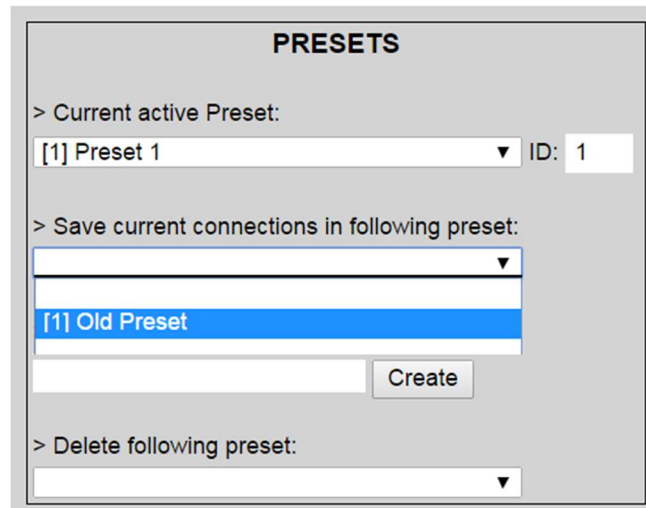


The screenshot shows a window titled "PRESETS". It contains three main sections:

- > Current active Preset:** A dropdown menu showing "[1] Preset 1" and an "ID: 1" field.
- > Save current connections in following preset:** A dropdown menu is open, showing a list of options. "[1] Old Preset" is highlighted in blue. Below the dropdown is a "Create" button.
- > Delete following preset:** A dropdown menu.

Figure 194: Change Current Active Preset

Once selected, the **Preset** will be saved and a green SUCCESS tag will appear next to the > **Save current connections in following preset** field (Figure 195).

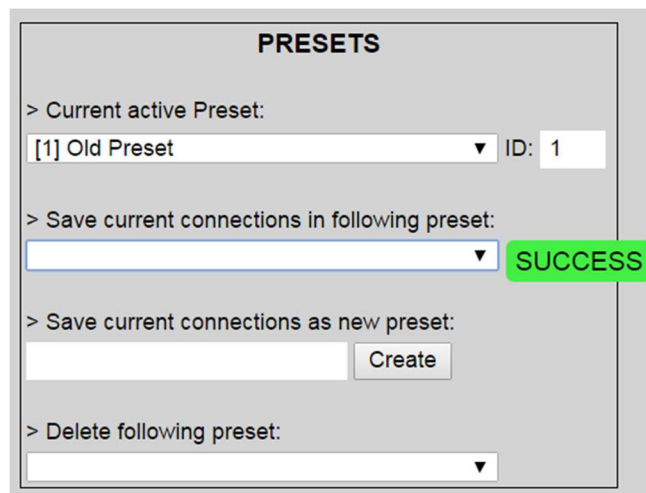

The screenshot shows the same "PRESETS" window as Figure 194, but with the following changes:

- > Current active Preset:** The dropdown menu now shows "[1] Old Preset".
- > Save current connections in following preset:** The dropdown menu is now empty. A green "SUCCESS" tag is displayed to the right of the dropdown.
- > Save current connections as new preset:** A new section with an empty dropdown menu and a "Create" button.
- > Delete following preset:** The dropdown menu is empty.

Figure 195: Confirmation of Changed Preset Name

In order to activate an existing **Preset**, select > **Current active Preset**, and select the **Preset** name from the drop-down box and the **Preset** will become active. The active **Preset** will also be displayed in the **Current active Preset** field.

3. Products Screen - RS-232 Tab

The **RS-232** tab of the **Products** screen enables the user to send RS-232 commands to any MuxLab transmitter or receiver (Figure 196). This is done either through the Network Controller or directly by connecting a PC to the RS-232 port of any transmitter or receiver.

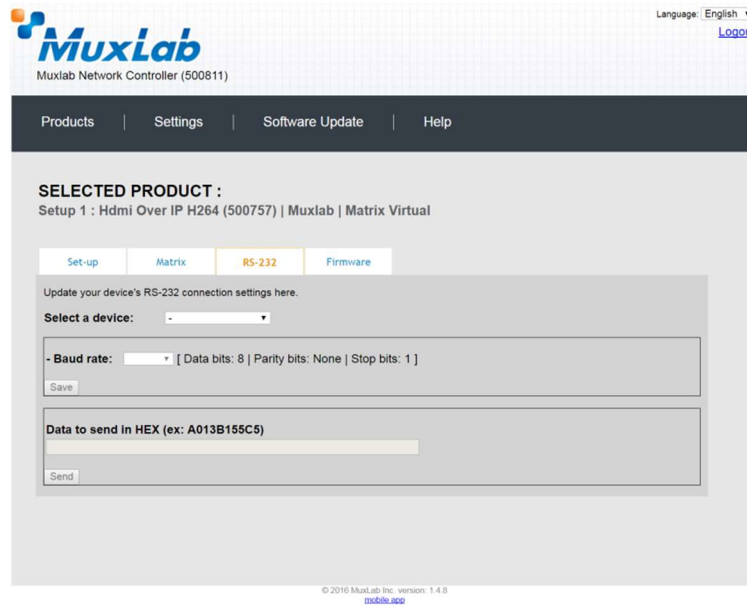


Figure 196: RS-232 Tab

When sending RS-232 commands through the Network Controller, the user first selects the device that the RS-232 commands will be sent to. This is done by clicking on the **Select a device** drop-down list and making a selection (Figure 197).

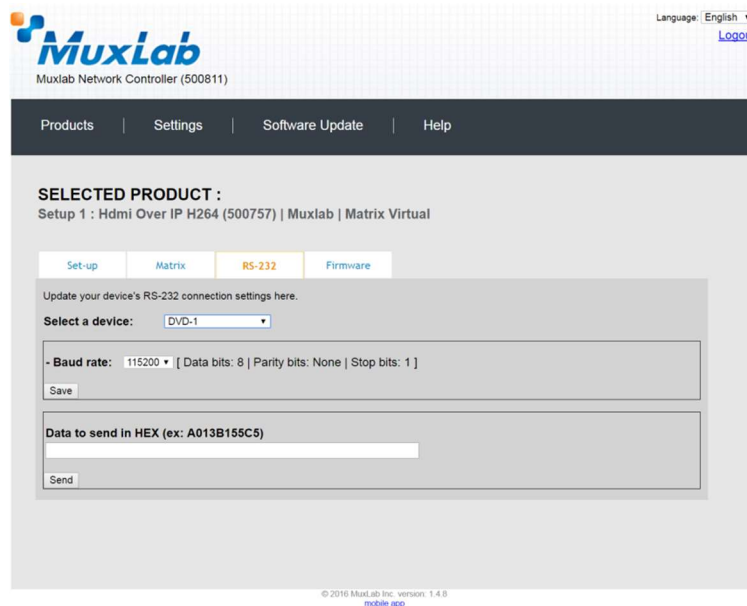


Figure 197: RS-232 Tab - Selecting a Device

Once a device is selected, the **Data to send in HEX** field becomes enabled. In the above example, DVD-1 was chosen as the selected device (but a receiver connected to sink equipment could have also been selected), meaning that a command sent to DVD-1 will travel from the Network Controller to the Ethernet Switch, and from the Ethernet Switch to the transmitter connected to DVD-1. That transmitter will then send the specified data command to DVD-1.

Note that no RS232 feedback is sent to the Network Controller when sending an RS232 command originating from the Network Controller in the direction of the transmitter (to DVD-1).

When sending RS-232 commands directly from a PC to any transmitter or receiver, in pass-through mode, this is automatically accomplished by the existing connection between the transmitter and receiver. As such this connection must exist for pass-through to operate.

IR Pass-through

Special note concerning IR pass-through. This functions in the same manner as RS232 pass-through above, but is limited in one direction, from receiver to transmitter to control source end devices. Thus a connection between transmitter and receiver, automatically establishes an IR pass-through from the receiver to the transmitter.

Note that IR commands sent from the Network Controller is not supported on the 500757.

4. Products Screen - Firmware Tab

The **Firmware** tab of the Products screen enables the user to update the firmware for MuxLab transmitters and receiver (Figure 198).

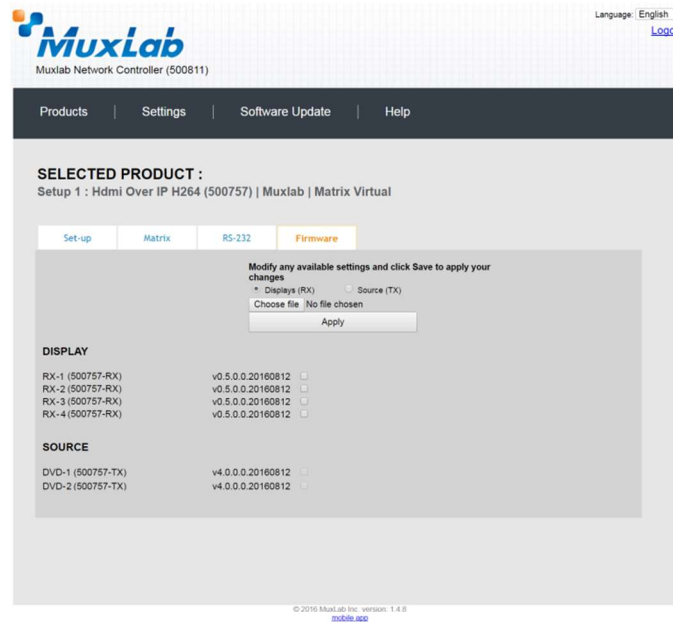



Figure 198: Firmware Tab

The user first selects either **Display (RX)** or **Source (TX)**, then chooses the firmware update file to upload to the given device. Once the file is selected, the user checks the box next to the given device (listed under **DISPLAY** and **SOURCE**) targeted for firmware upgrade, and then clicks **Apply**.

Settings Screen

The **Settings** screen contains two tabs: **Network** and **Administration**.

The **Network** tab (Figure 199) is used to change the IP address of the MuxLab Network Controller, the network mask, as well as the router IP address. It also allows the user to enable or disable DHCP.

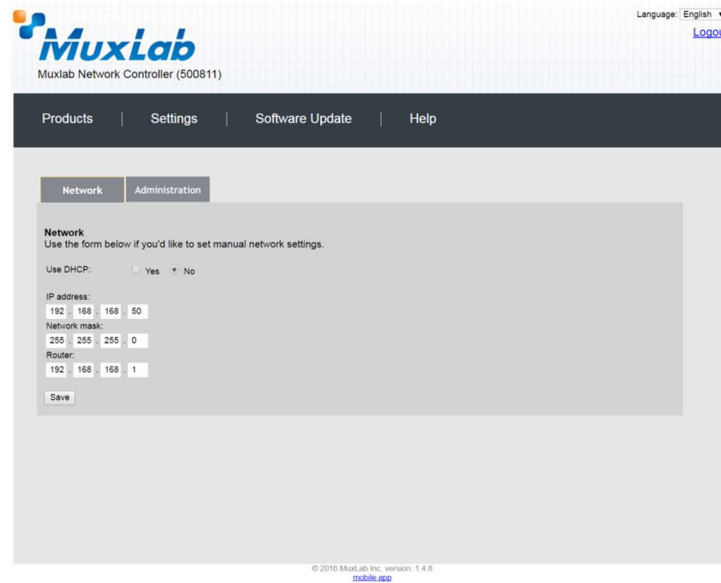

The screenshot shows the MuxLab Network Controller (500811) interface. The top navigation bar includes 'Products', 'Settings', 'Software Update', and 'Help'. The 'Settings' tab is active, and the 'Network' sub-tab is selected. The 'Network' section contains a form for manual network settings. It includes a 'Use DHCP' toggle set to 'No'. Below this are input fields for 'IP address' (192, 168, 168, 50), 'Network mask' (255, 255, 255, 0), and 'Router' (192, 168, 168, 1). A 'Save' button is located at the bottom of the form. The footer indicates the version is 1.4.8 and provides a link to the mobile app.

Figure 199: Settings Screen: Network Tab

The **Administration** tab is used to create or delete user accounts, change passwords, restore data, backup data, and retrieve logs (Figure 200).



The screenshot shows the MuxLab Network Controller (500811) interface. The top navigation bar includes 'Products', 'Settings', 'Software Update', and 'Help'. The 'Settings' tab is active, and the 'Administration' sub-tab is selected. The 'Administration' section contains several functional areas: 'User Accounts' with a dropdown to 'Create a new User Account Or select a User to edit:', fields for 'User Name', 'new password', 'Confirm new password', and 'User Type', and buttons for 'Create', 'Update', and 'Delete'; 'Restore data' with a 'Specify file:' field and a 'Restore' button, accompanied by a warning: 'WARNING ! You MUST FIRST set the IP address of this controller using the same as the controller this backup file come from !!!'; 'Backup data' with a 'Backup' button; and 'Get Logs' with 'Download Logs' and 'Delete Logs' buttons. The footer indicates the version is 1.4.8 and provides a link to the mobile app.

Figure 200: Settings Screen: Administration Tab

Software Update Screen

The **Software Update** enables the user to update MuxLab Network Controller software (Figure 201). This software is available on MuxLab's website (www.muxlab.com). Download the software to the local PC before performing the update.

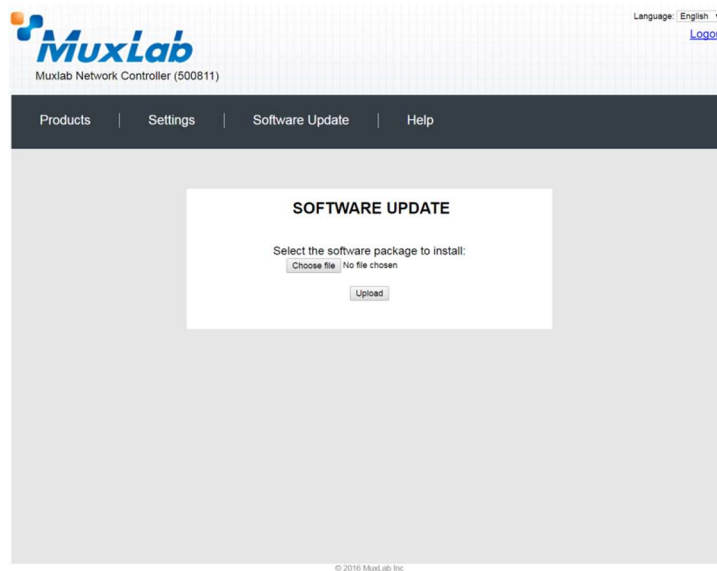


Figure 201: Software Update Screen

Help Screen

The **Help** screen offers quick contact information for customer support and all other inquiries (Figure 202).

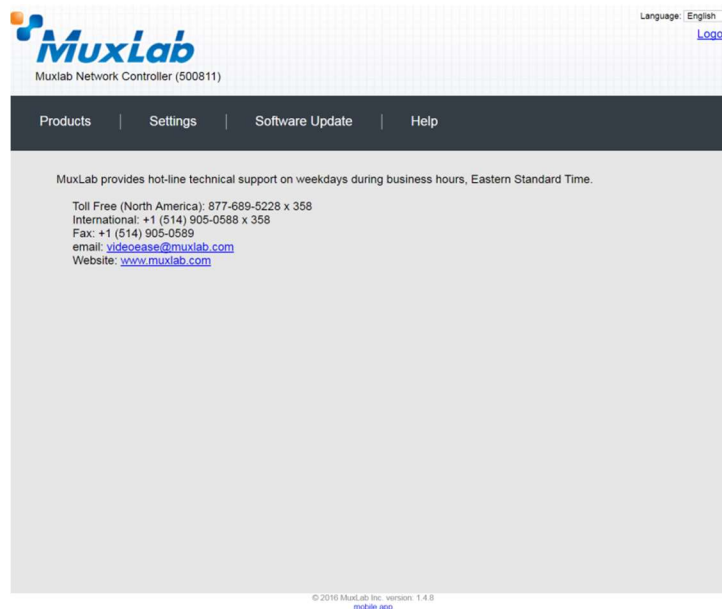


Figure 202: Help Screen

Extender Model 500758

Products Screen

Once the user has logged in, the **Products** screen will appear (Figure 203).

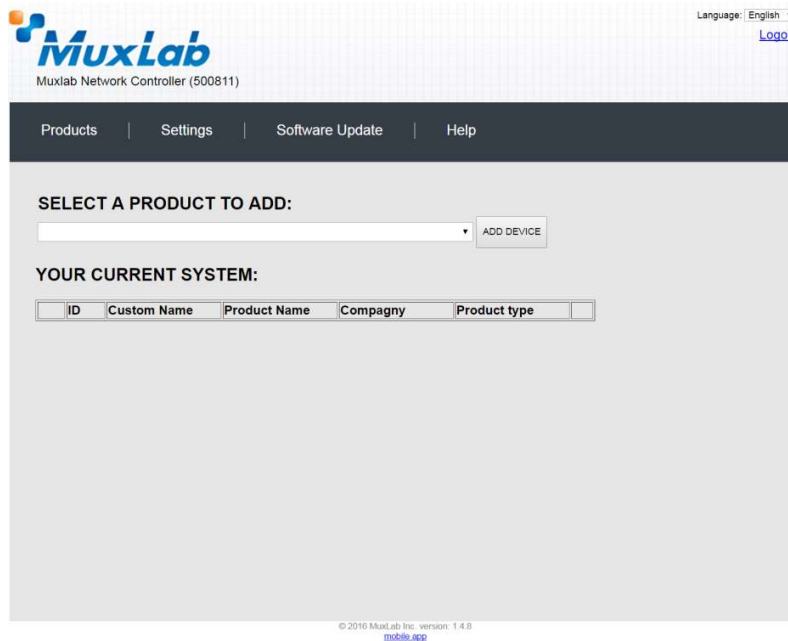


Figure 203: Products Screen – Initial View

In the **SELECT A PRODUCT TO ADD:** drop down box, select **Hdmi Over IP 4K (500758/759)** and then click on **ADD DEVICE** (Figure 204).

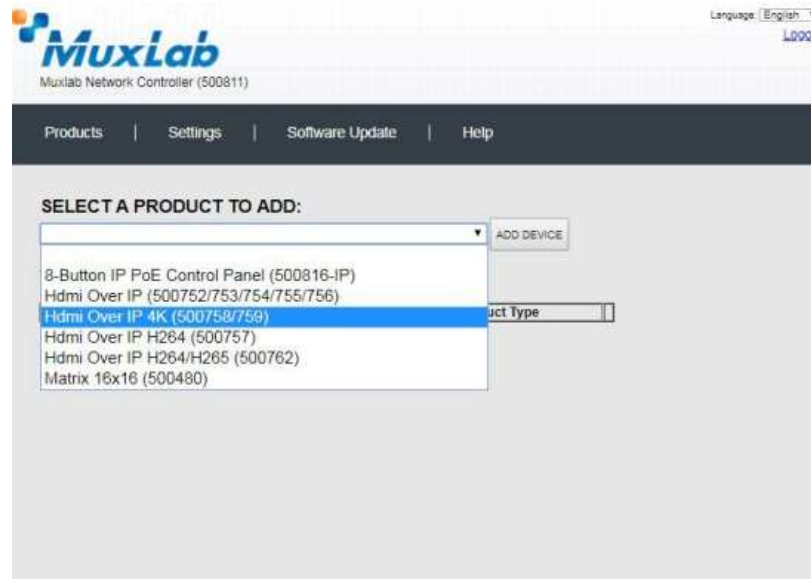


Figure 204: Products Screen – Selecting a Product

A dialog box appears asking the user to provide a custom name for the selected product (Figure 205). The user then types a name in the **Custom Name:** field and clicks on **OK**. Note that if the user decides to click on **CANCEL**, the previous screen appears (Figure 204), without a product being added.

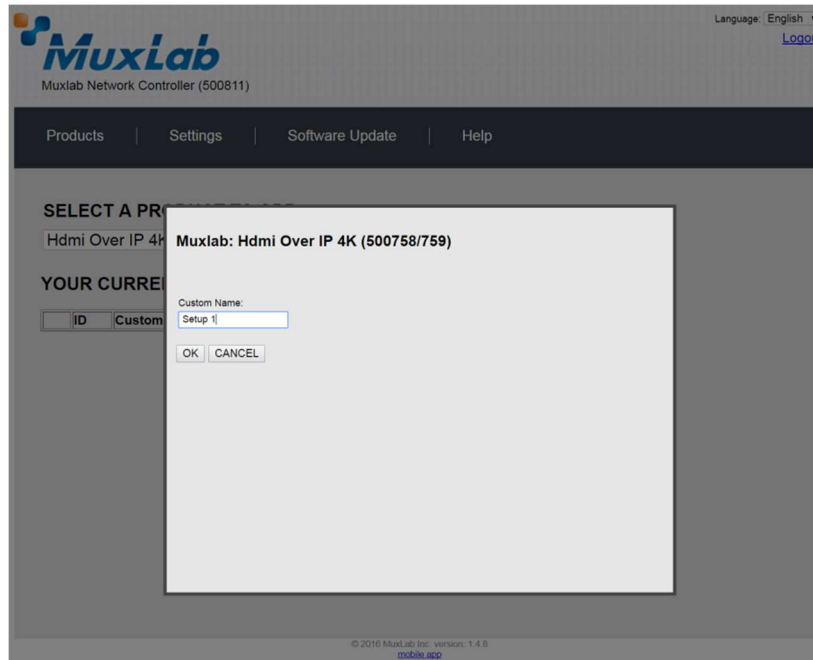


Figure 205: Products Screen – Naming a Product

The custom name has been added to **YOUR CURRENT SYSTEM** (Figure 206).

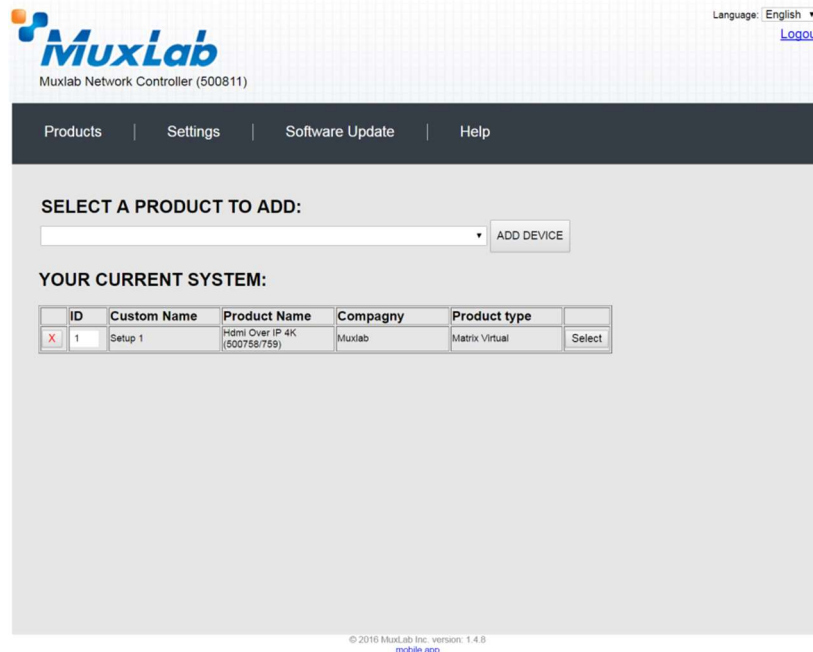


Figure 206: Products Screen – Your Current System Selection

The user can change the ID of each row by modifying the **ID** field. The user can also delete the entire row completely by clicking the **X** next to it.

To configure a given product, the user clicks on **Select**, which brings up a multi-tabbed screen (Figure 207).

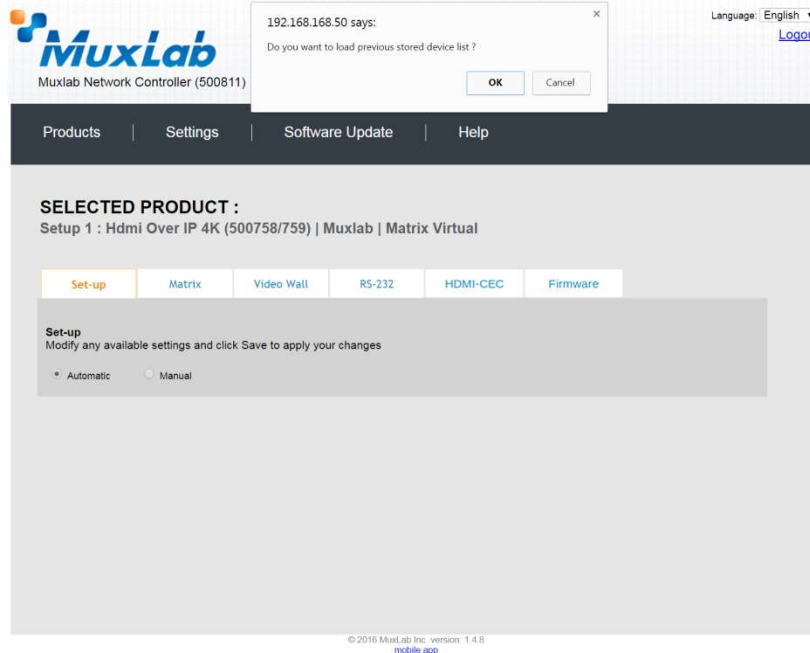


Figure 207: Products Screen – Load Dialog

By default, a dialog appears asking the user to load a previously saved device list (in case such a list has already been stored). This dialog will appear even if no device list has been previously saved.

Six tabs appear within the **Products** screen:

1. Set-up
2. Matrix
3. Video Wall
4. RS-232
5. HDMI CEC
6. Firmware

1. Products Screen - Set-up Tab

The **Set-up** tab offers the user two options for the type of set-up allowed: **Automatic** or **Manual**.

Automatic means that the software will scan the system for every dip-switch enabled device. The software will then override its manual dip-switch address settings and place these units under software address control. (Automatic is recommended).

Manual means that the software will allow the manual dip-switch address settings of any found device to remain active.

After selecting **Automatic** or **Manual**, click on **Launch discovery** (Figure 208).

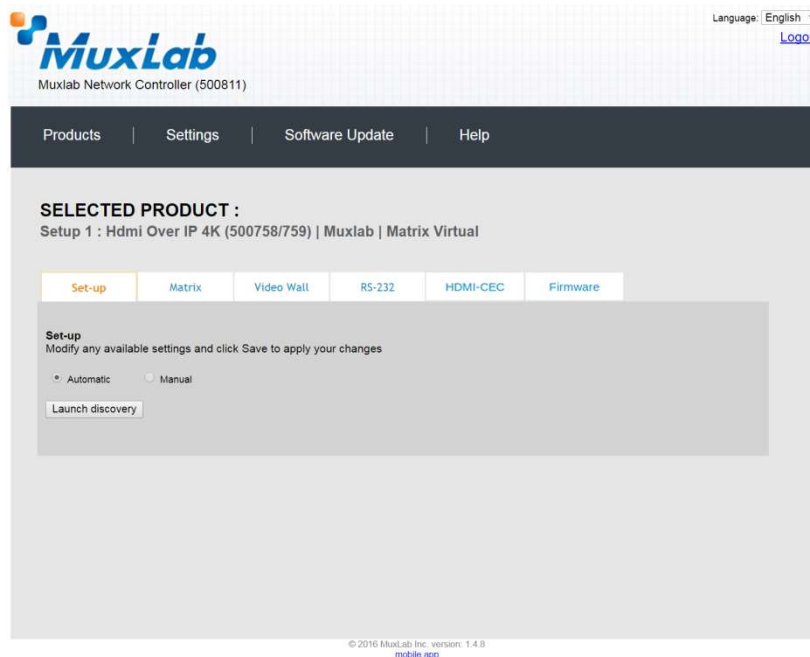


Figure 208: Products Screen – Set-up Tab

The system will scan the network for all source side devices (500758 transmitters) and display side devices (500758 receivers), and will display the scan results in tabular form (Figure 209).

Each 500758 transmitter and receiver can be assigned an arbitrary descriptive name, normally reflecting the end device that it is terminated to. To change the name of any Display (RX) or Source (TX) device, click the **Name** field to edit its contents. Several **Name** fields can be edited before saving changes, as shown in Figure 210 (orange highlighted fields).

MuxLab Network Controller (500811)

Language: English [Logout](#)

Products | Settings | Software Update | Help

SELECTED PRODUCT :
Setup 1 : Hdmi Over IP 4K (500758/759) | Muxlab | Matrix Virtual

Set-up | Matrix | Video Wall | RS-232 | HDMI-CEC | Firmware

Set-up
Modify any available settings and click Save to apply your changes

Automatic Manual

[Launch discovery](#)

Display (4 RX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP		
0	RX-00-0B-78-00-7D-E2	00-0B-78-00-7D-E2	192.168.168.64	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-00-0B-78-00-7E-59	00-0B-78-00-7E-59	192.168.168.60	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-00-0B-78-00-7E-5E	00-0B-78-00-7E-5E	192.168.168.65	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-00-0B-78-00-7E-63	00-0B-78-00-7E-63	192.168.168.63	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

Source (2 TX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP		
0	DVD-1	00-0B-78-00-7D-D9	192.168.168.62	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	DVD-2	00-0B-78-00-7D-0B	192.168.168.66	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

[Save](#)

© 2016 MuxLab Inc. version: 1.4.8 [mobile app](#)

Figure 209: Products Screen – Set-up Tab

MuxLab Network Controller (500811)

Language: English [Logout](#)

Products | Settings | Software Update | Help

SELECTED PRODUCT :
Setup 1 : Hdmi Over IP 4K (500758/759) | Muxlab | Matrix Virtual

Set-up | Matrix | Video Wall | RS-232 | HDMI-CEC | Firmware

Set-up
Modify any available settings and click Save to apply your changes

Automatic Manual

[Launch discovery](#)

Display (4 RX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP		
0	RX-1	00-0B-78-00-7D-E2	192.168.168.64	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-2	00-0B-78-00-7E-59	192.168.168.60	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-3	00-0B-78-00-7E-5E	192.168.168.65	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-4	00-0B-78-00-7E-63	192.168.168.63	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

Source (2 TX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP		
0	DVD-1	00-0B-78-00-7D-D9	192.168.168.62	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	DVD-2	00-0B-78-00-7D-0B	192.168.168.66	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

[Save](#)

© 2016 MuxLab Inc. version: 1.4.8 [mobile app](#)

Figure 210: Name Editing

To save all name changes, click on **Save**. A green UPDATED tag will appear next to newly changed names (Figure 211).

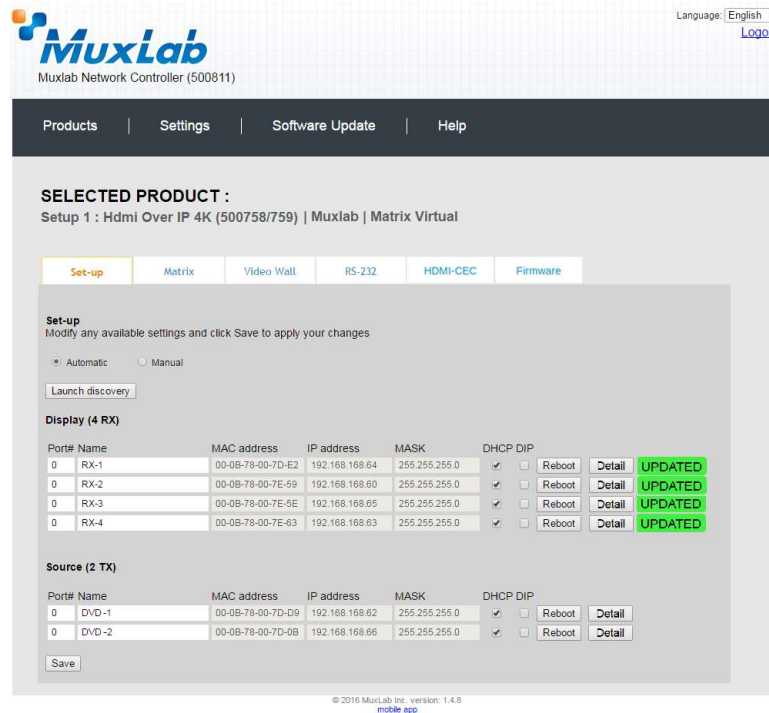


Figure 211: Saving Name Changes

To view and modify component parameters, click on the **Detail** button next to the given component. A dialog appears (Figure 212). You can set the output video format and DHCP format, enable or disable auto-detect resolution and HDR.

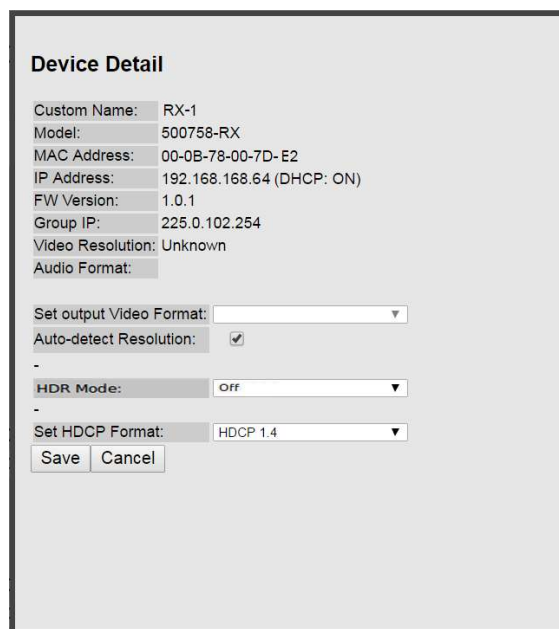


Figure 212: Device Detail Dialog

2. Products Screen - Matrix Tab

The **Matrix** tab of the **Products** screen allows the user to connect any Display to any Source. The user also has the option of using **Presets** to save connection schemes (“Presets”), as well as to edit and delete existing presets (Figure 213).

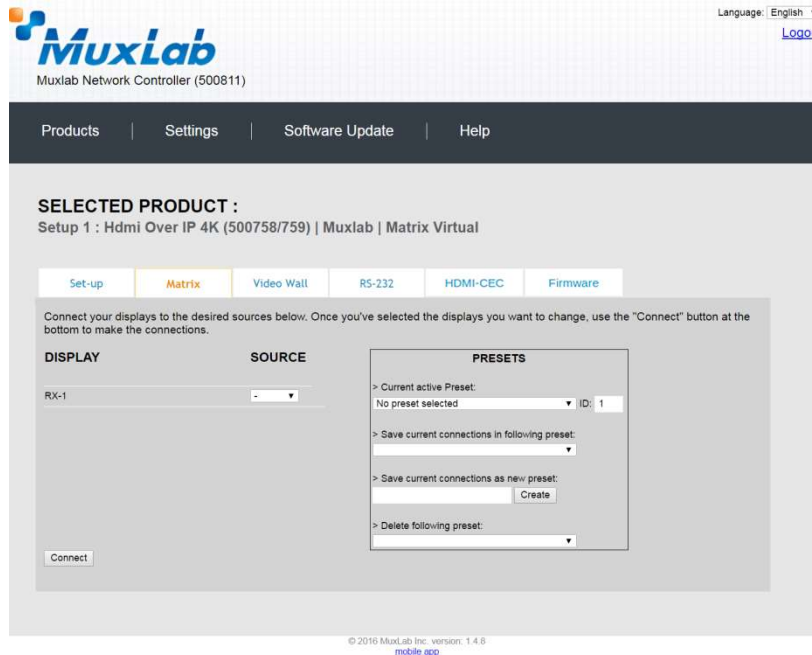


Figure 213: Matrix Tab

To connect a display to a source, the user first clicks on the drop-down list next to the given display (for example “RX-1”) and selects which source to connect it to (Figure 214).

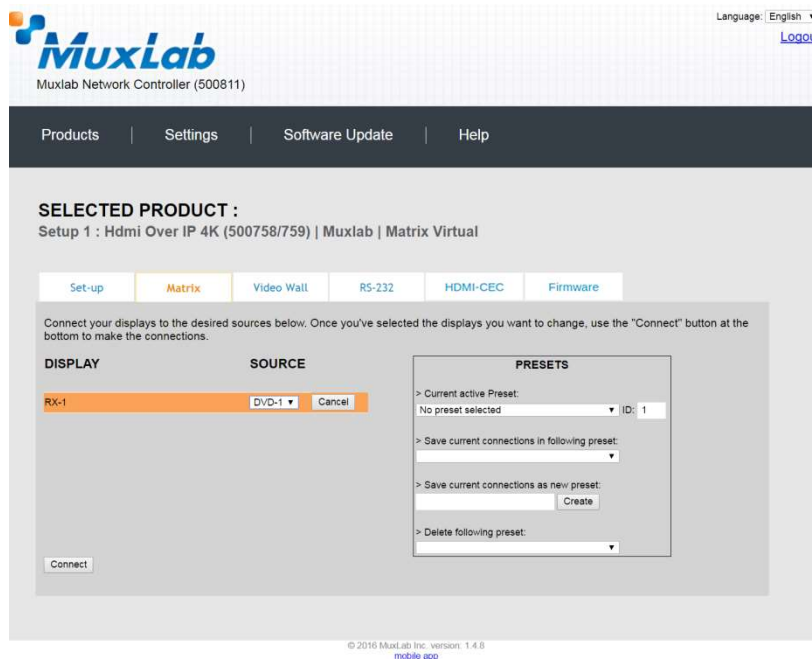


Figure 214: Change Connection

Once the selection is made (the user can change any or all connections between displays and sources), the user clicks on **Connect** to finalize the change. A green **SUCCESS** tag will appear next to the new or changed connection (Figure 215).

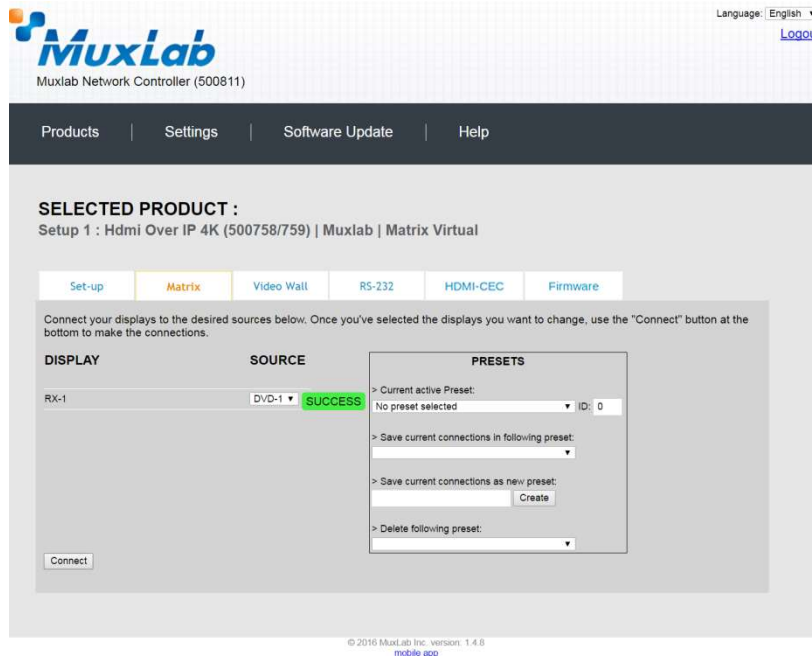


Figure 215: Change Successful

To create a new preset, the user clicks the **> Save current connections as new preset** field (Figure 216) and types a name. This assigned preset name will be linked to the existing connection scheme being shown within the **Matrix** tab.


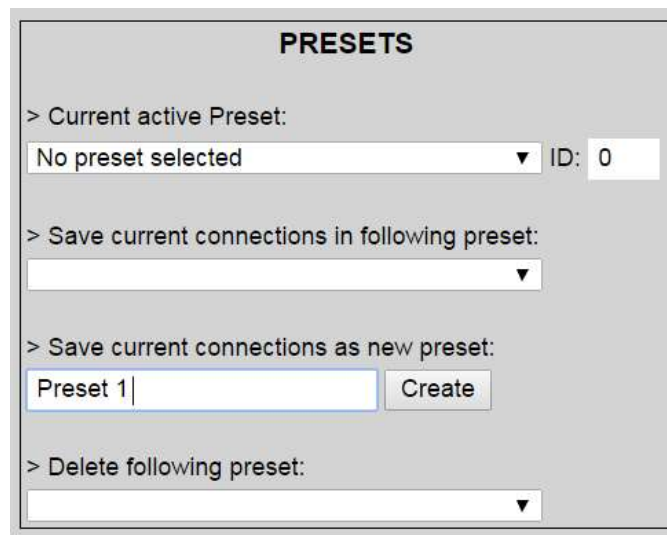


Figure 216: Create New Preset

To save this preset, the user clicks on **Create**. A green SUCCESS tag will appear next to the > **Save current connections as new preset** field and the newly created preset becomes the **Current active Preset** (Figure 217).

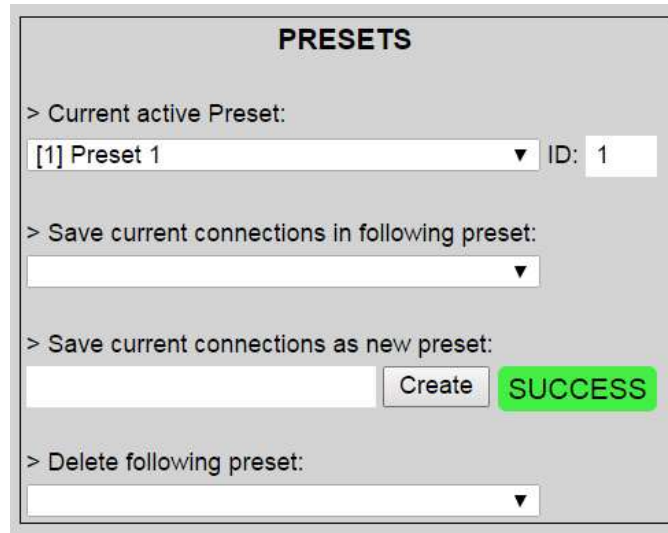


The screenshot shows a window titled "PRESETS" with the following elements:

- > Current active Preset: A dropdown menu showing "[1] Preset 1" and an "ID: 1" field.
- > Save current connections in following preset: An empty dropdown menu.
- > Save current connections as new preset: An empty text input field, a "Create" button, and a green "SUCCESS" tag.
- > Delete following preset: An empty dropdown menu.

Figure 217: Confirmation of New Preset

To delete a preset, the user clicks the > **Delete following preset** drop-down box and selects a preset name from the list shown (Figure 218).

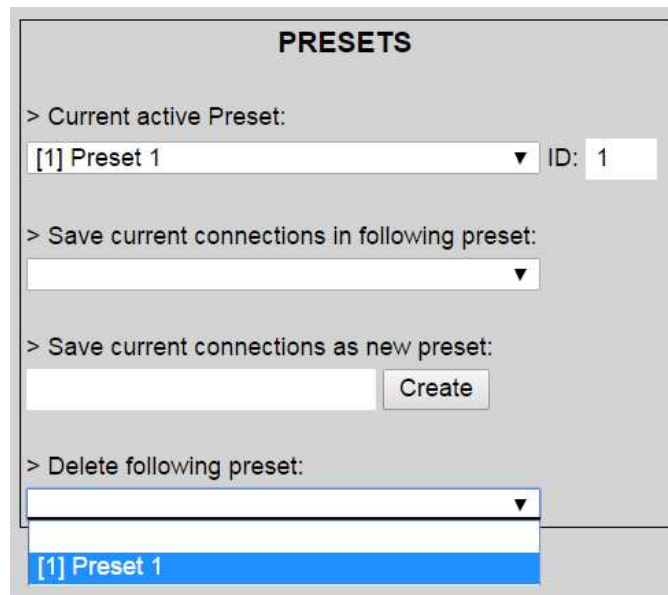

The screenshot shows the same "PRESETS" window as Figure 217, but with the "Delete following preset" dropdown menu open. The menu is currently empty, and the option "[1] Preset 1" is highlighted in blue at the bottom of the list. The "Create" button is visible, but the "SUCCESS" tag is no longer present.

Figure 218: Delete Preset

Once selected, a dialog will appear asking the user to confirm the deletion request (Figure 219).

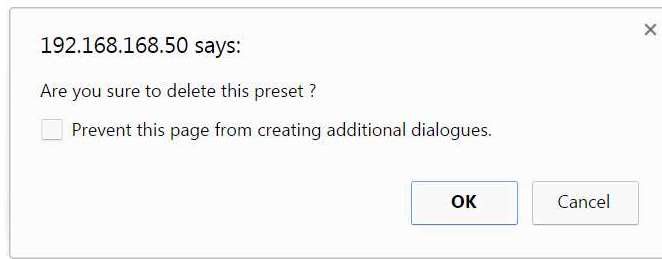


Figure 219: Confirmation of Deleted Preset

Click on **OK**. The preset will be deleted and a green SUCCESS tag will appear next to the **> Delete following preset** field (Figure 220).


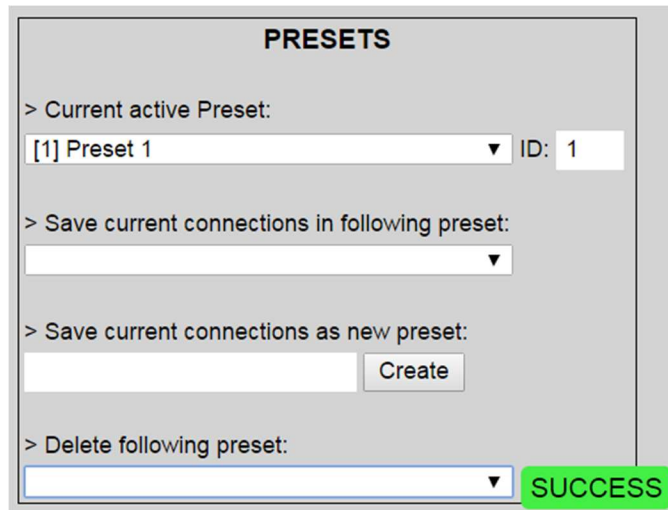


Figure 220: Confirmation of Deleted Preset

To save the current matrix configuration under an existing **Preset** name, click on > **Save current connection in following preset** drop-down box and selects a preset name (Figure 221).

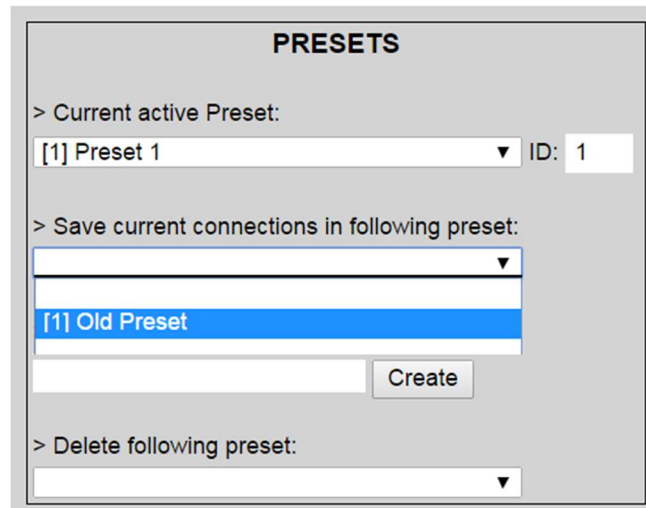


The screenshot shows a window titled "PRESETS". It contains three main sections:

- > Current active Preset:** A dropdown menu showing "[1] Preset 1" and an "ID: 1" field.
- > Save current connections in following preset:** A dropdown menu is open, showing a list of options. "[1] Old Preset" is highlighted in blue. Below the dropdown is a "Create" button.
- > Delete following preset:** A dropdown menu.

Figure 221: Change Current Active Preset

Once selected, the **Preset** will be saved and a green SUCCESS tag will appear next to the > **Save current connections in following preset** field (Figure 222).

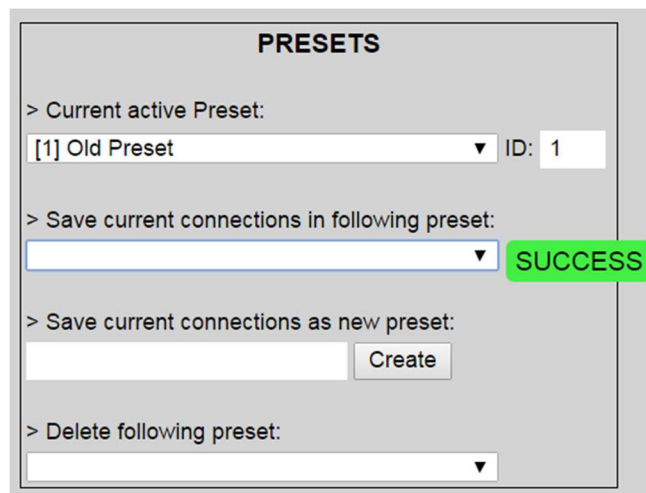

The screenshot shows the same "PRESETS" window as Figure 221, but with the following changes:

- > Current active Preset:** The dropdown menu now shows "[1] Old Preset".
- > Save current connections in following preset:** The dropdown menu is now empty. A green "SUCCESS" tag is displayed to the right of the dropdown.
- > Save current connections as new preset:** A new section with an empty dropdown menu and a "Create" button.
- > Delete following preset:** The dropdown menu is empty.

Figure 222: Confirmation of Changed Preset Name

In order to activate an existing **Preset**, select > **Current active Preset**, and select the **Preset** name from the drop-down box and the **Preset** will become active. The active **Preset** will also be displayed in the **Current active Preset** field.

3. Products Screen - Video Wall Tab

MuxLab's Extender 500758 does not support the Video Wall feature. Clicking on this tab will display the following screen (Figure 223).

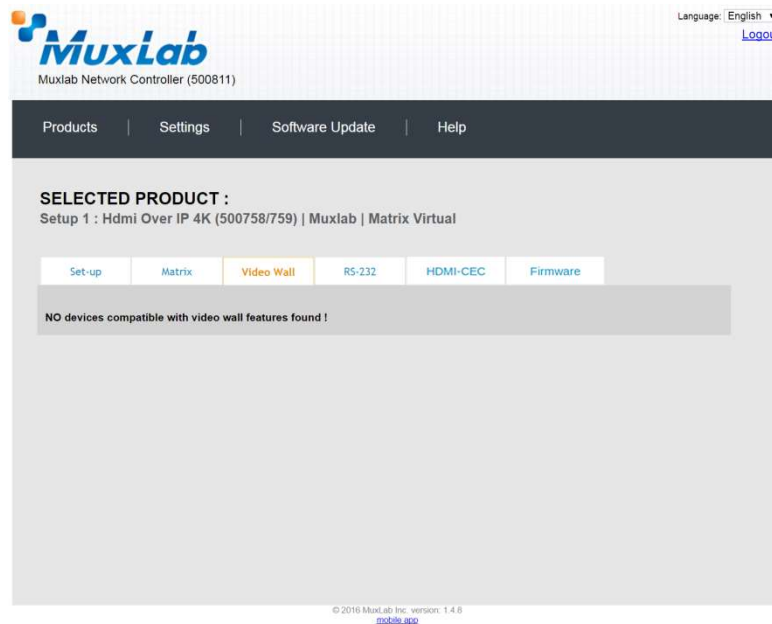


Figure 223: Video Wall Tab

For more information on the Video Wall tab and its features, refer to the section of this manual dealing with MuxLab Extender 500754 and MuxLab Extender 500759.

4. Products Screen - RS-232 Tab

The **RS-232** tab of the **Products** screen enables the user to send RS-232 commands to any MuxLab transmitter or receiver (Figure 224). This is done either through the Network Controller or directly by connecting a PC to the RS-232 port of any transmitter or receiver.

MuxLab
Muxlab Network Controller (500811)

Language: English
Logout

Products | Settings | Software Update | Help

SELECTED PRODUCT :
Setup 1 : Hdmi Over IP 4K (500758/759) | Muxlab | Matrix Virtual

Set-up | Matrix | Video Wall | **RS-232** | HDMI-CEC | Firmware

Update your device's RS-232 connection settings here.

Select a device:

Baud rate: [Data bits: 8 | Parity bits: None | Stop bits: 1]

Save

Data to send in HEX (ex: A013B155C5)

Send

© 2016 MuxLab Inc. version: 1.4.8
muxlab.app

Figure 224: RS-232 Tab

When sending RS-232 commands through the Network Controller, the user first selects the device that the RS-232 commands will be sent to. This is done by clicking on the **Select a device** drop-down list and making a selection (Figure 225).

MuxLab
Muxlab Network Controller (500811)

Language: English
Logout

Products | Settings | Software Update | Help

SELECTED PRODUCT :
Setup 1 : Hdmi Over IP 4K (500758/759) | Muxlab | Matrix Virtual

Set-up | Matrix | Video Wall | **RS-232** | HDMI-CEC | Firmware

Update your device's RS-232 connection settings here.

Select a device:

Baud rate: [Data bits: 8 | Parity bits: None | Stop bits: 1]

Save

Data to send in HEX (ex: A013B155C5)

Send

© 2016 MuxLab Inc. version: 1.4.8
muxlab.app

Figure 225: RS-232 Tab - Selecting a Device

Once a device is selected, the **Data to send in HEX** field becomes enabled. In the above example, DVD-1 was chosen as the selected device (but a receiver connected to sink equipment could have also been selected), meaning that a command sent to DVD-1 will travel from the Network Controller to the Ethernet Switch, and from the Ethernet Switch to the transmitter connected to DVD-1. That transmitter will then send the specified data command to DVD-1.

Note that no RS232 feedback is sent to the Network Controller when sending an RS232 command originating from the Network Controller in the direction of the transmitter (to DVD-1).

When sending RS-232 commands directly from a PC to any transmitter or receiver, in pass-through mode, this is automatically accomplished by the existing connection between the transmitter and receiver. As such this connection must exist for pass-through to operate.

IR Pass-through

Special note concerning IR pass-through. This functions in the same manner as RS232 pass-through above, but is limited in one direction, from receiver to transmitter to control source end devices. Thus a connection between transmitter and receiver, automatically establishes an IR pass-through from the receiver to the transmitter.

Note that IR commands sent from the Network Controller is not supported on the 500758.

5. Products Screen – HDMI CEC Tab

The **HDMI CEC** tab of the Products screen enables the user to support CEC commands including Standby, Power ON, Volume Up, Volume Down, & Mute (Figure 226).

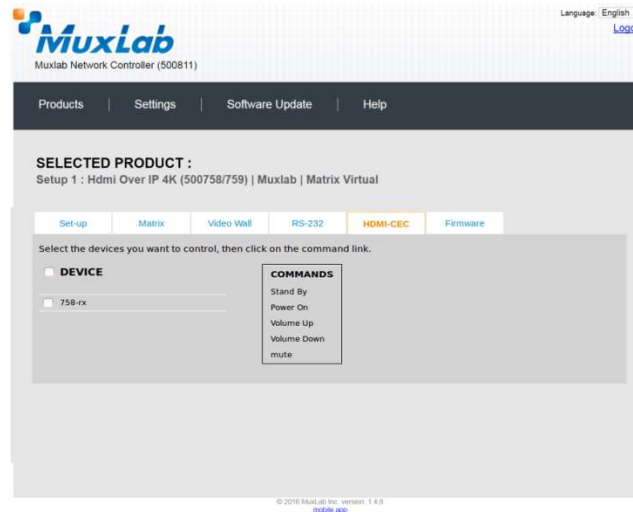


Figure 226: HDMI CEC Tab

6. Products Screen - Firmware Tab

The **Firmware** tab of the Products screen enables the user to update the firmware for MuxLab transmitters and receiver (Figure 227).




Figure 227: Firmware Tab

The user first selects either **Display (RX)** or **Source (TX)**, then chooses the firmware update file to upload to the given device. Once the file is selected, the user checks the box next to the given device (listed under **DISPLAY** and **SOURCE**) targeted for firmware upgrade, and then clicks **Apply**.

Settings Screen

The **Settings** screen contains two tabs: **Network** and **Administration**.

The **Network** tab (Figure 228) is used to change the IP address of the MuxLab Network Controller, the network mask, as well as the router IP address. It also allows the user to enable or disable DHCP.

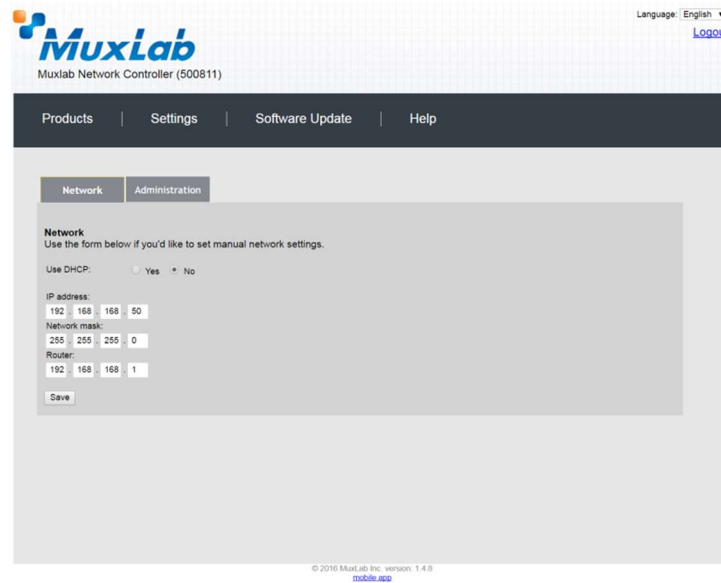

The screenshot shows the MuxLab Network Controller (500811) interface. The top navigation bar includes 'Products', 'Settings', 'Software Update', and 'Help'. The 'Settings' tab is active, and the 'Network' sub-tab is selected. The 'Network' section contains a form for manual network settings. It includes a 'Use DHCP' toggle set to 'No'. Below this are input fields for 'IP address' (192, 168, 168, 50), 'Network mask' (255, 255, 255, 0), and 'Router' (192, 168, 168, 1). A 'Save' button is located at the bottom of the form. The footer indicates the version is 1.4.8 and provides a link to the mobile app.

Figure 228: Settings Screen: Network Tab

The **Administration** tab is used to create or delete user accounts, change passwords, restore data, backup data, and retrieve logs (Figure 229).



The screenshot shows the MuxLab Network Controller (500811) interface with the 'Administration' sub-tab selected. It features several sections: 'User Accounts' with a dropdown to 'Create a new User Account Or select a User to edit:', fields for 'User Name', 'new password', 'Confirm new password', and 'User Type', and buttons for 'Create', 'Update', and 'Delete'; 'Restore data' with a 'Specify file:' field and a 'Restore' button, accompanied by a warning: 'WARNING ! You MUST FIRST set the IP address of this controller using the same as the controller this backup file come from !!!'; 'Backup data' with a 'Backup' button; and 'Get Logs' with 'Download Logs' and 'Delete Logs' buttons. The footer shows version 1.4.8 and a mobile app link.

Figure 229: Settings Screen: Administration Tab

Software Update Screen

The **Software Update** enables the user to update MuxLab Network Controller software (Figure 230). This software is available on MuxLab's website (www.muxlab.com). Download the software to the local PC before performing the update.

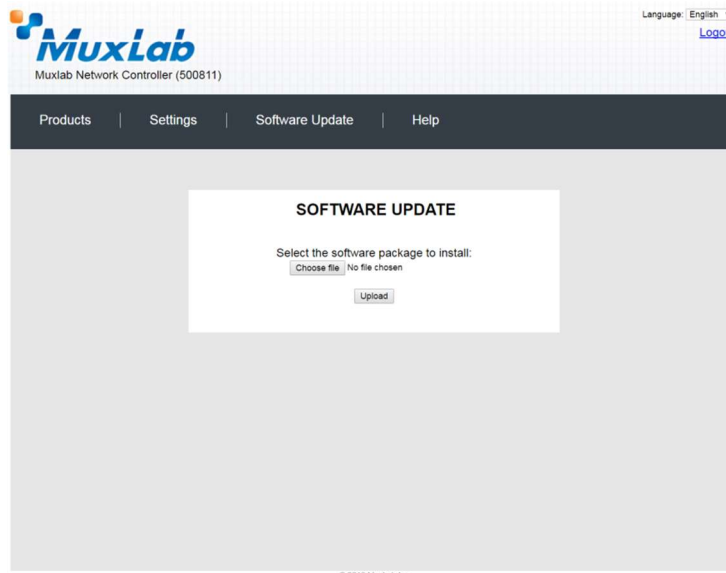


Figure 230: Software Update Screen

Help Screen

The **Help** screen offers quick contact information for customer support and all other inquiries (Figure 231).

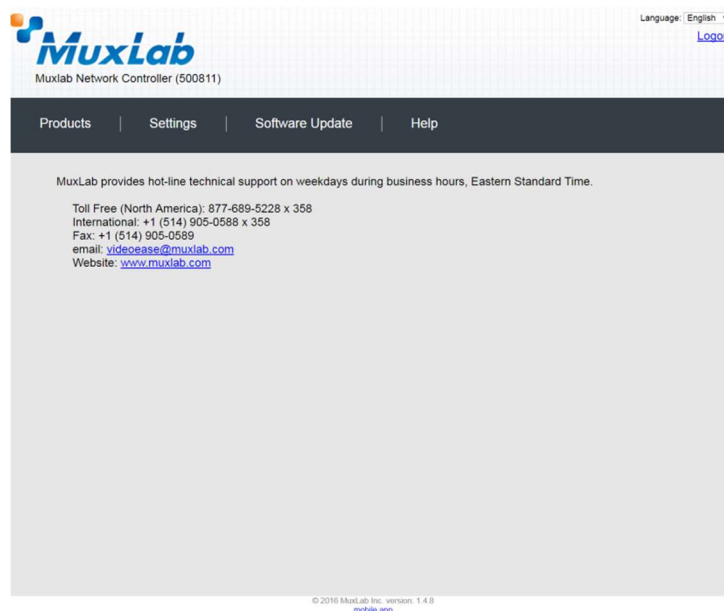


Figure 231: Help Screen

Extender Model 500759

Products Screen

Once the user has logged in, the **Products** screen will appear (Figure 232).

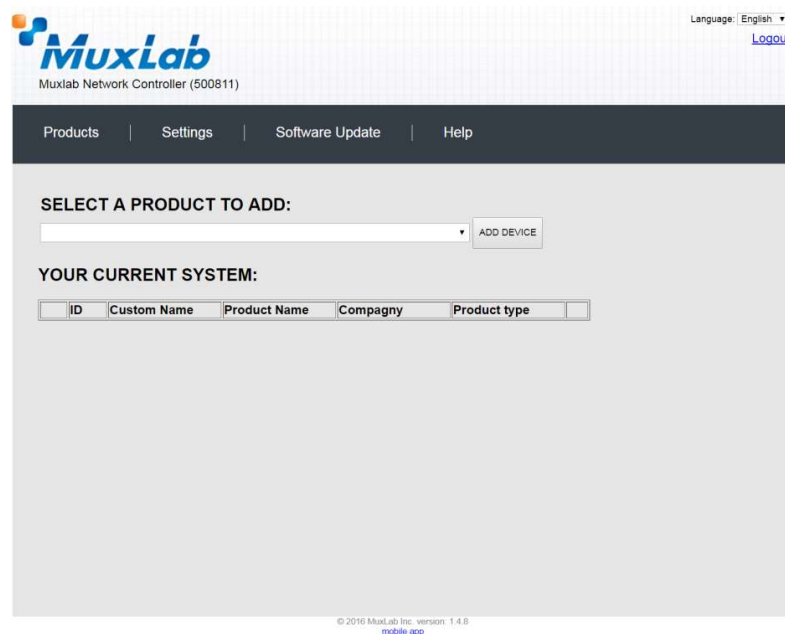


Figure 232: Products Screen – Initial View

In the **SELECT A PRODUCT TO ADD:** drop down box, select **Hdmi Over IP 4K (500758/759)** and then click on **ADD DEVICE** (Figure 233).

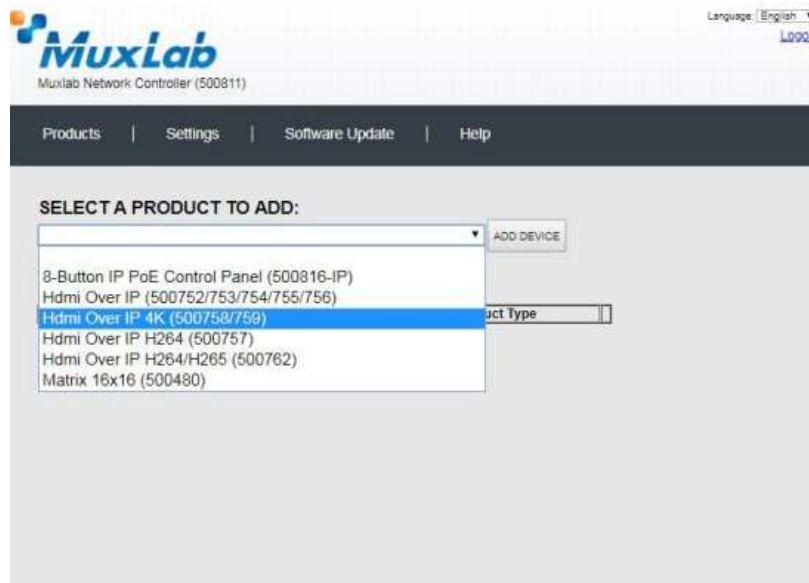


Figure 233: Products Screen – Selecting a Product

A dialog box appears asking the user to provide a custom name for the selected product (Figure 234). The user then types a name in the **Custom Name:** field and clicks on **OK**. Note that if the user decides to click on **CANCEL**, the previous screen appears (Figure 233), without a product being added.

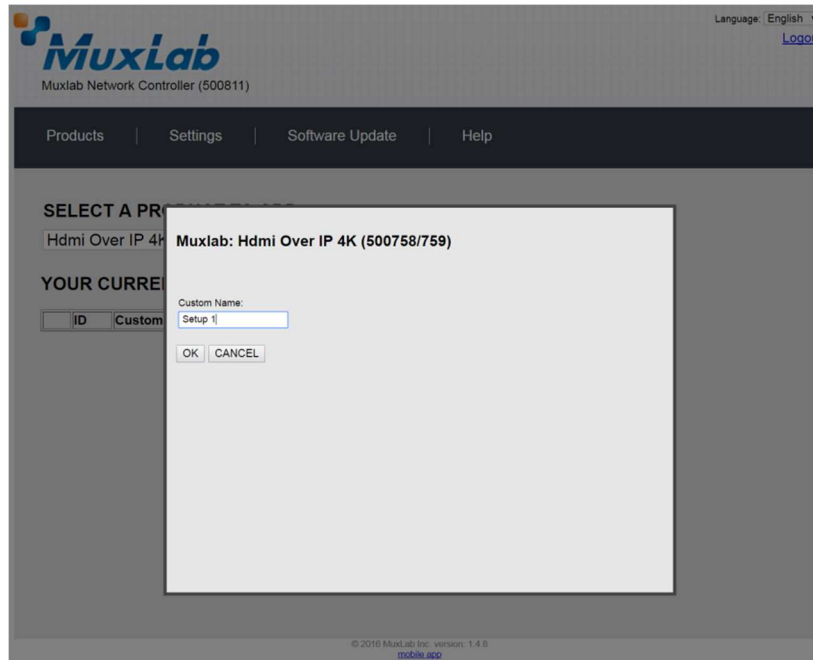


Figure 234: Products Screen – Naming a Product

The custom name has been added to **YOUR CURRENT SYSTEM** (Figure 235).

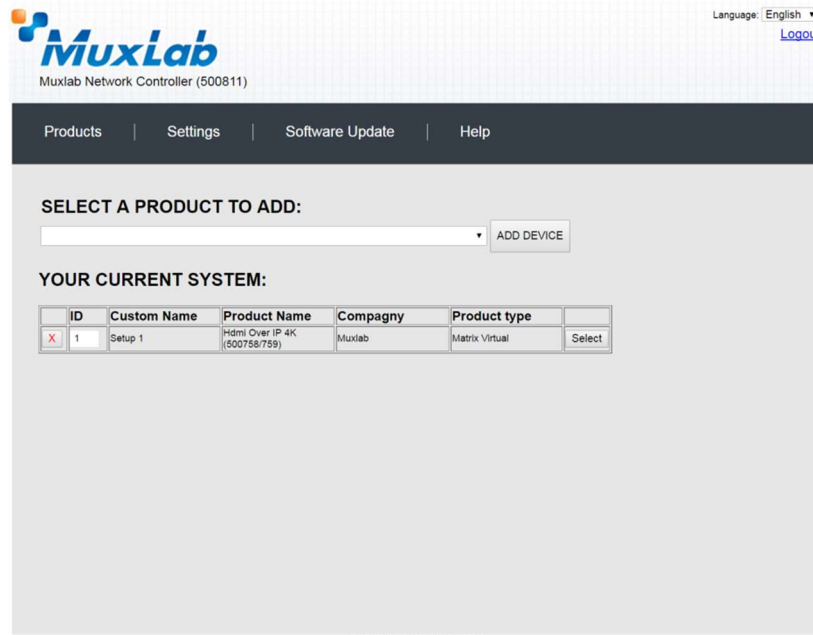


Figure 235: Products Screen – Your Current System Selection

The user can change the ID of each row by modifying the **ID** field. The user can also delete the entire row completely by clicking the **X** next to it.

To configure a given product, the user clicks on **Select**, which brings up a multi-tabbed screen (Figure 236).

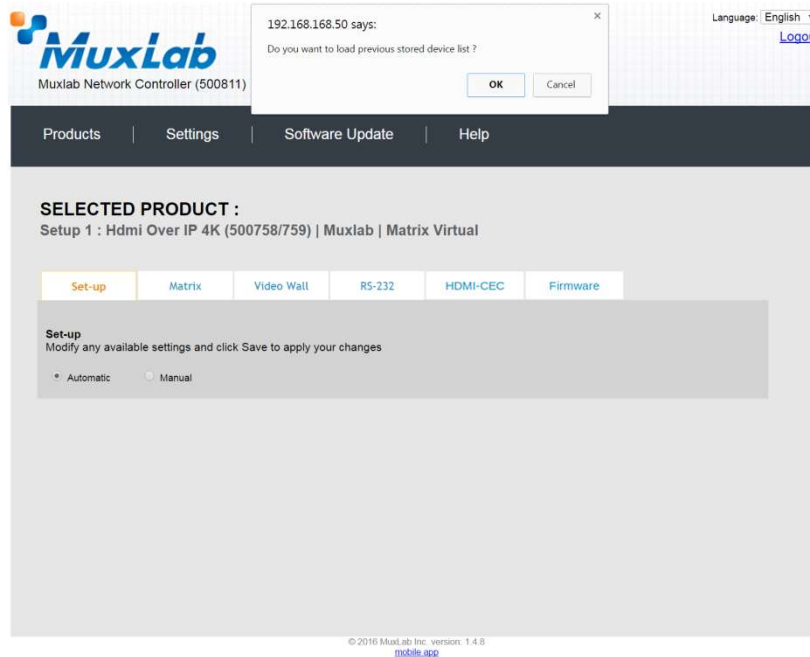


Figure 236: Products Screen – Load Dialog

By default, a dialog appears asking the user to load a previously saved device list (in case such a list has already been stored). This dialog will appear even if no device list has been previously saved.

Five tabs appear within the **Products** screen:

1. Set-up
2. Matrix
3. Video Wall
4. RS-232
5. HDMI CEC
6. Firmware

1. Products Screen - Set-up Tab

The **Set-up** tab offers the user two options for the type of set-up allowed: **Automatic** or **Manual**.

Automatic means that the software will scan the system for every dip-switch enabled device. The software will then override its manual dip-switch address settings and place these units under software address control. (Automatic is recommended).

Manual means that the software will allow the manual dip-switch address settings of any found device to remain active.

After selecting **Automatic** or **Manual**, click on **Launch discovery** (Figure 237).

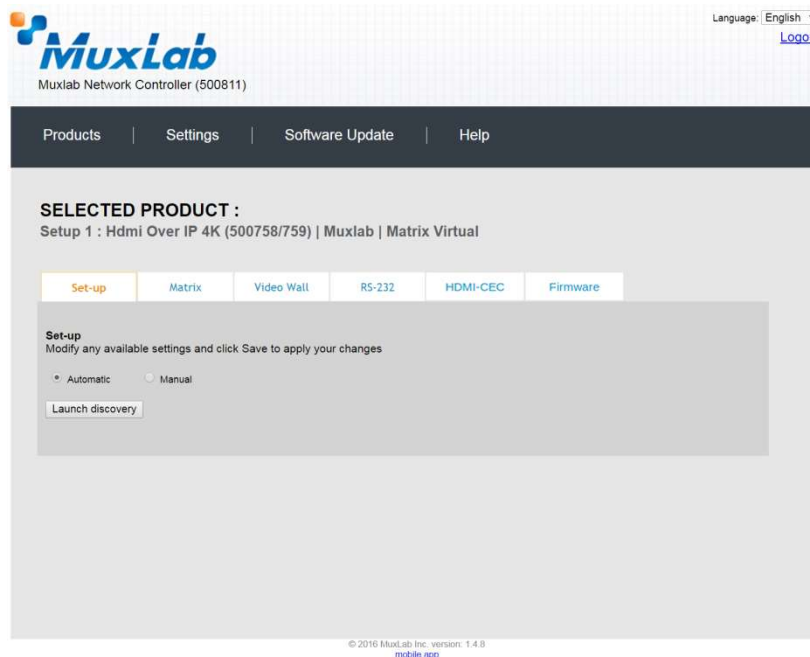


Figure 237: Products Screen – Set-up Tab

The system will scan the network for all source side devices (500759 transmitters) and display side devices (500759 receivers), and will display the scan results in tabular form (Figure 238).

Each 500759 transmitter and receiver can be assigned an arbitrary descriptive name, normally reflecting the end device that it is terminated to. To change the name of any Display (RX) or Source (TX) device, click the **Name** field to edit its contents. Several **Name** fields can be edited before saving changes, as shown in Figure 239 (orange highlighted fields).

MuxLab Network Controller (500811)

Language: English [Logout](#)

Products | Settings | Software Update | Help

SELECTED PRODUCT :
Setup 1 : Hdmi Over IP 4K (500758/759) | Muxlab | Matrix Virtual

Set-up | Matrix | Video Wall | RS-232 | HDMI-CEC | Firmware

Set-up
Modify any available settings and click Save to apply your changes

Automatic Manual

[Launch discovery](#)

Display (4 RX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP		
0	RX-00-0B-78-00-7D-E2	00-0B-78-00-7D-E2	192.168.168.64	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-00-0B-78-00-7E-59	00-0B-78-00-7E-59	192.168.168.80	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-00-0B-78-00-7E-5E	00-0B-78-00-7E-5E	192.168.168.85	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-00-0B-78-00-7E-63	00-0B-78-00-7E-63	192.168.168.83	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

Source (2 TX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP		
0	DVD-1	00-0B-78-00-7D-D9	192.168.168.62	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	DVD-2	00-0B-78-00-7D-0B	192.168.168.66	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

[Save](#)

© 2016 MuxLab Inc. version: 1.4.8 [mobile app](#)

Figure 238: Products Screen – Set-up Tab

MuxLab Network Controller (500811)

Language: English [Logout](#)

Products | Settings | Software Update | Help

SELECTED PRODUCT :
Setup 1 : Hdmi Over IP 4K (500758/759) | Muxlab | Matrix Virtual

Set-up | Matrix | Video Wall | RS-232 | HDMI-CEC | Firmware

Set-up
Modify any available settings and click Save to apply your changes

Automatic Manual

[Launch discovery](#)

Display (4 RX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP		
0	RX-1	00-0B-78-00-7D-E2	192.168.168.64	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-2	00-0B-78-00-7E-59	192.168.168.80	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-3	00-0B-78-00-7E-5E	192.168.168.85	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	RX-4	00-0B-78-00-7E-63	192.168.168.83	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

Source (2 TX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP		
0	DVD-1	00-0B-78-00-7D-D9	192.168.168.62	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	DVD-2	00-0B-78-00-7D-0B	192.168.168.66	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

[Save](#)

© 2016 MuxLab Inc. version: 1.4.8 [mobile app](#)

Figure 239: Name Editing

To save all name changes, click on **Save**. A green UPDATED tag will appear next to newly changed names (Figure 240).

MuxLab
Muxlab Network Controller (500811)

Language: English [Logout](#)

Products | Settings | Software Update | Help

SELECTED PRODUCT :
Setup 1 : Hdmi Over IP 4K (500758/759) | Muxlab | Matrix Virtual

Set-up | Matrix | Video Wall | RS-232 | HDMI-CEC | Firmware

Set-up
Modify any available settings and click Save to apply your changes

Automatic Manual

[Launch discovery](#)

Display (4 RX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP	Reboot	Detail	UPDATED
0	RX-1	00-0B-78-00-7D-E2	192.168.168.64	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail	UPDATED
0	RX-2	00-0B-78-00-7E-59	192.168.168.60	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail	UPDATED
0	RX-3	00-0B-78-00-7E-5E	192.168.168.85	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail	UPDATED
0	RX-4	00-0B-78-00-7E-63	192.168.168.63	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail	UPDATED

Source (2 TX)

Port#	Name	MAC address	IP address	MASK	DHCP	DIP	Reboot	Detail
0	DVD-1	00-0B-78-00-7D-D9	192.168.168.62	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail
0	DVD-2	00-0B-78-00-7D-0B	192.168.168.66	255.255.255.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Reboot	Detail

[Save](#)

© 2016 MuxLab Inc. - version: 1.4.8
[mobile.asp](#)

Figure 240: Saving Name Changes

To view and modify component parameters, click on the **Detail** button next to the given component. A dialog appears (Figure 241).

Device Detail

Custom Name: RX-1
 Model: 500759-RX
 MAC Address: 00-0B-78-00-7D-E2
 IP Address: 192.168.168.64 (DHCP: ON)
 FW Version: 1.0.1
 Group IP: 225.0.102.254
 Video Resolution: Unknown
 Audio Format:

Set output Video Format:

Auto-detect Resolution:

HDR Mode: Off

Set HDCP Format: HDCP 1.4

[Save](#) [Cancel](#)

Figure 241: Device Detail Dialog

2. Products Screen - Matrix Tab

The **Matrix** tab of the **Products** screen allows the user to connect any Display to any Source. The user also has the option of using **Presets** to save connection schemes (“Presets”), as well as to edit and delete existing presets (Figure 242).

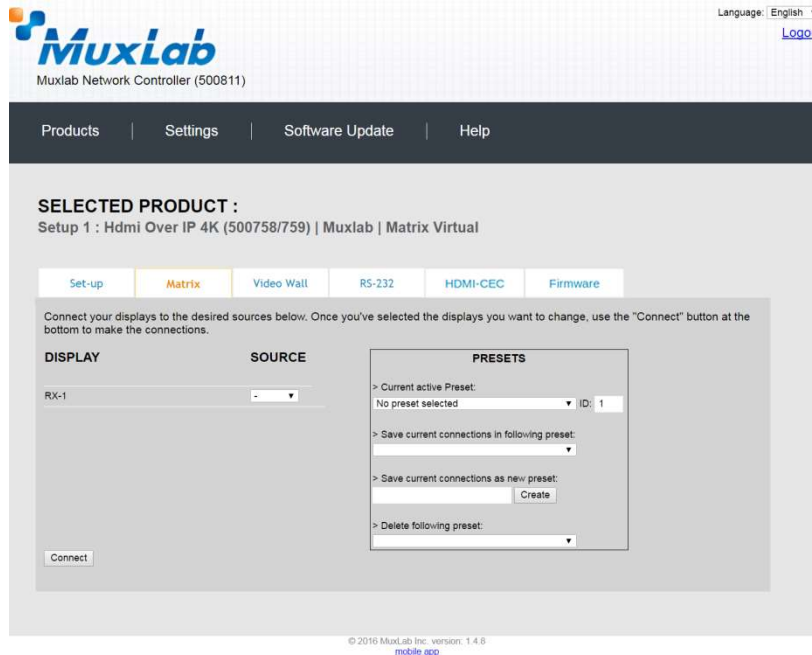


Figure 242: Matrix Tab

To connect a display to a source, the user first clicks on the drop-down list next to the given display (for example “RX-1”) and selects which source to connect it to (Figure 243).

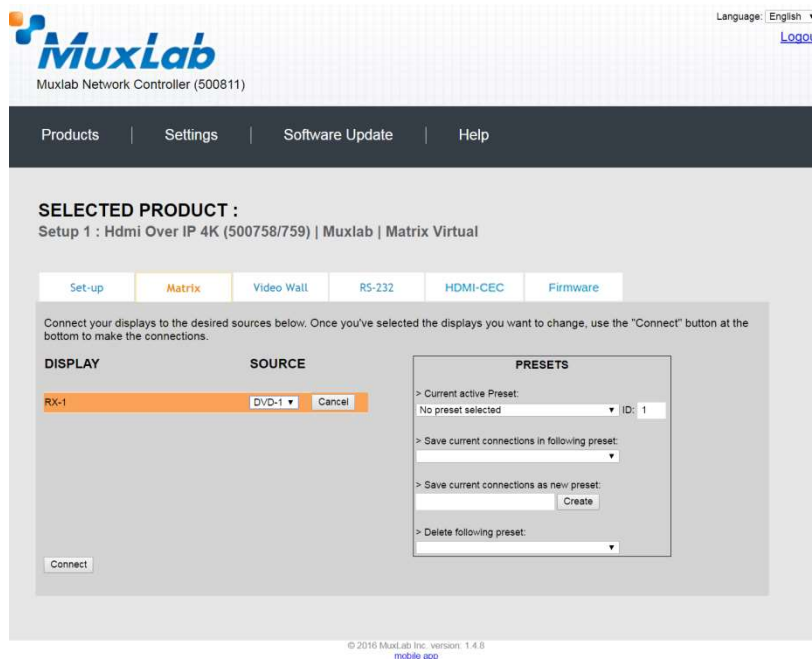


Figure 243: Change Connection

Once the selection is made (the user can change any or all connections between displays and sources), the user clicks on **Connect** to finalize the change. A green **SUCCESS** tag will appear next to the new or changed connection (Figure 244).

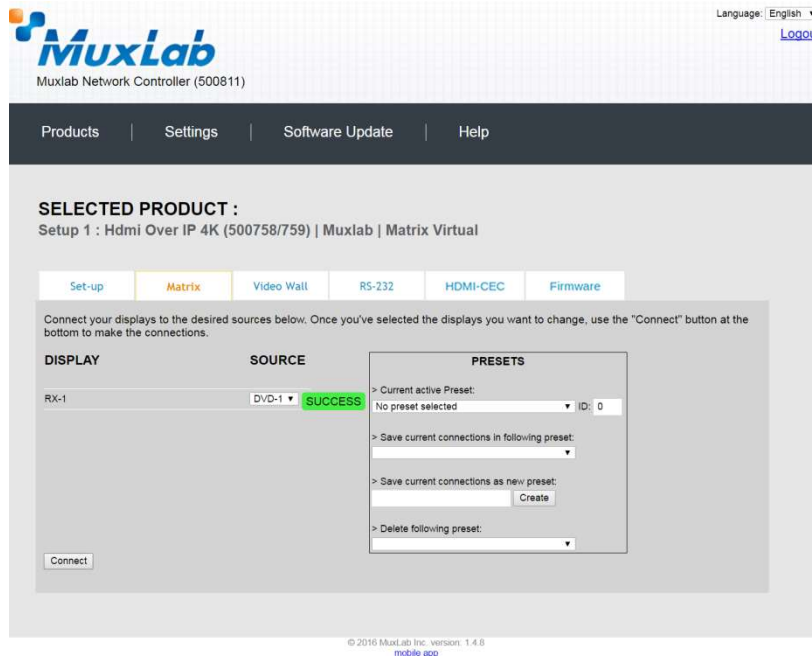


Figure 244: Change Successful

To create a new preset, the user clicks the > **Save current connections as new preset** field (Figure 245) and types a name. This assigned preset name will be linked to the existing connection scheme being shown within the **Matrix** tab.


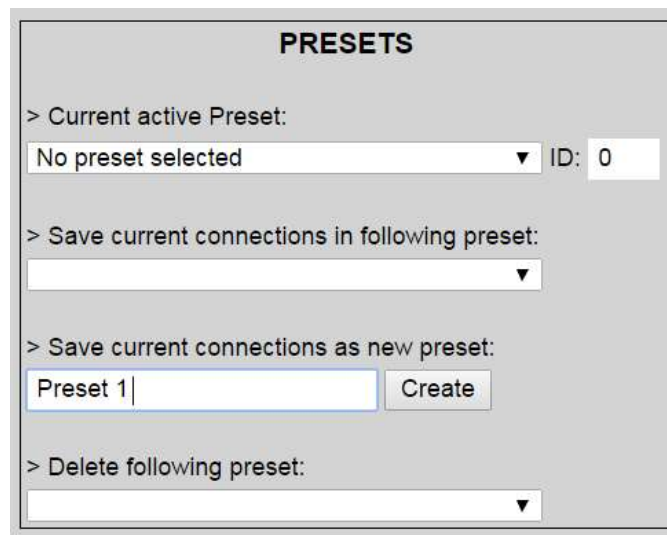


Figure 245: Create New Preset

To save this preset, the user clicks on **Create**. A green SUCCESS tag will appear next to the > **Save current connections as new preset** field and the newly created preset becomes the **Current active Preset** (Figure 246).

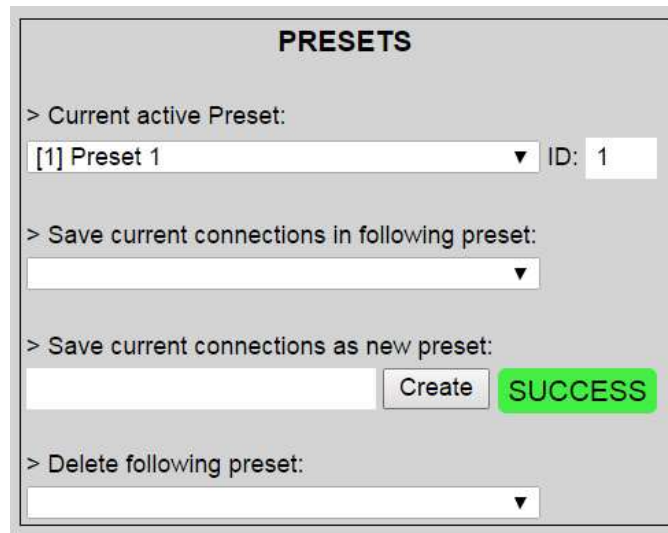


The screenshot shows a window titled "PRESETS" with the following elements:

- > Current active Preset: A dropdown menu showing "[1] Preset 1" and an "ID: 1" field.
- > Save current connections in following preset: An empty dropdown menu.
- > Save current connections as new preset: An empty text input field, a "Create" button, and a green "SUCCESS" tag.
- > Delete following preset: An empty dropdown menu.

Figure 246: Confirmation of New Preset

To delete a preset, the user clicks the > **Delete following preset** drop-down box and selects a preset name from the list shown (Figure 247).

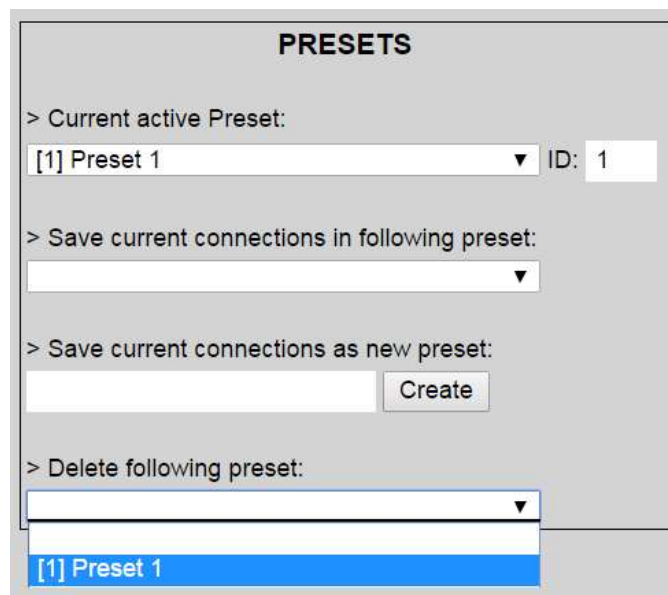

The screenshot shows the same "PRESETS" window as Figure 246, but with the following changes:

- The "Delete following preset:" dropdown menu is open, showing a list with "[1] Preset 1" selected and highlighted in blue.
- The "Create" button is now disabled (greyed out).
- The "SUCCESS" tag is no longer present.

Figure 247: Delete Preset

Once selected, a dialog will appear asking the user to confirm the deletion request (Figure 248).

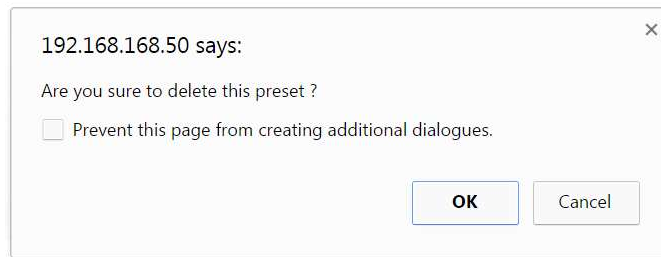


Figure 248: Confirmation of Deleted Preset

Click on **OK**. The preset will be deleted and a green SUCCESS tag will appear next to the **> Delete following preset** field (Figure 249).


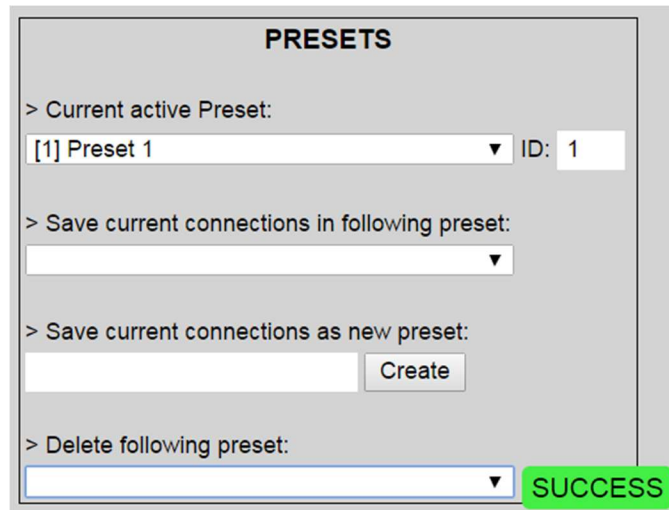


Figure 249: Confirmation of Deleted Preset

To save the current matrix configuration under an existing **Preset** name, click on > **Save current connection in following preset** drop-down box and selects a preset name (Figure 250).

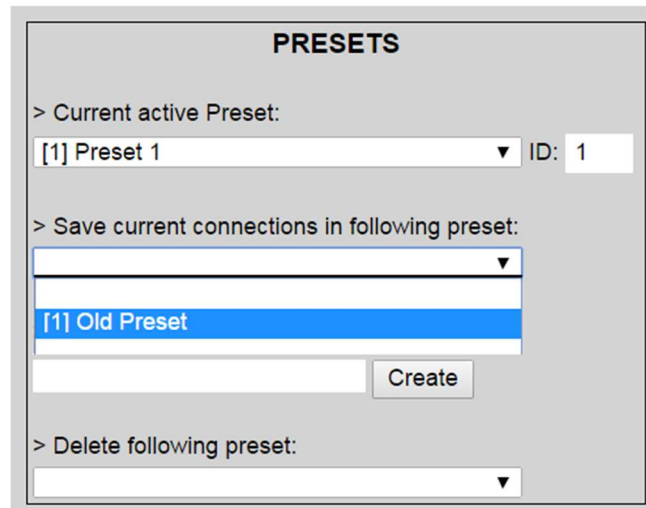


The screenshot shows a window titled "PRESETS". It contains three main sections:

- > Current active Preset:** A dropdown menu showing "[1] Preset 1" and an "ID: 1" field.
- > Save current connections in following preset:** A dropdown menu is open, showing a list of options. "[1] Old Preset" is highlighted in blue. Below the dropdown is a "Create" button.
- > Delete following preset:** A dropdown menu.

Figure 250: Change Current Active Preset

Once selected, the **Preset** will be saved and a green SUCCESS tag will appear next to the > **Save current connections in following preset** field (Figure 251).

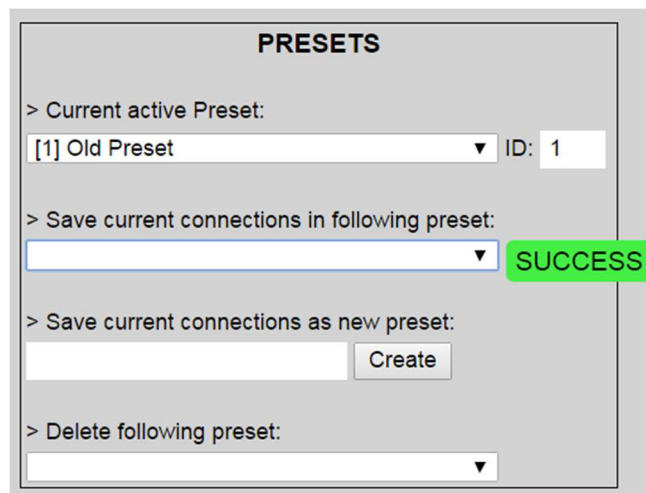

The screenshot shows the same "PRESETS" window as Figure 250, but with the following changes:

- > Current active Preset:** The dropdown menu now shows "[1] Old Preset".
- > Save current connections in following preset:** The dropdown menu is now empty. A green "SUCCESS" tag is displayed to the right of the dropdown.
- > Save current connections as new preset:** A new section with a text input field and a "Create" button.
- > Delete following preset:** The dropdown menu.

Figure 251: Confirmation of Changed Preset Name

In order to activate an existing **Preset**, select > **Current active Preset**, and select the **Preset** name from the drop-down box and the **Preset** will become active. The active **Preset** will also be displayed in the **Current active Preset** field.

3. Products Screen - Video Wall Tab

The **Video Wall** tab enables the user to configure an NxM video wall consisting of NxM monitors, all of the same size (Figure 252).

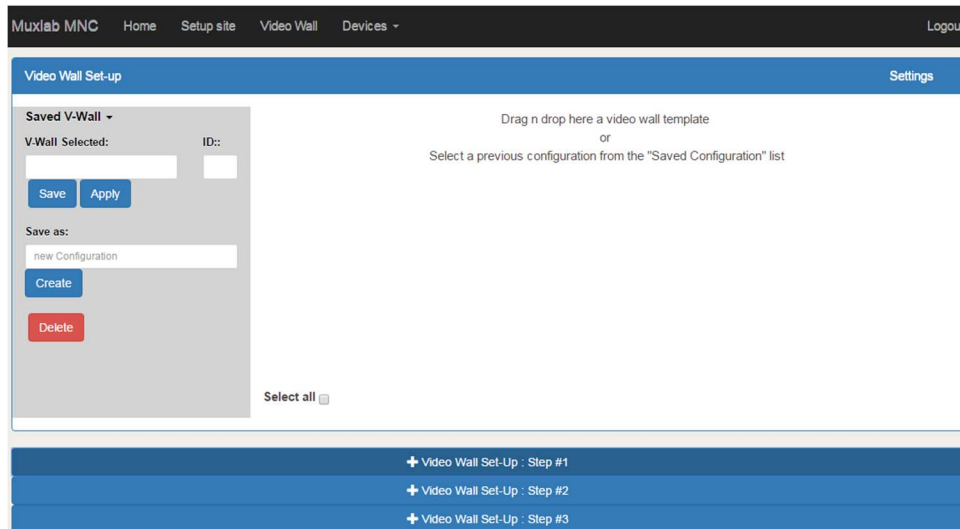


Figure 252: Video Wall Tab

This screen is laid-out in a 3-step pattern, with a display pane that shows the NxM video wall setup:

1. The user clicks on **+Video Wall Set-Up: Step #1**, which expands to provide the user with video wall size options (Figure 253).

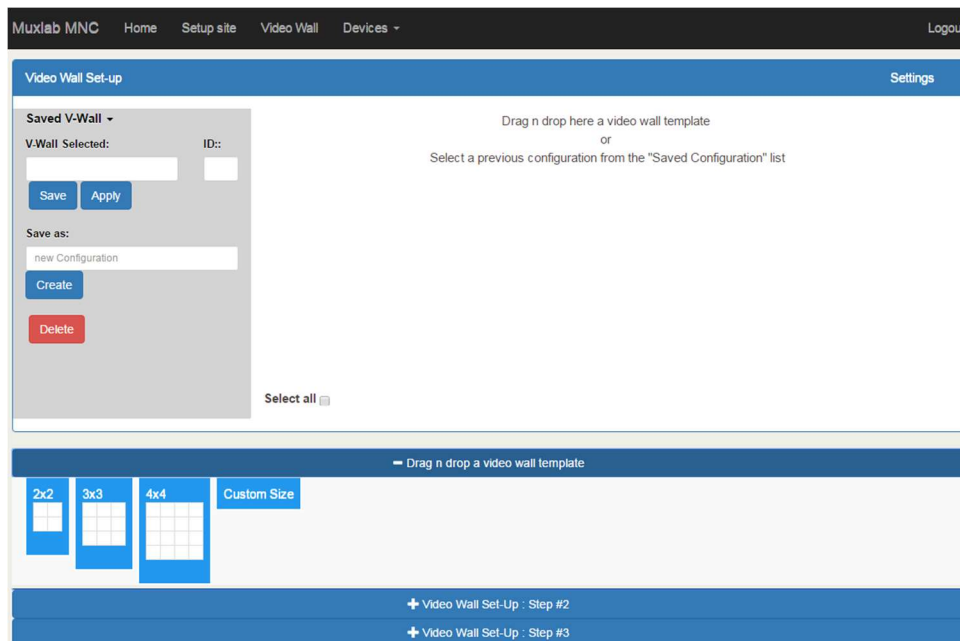


Figure 253: Video Wall Tab

- a. By clicking on and dragging any of the NxN preconfigured boxes into the display pane, the user creates a video matrix of the same size. In the example shown in Figure 254, a 2x2 video wall consisting of 4 monitors is created. Custom video wall sizes may also be created.

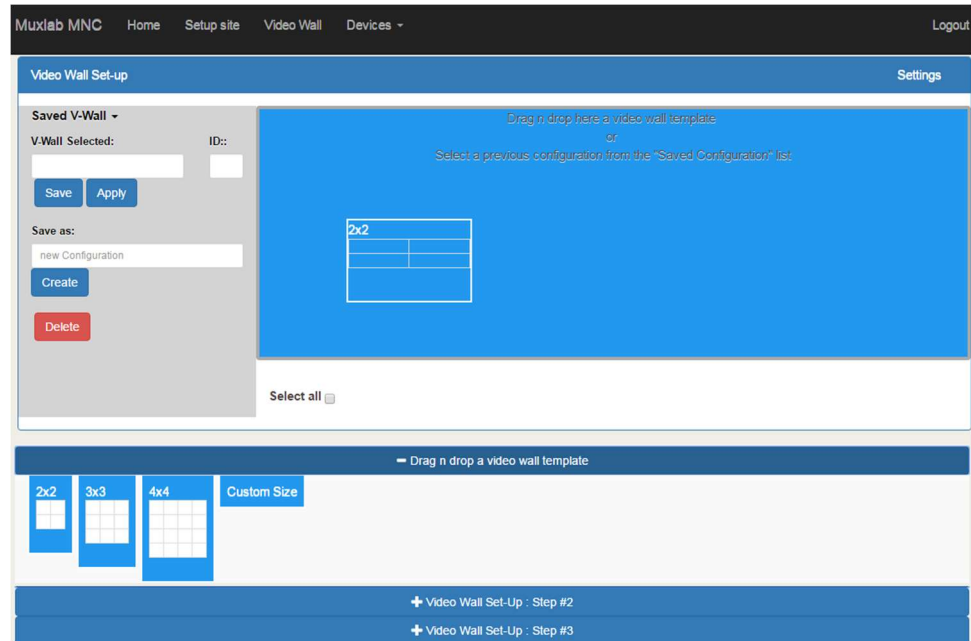


Figure 254: Video Wall Tab – Dragging to Create a 2x2 Video Wall

- b. Once dragged into the display pane, the user is asked for display dimensions (Figure 255).

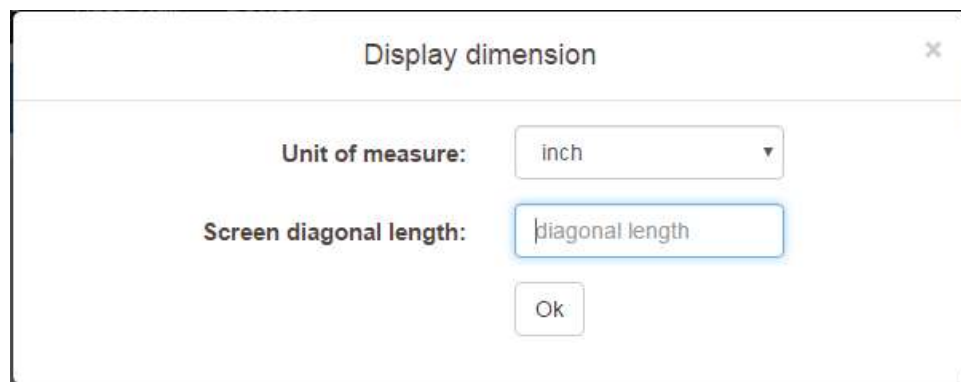


Figure 255: Video Wall Tab – Newly Created 2x2 Video Wall

- c. Once created, the display panel shows an empty (unpopulated) video wall consisting of 4 monitors (Figure 256).

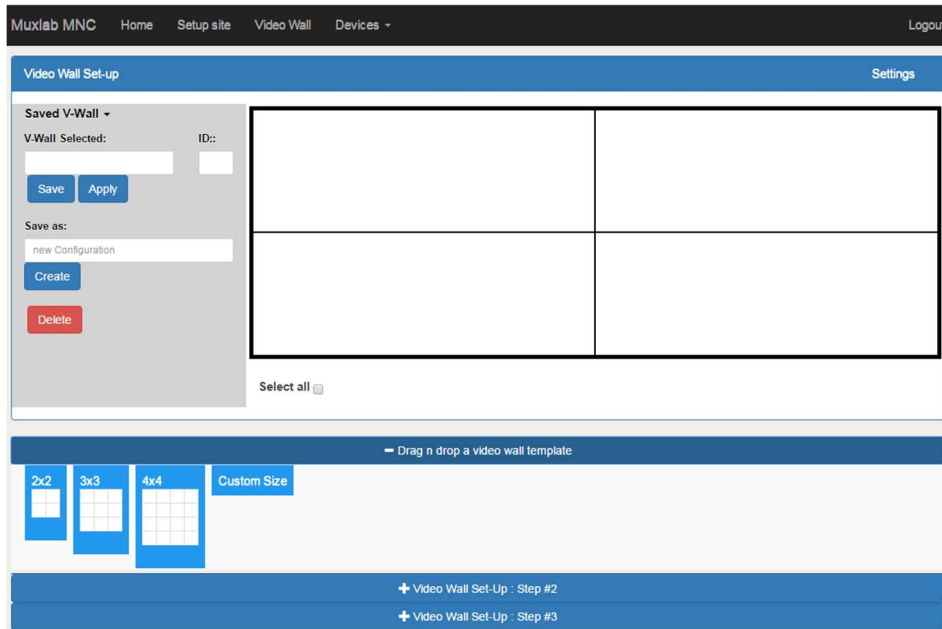


Figure 256: Video Wall Tab – Newly Created 2x2 Video Wall

- 2. The user clicks on **+Video Wall Set-Up: Step #2**, which expands to provide the user with display mapping options (Figure 257).

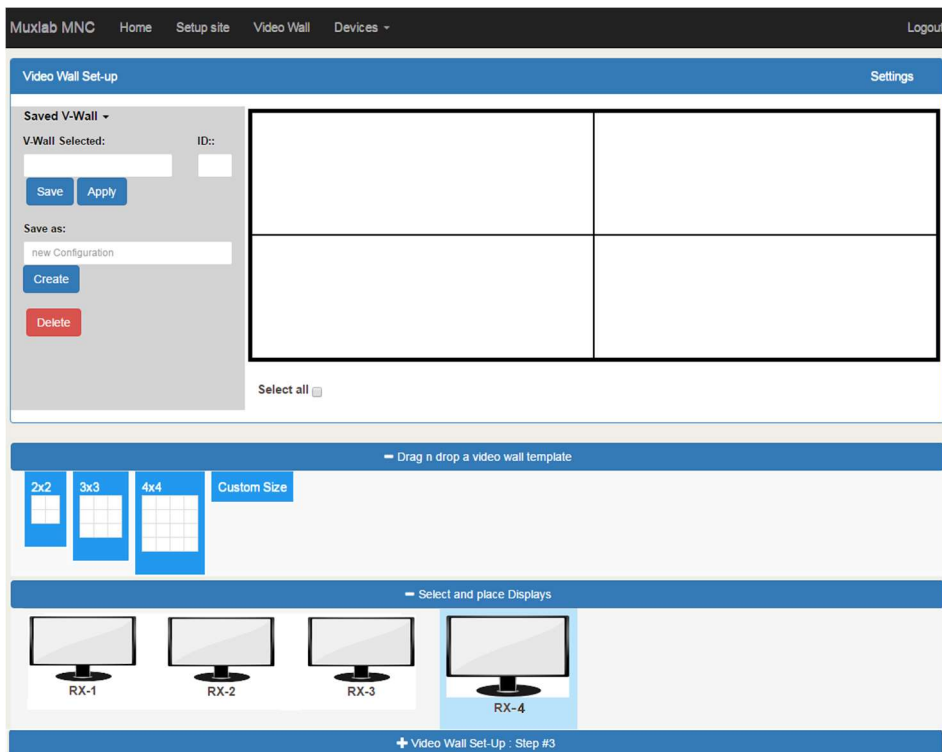


Figure 257: Video Wall Tab – Newly Created 2x2 Video Wall

- a. The user clicks on a given display in the lower section of the screen. This highlights the display in a light blue box. (Note that dragging and dropping displays into the display pane is not allowed.)
- b. The user clicks on any one of the cells in the display pane.
- c. The clicked cell in the display pane is now mapped to the given display.
- d. The user must continue mapping the remaining displays to the remaining cells. The display pane then becomes fully display mapped (Figure 258).

RX-3 Sh H:0,V:0 Sc H:0,V:0	RX-2 Sh H:0,V:0 Sc H:0,V:0
RX-1 Sh H:0,V:0 Sc H:0,V:0	RX-4 Sh H:0,V:0 Sc H:0,V:0

Figure 258: Video Wall Tab – Fully Display Mapped Video Wall

3. The user clicks on **+Video Wall Set-Up: Step #3**, which expands to provide the user with source mapping options (Figure 259).

The screenshot shows the 'Video Wall Set-up' interface. At the top, there is a navigation bar with 'Muxlab MNC', 'Home', 'Setup site', 'Video Wall', and 'Devices'. A 'Logout' link is in the top right. The main content area is titled 'Video Wall Set-up' and includes a 'Settings' link. On the left, there is a 'Saved V-Wall' section with a dropdown menu, an 'ID:' field, and 'Save' and 'Apply' buttons. Below this is a 'Save as:' section with a text input field containing 'new Configuration', a 'Create' button, and a 'Delete' button. The central part of the interface is a 2x2 grid of display cells, each containing the text 'RX-1', 'RX-2', 'RX-3', or 'RX-4' followed by 'Sh H:0,V:0' and 'Sc H:0,V:0'. Below the grid is a 'Select all' checkbox. Underneath the grid is a section for selecting a video wall template, with options for '2x2', '3x3', '4x4', and 'Custom Size'. Below this is a section for selecting and placing displays, showing four monitor icons labeled 'RX-1', 'RX-2', 'RX-3', and 'RX-4'. At the bottom, there is a section for selecting a source to connect, showing two source icons labeled 'DVD' and 'TX-00-0B-78-00-7D-0B'.

Figure 259: Video Wall Tab – Connecting Sources to Receivers

- The user clicks on one or more cells in the display pane. Once clicked, the panes will change to blue to indicate that they are now actively selected.
- The user clicks on any single source shown in the lower part of the screen.
- The clicked cell(s) in the display pane is (are) now mapped to the given source.
- The user maps some or all sources to all cells. The display pane then becomes fully source mapped (Figure 260).

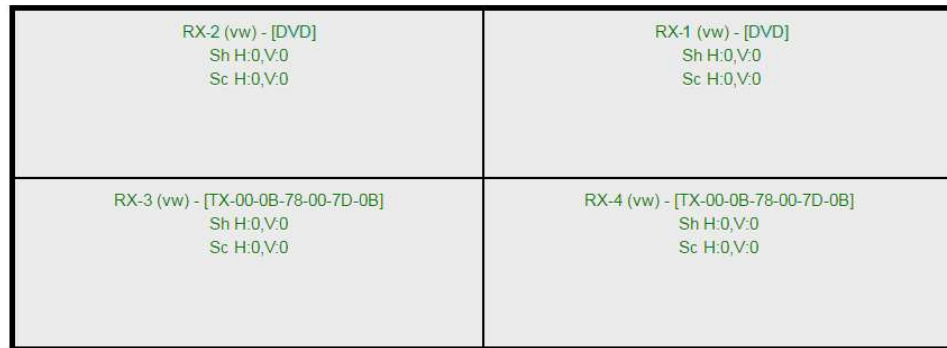


Figure 260: Video Wall Tab – Fully Source Mapped Video Wall

To configure the display size and bezel dimensions of all the displays (assumed to be all equal) comprising the video wall, the user clicks on **Settings** in the top right hand side of the **Video Wall** tab. This brings up the display setting options (Figure 261).



Figure 261: Video Wall Tab – Display Setting Options

Since the video wall consists of only one type of display (all displays are the same), the user only needs to modify the dimensions for only one representative display.

Note that **Unit**, **screen width**, and **screen height** values are derived from the information provided by the user when first creating the video wall (Figure 255). Also, **Bezel top**, **bezel bottom**, **bezel left**, and **bezel right** are all set to 0.1 inch by default, but these values may be changed.

Display settings options also allow the user to scale or shift the image of one or several displays at the same time. The user must first select the display(s) to be modified in the display plane, and then clicks on any of the eight buttons (Scale/Shift) in the display setting options. Clicking on **Reset** resets any changes made to these eight buttons, not to **Unit**, **screen width**, **screen height**, or **bezel** values.

The settings of any video wall can be saved as a named configuration by using the options shown in the left hand side of the **Video Wall** tab. Video wall configurations can be named, saved, deleted, or activated.

Note that not all displays in an actual video wall need to be included in a given saved configuration, simply start the three steps mentioned above, but only include the required subset of the displays to define as a given configuration, and save this configuration. For example, if the actual video wall consists of four (4) horizontal displays by four (4) vertical displays (4x4 video wall), a 2x2 configuration can be created consisting of only the upper-left corner four displays. To do so create a 2x2 video wall configuration in Step #1 above, then assign the corresponding four displays in the upper-left corner in Step #2 above, then in Step #3 assign the initial source, and save this configuration. Tip, use a configuration name that is representative of the actual setup, such as “Upper Left 2x2” in this case.

Any saved configuration can be activated and displayed on the video wall with the initial assigned source by simply loading it. Once activated, the initial source can easily be changed by repeating Step #3 above with a different source selected, after which you can either save this change or choose not to save it so the next time this configuration is activated the initial source remains unchanged.

4. Products Screen - RS-232 Tab

The **RS-232** tab of the **Products** screen enables the user to send RS-232 commands to any MuxLab transmitter or receiver (Figure 262). This is done either through the Network Controller or directly by connecting a PC to the RS-232 port of any transmitter or receiver.

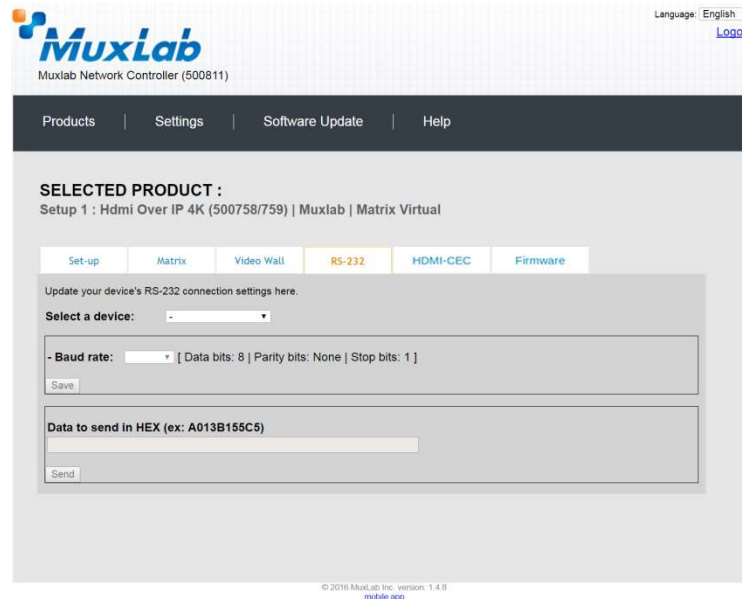


Figure 262: RS-232 Tab

When sending RS-232 commands through the Network Controller, the user first selects the device that the RS-232 commands will be sent to. This is done by clicking on the **Select a device** drop-down list and making a selection (Figure 263).

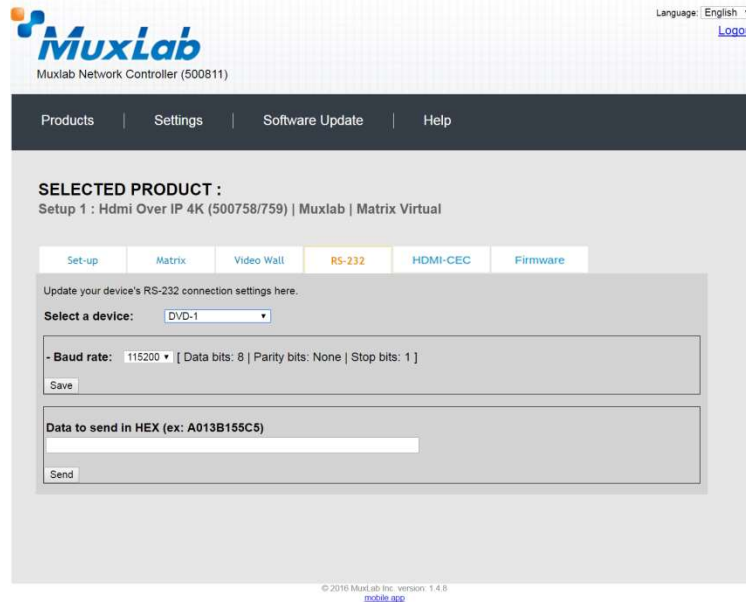


Figure 263: RS-232 Tab - Selecting a Device

Once a device is selected, the **Data to send in HEX** field becomes enabled. In the above example, DVD-1 was chosen as the selected device (but a receiver connected to sink equipment could have also been selected), meaning that a command sent to DVD-1 will travel from the Network Controller to the Ethernet Switch, and from the Ethernet Switch to the transmitter connected to DVD-1. That transmitter will then send the specified data command to DVD-1.

Note that no RS232 feedback is sent to the Network Controller when sending an RS232 command originating from the Network Controller in the direction of the transmitter (to DVD-1).

When sending RS-232 commands directly from a PC to any transmitter or receiver, in pass-through mode, this is automatically accomplished by the existing connection between the transmitter and receiver. As such this connection must exist for pass-through to operate.

IR Pass-through

Special note concerning IR pass-through. This functions in the same manner as RS232 pass-through above, but is limited in one direction, from receiver to transmitter to control source end devices. Thus a connection between transmitter and receiver, automatically establishes an IR pass-through from the receiver to the transmitter.

Note that IR commands sent from the Network Controller is not supported on the 500759.

5. Products Screen – HDMI CEC Tab

The **HDMI CEC** tab of the Products screen enables the user to support CEC commands including Standby, Power ON, Volume Up, Volume Down and Mute (Figure 264).

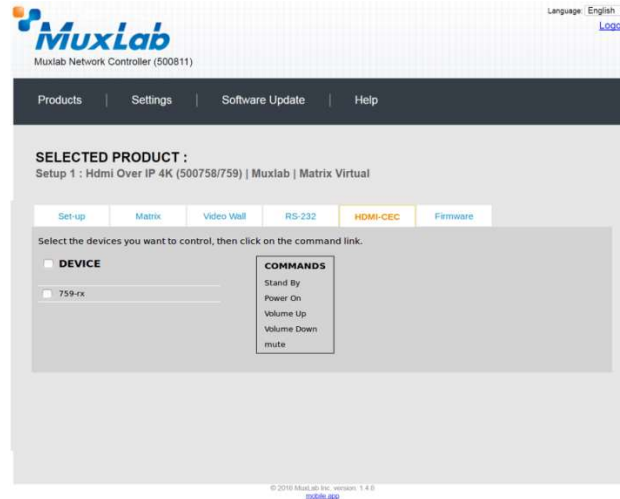


Figure 264: HDMI CEC Tab

6. Products Screen - Firmware Tab

The **Firmware** tab of the Products screen enables the user to update the firmware for MuxLab transmitters and receiver (Figure 265).

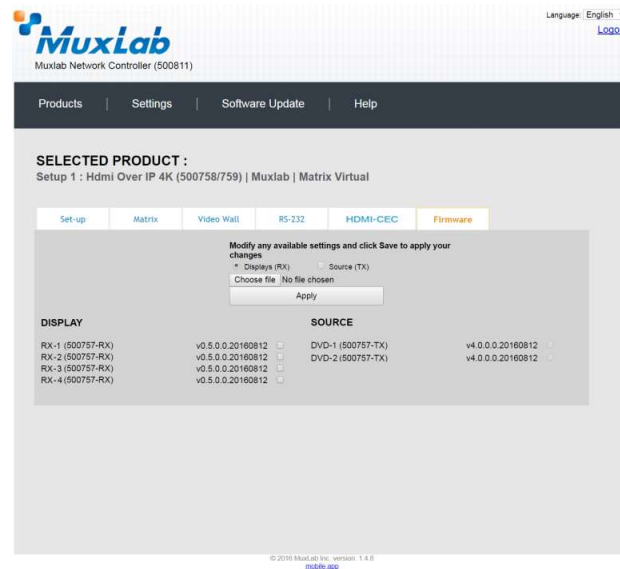



Figure 265: Firmware Tab

The user first selects either **Display (RX)** or **Source (TX)**, then chooses the firmware update file to upload to the given device. Once the file is selected, the user checks the box next to the given device (listed under **DISPLAY** and **SOURCE**) targeted for firmware upgrade, and then clicks **Apply**.

Settings Screen

The **Settings** screen contains two tabs: **Network** and **Administration**.

The **Network** tab (Figure 266) is used to change the IP address of the MuxLab Network Controller, the network mask, as well as the router IP address. It also allows the user to enable or disable DHCP.

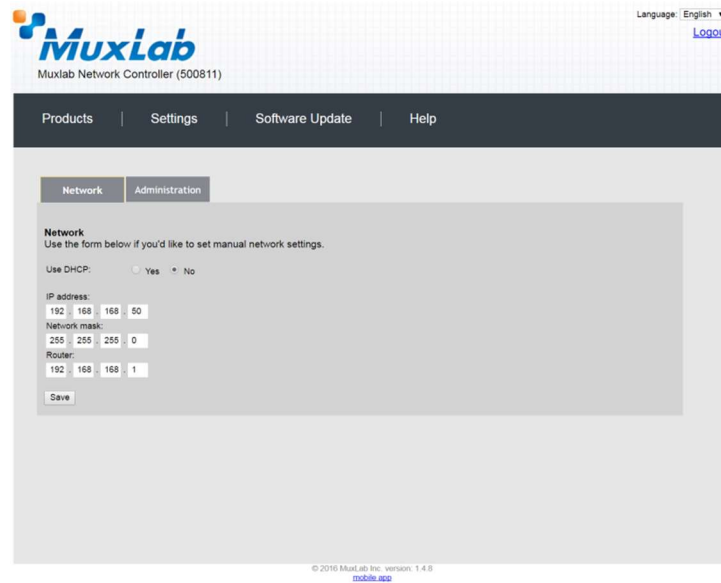

The screenshot shows the MuxLab Network Controller (500811) interface. The top navigation bar includes 'Products', 'Settings', 'Software Update', and 'Help'. The 'Settings' tab is active, and the 'Network' sub-tab is selected. The 'Network' section contains a form for manual network settings. It includes a 'Use DHCP' toggle set to 'No'. Below this are input fields for 'IP address' (192, 168, 168, 50), 'Network mask' (255, 255, 255, 0), and 'Router' (192, 168, 168, 1). A 'Save' button is located at the bottom of the form. The footer indicates the version is 1.4.8 and provides a link to the mobile app.

Figure 266: Settings Screen: Network Tab

The **Administration** tab is used to create or delete user accounts, change passwords, restore data, backup data, and retrieve logs (Figure 267).



The screenshot shows the MuxLab Network Controller (500811) interface with the 'Administration' sub-tab selected. It features several sections: 'User Accounts' with a dropdown to 'Create a new User Account Or select a User to edit:', input fields for 'User Name', 'new password', and 'Confirm new password', and a 'User Type' dropdown; 'Restore data' with a 'Specify file:' field and a 'Restore' button; 'Backup data' with a 'Backup' button; and 'Get Logs' with 'Download Logs' and 'Delete Logs' buttons. A warning message states: 'WARNING ! You MUST FIRST set the IP address of this controller using the same as the controller this backup file come from !!!'. The footer shows version 1.4.8 and a mobile app link.

Figure 267: Settings Screen: Administration Tab

Software Update Screen

The **Software Update** enables the user to update MuxLab Network Controller software (Figure 268). This software is available on MuxLab's website (www.muxlab.com). Download the software to the local PC before performing the update.

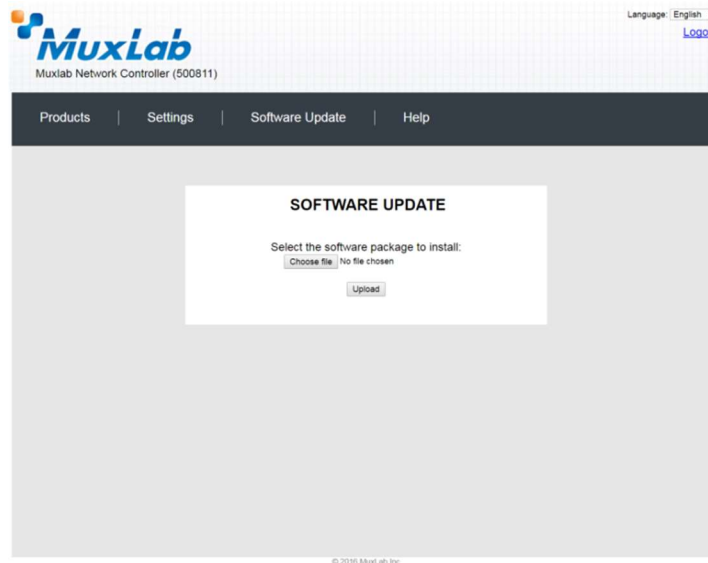


Figure 268: Software Update Screen

Help Screen

The **Help** screen offers quick contact information for customer support and all other inquiries (Figure 269).



Figure 269: Help Screen

Extender Model 500770

Products Screen

Once the user has logged in, the **Products** screen will appear (Figure 270).

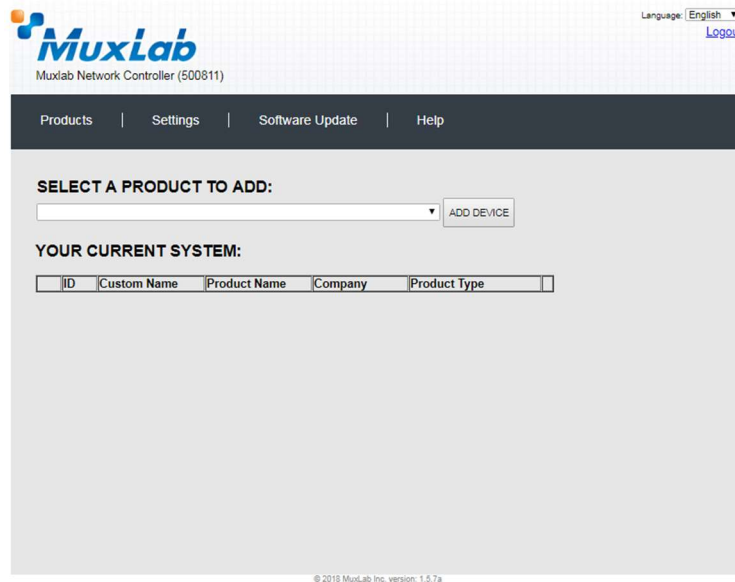


Figure 270: Products Screen – Initial View

In the **SELECT A PRODUCT TO ADD:** drop down box, select **HDMI over IP (500758/759/770/771/773/777)** and then click on **ADD DEVICE** (Figure 271).

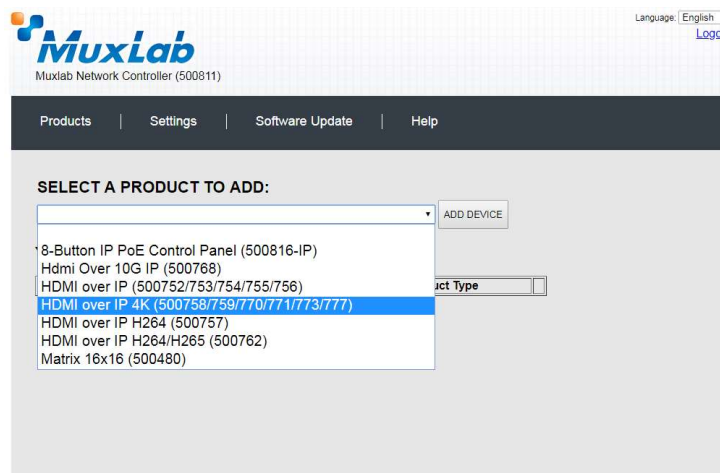


Figure 271: Products Screen – Selecting a Product

A dialog box appears asking the user to provide a custom name for the selected product (Figure 271). The user then types a name in the **Custom Name:** field and clicks on **OK**. Note that if the user decides to click on **CANCEL**, the previous screen appears (Figure 270), without a product being added.

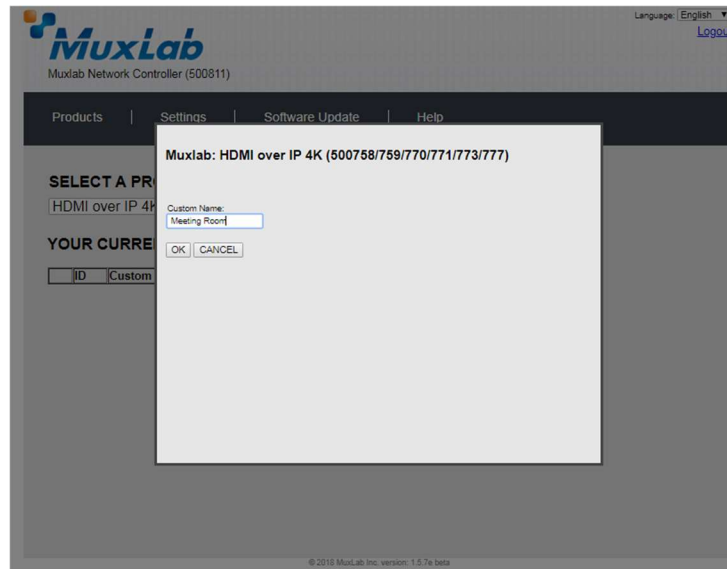


Figure 272: Products Screen – Naming a Product

The custom name has been added to **YOUR CURRENT SYSTEM** (Figure 273).

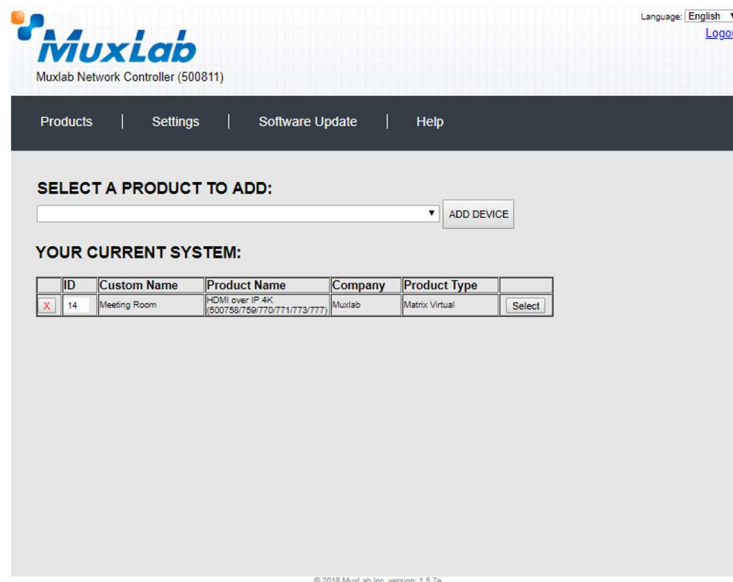


Figure 273: Products Screen – Your Current System Selection

The user can change the ID of each row by modifying the **ID** field. The user can also delete the entire row completely by clicking the **X** next to it.

To configure a given product, the user clicks on **Select**, which brings up a multi-tabbed screen (Figure 274).

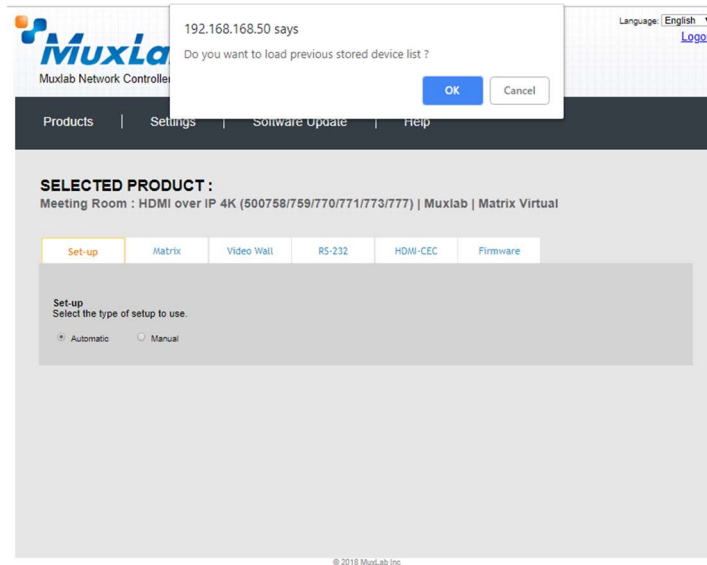


Figure 274: Products Screen – Load Dialog

By default, a dialog appears asking the user to load a previously saved device list (in case such a list has already been stored). This dialog will appear even if no device list has been previously saved.

Six tabs appear within the **Products** screen:

1. Set-up
2. Matrix
3. Video Wall
4. RS-232
5. HDMI CEC
6. Firmware

1. Products Screen - Set-up Tab

The **Set-up** tab offers the user two options for the type of set-up allowed: **Automatic** or **Manual**.

Automatic means that the software will scan the system for every dip-switch enabled device. The software will then override its manual dip-switch address settings and place these units under software address control. (Automatic is recommended).

Manual means that the software will allow the manual dip-switch address settings of any found device to remain active.

After selecting **Automatic** or **Manual**, click on **Launch discovery** (Figure 275).

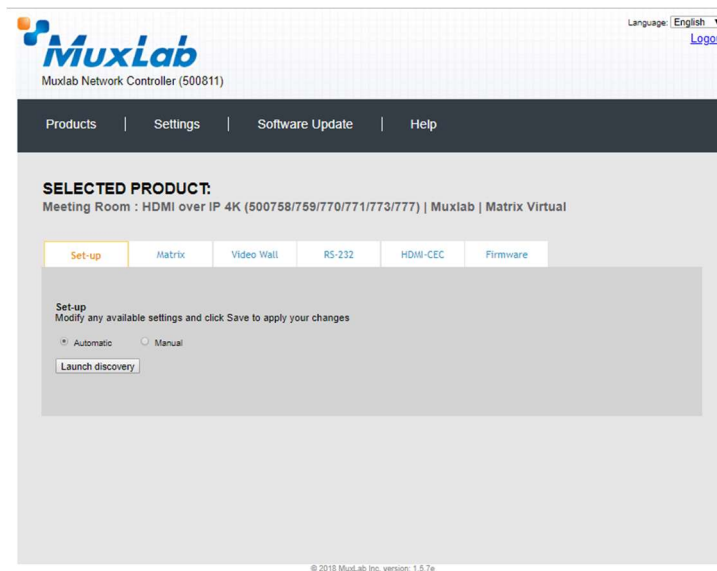


Figure 275: Products Screen – Set-up Tab

The system will scan the network for all source side devices (500770 transmitters) and display side devices (500770 receivers), and will display the scan results in tabular form (Figure 276).

Each 500770 transmitter and receiver can be assigned an arbitrary descriptive name, normally reflecting the end device that it is terminated to. To change the name of any Display (RX) or Source (TX) device, click the **Name** field to edit its contents. Several **Name** fields can be edited before saving changes, as shown in Figure 2 (orange highlighted fields).

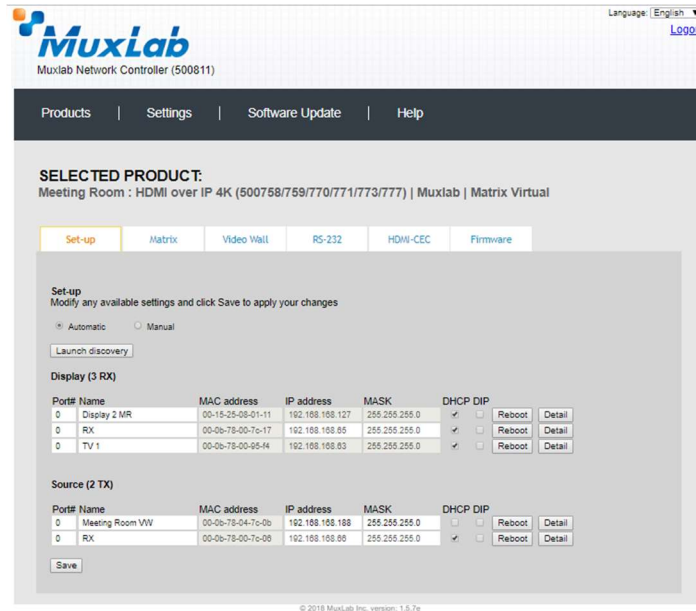


Figure 276: Products Screen – Set-up Tab

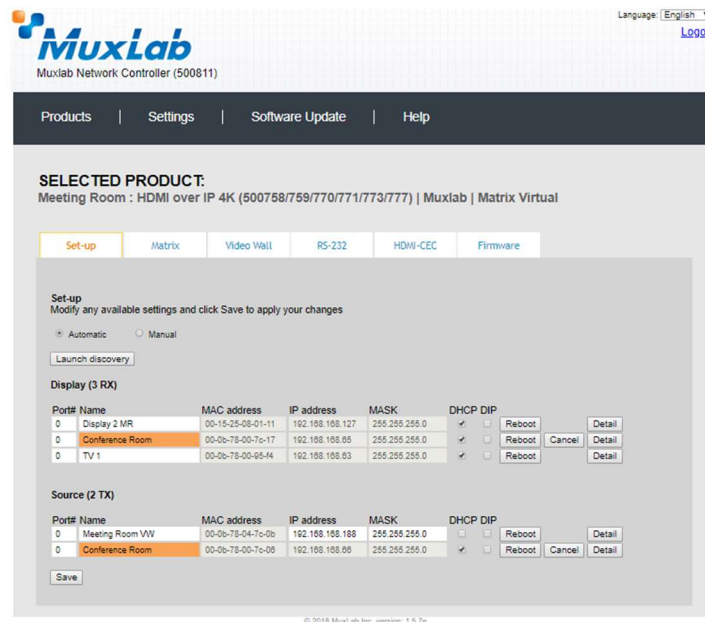


Figure 277: Name Editing

To save all name changes, click on **Save**. A green UPDATED tag will appear next to newly changed names (Figure 278).

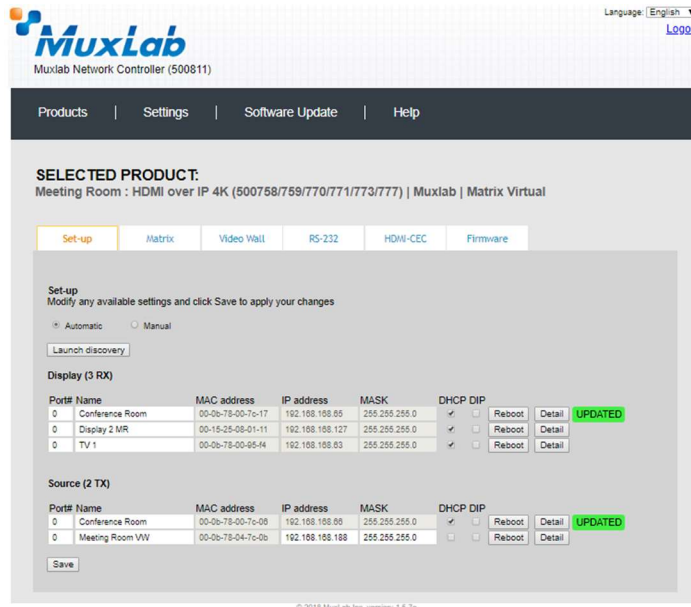


Figure 278: Saving Name Changes

To view component parameters, click on the **Detail** button next to the given component. A dialog appears (Figure 279).

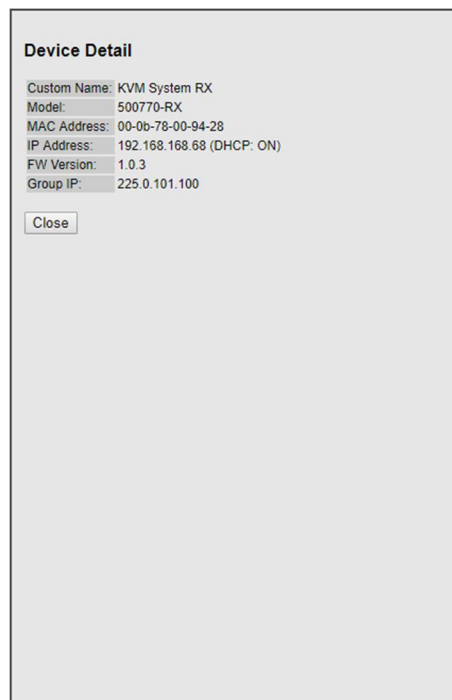


Figure 279: Device Detail Dialog

2. Products Screen - Matrix Tab

The **Matrix** tab of the **Products** screen allows the user to connect any Display to any Source. The user also has the option of using **Presets** to save connection schemes (“Presets”), as well as to edit and delete existing presets (Figure 280).

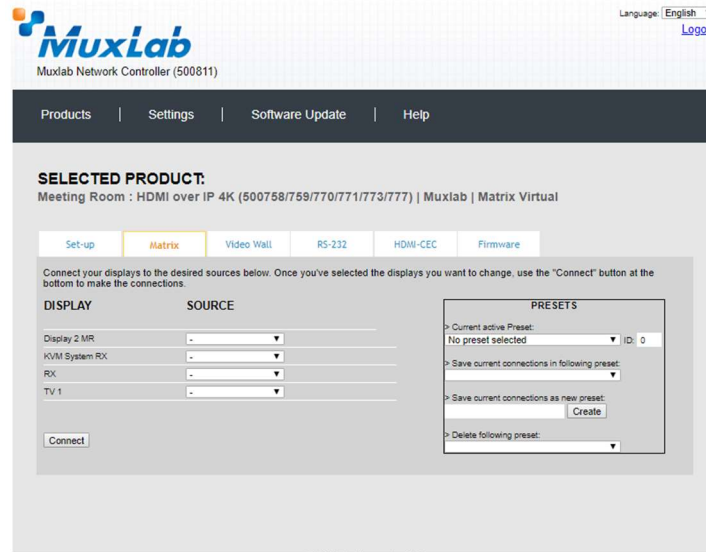


Figure 280: Matrix Tab

To connect a display to a source, the user first clicks on the drop-down list next to the given display (for example “KVM System RX”) and selects which source to connect it to (Figure 281).

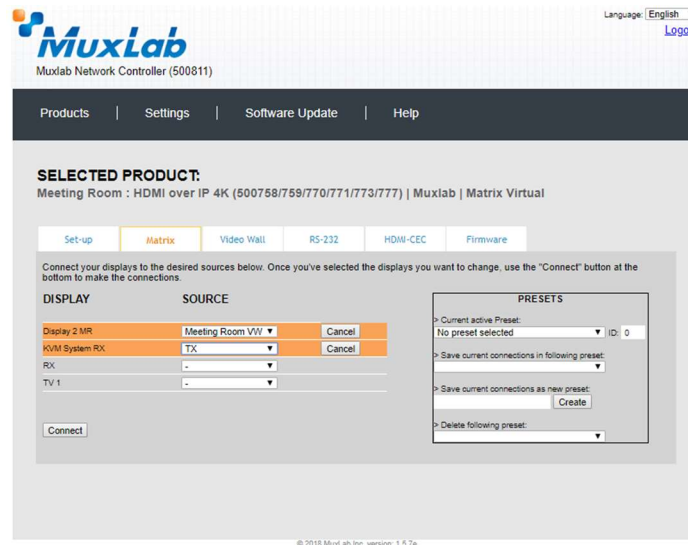


Figure 281: Change Connection

Once the selection is made (the user can change any or all connections between displays and sources), the user clicks on **Connect** to finalize the change. A green **SUCCESS** tag will appear next to the new or changed connection (Figure 282).

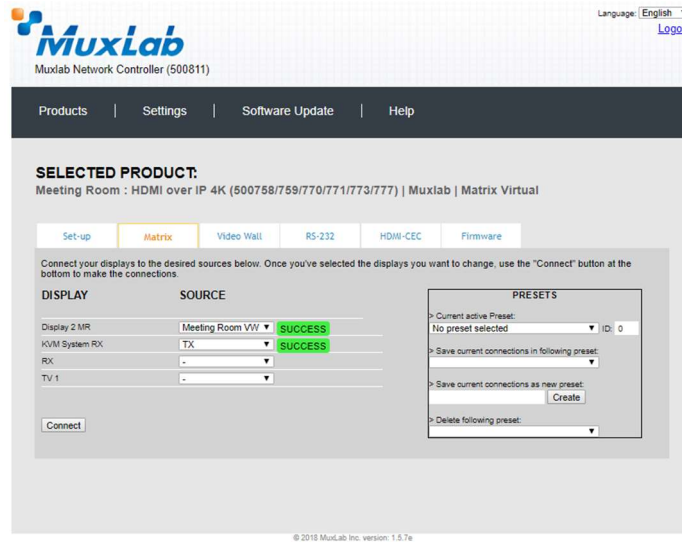


Figure 282: Change Success

To create a new preset, the user clicks the > **Save current connections as new preset** field (Figure 283) and types a name. This assigned preset name will be linked to the existing connection scheme being shown within the **Matrix** tab.


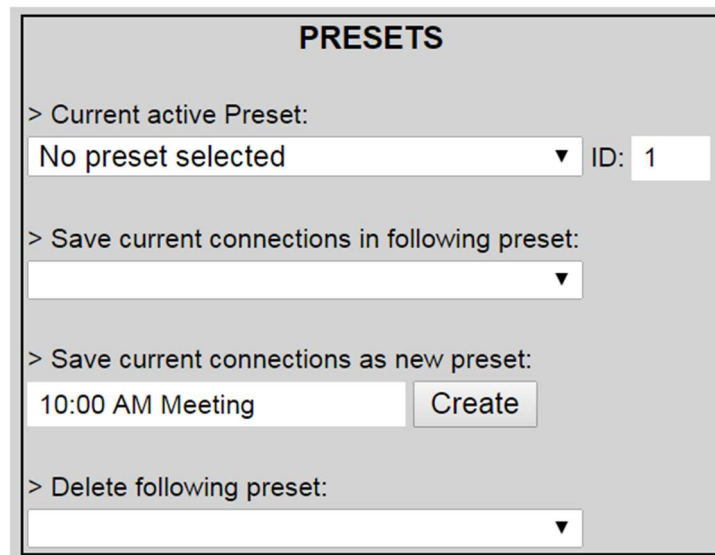


Figure 283: Create New Preset

To save this preset, the user clicks on **Create**. A green SUCCESS tag will appear next to the > **Save current connections as new preset** field and the newly created preset becomes the **Current active Preset** (Figure 284).

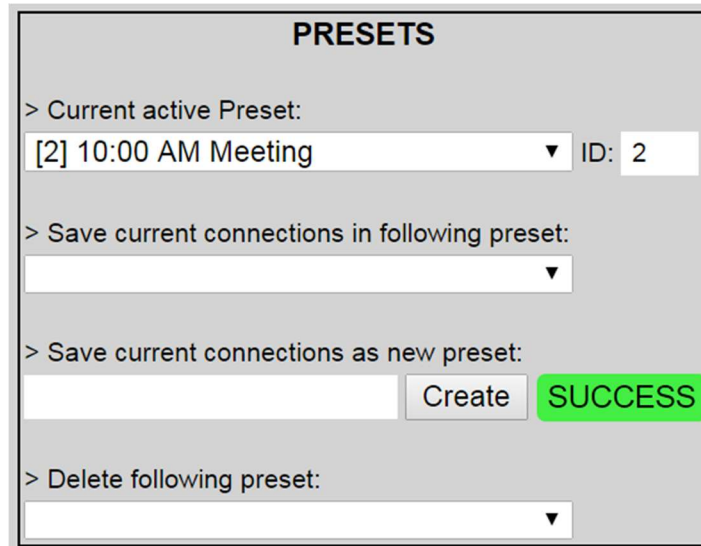


The screenshot shows a window titled "PRESETS" with a light gray background. It contains four sections, each starting with a right-pointing chevron (>):

- Current active Preset:** A dropdown menu showing "[2] 10:00 AM Meeting" and "ID: 2".
- Save current connections in following preset:** An empty dropdown menu.
- Save current connections as new preset:** An empty text input field followed by a "Create" button and a green "SUCCESS" tag.
- Delete following preset:** An empty dropdown menu.

Figure 284: Confirmation of New Preset

To delete a preset, the user clicks the > **Delete following preset** drop-down box and selects a preset name from the list shown (Figure 285).

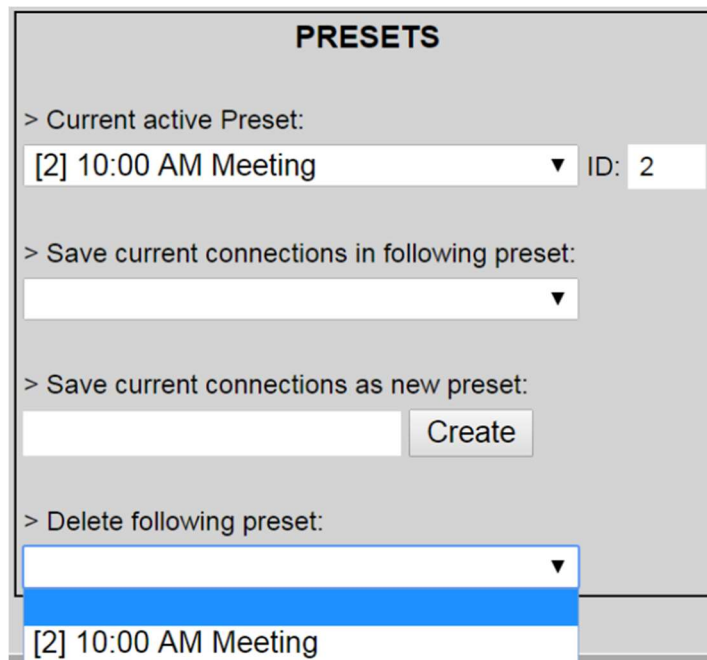

The screenshot shows the same "PRESETS" window as Figure 284. The "Delete following preset:" dropdown menu is open, showing a list of preset names. The first item, "[2] 10:00 AM Meeting", is highlighted in blue. The "Create" button is no longer visible, and the "SUCCESS" tag is absent.

Figure 285: Delete Preset

Once selected, a dialog will appear asking the user to confirm the deletion request (Figure 286).



Figure 286: Confirmation of Deleted Preset

Click on **OK**. The preset will be deleted and a green SUCCESS tag will appear next to the > **Delete following preset** field (Figure 287).


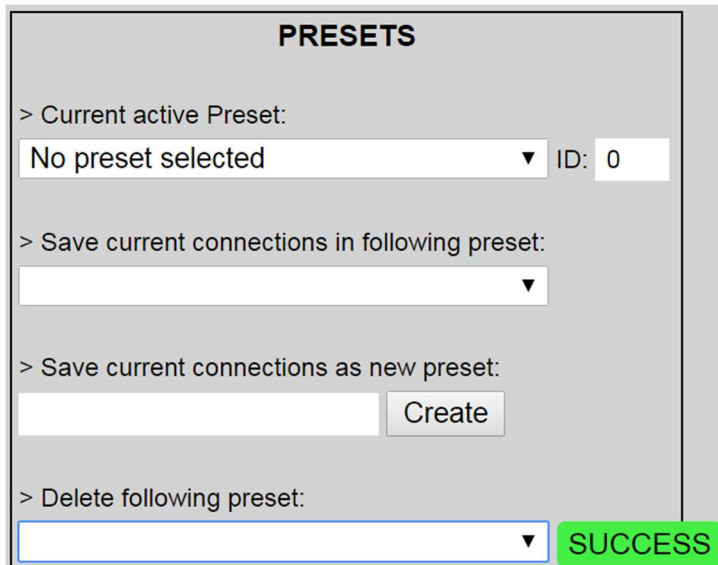


Figure 287: Confirmation of Deleted Preset

To save the current matrix configuration under an existing **Preset** name, click on > **Save current connection in following preset** drop-down box and selects a preset name (Figure 288).

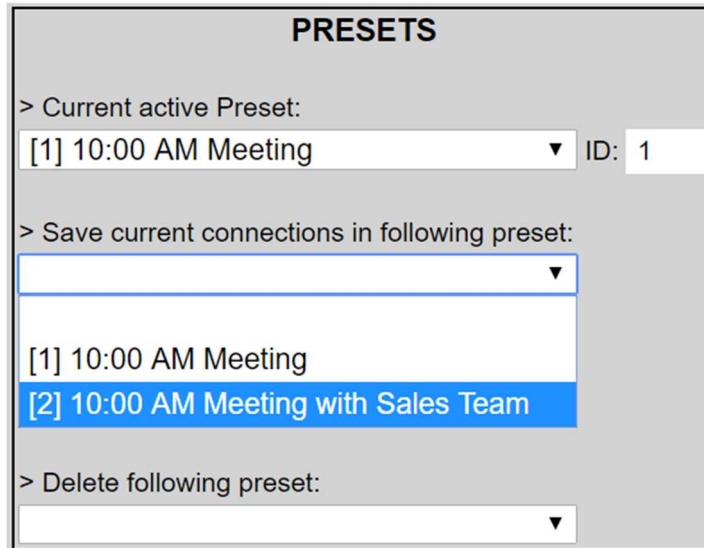


The screenshot shows a window titled "PRESETS". It contains three main sections:

- > Current active Preset:** A dropdown menu showing "[1] 10:00 AM Meeting" and an "ID: 1" field.
- > Save current connections in following preset:** A dropdown menu that is open, showing a list of options: "[1] 10:00 AM Meeting" and "[2] 10:00 AM Meeting with Sales Team". The second option is highlighted in blue.
- > Delete following preset:** An empty dropdown menu.

Figure 288: Change Current Active Preset

Once selected, the **Preset** will be saved and a green SUCCESS tag will appear next to the > **Save current connections in following preset** field (Figure 289).

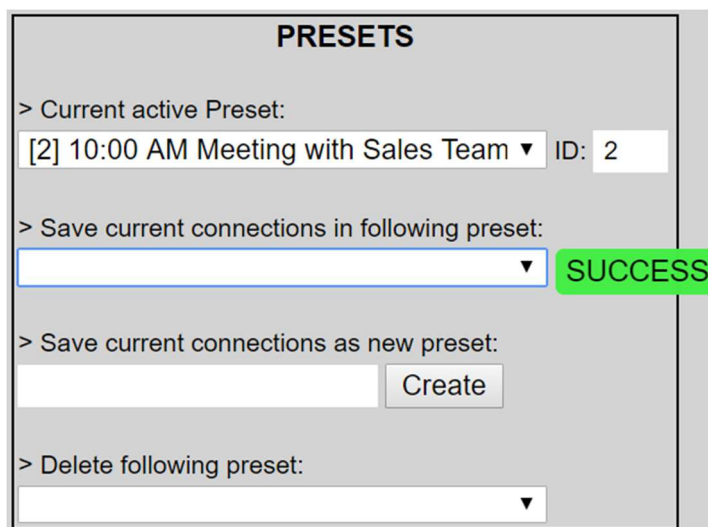

The screenshot shows the "PRESETS" window after a selection. The "Save current connections in following preset" dropdown menu is now closed, and a green "SUCCESS" tag is visible to its right. The "Current active Preset" dropdown now shows "[2] 10:00 AM Meeting with Sales Team" and "ID: 2". A "Create" button is visible next to the "Save current connections as new preset" field.

Figure 289: Confirmation of Changed Preset Name

In order to activate an existing **Preset**, select > **Current active Preset**, and select the **Preset** name from the drop-down box and the **Preset** will become active. The active **Preset** will also be displayed in the **Current active Preset** field.

3. Products Screen - Video Wall Tab

MuxLab's KVM HDMI Extender 500770 does not support the Video Wall feature. Clicking on this tab will display the following screen (Figure 290)

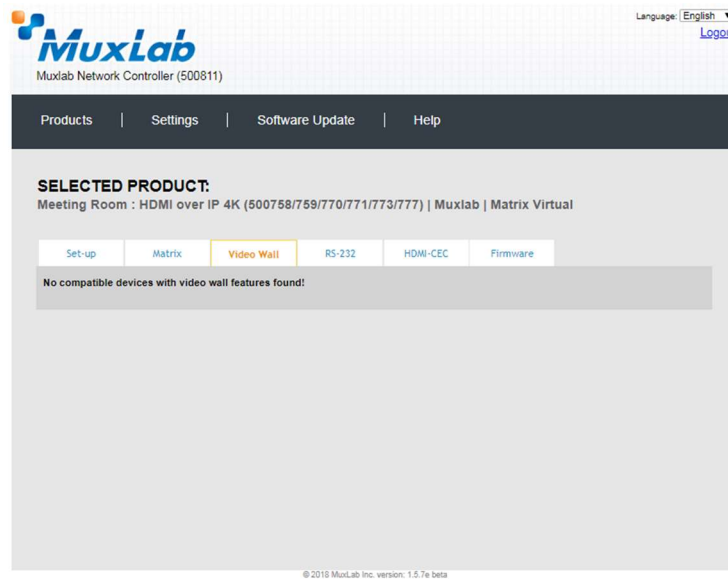


Figure 290: Video Wall Tab

4. Products Screen - RS-232 Tab

The **RS-232** tab of the **Products** screen enables the user to send RS-232 commands to any MuxLab transmitter or receiver. However, the 500770 does not support RS232 commands. Clicking on this tab will display the following screen (Figure 291)

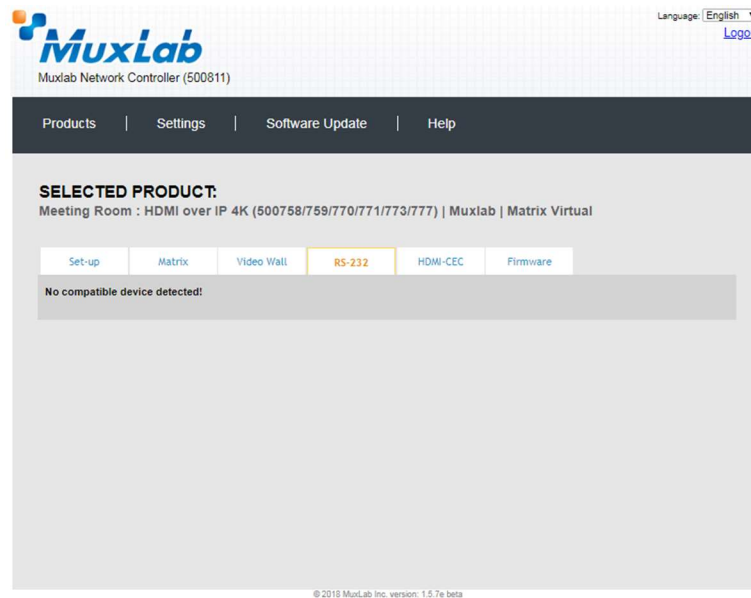


Figure 291: RS-232 Tab

5. Products Screen – HDMI CEC Tab

The **HDMI CEC** tab of the **Products** screen enables the user to support CEC commands on supported products. However, this feature is not supported on the 500770. Clicking on this tab will display the following screen (Figure 292).

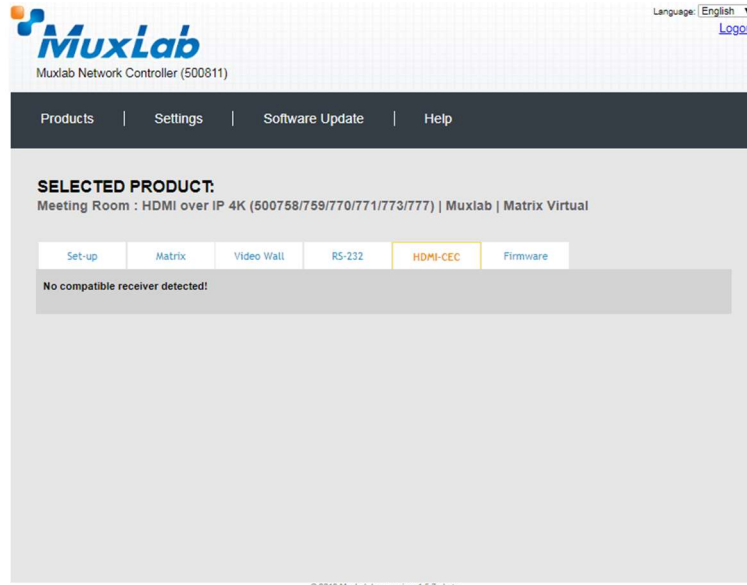


Figure 292: HDMI CEC Tab

6. Products Screen - Firmware Tab

The **Firmware** tab of the **Products** screen enables the user to update the firmware for MuxLab transmitters and receiver (Figure 293).

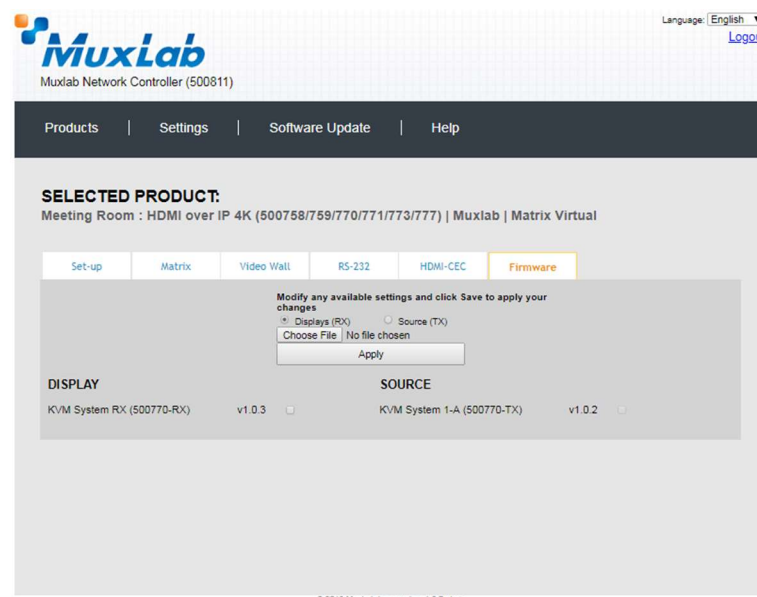



Figure 293: Firmware Tab

The user first selects either **Display (RX)** or **Source (TX)**, then chooses the firmware update file to upload to the given device. Once the file is selected, the user checks the box next to the given device (listed under **DISPLAY** and **SOURCE**) targeted for firmware upgrade, and then clicks **Apply**.

Settings Screen

The **Settings** screen contains two tabs: **Network** and **Administration**.

The **Network** tab (Figure 294) is used to change the IP address of the MuxLab Network Controller (MNC), the network mask, as well as the router IP address. It also allows the user to enable or disable DHCP.

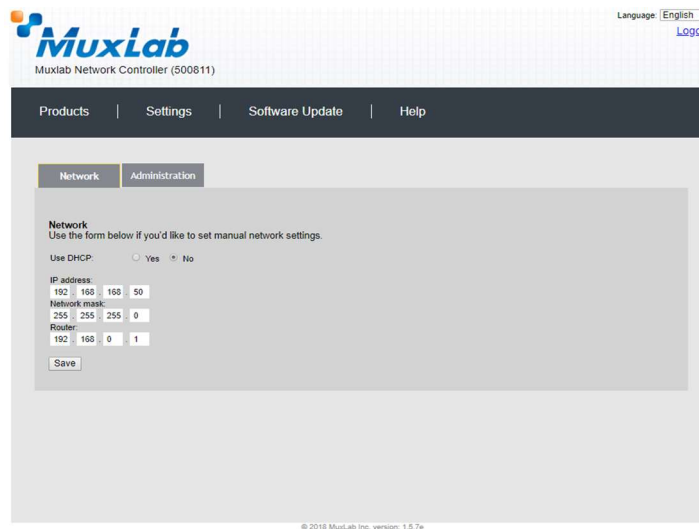

The screenshot shows the MuxLab Network Controller (500811) interface. The top navigation bar includes 'Products', 'Settings', 'Software Update', and 'Help'. The 'Settings' tab is active, and the 'Network' sub-tab is selected. The 'Network' section contains a form for manual network settings. The form includes a 'Use DHCP' section with radio buttons for 'Yes' and 'No'. Below this are input fields for 'IP address' (192 | 168 | 168 | 50), 'Network mask' (255 | 255 | 255 | 0), and 'Router' (192 | 168 | 0 | 1). A 'Save' button is located at the bottom of the form. The footer of the page indicates the version is 1.5.7e.

Figure 294: Settings Screen: Network Tab

The **Administration** tab is used to create or delete user accounts, change passwords, restore data, backup data, and retrieve logs (Figure 295).

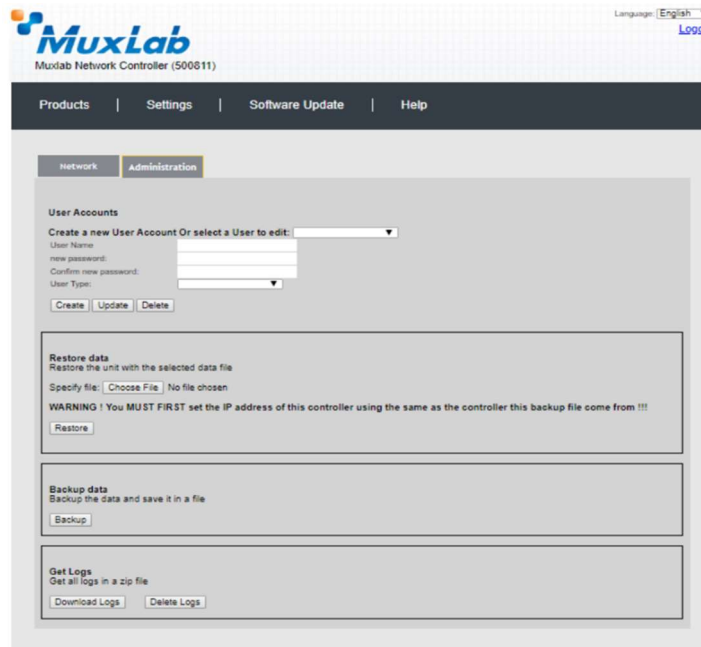


Figure 295: Settings Screen: Administration Tab

Software Update Screen

The **Software Update** enables the user to update MuxLab Network Controller software (Figure 296). This software is available on MuxLab's website (www.muxlab.com). Download the software to the local PC before performing the update.

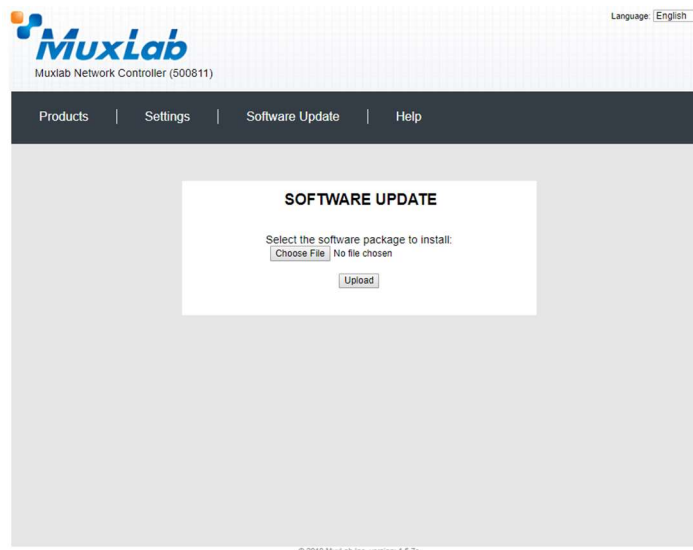


Figure 296: Software Update Screen

Help Screen

The **Help** screen offers quick contact information for customer support and all other inquiries (Figure 297).



Figure 297: Help Screen

Extender Model 500771

Products Screen

Once the user has logged in, the **Products** screen will appear (Figure 298).

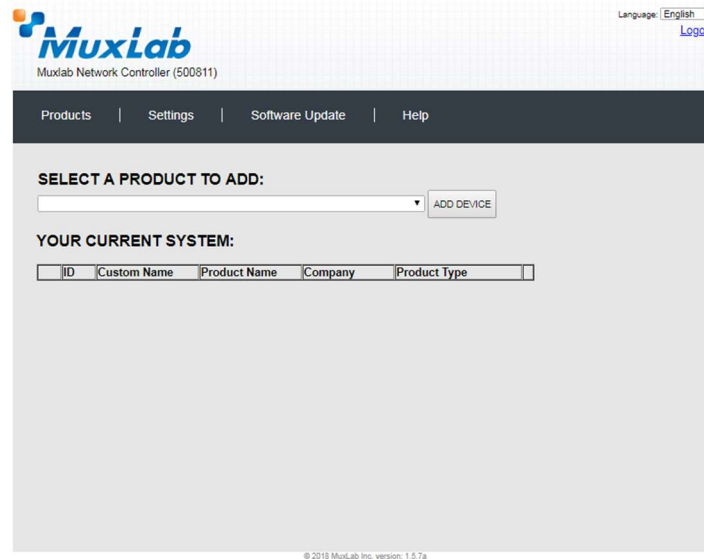


Figure 298: Products Screen – Initial View

In the **SELECT A PRODUCT TO ADD:** drop down box, select **HDMI Over IP 4K (500758/759/770/771/773/777)** and then click on **ADD DEVICE** (Figure 299).

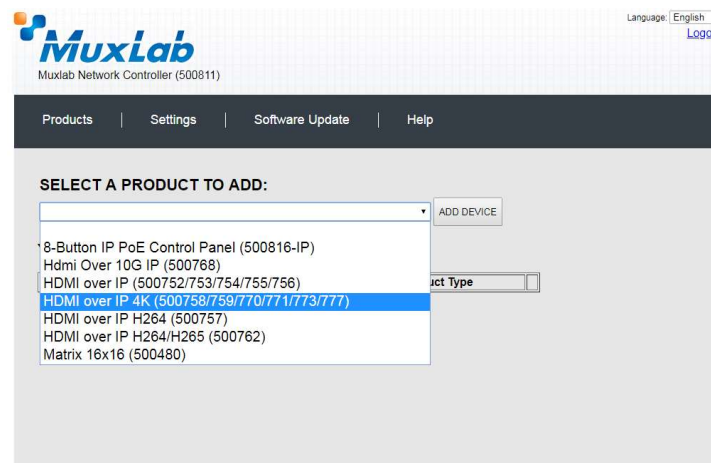


Figure 299: Products Screen – Selecting a Product

A dialog box appears asking the user to provide a custom name for the selected product (Figure 300). The user then types a name in the **Custom Name:** field and clicks on **OK**. Note that if the user decides to click on **CANCEL**, the previous screen appears (Figure 298), without a product being added.

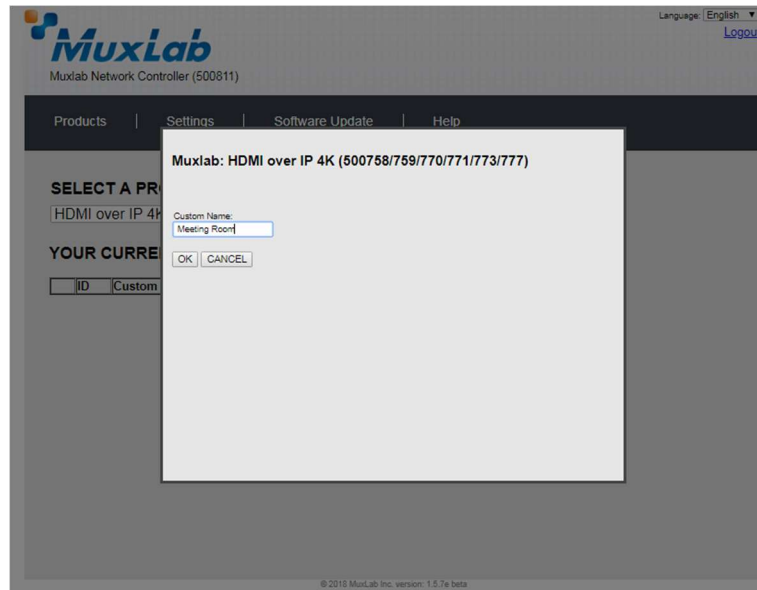


Figure 300: Products Screen – Naming a Product

The custom name has been added to **YOUR CURRENT SYSTEM** (Figure 301).

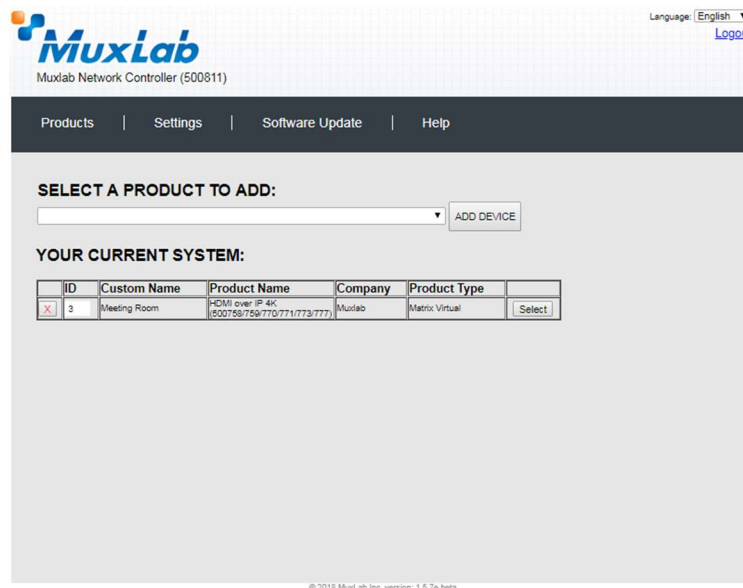


Figure 301: Products Screen – Your Current System Selection

The user can change the ID of each row by modifying the **ID** field. The user can also delete the entire row completely by clicking the **X** next to it.

To configure a given product, the user clicks on **Select**, which brings up a multi-tabbed screen (Figure 302).

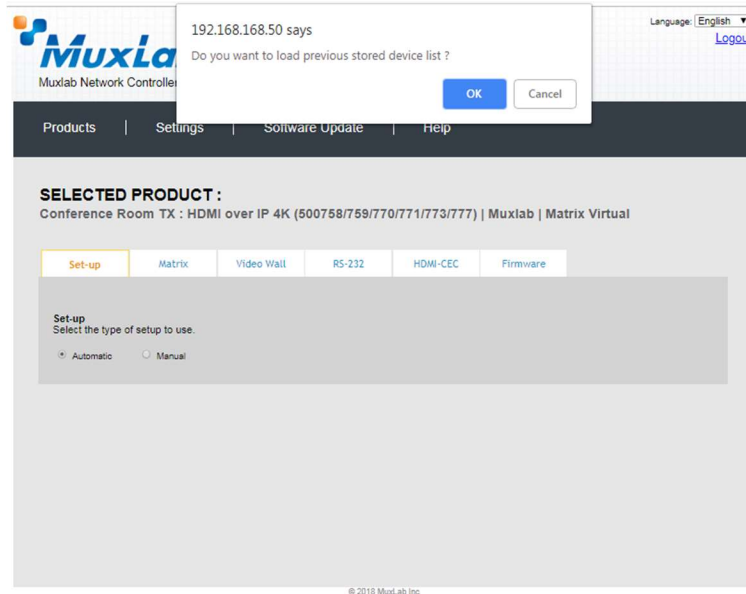


Figure 302: Products Screen – Load Dialog

By default, a dialog appears asking the user to load a previously saved device list (in case such a list has already been stored). This dialog will appear even if no device list has been previously saved.

Six tabs appear within the **Products** screen:

1. Set-up
2. Matrix
3. Video Wall
4. RS-232
5. HDMI-CEC
6. Firmware

1. Products Screen - Set-up Tab

The **Set-up** tab offers the user two options for the type of set-up allowed: **Automatic** or **Manual**.

Automatic means that the software will scan the system for every dip-switch enabled device. The software will then override its manual dip-switch address settings and place these units under software address control. (Automatic is recommended).

Manual means that the software will allow the manual dip-switch address settings of any found device to remain active.

After selecting **Automatic** or **Manual**, click on **Launch discovery** (Figure 303).

Figure 3033: Products Screen – Set-up Tab

The system will scan the network for all source side devices (500771 transmitters), and display side devices (500758 receivers), and will display the scan results in tabular form (Figure 303).

Each 500771 transmitter and receiver can be assigned an arbitrary descriptive name, normally reflecting the end device that it is terminated to. To change the name of any Source (TX) device, click the **Name** field to edit its contents. Several **Name** fields can be edited before saving changes, as shown in Figure 305 (orange highlighted fields).

Language: English [Logout](#)

MuxLab
Muxlab Network Controller (500811)

Products | Settings | Software Update | Help

SELECTED PRODUCT:
Conference Room 1A : HDMI over IP 4K (500758/759/770/771/773) | Muxlab | Matrix Virtual

Set-up | Matrix | Video Wall | RS-232 | HDMI-CEC | Firmware

Set-up
Modify any available settings and click Save to apply your changes

Automatic Manual

[Launch discovery](#)

Display (1 RX)

Port#	Name	MAC address	IP address	MASK	DHCP D/P		
0	TV	00-0b-78-00-95-44	192.168.168.03	255.255.255.0	<input checked="" type="checkbox"/> <input checked="" type="checkbox"/>	Reboot	Cancel Detail

Source (1 TX)

Port#	Name	MAC address	IP address	MASK	DHCP D/P		
0	DVI Computer	00-0b-78-00-95-49	192.168.168.01	255.255.255.0	<input checked="" type="checkbox"/> <input type="checkbox"/>	Reboot	Cancel Detail

[Save](#)

© 2018 MuxLab Inc. version: 1.5.0e

Figure 304: Name Editing

To save all name changes, click on **Save**. A green UPDATED tag will appear next to newly changed names (Figure 306).

Language: English [Logout](#)

MuxLab
Muxlab Network Controller (500811)

Products | Settings | Software Update | Help

SELECTED PRODUCT:
Conference Room 1A : HDMI over IP 4K (500758/759/770/771/773) | Muxlab | Matrix Virtual

Set-up | Matrix | Video Wall | RS-232 | HDMI-CEC | Firmware

Set-up
Modify any available settings and click Save to apply your changes

Automatic Manual

[Launch discovery](#)

Display (1 RX)

Port#	Name	MAC address	IP address	MASK	DHCP D/P		
0	TV	00-0b-78-00-95-44	192.168.168.03	255.255.255.0	<input checked="" type="checkbox"/> <input checked="" type="checkbox"/>	Reboot	Detail UPDATED

Source (1 TX)

Port#	Name	MAC address	IP address	MASK	DHCP D/P		
0	DVI Computer	00-0b-78-00-95-49	192.168.168.01	255.255.255.0	<input checked="" type="checkbox"/> <input type="checkbox"/>	Reboot	Detail UPDATED

[Save](#)

© 2018 MuxLab Inc. version: 1.5.0e

Figure 305: Saving Name Changes

To view component parameters, click on the **Detail** button next to the given component. A dialog appears (Figure 307).

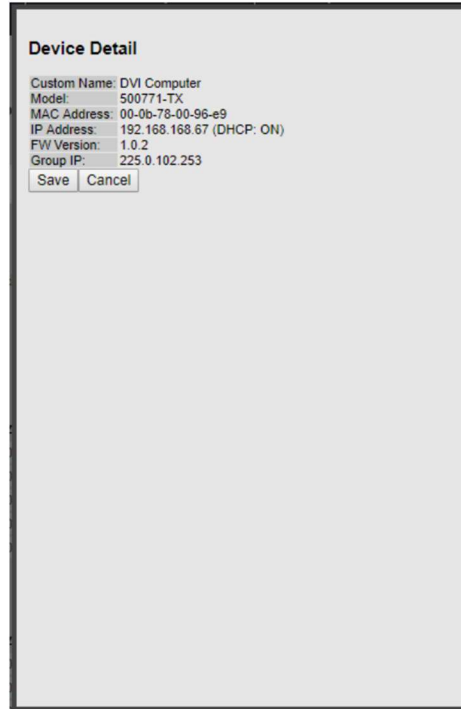


Figure 306: Device Detail Dialog

2. Products Screen - Matrix Tab

The **Matrix** tab of the **Products** screen allows the user to connect any Display to any Source. The user also has the option of using **Presets** to save connection schemes (“Presets”), as well as to edit and delete existing presets (Figure 308).

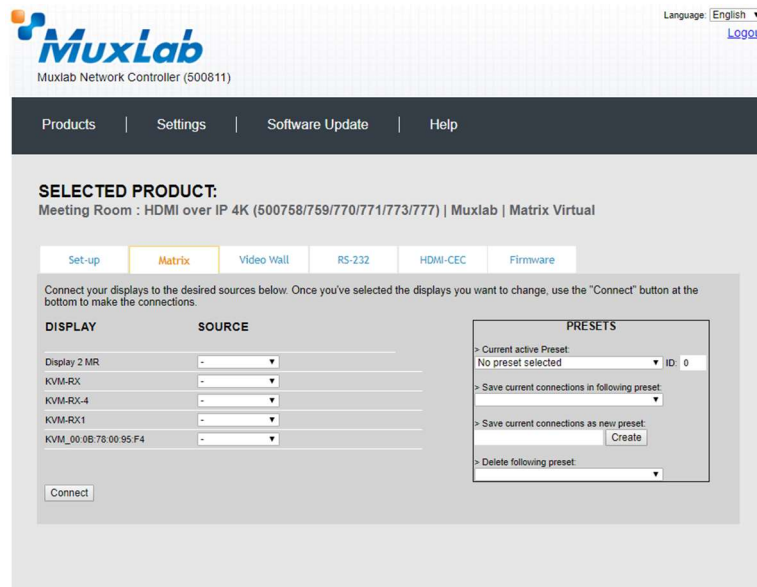


Figure 307: Matrix Tab

To connect a display to a source, the user first clicks on the drop-down list next to the given display (for example “Display 2 MR”) and selects which source to connect it to (Figure 309).

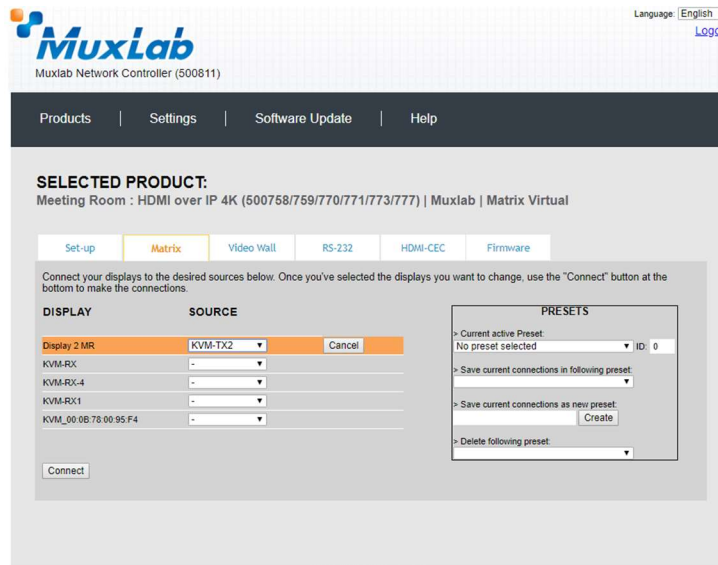


Figure 308: Change Connection

Once the selection is made (the user can change any or all connections between displays and sources), the user clicks on **Connect** to finalize the change. A green **SUCCESS** tag will appear next to the new or changed connection (Figure 310).


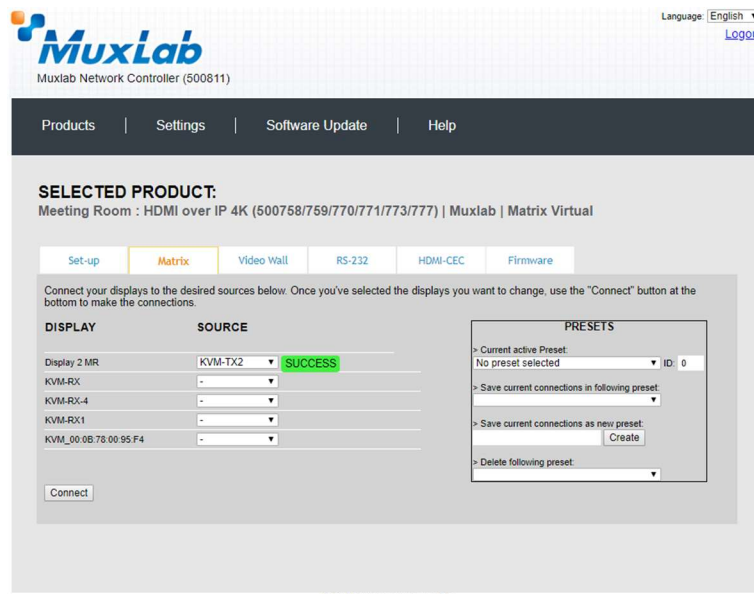


Figure 309: Change Successful

To create a new preset, the user clicks the > **Save current connections as new preset** field (Figure 311) and types a name. This assigned preset name will be linked to the existing connection scheme being shown within the **Matrix** tab.

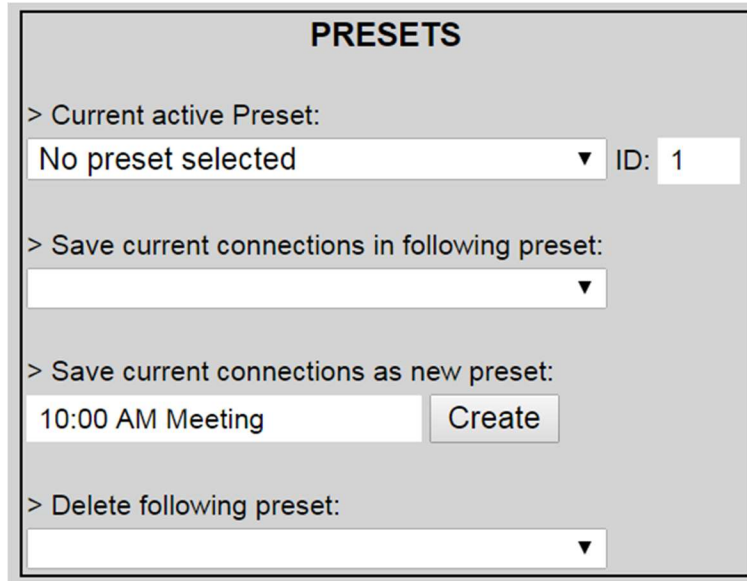


The screenshot shows a window titled "PRESETS" with the following elements:

- > Current active Preset: A dropdown menu showing "No preset selected" and an "ID: 1" label.
- > Save current connections in following preset: An empty dropdown menu.
- > Save current connections as new preset: A text input field containing "10:00 AM Meeting" and a "Create" button.
- > Delete following preset: An empty dropdown menu.

Figure 310: Create New Preset

To save this preset, the user clicks on **Create**. A green SUCCESS tag will appear next to the > **Save current connections as new preset** field and the newly created preset becomes the **Current active Preset** (Figure 312).

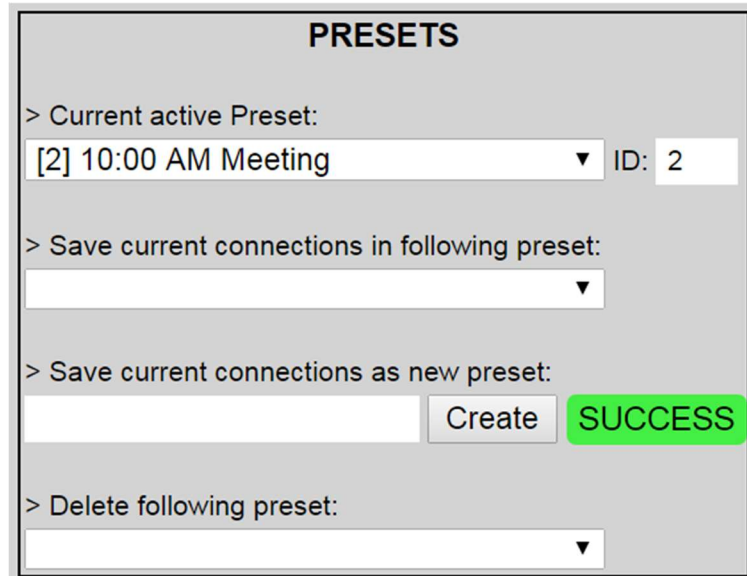


The screenshot shows the "PRESETS" window after the "Create" button was clicked. The changes are:

- > Current active Preset: The dropdown menu now shows "[2] 10:00 AM Meeting" and the "ID" label is now "2".
- > Save current connections as new preset: The "Create" button is now disabled, and a green "SUCCESS" tag has appeared to its right.

Figure 311: Confirmation of New Preset

To delete a preset, the user clicks the > **Delete following preset** drop-down box and selects a preset name from the list shown (Figure 313).

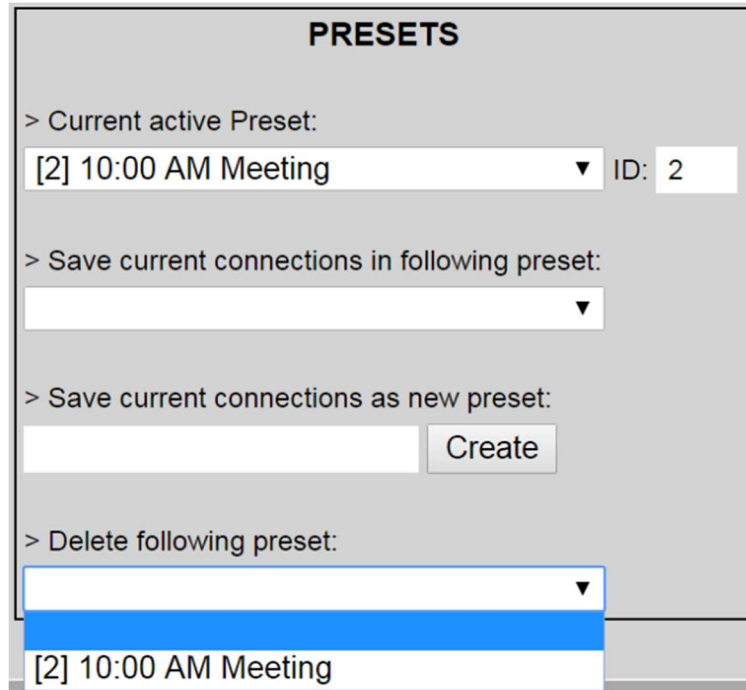

The screenshot shows a dialog box titled "PRESETS". It contains four sections:

- > Current active Preset: A dropdown menu showing "[2] 10:00 AM Meeting" and an "ID: 2" field.
- > Save current connections in following preset: An empty dropdown menu.
- > Save current connections as new preset: An empty text input field and a "Create" button.
- > Delete following preset: A dropdown menu with "[2] 10:00 AM Meeting" selected and highlighted in blue.

Figure 312: Delete Preset

Once selected, a dialog will appear asking the user to confirm the deletion request (Figure 314).




The screenshot shows a confirmation dialog box with the following text:

192.168.168.50 says
Are you sure to delete this preset ?

At the bottom right, there are two buttons: "OK" (highlighted in blue) and "Cancel".

Figure 313: Confirmation of Deleted Preset

Click on **OK**. The preset will be deleted and a green SUCCESS tag will appear next to the > **Delete following preset** field (Figure 315).

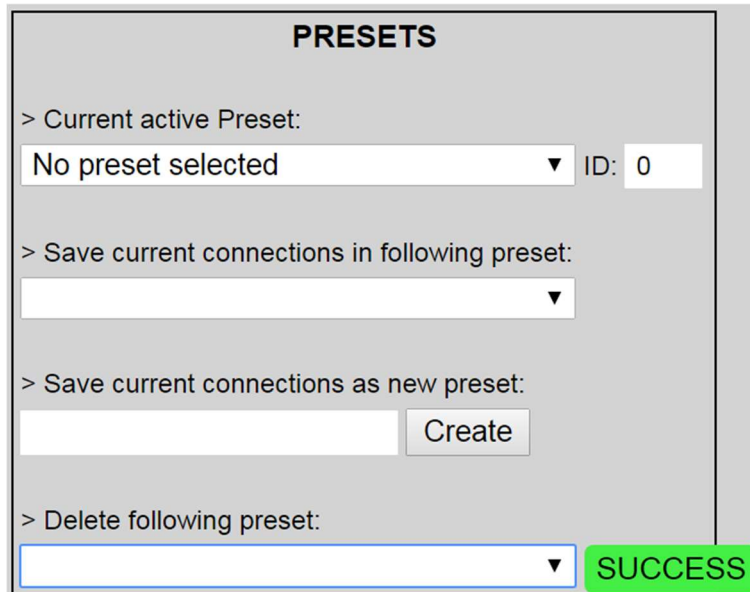


The screenshot shows a web interface titled "PRESETS". It contains four sections:

- > Current active Preset: A dropdown menu showing "No preset selected" and an "ID: 0" field.
- > Save current connections in following preset: An empty dropdown menu.
- > Save current connections as new preset: An empty text input field followed by a "Create" button.
- > Delete following preset: An empty dropdown menu.

A green "SUCCESS" message is displayed in a box at the bottom right of the interface.

Figure 314: Confirmation of Deleted Preset

To save the current matrix configuration under an existing **Preset** name, click on > **Save current connection in following preset** drop-down box and selects a preset name (Figure 316).

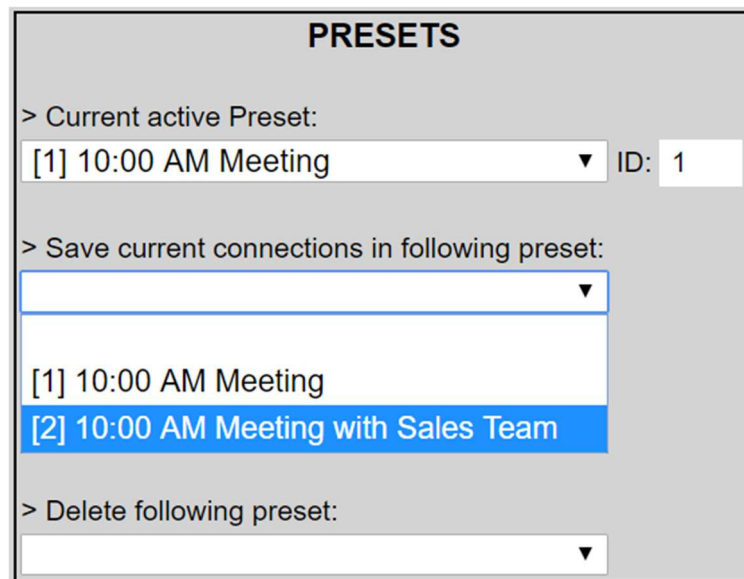

The screenshot shows the "PRESETS" interface with the following sections:

- > Current active Preset: A dropdown menu showing "[1] 10:00 AM Meeting" and an "ID: 1" field.
- > Save current connections in following preset: A dropdown menu that is open, showing a list of presets: "[1] 10:00 AM Meeting" and "[2] 10:00 AM Meeting with Sales Team". The second option is highlighted in blue.
- > Delete following preset: An empty dropdown menu.

Figure 315: Change Current Active Preset

Once selected, the **Preset** will be saved and a green SUCCESS tag will appear next to the > **Save current connections in following preset** field (Figure 317).

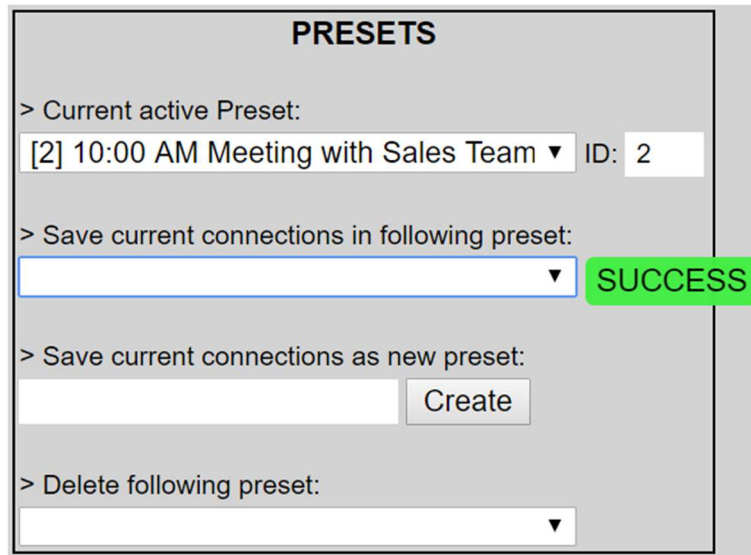


Figure 316: Confirmation of Changed Preset Name

In order to activate an existing **Preset**, select > **Current active Preset**, and select the **Preset** name from the drop-down box and the **Preset** will become active. The active **Preset** will also be displayed in the **Current active Preset** field.

3. Products Screen - Video Wall Tab

MuxLab's KVM DVI Extender 500771 does not support the Video Wall feature. Clicking on this tab will display the following screen (Figure 318).

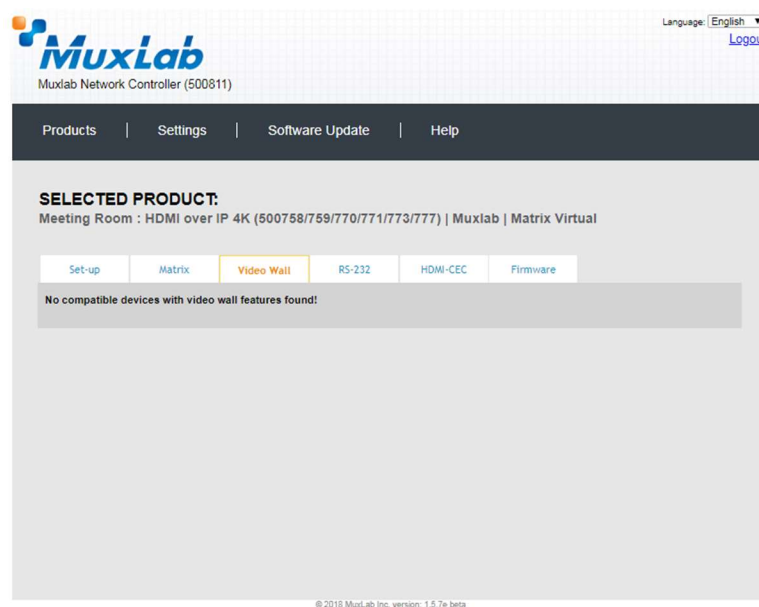


Figure 317: Video Wall Tab

4. Products Screen - RS-232 Tab

MuxLab’s KVM DVI Extender 500771 does not support RS232. Clicking on this tab will display the following screen (Figure 319).

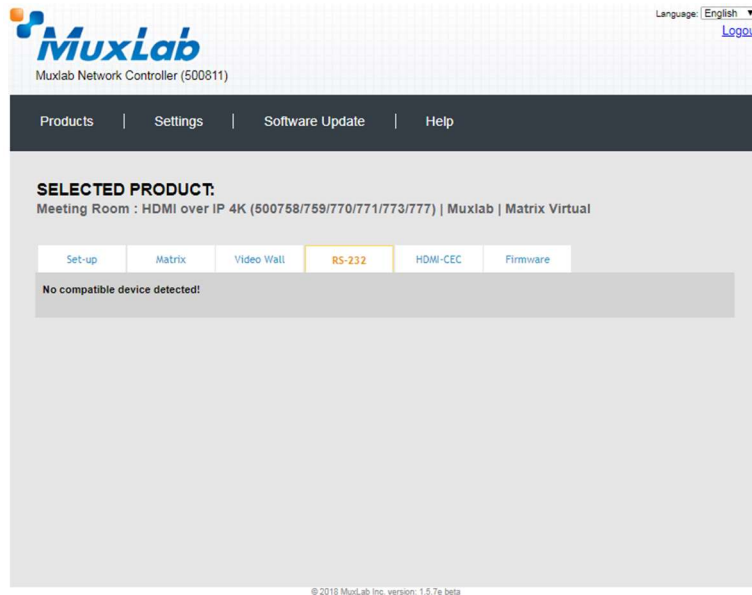


Figure 318: RS-232 Tab

5. Products Screen – HDMI-CEC Tab

MuxLab’s KVM DVI Extender 500771 does not support HDMI-CEC feature. Clicking on this tab will display the following screen (Figure 320).

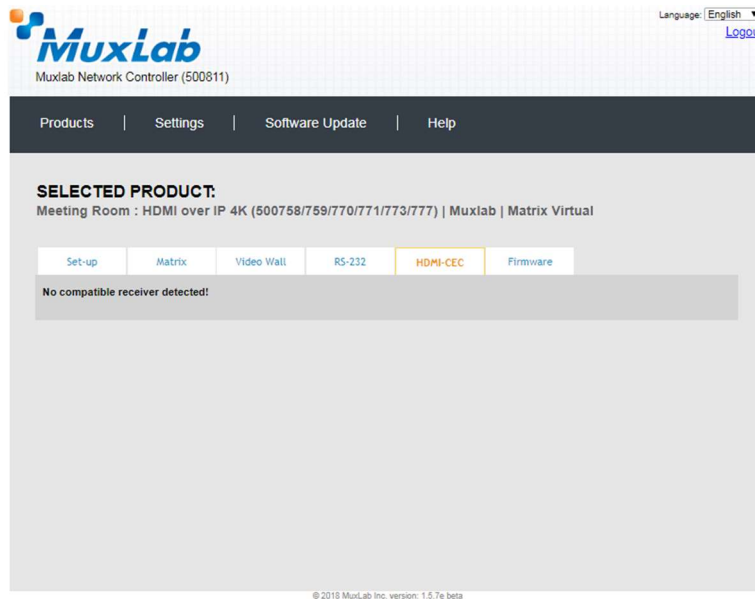


Figure 319: HDMI CEC Tab

6. Products Screen - Firmware Tab

The **Firmware** tab of the Products screen enables the user to update the firmware for MuxLab transmitters and receiver (Figure 321).

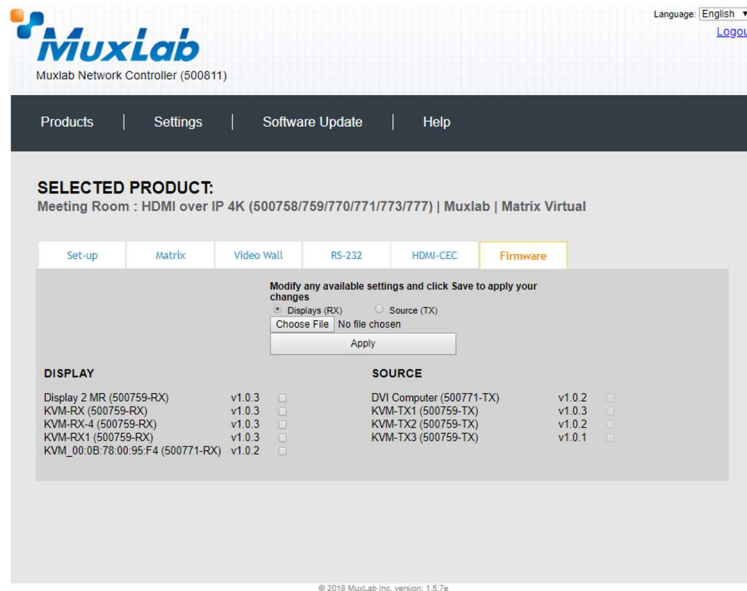


Figure 320: Firmware Tab

The user first selects either Display (RX) or Source (TX), then chooses the firmware update file to upload to the given device. Once the file is selected, the user checks the box next to the given device (listed under DISPLAY and SOURCE) targeted for firmware upgrade, and then clicks Apply.

Settings Screen

The **Settings** screen contains two tabs: **Network** and **Administration**.

The **Network** tab (Figure 322) is used to change the IP address of the MuxLab Network Controller, the network mask, as well as the router IP address. It also allows the user to enable or disable DHCP.

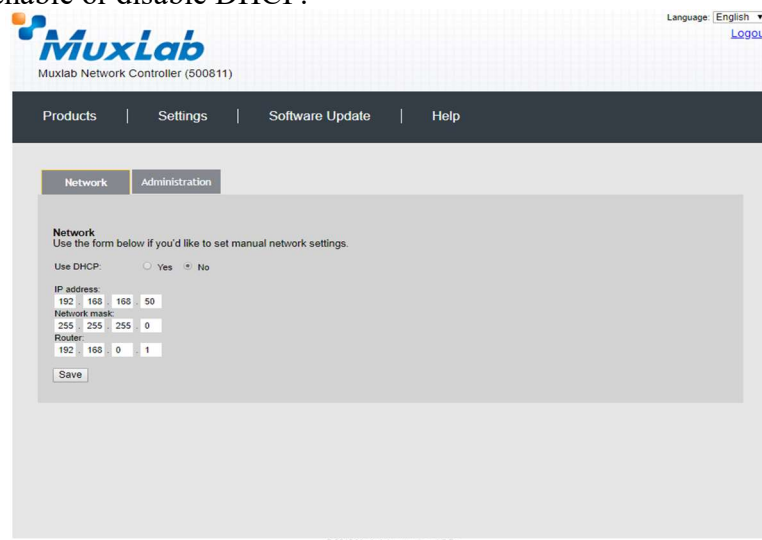


Figure 321: Settings Screen: Network Tab

The **Administration** tab is used to create or delete user accounts, change passwords, restore data, backup data, and retrieve logs (Figure 323).

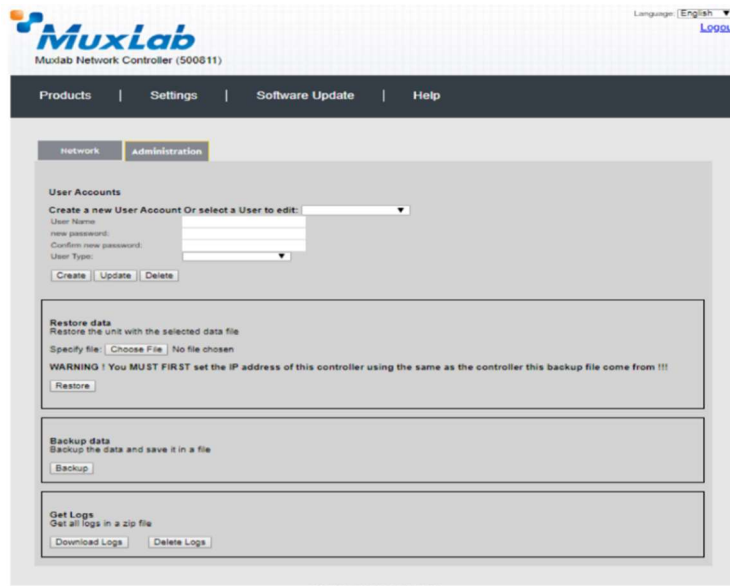


Figure 322: Settings Screen: Administration Tab

Software Update Screen

The **Software Update** enables the user to update MuxLab Network Controller software (Figure 324). This software is available on MuxLab's website (www.muxlab.com). Download the software to the local PC before performing the update.

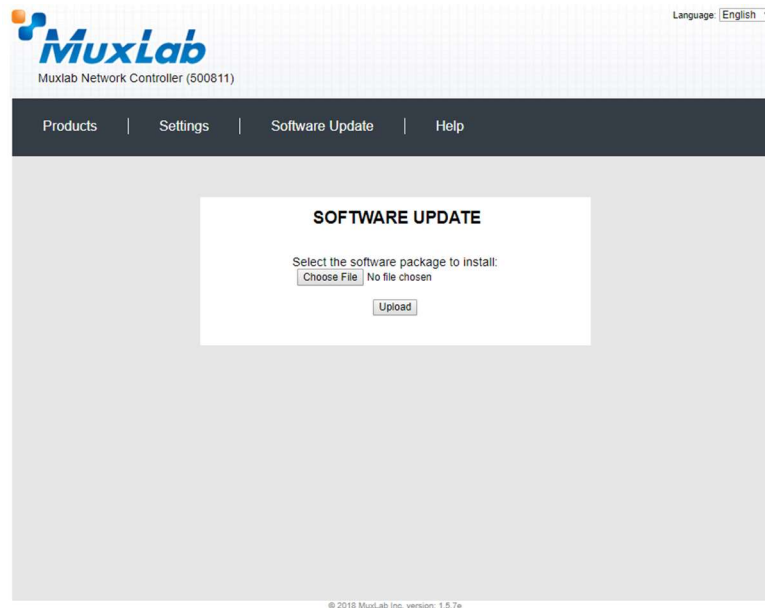


Figure 323: Software Update Screen

Help Screen

The **Help** screen offers quick contact information for customer support and all other inquiries (Figure 325).

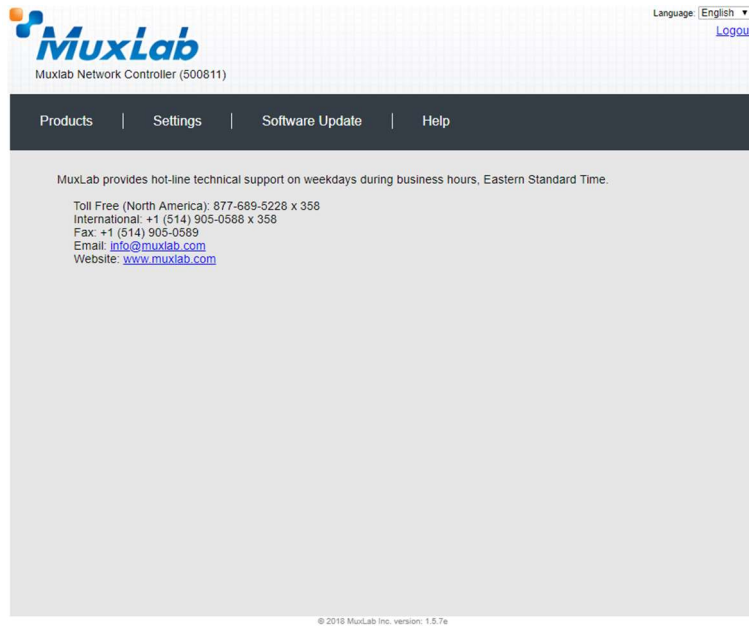


Figure 324: Help Screen

Extender Model 500773

Products Screen

Once the user has logged in, the Products screen will appear (Figure 326).

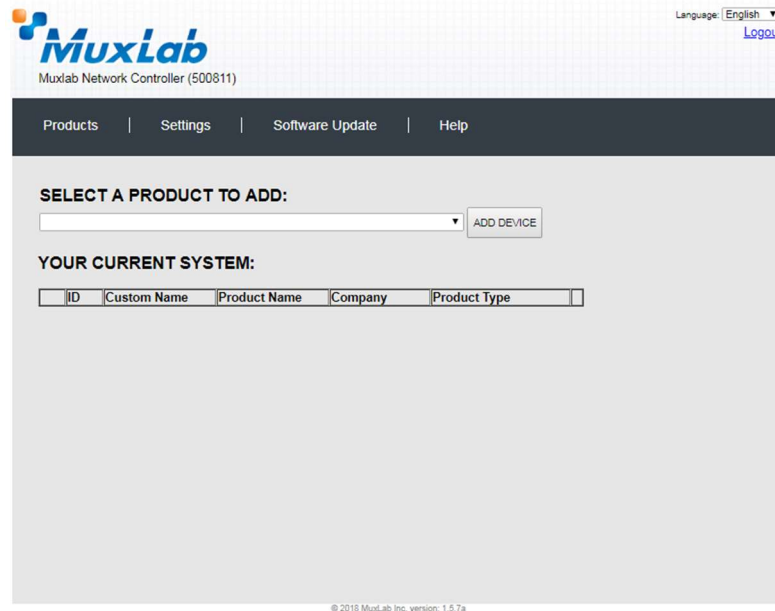


Figure 325: Products Screen – Initial View

In the **SELECT A PRODUCT TO ADD:** drop down box, select **Hdmi Over IP 4K (500758/759/770/771/773/777)** and then click on **ADD DEVICE** (Figure 327).

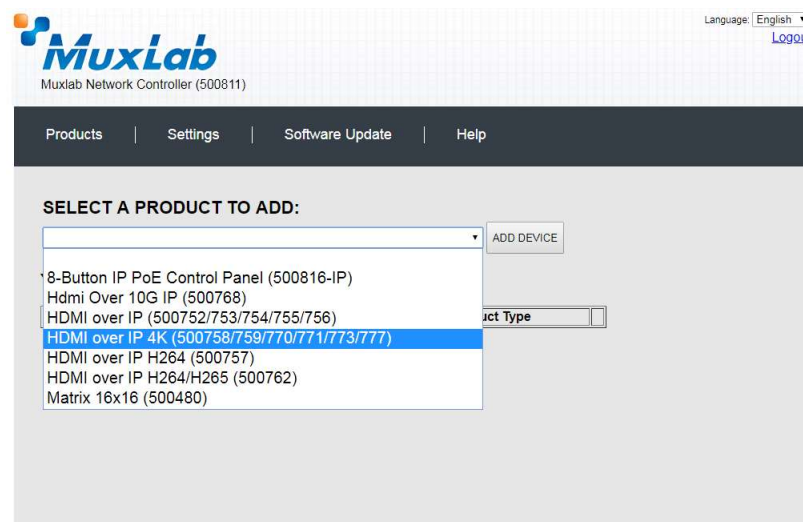


Figure 326: Products Screen – Selecting a Product

A dialog box appears asking the user to provide a custom name for the selected product (Figure 328). The user then types a name in the **Custom Name:** field and clicks on **OK**. Note that if the user decides to click on **CANCEL**, the previous screen appears (Figure 326), without a product being added.



Figure 327: Products Screen – Naming a Product

The custom name has been added to YOUR CURRENT SYSTEM (Figure 329).

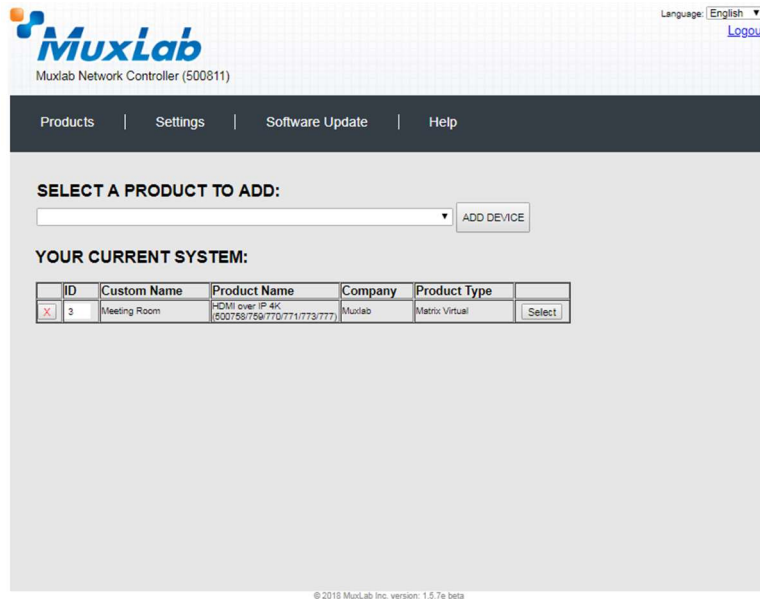


Figure 328: Products Screen – Your Current System Selection

The user can change the ID of each row by modifying the **ID** field. The user can also delete the entire row completely by clicking the **X** next to it.

To configure a given product, the user clicks on **Select**, which brings up a multi-tabbed screen (Figure 330).

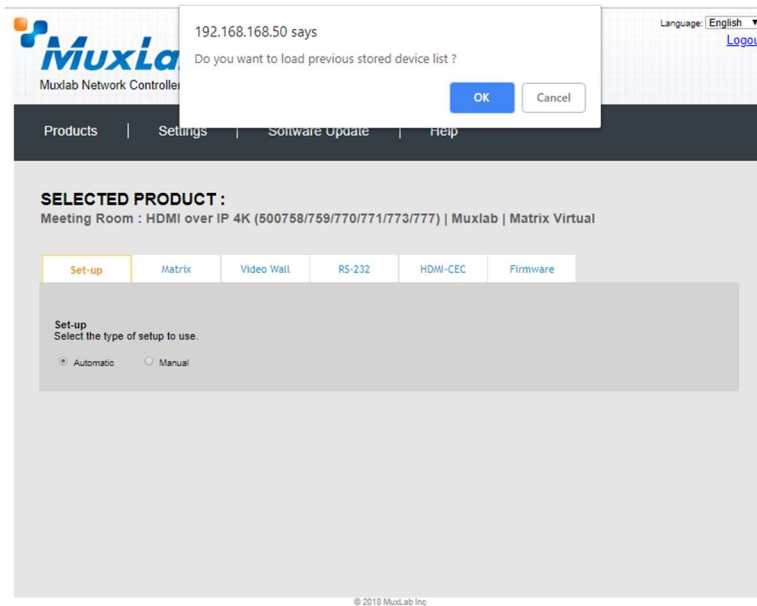


Figure 329: Products Screen – Load Dialog

By default, a dialog appears asking the user to load a previously saved device list (in case such a list has already been stored). This dialog will appear even if no device list has been previously saved.

Five tabs appear within the **Products** screen:

1. Set-up
2. Matrix
3. Video Wall
4. RS-232
5. HDMI CEC
6. Firmware

1. Products Screen - Set-up Tab

The **Set-up** tab offers the user two options for the type of set-up allowed: **Automatic** or **Manual**.

Automatic means that the software will scan the system for every dip-switch enabled device. The software will then override its manual dip-switch address settings and place these units under software address control. (Automatic is recommended).

Manual means that the software will allow the manual dip-switch address settings of any found device to remain active.

After selecting **Automatic** or **Manual**, click on **Launch discovery** (Figure 331).

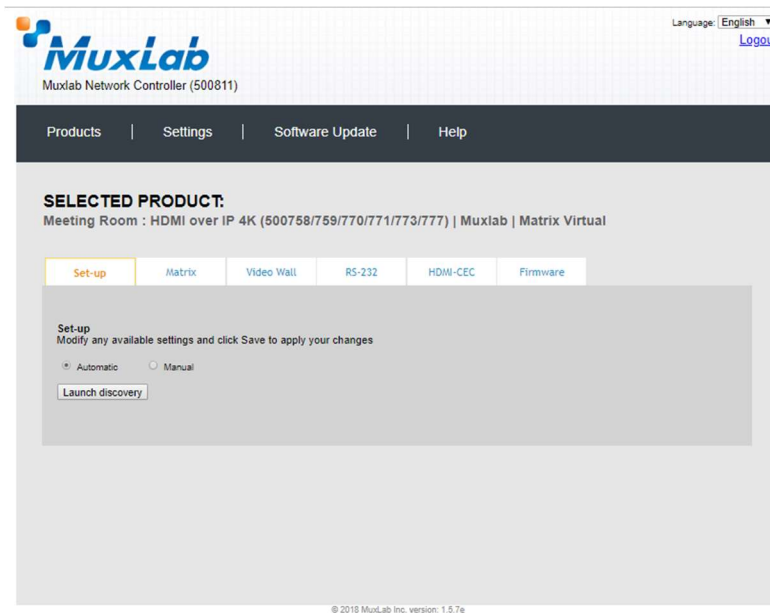


Figure 330: Products Screen – Set-up Tab

The system will scan the network for all source side devices (500773 transmitters), and will display the scan results in tabular form (Figure 332).

Each 500773 transmitter can be assigned an arbitrary descriptive name, normally reflecting the end device that it is terminated to. To change the name of any Source (TX) device, click the **Name** field to edit its contents. Several **Name** fields can be edited before saving changes, as shown in Figure 333 (orange highlighted fields).

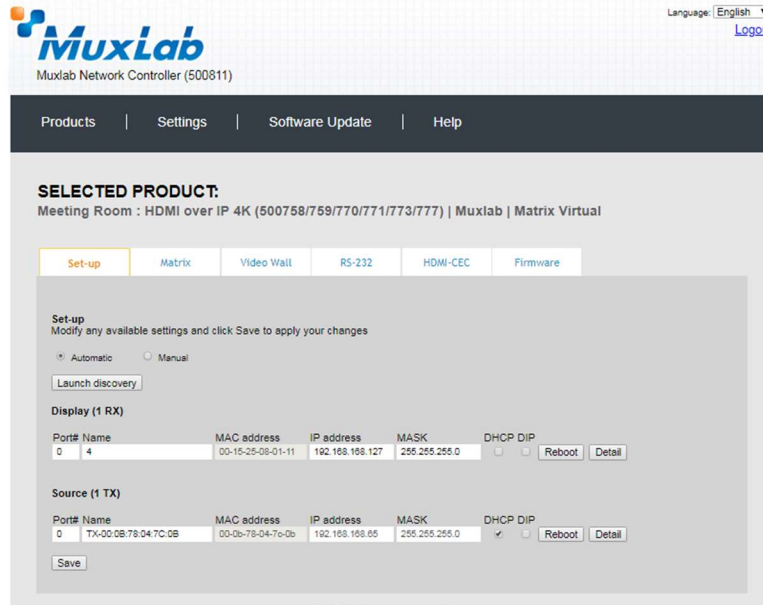


Figure 331: Products Screen – Set-up Tab

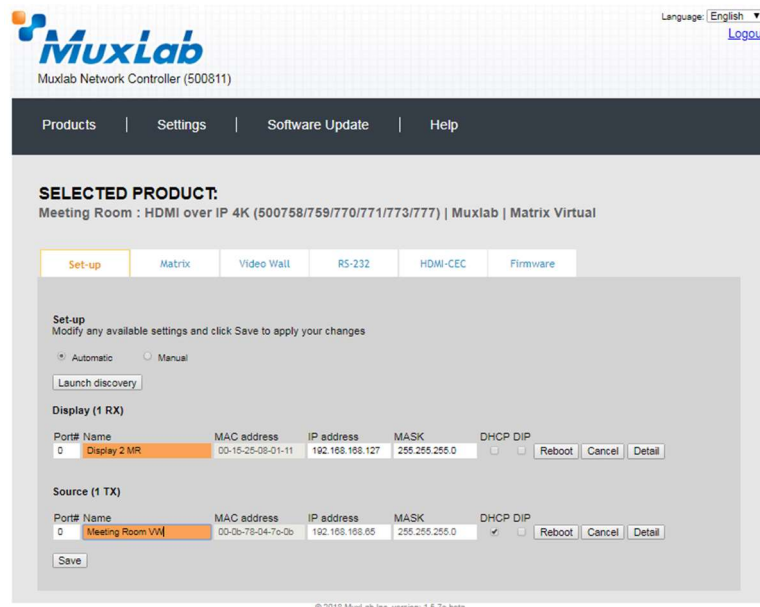


Figure 332: Name Editing

To save all name changes, click on **Save**. A green UPDATED tag will appear next to newly changed names (Figure 334).

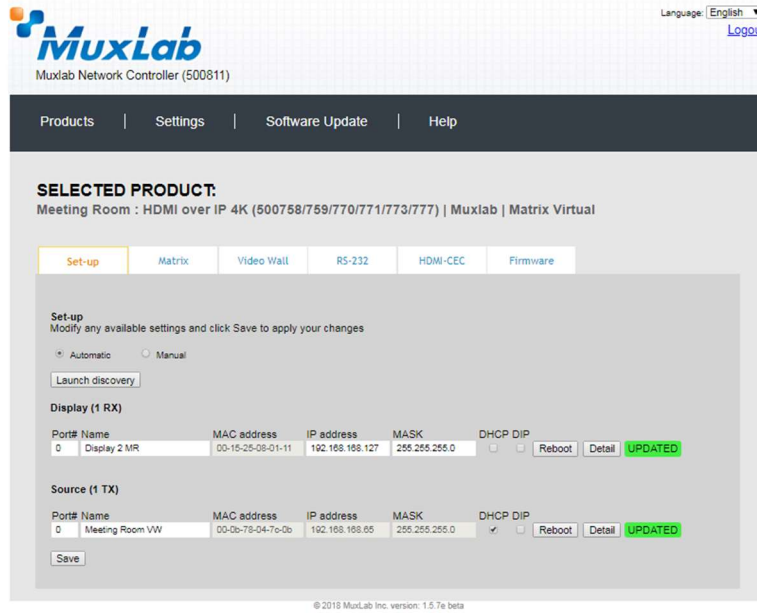


Figure 333: Saving Name Changes

To view and modify component parameters, click on the **Detail** button next to the given component. A dialog appears (Figure 335).

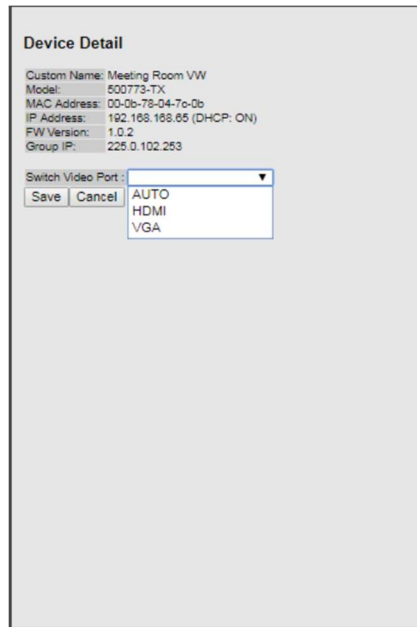


Figure 334: Device Detail Dialog

2. Products Screen - Matrix Tab

The **Matrix** tab of the **Products** screen allows the user to connect any Display to any Source. The user also has the option of using **Presets** to save connection schemes (“Presets”), as well as to edit and delete existing presets (Figure 336).

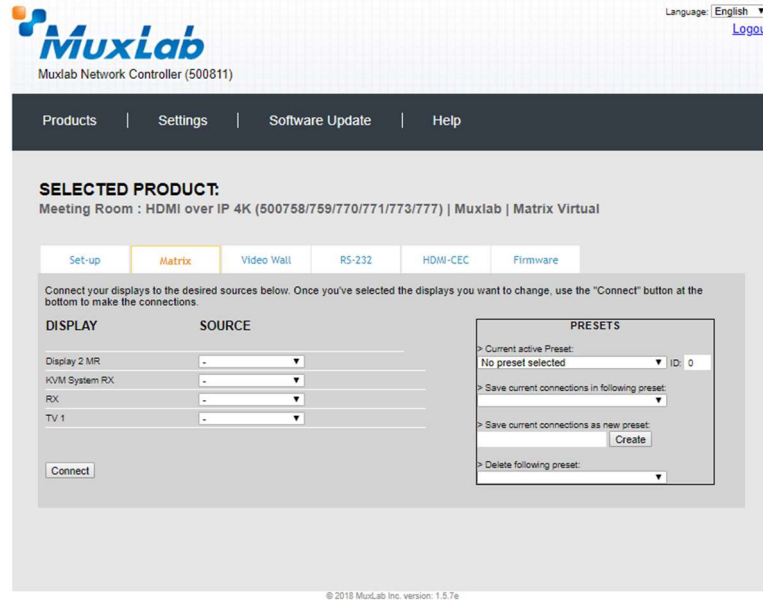


Figure 335: Matrix Tab

To connect a display to a source, the user first clicks on the drop-down list next to the given display (for example “Display 2 MR”) and selects which source to connect it to (Figure 337).

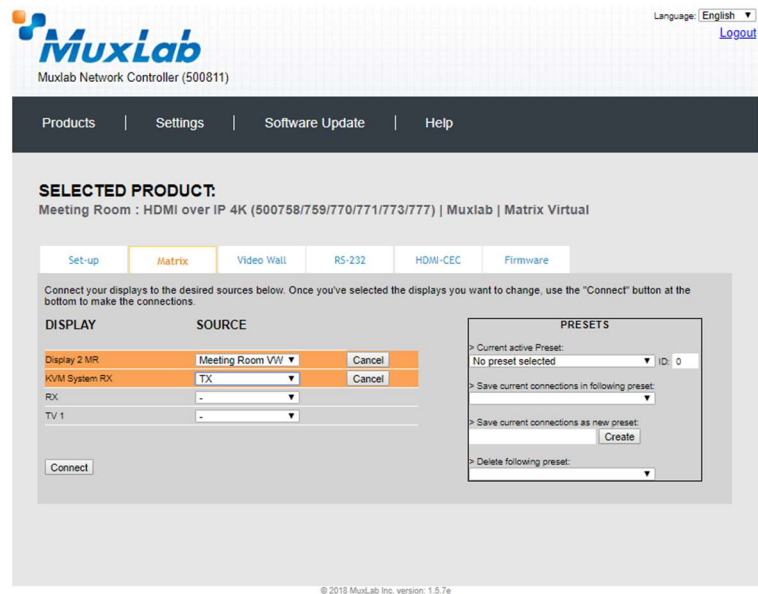


Figure 336: Change Connection

Once the selection is made (the user can change any or all connections between displays and sources), the user clicks on **Connect** to finalize the change. A green **SUCCESS** tag will appear next to the new or changed connection (Figure 338).

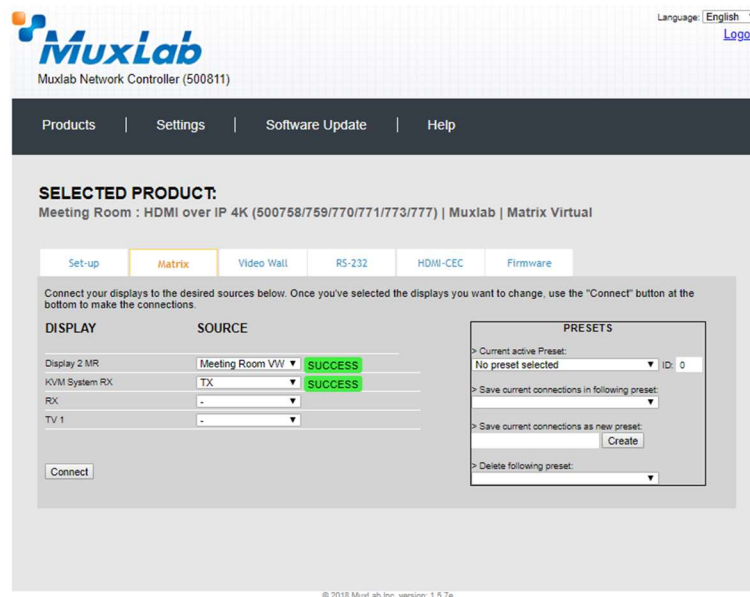


Figure 337: Change Successful

To create a new preset, the user clicks the **> Save current connections as new preset** field (Figure 339) and types a name. This assigned preset name will be linked to the existing connection scheme being shown within the **Matrix** tab.


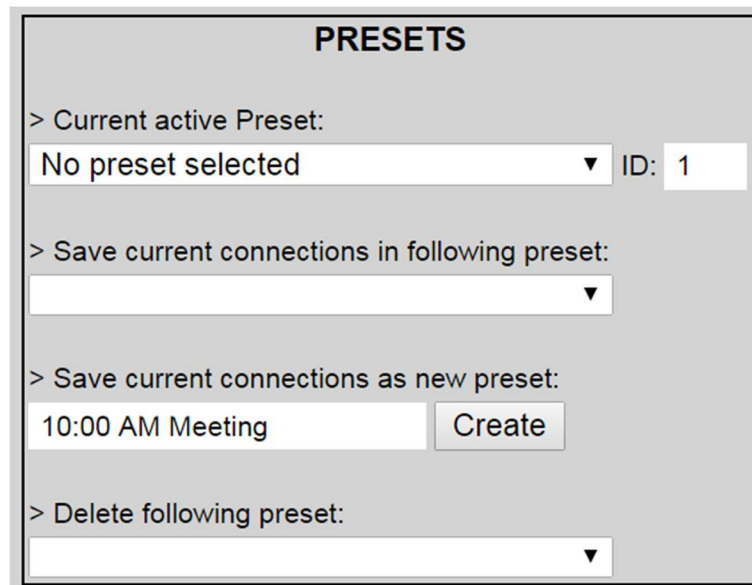


Figure 338: Create New Preset

To save this preset, the user clicks on **Create**. A green **SUCCESS** tag will appear next to the > **Save current connections as new preset** field and the newly created preset becomes the **Current active Preset** (Figure 340).

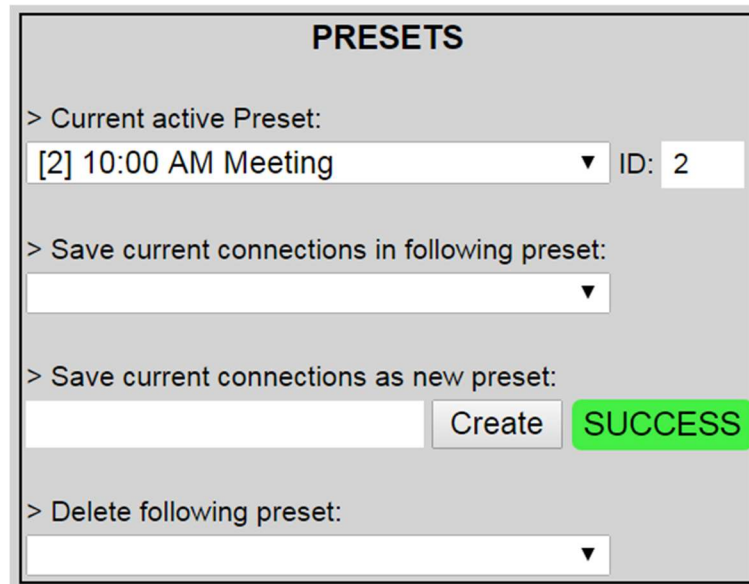

PRESETS

> Current active Preset:
[2] 10:00 AM Meeting ▼ ID: 2


> Save current connections in following preset:
▼

> Save current connections as new preset:
▼ Create **SUCCESS**

> Delete following preset:
▼

Figure 339: Confirmation of New Preset

To delete a preset, the user clicks the > **Delete following preset** drop-down box and selects a preset name from the list shown (Figure 341).

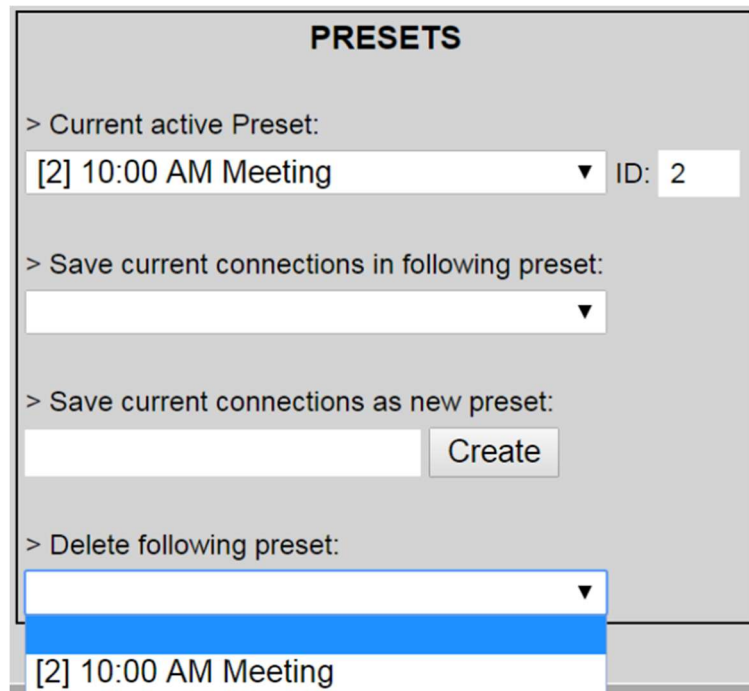

PRESETS

> Current active Preset:
[2] 10:00 AM Meeting ▼ ID: 2

> Save current connections in following preset:
▼

> Save current connections as new preset:
▼ Create

> Delete following preset:
▼
[2] 10:00 AM Meeting

Figure 340: Delete Preset

Once selected, a dialog will appear asking the user to confirm the deletion request (Figure 342).



Figure 341: Confirmation of Deleted Preset

Click on **OK**. The preset will be deleted and a green SUCCESS tag will appear next to the > **Delete following preset** field (Figure 343).


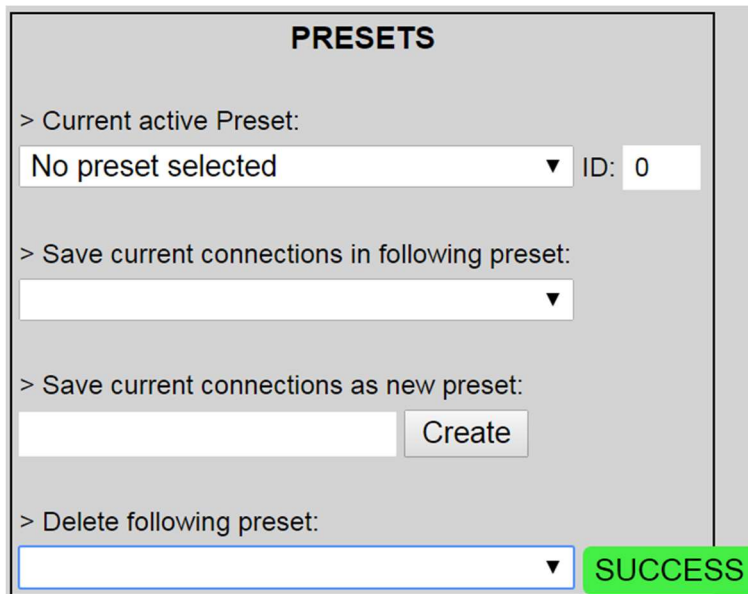


Figure 342: Confirmation of Deleted Preset

To save the current matrix configuration under an existing **Preset** name, click on > **Save current connection in following preset** drop-down box and selects a preset name (Figure 344).

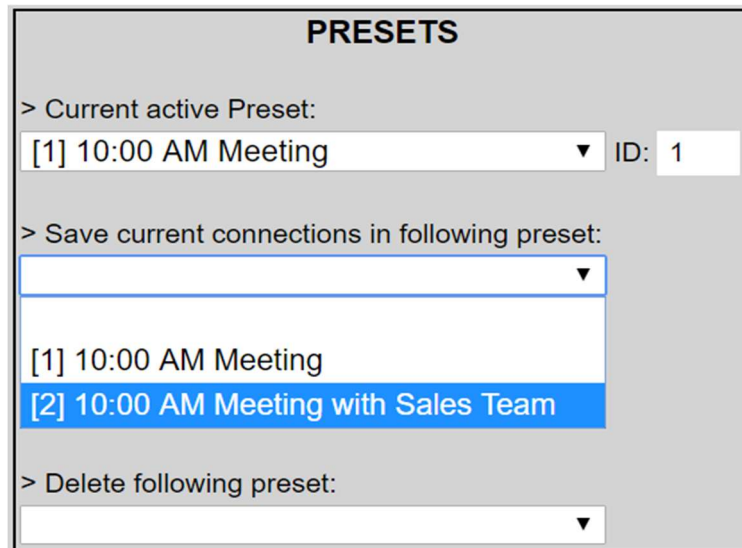


The screenshot shows a window titled "PRESETS". It contains three sections:

- > Current active Preset: A dropdown menu showing "[1] 10:00 AM Meeting" and "ID: 1".
- > Save current connections in following preset: A dropdown menu that is open, showing a list of options. The option "[2] 10:00 AM Meeting with Sales Team" is highlighted in blue.
- > Delete following preset: A dropdown menu.

Figure 343: Change Current Active Preset

Once selected, the **Preset** will be saved and a green SUCCESS tag will appear next to the > **Save current connections in following preset** field (Figure 345).

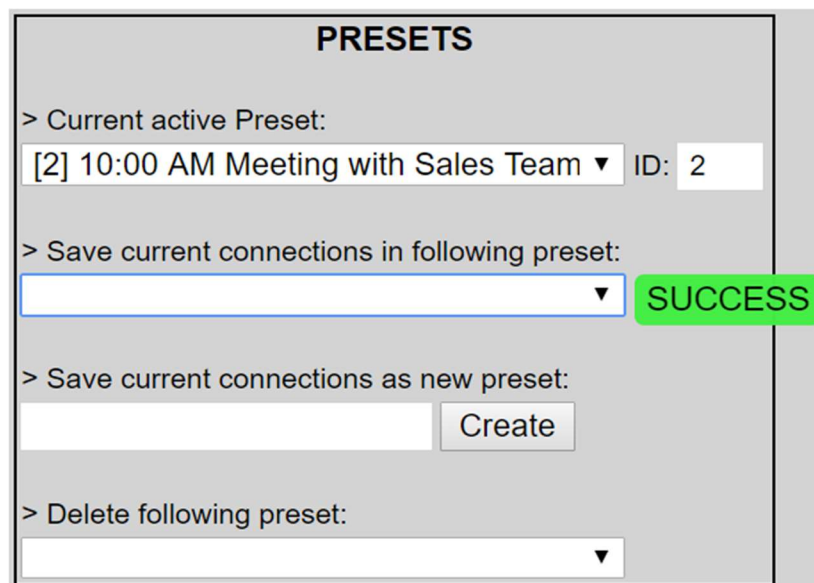

The screenshot shows the same "PRESETS" window as Figure 343. The dropdown menu for "Save current connections in following preset" is now closed, and a green "SUCCESS" tag is visible to its right. The "Current active Preset" dropdown now shows "[2] 10:00 AM Meeting with Sales Team" and "ID: 2". Below this section, there is a "Save current connections as new preset:" section with a text input field and a "Create" button. The "Delete following preset:" dropdown menu is also visible.

Figure 344: Confirmation of Changed Preset Name

In order to activate an existing **Preset**, select > **Current active Preset**, and select the **Preset** name from the drop-down box and the **Preset** will become active. The active **Preset** will also be displayed in the **Current active Preset** field.

3. Products Screen - Video Wall Tab

The HDMI/VGA wall plate transmitter 500773 will require the 500759-RX to be able to do **Video Wall**, please refer to the 500759 Video Wall for further details on the configuration.

4. Products Screen - RS-232 Tab

MuxLab's HDMI/VGA wall plate transmitter 500773 does not support RS232. Clicking on this tab will display the following screen (Figure 346).

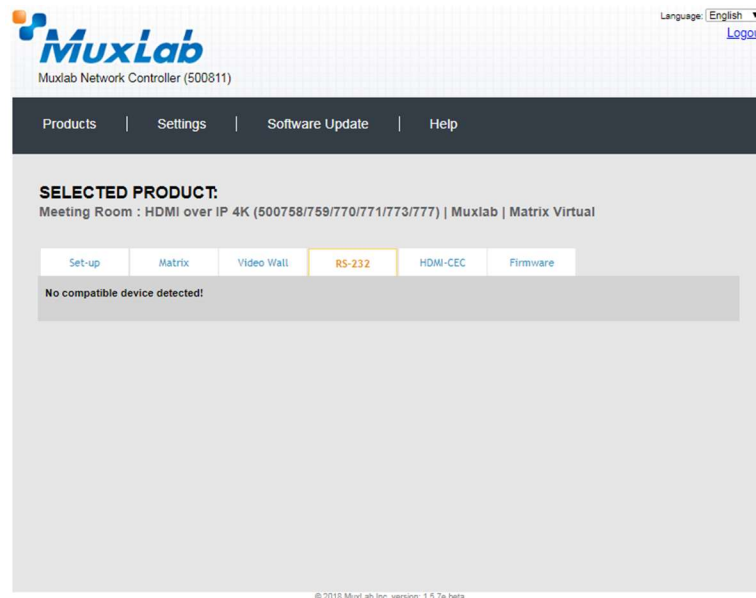


Figure 345: RS-232 Tab

5. Products Screen – HDMI CEC Tab

HDMI CEC feature is not supported in the HDMI/VGA wall plate transmitter 500773 as there is not IR connector on it.

6. Products Screen - Firmware Tab

The Firmware tab of the Products screen enables the user to update the firmware for MuxLab transmitters and receiver (Figure 347).

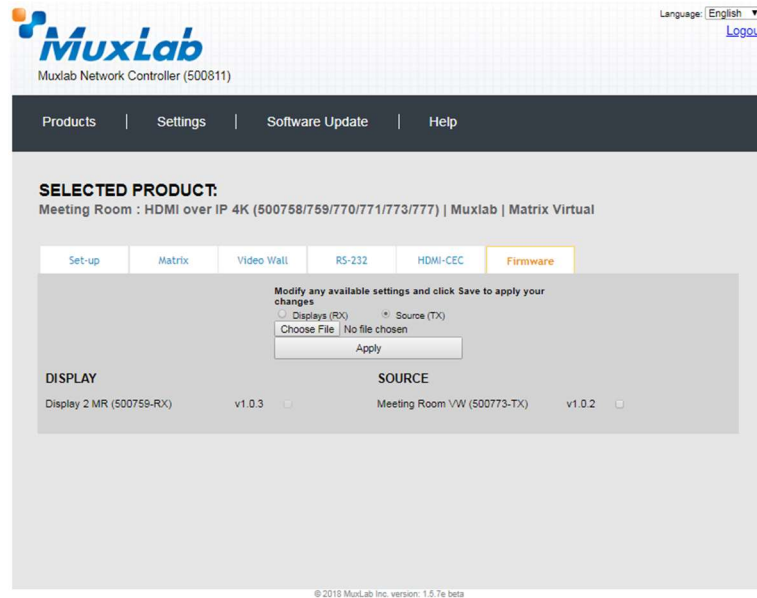


Figure 346: Firmware Tab

The user first selects either **Display (RX)** or **Source (TX)**, then chooses the firmware update file to upload to the given device. Once the file is selected, the user checks the box next to the given device (listed under **DISPLAY** and **SOURCE**) targeted for firmware upgrade, and then clicks **Apply**.

Settings Screen

The **Settings** screen contains two tabs: **Network** and **Administration**.

The **Network** tab (Figure 348) is used to change the IP address of the MuxLab Network Controller, the network mask, as well as the router IP address. It also allows the user to enable or disable DHCP.

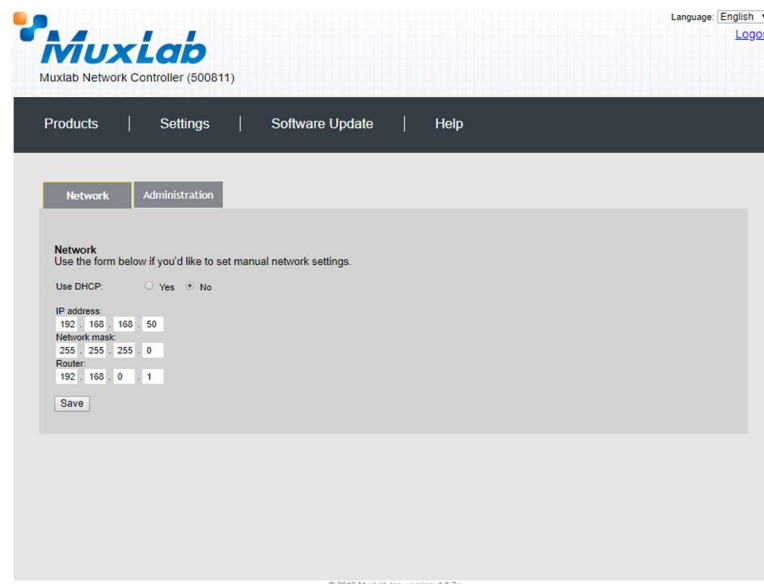


Figure 347: Settings Screen: Network Tab

The **Administration** tab is used to create or delete user accounts, change passwords, restore data, backup data, and retrieve logs (Figure 349).

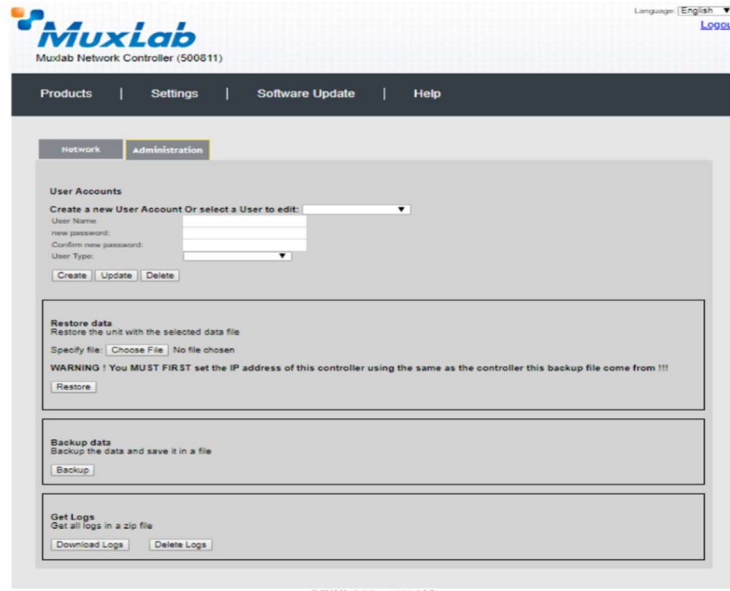


Figure 348: Settings Screen: Administration Tab

Software Update Screen

The **Software Update** enables the user to update MuxLab Network Controller software (Figure 350). This software is available on MuxLab's website (www.muxlab.com). Download the software to the local PC before performing the update.

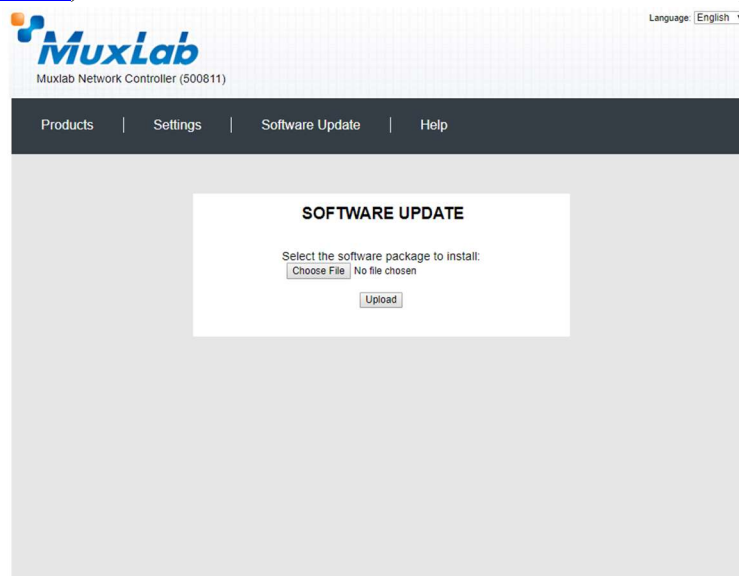


Figure 349: Software Update Screen

Extender Model 500777

Products Screen

Once the user has logged in, the **Products** screen will appear (Figure 351).

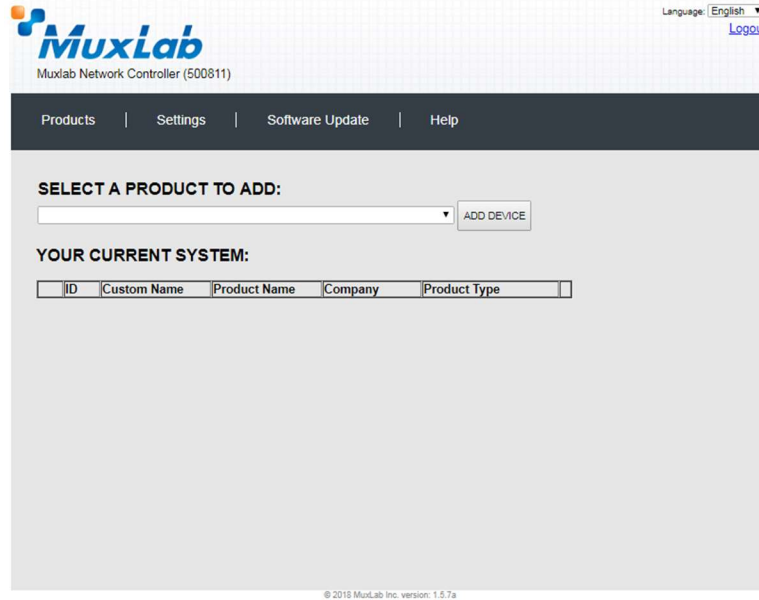


Figure 350: Products Screen – Initial View

In the **SELECT A PRODUCT TO ADD:** drop down box, select **HDMI Over IP 4K (500758/759/770/771/773/777)** and then click on **ADD DEVICE** (Figure 352).

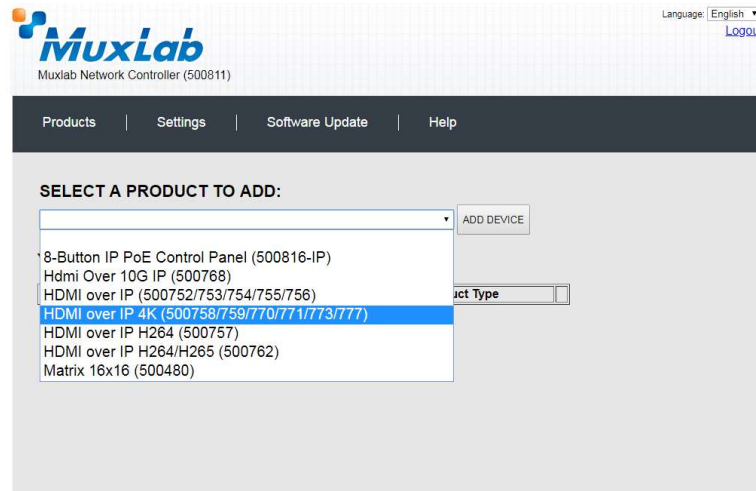


Figure 351: Products Screen – Selecting a Product

A dialog box appears asking the user to provide a custom name for the selected product (Figure 353). The user then types a name in the **Custom Name:** field and clicks on **OK**. Note that if the user decides to click on **CANCEL**, the previous screen appears (Figure 351), without a product being added.

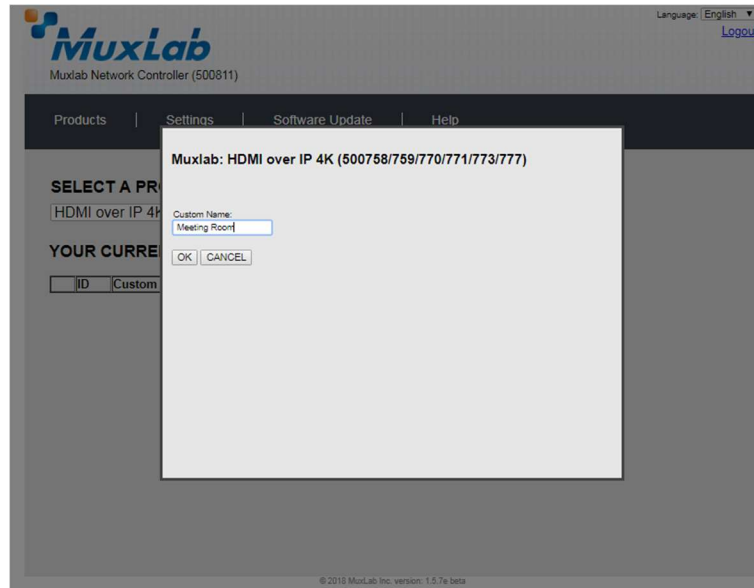


Figure 352: Products Screen – Naming a Product

The custom name has been added to **YOUR CURRENT SYSTEM** (Figure 354).

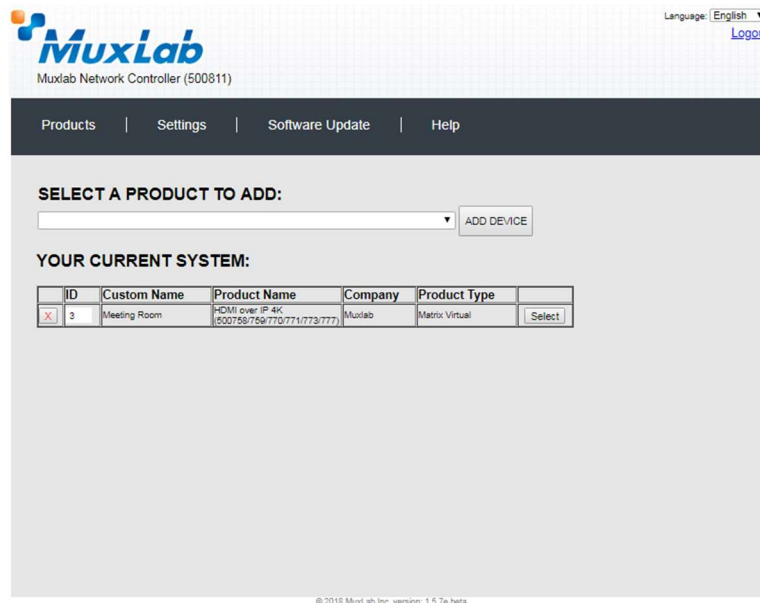


Figure 353: Products Screen – Your Current System Selection

The user can change the ID of each row by modifying the **ID** field. The user can also delete the entire row completely by clicking the **X** next to it.

To configure a given product, the user clicks on **Select**, which brings up a multi-tabbed screen (Figure 355).

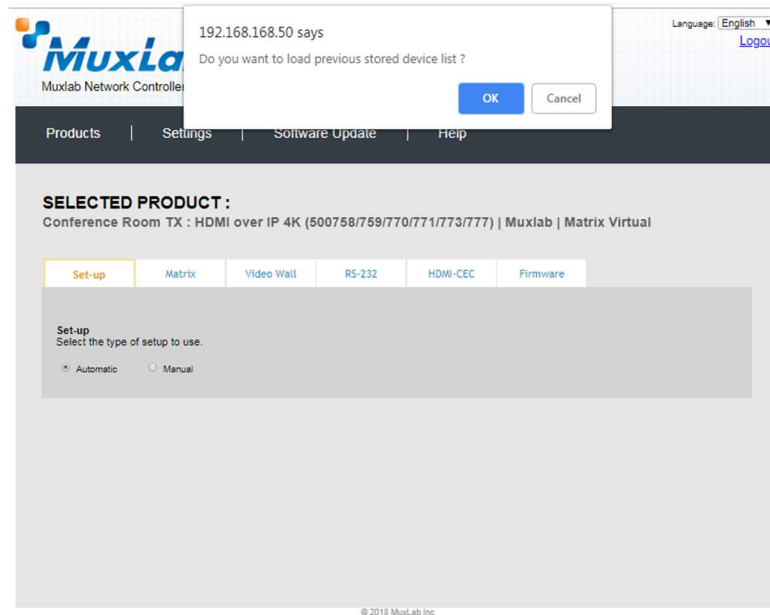


Figure 354: Products Screen – Load Dialog

By default, a dialog appears asking the user to load a previously saved device list (in case such a list has already been stored). This dialog will appear even if no device list has been previously saved.

Five tabs appear within the **Products** screen:

1. Set-up
2. Matrix
3. Video Wall
4. RS-232
5. HDMI CEC
6. Firmware

1. Products Screen - Set-up Tab

The **Set-up** tab offers the user two options for the type of set-up allowed: **Automatic** or **Manual**.

Automatic means that the software will scan the system for every dip-switch enabled device. The software will then override its manual dip-switch address settings and place these units under software address control. (Automatic is recommended).

Manual means that the software will allow the manual dip-switch address settings of any found device to remain active.

After selecting **Automatic** or **Manual**, click on **Launch discovery** (Figure 356).

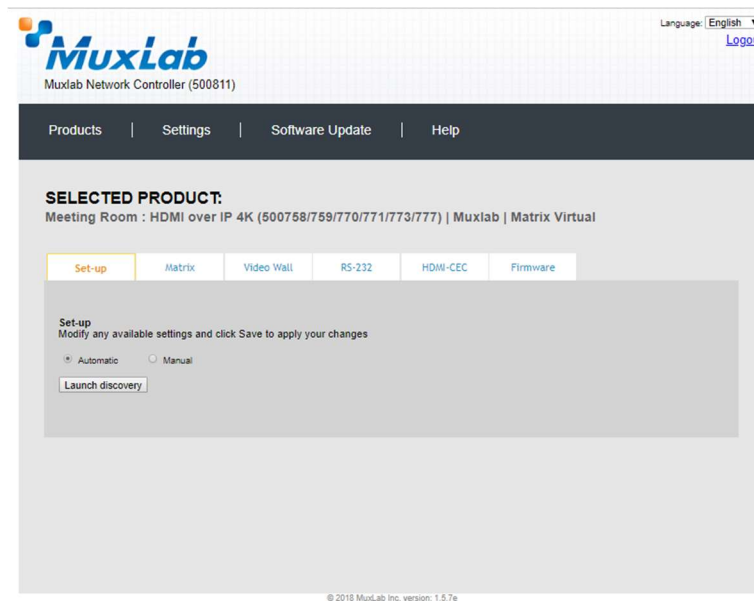


Figure 355: Products Screen – Set-up Tab

The system will scan the network for all source side devices (500777 transmitters), and will display the scan results in tabular form (Figure 357).

Each 500777 transmitter and receiver can be assigned an arbitrary descriptive name, normally reflecting the end device that it is terminated to. To change the name of any Source (TX) device, click the **Name** field to edit its contents. Several **Name** fields can be edited before saving changes, as shown in Figure 358 (orange highlighted fields).

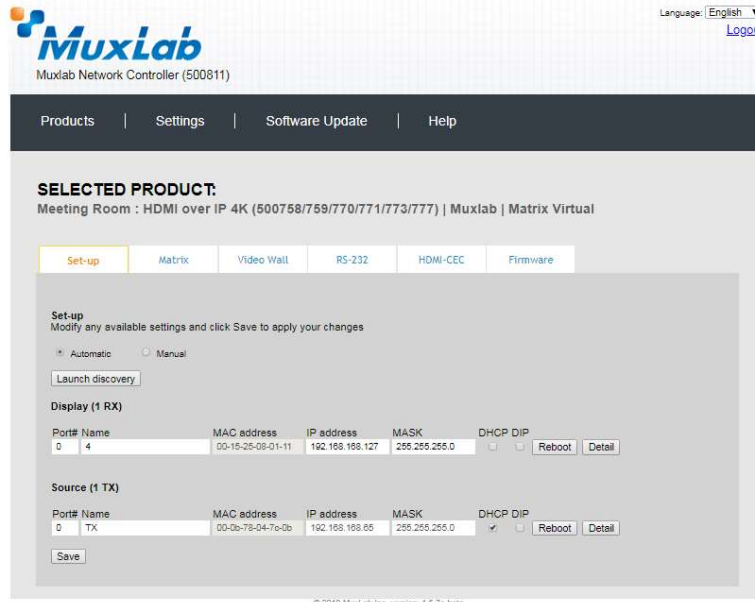


Figure 356: Products Screen – Set-up Tab

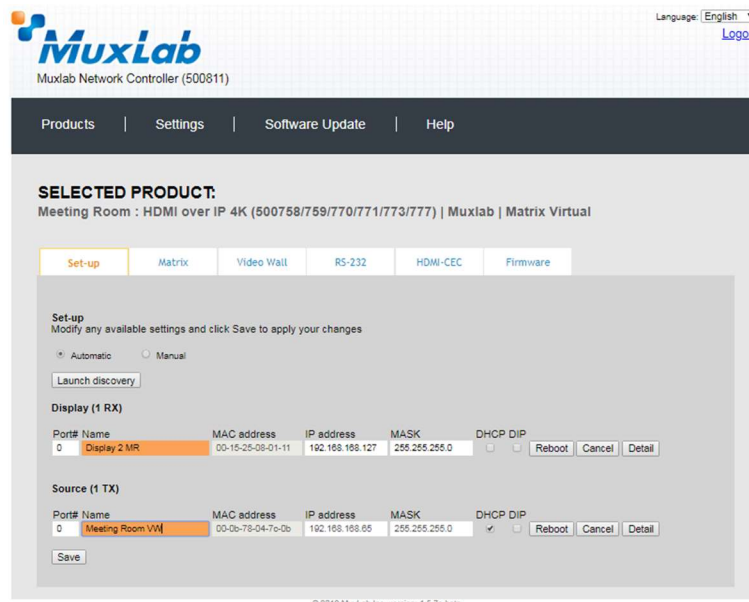


Figure 357: Name Editing

To save all name changes, click on **Save**. A green **UPDATED** tag will appear next to newly changed names (Figure 359).

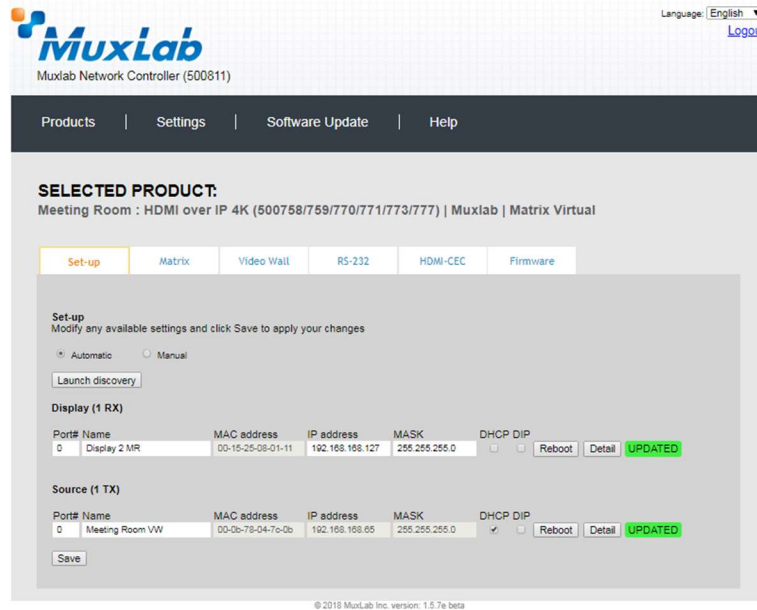


Figure 358: Saving Name Changes

To view and modify component parameters, click on the **Detail** button next to the given component. A dialog appears (Figure 360).

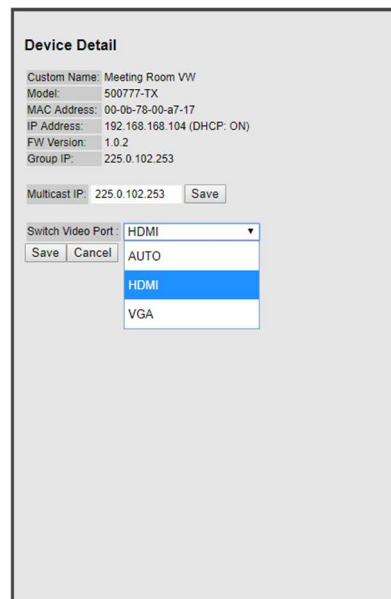


Figure 359: Device Detail Dialog

2. Products Screen - Matrix Tab

The **Matrix** tab of the **Products** screen allows the user to connect any Display to any Source. The user also has the option of using **Presets** to save connection schemes (“Presets”), as well as to edit and delete existing presets (Figure 361)

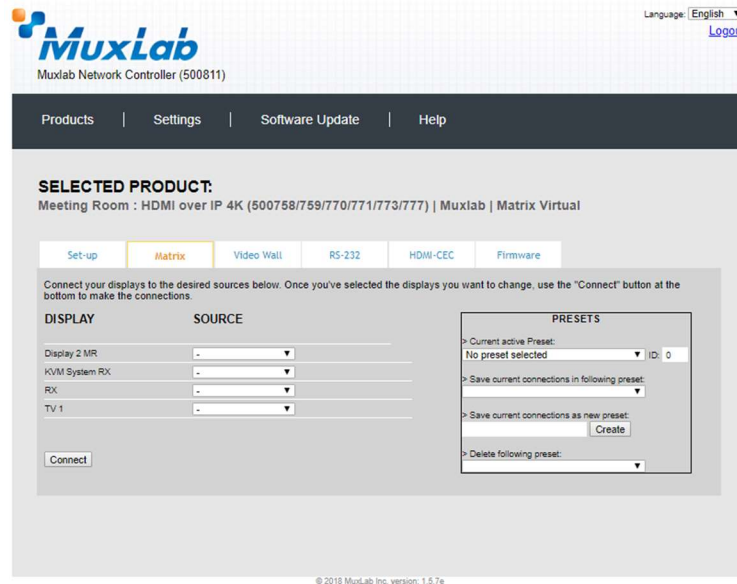


Figure 360: Matrix Tab

To connect a display to a source, the user first clicks on the drop-down list next to the given display (for example “Display 2 MR”) and selects which source to connect it to (Figure 362).

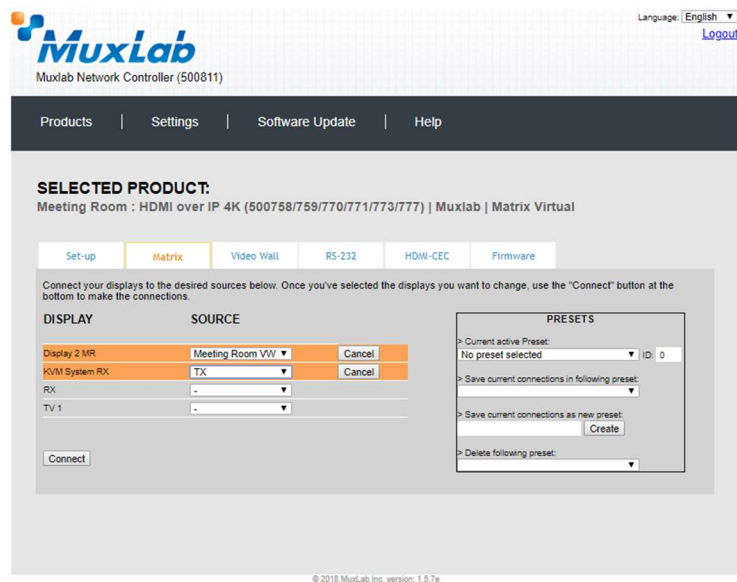


Figure 361: Change Connection

Once the selection is made (the user can change any or all connections between displays and sources), the user clicks on **Connect** to finalize the change. A green **SUCCESS** tag will appear next to the new or changed connection (Figure 363)

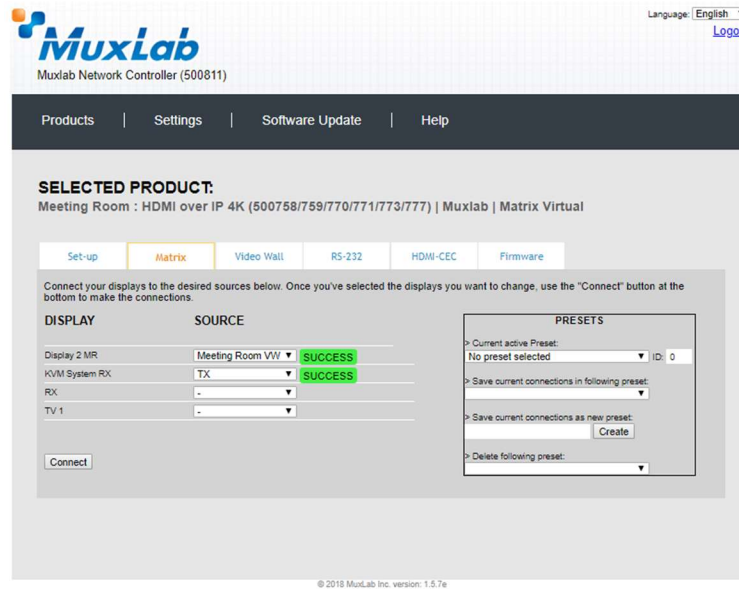


Figure 362: Change Successful

To create a new preset, the user clicks the **> Save current connections as new preset** field (Figure 364) and types a name. This assigned preset name will be linked to the existing connection scheme being shown within the **Matrix** tab.


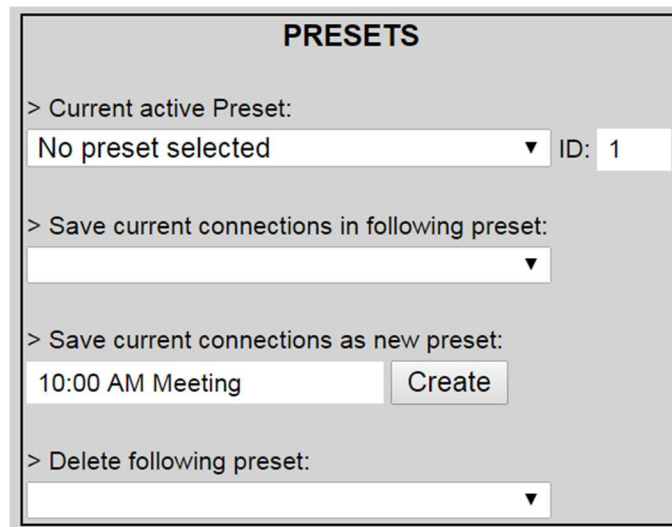


Figure 363: Create New Preset

To save this preset, the user clicks on **Create**. A green SUCCESS tag will appear next to the > **Save current connections as new preset** field and the newly created preset becomes the **Current active Preset** (Figure 365)

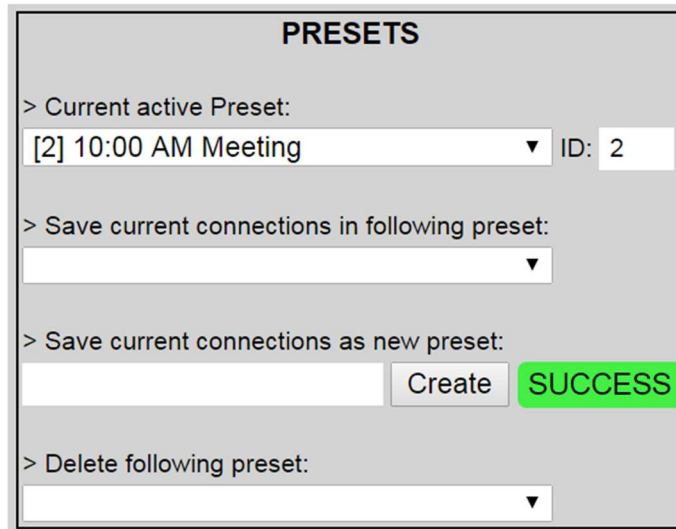


The screenshot shows a window titled "PRESETS" with a light gray background. It contains four sections, each starting with a right-pointing chevron (>):

- Current active Preset:** A dropdown menu showing "[2] 10:00 AM Meeting" and a small "ID: 2" box to its right.
- Save current connections in following preset:** An empty dropdown menu.
- Save current connections as new preset:** An empty text input field followed by a "Create" button and a green "SUCCESS" tag.
- Delete following preset:** An empty dropdown menu.

Figure 364: Confirmation of New Preset

To delete a preset, the user clicks the > **Delete following preset** drop-down box and selects a preset name from the list shown (Figure 366)

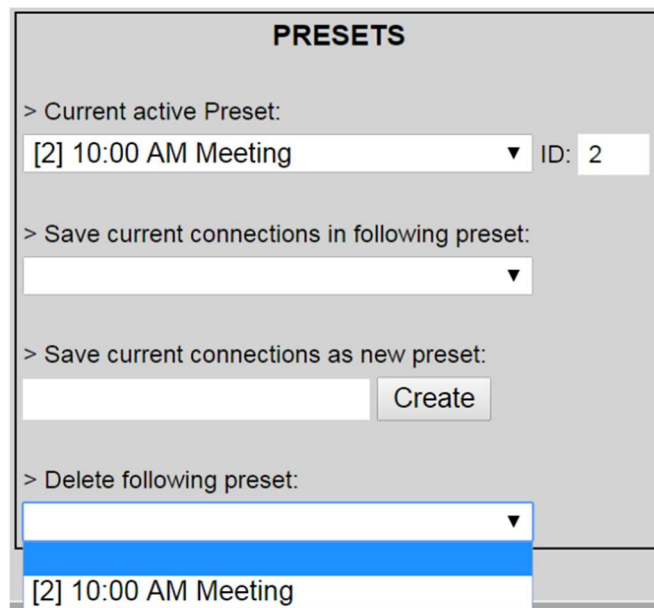

The screenshot shows the same "PRESETS" window as Figure 364. The "Delete following preset:" section's dropdown menu is open, displaying a list with one item: "[2] 10:00 AM Meeting". The other sections remain the same as in Figure 364.

Figure 365: Delete Preset

Once selected, a dialog will appear asking the user to confirm the deletion request (Figure 367).



Figure 366: Confirmation of Deleted Preset

Click on **OK**. The preset will be deleted and a green SUCCESS tag will appear next to the > **Delete following preset** field (Figure 368)


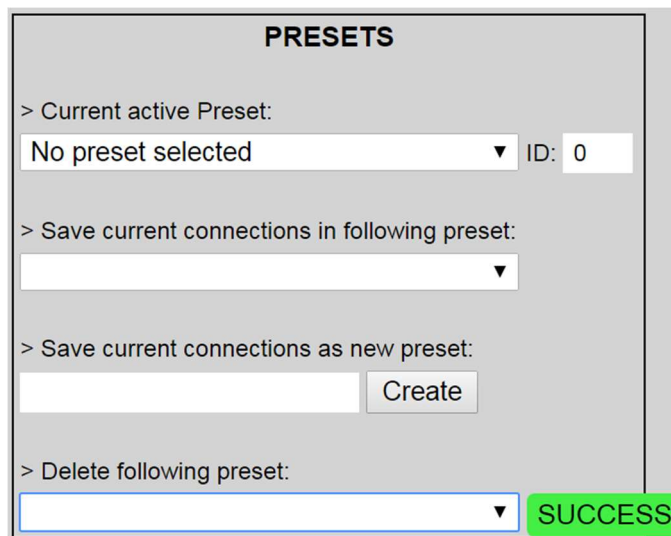


Figure 367: Confirmation of Deleted Preset

To save the current matrix configuration under an existing **Preset** name, click on > **Save current connection in following preset** drop-down box and selects a preset name (Figure 369)

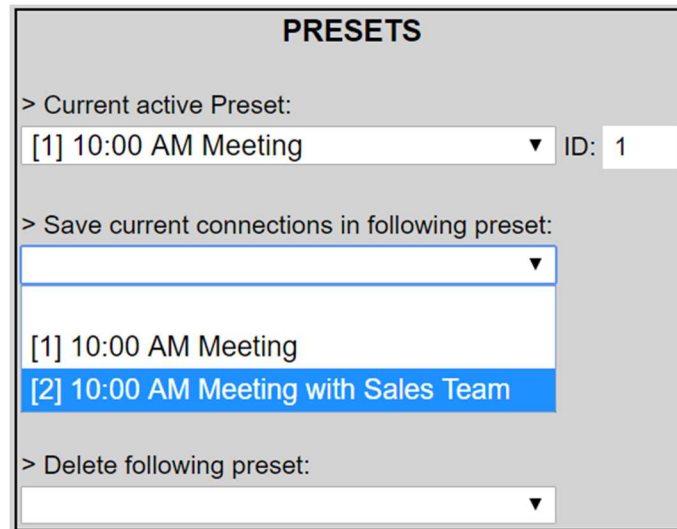


The screenshot shows a window titled "PRESETS". It contains three main sections:

- > Current active Preset:** A dropdown menu showing "[1] 10:00 AM Meeting" and an "ID: 1" field.
- > Save current connections in following preset:** A dropdown menu that is open, showing a list of options: "[1] 10:00 AM Meeting" and "[2] 10:00 AM Meeting with Sales Team". The second option is highlighted in blue.
- > Delete following preset:** A dropdown menu that is currently empty.

Figure 368: Change Current Active Preset

Once selected, the **Preset** will be saved and a green SUCCESS tag will appear next to the > **Save current connections in following preset** field (Figure 370).

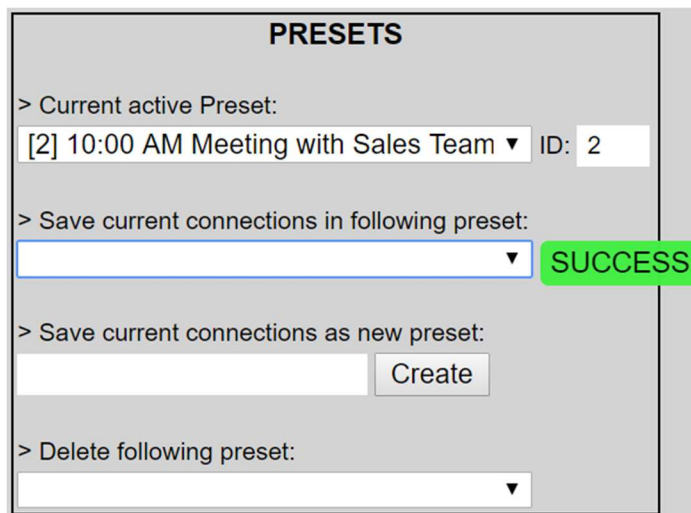

The screenshot shows the "PRESETS" window after the selection in Figure 368. The changes are:

- > Current active Preset:** The dropdown menu now shows "[2] 10:00 AM Meeting with Sales Team" and the "ID" field now shows "2".
- > Save current connections in following preset:** The dropdown menu is now closed, and a green "SUCCESS" tag is displayed to its right.
- > Save current connections as new preset:** A new section with an empty text input field and a "Create" button.
- > Delete following preset:** The dropdown menu remains empty.

Figure 369: Confirmation of Changed Preset Name

In order to activate an existing **Preset**, select > **Current active Preset**, and select the **Preset** name from the drop-down box and the **Preset** will become active. The active **Preset** will also be displayed in the **Current active Preset** field.

3. Products Screen - Video Wall Tab

The HDMI/VGA/USB wall plate transmitter 500777 will require either the 500758-RX or 500759-RX to be able to do **Video Wall**, please refer to the Video Wall section for further details on the configuration.

4. Products Screen - RS-232 Tab

MuxLab's HDMI/VGA/USB wall plate transmitter 500777 does not support RS232. Clicking on this tab will display the following screen (Figure 371)

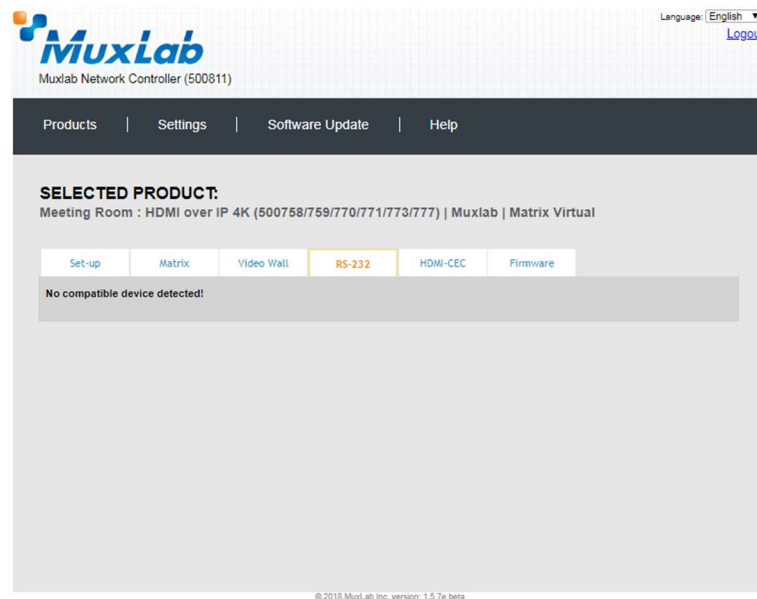


Figure 370: RS-232 Tab

5. Products Screen – HDMI CEC Tab

HDMI CEC feature is not supported in the HDMI/VGA wall plate transmitter 500773 as there is not IR connector on it.

6. Products Screen - Firmware Tab

The Firmware tab of the Products screen enables the user to update the firmware for MuxLab transmitters and receivers (Figure 372).

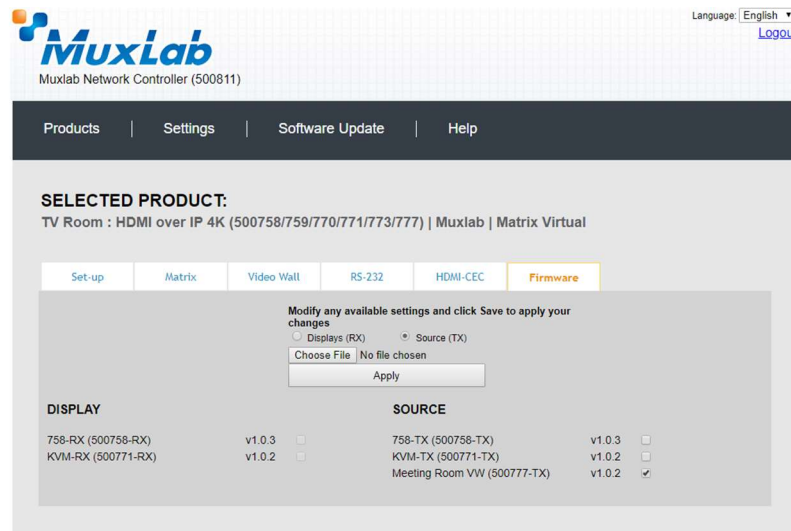



Figure 371: Firmware Tab

The user first selects either **Display (RX)** or **Source (TX)**, then chooses the firmware update file to upload to the given device. Once the file is selected, the user checks the box next to the given device (listed under **DISPLAY** and **SOURCE**) targeted for firmware upgrade, and then clicks **Apply**.

Settings Screen

The **Settings** screen contains two tabs: **Network** and **Administration**.

The **Network** tab (Figure 373) is used to change the IP address of the MuxLab Network Controller, the network mask, as well as the router IP address. It also allows the user to enable or disable DHCP.

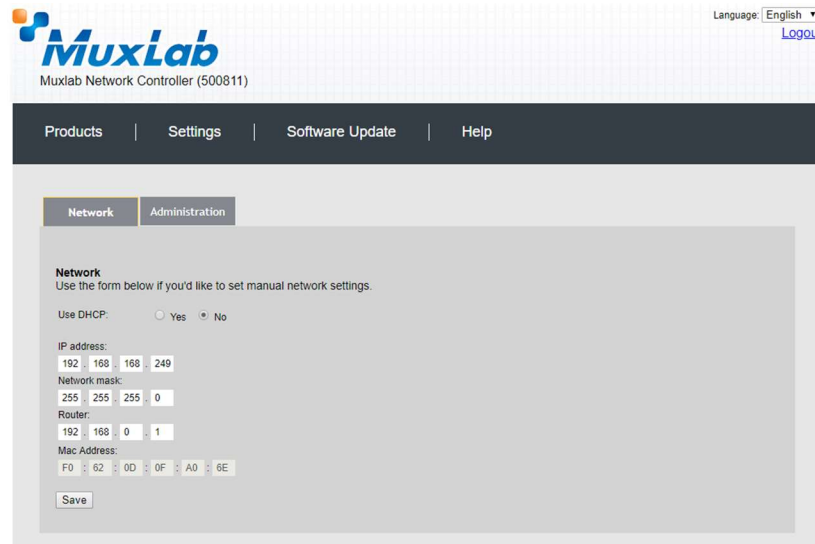


The screenshot shows the MuxLab Network Controller (500811) interface. The top navigation bar includes 'Products', 'Settings', 'Software Update', and 'Help'. The 'Settings' tab is active, and the 'Network' sub-tab is selected. The 'Network' section contains the following fields and controls:

- Use DHCP:** Radio buttons for 'Yes' and 'No'.
- IP address:** Four input fields containing '192', '168', '168', and '249'.
- Network mask:** Four input fields containing '255', '255', '255', and '0'.
- Router:** Four input fields containing '192', '168', '0', and '1'.
- Mac Address:** Six input fields containing 'F0', '62', '0D', '0F', 'A0', and '6E'.
- Save** button.

Figure 372: Settings Screen: Network Tab

The **Administration** tab is used to create or delete user accounts, change passwords, restore data, backup data, and retrieve logs (Figure 374).

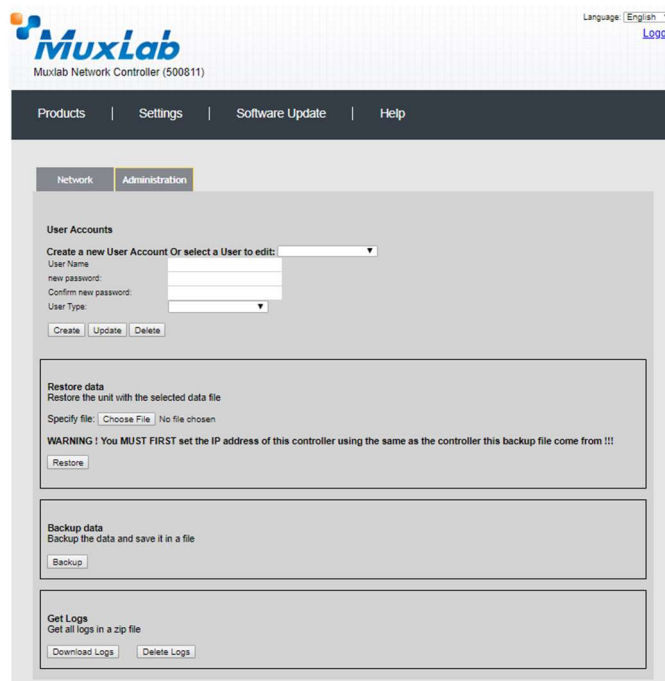

The screenshot shows the MuxLab Network Controller (500811) interface. The top navigation bar includes 'Products', 'Settings', 'Software Update', and 'Help'. The 'Settings' tab is active, and the 'Administration' sub-tab is selected. The 'Administration' section contains the following sections and controls:

- User Accounts:** A dropdown menu for 'Create a new User Account Or select a User to edit:'. Below it are input fields for 'User Name', 'new password', and 'Confirm new password', and a dropdown for 'User Type'. Buttons for 'Create', 'Update', and 'Delete' are at the bottom.
- Restore data:** A section with the text 'Restore the unit with the selected data file'. It includes a 'Specify file:' label and a 'Choose File' button. A warning message states: 'WARNING ! You MUST FIRST set the IP address of this controller using the same as the controller this backup file come from !!!'. A 'Restore' button is at the bottom.
- Backup data:** A section with the text 'Backup the data and save it in a file'. A 'Backup' button is at the bottom.
- Get Logs:** A section with the text 'Get all logs in a zip file'. It includes 'Download Logs' and 'Delete Logs' buttons.

Figure 373: Settings Screen: Administration Tab

Software Update Screen

The **Software Update** enables the user to update MuxLab Network Controller software (Figure 375). This software is available on MuxLab's website (www.muxlab.com). Download the software to the local PC before performing the update.

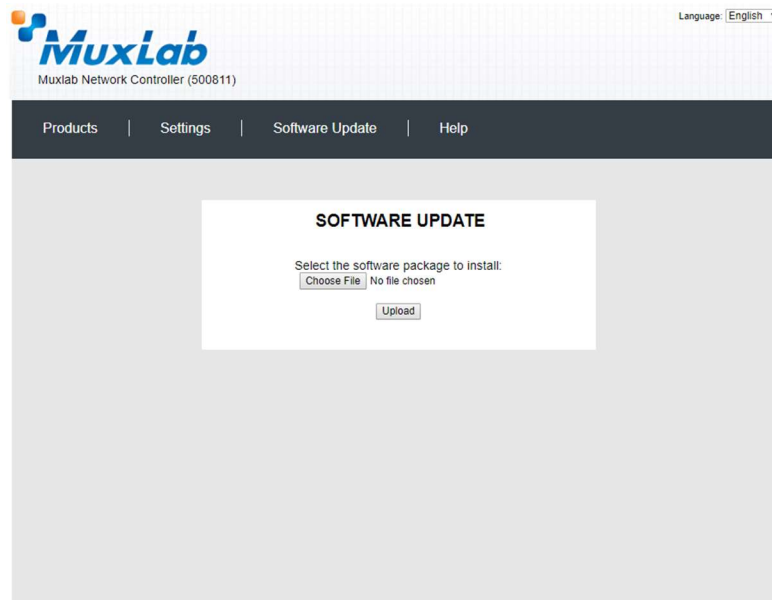


Figure 374: Software Update Screen

Help Screen

The **Help** screen offers quick contact information for customer support and all other inquiries (Figure 376)

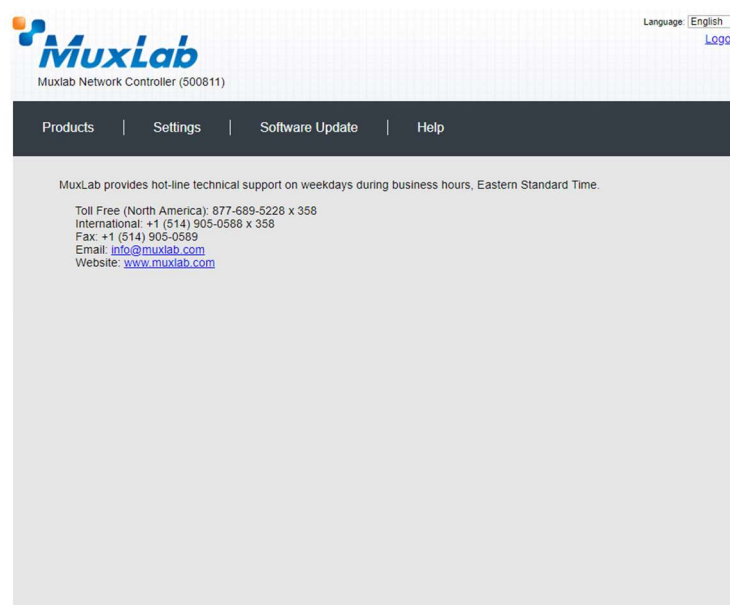


Figure 375: Help Screen

Extender Model 500755-AMP

Product Screen

Once the user has logged in, the **Products** screen will appear (Figure 377).

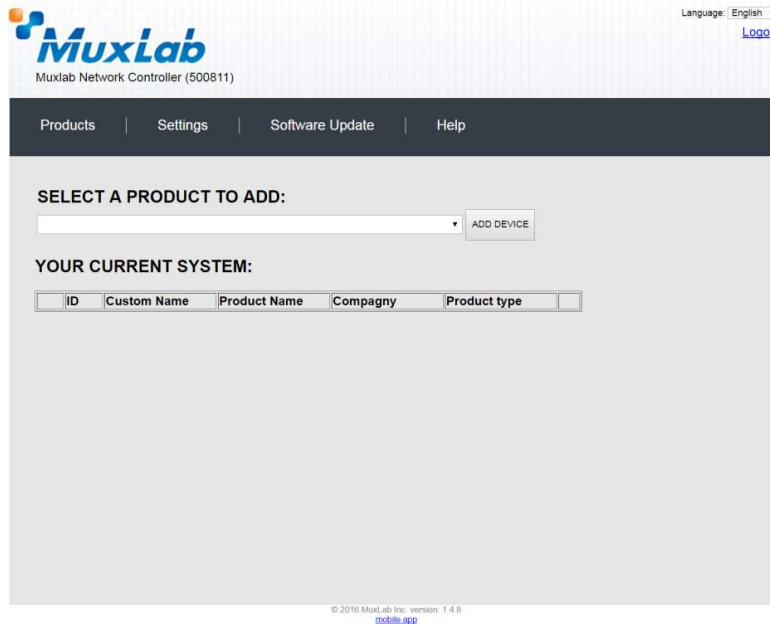


Figure 376: Products Screen – Initial View

In the **SELECT A PRODUCT TO ADD:** drop down box, select **Hdmi Over IP (500752/753/754/755/756)** and then click on **ADD DEVICE** (Figure 378).

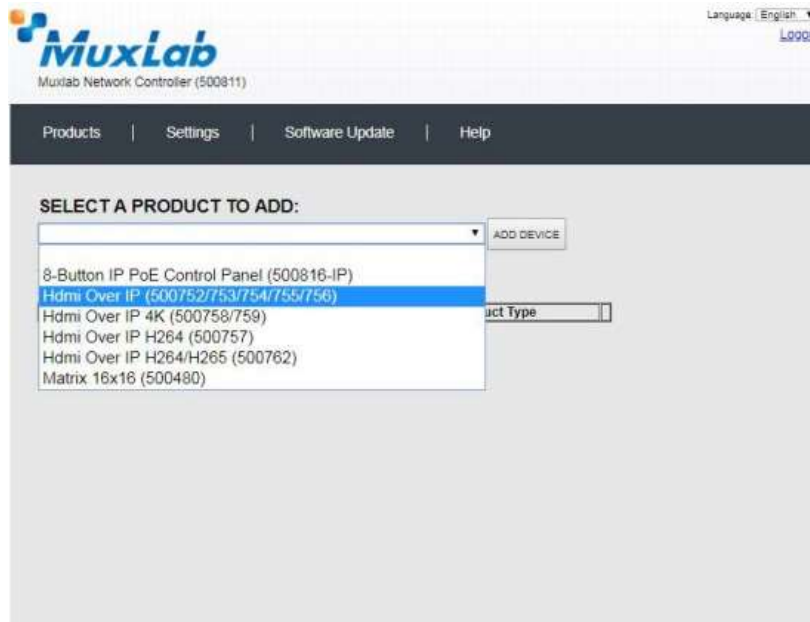


Figure 377: Products Screen – Selecting a Product

A dialog box appears asking the user to provide a custom name for the selected product (Figure 379). The user then types a name in the **Custom Name:** field and clicks on **OK**. Note that if the user decides to click on **CANCEL**, the previous screen appears (Figure 377), without a product being added.

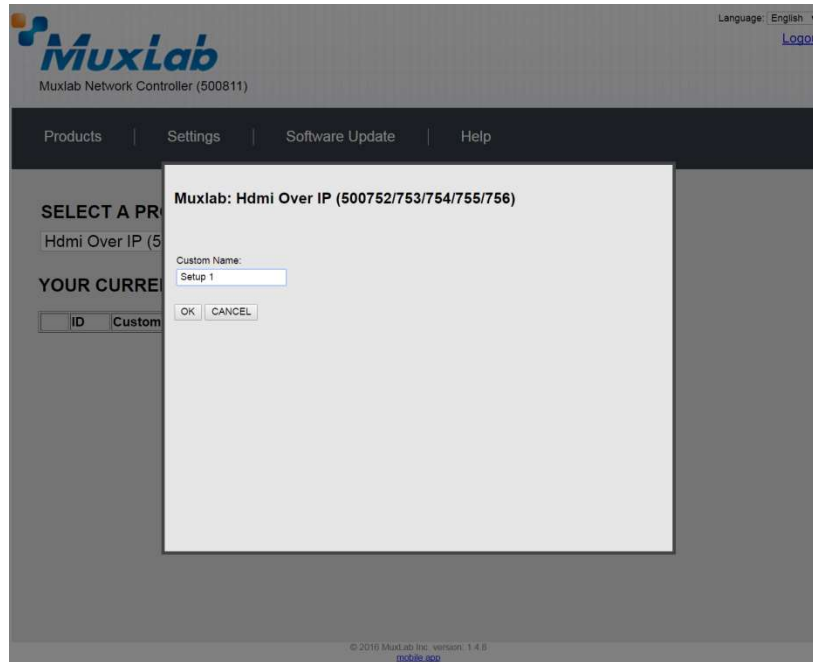


Figure 378: Products Screen – Naming a Product

The custom name has been added to **YOUR CURRENT SYSTEM** (Figure 380).

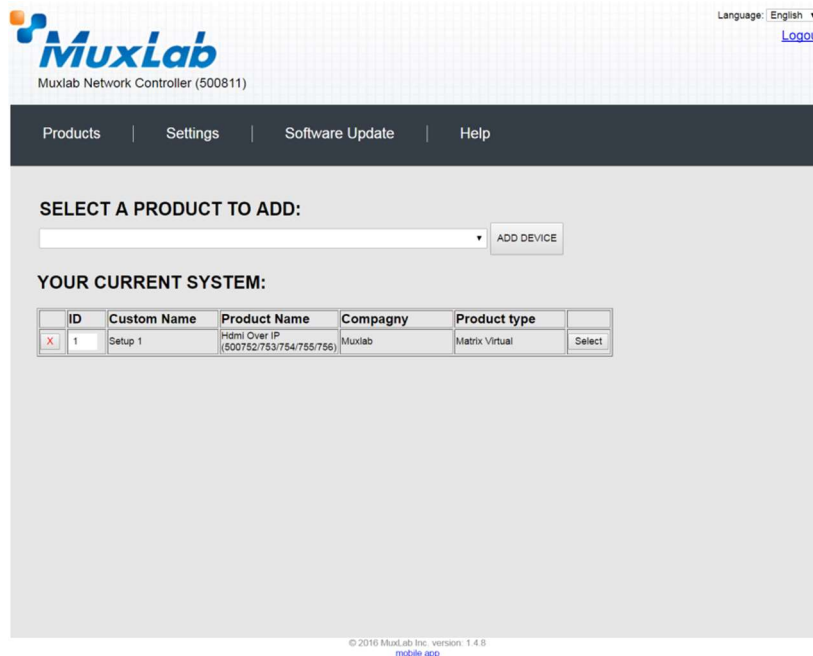


Figure 379: Products Screen – Your Current System Selection

The user can change the ID of each row by modifying the **ID** field. The user can also delete the entire row completely by clicking the **X** next to it.

To configure a given product, the user clicks on **Select**, which brings up a multi-tabbed screen (Figure 381).

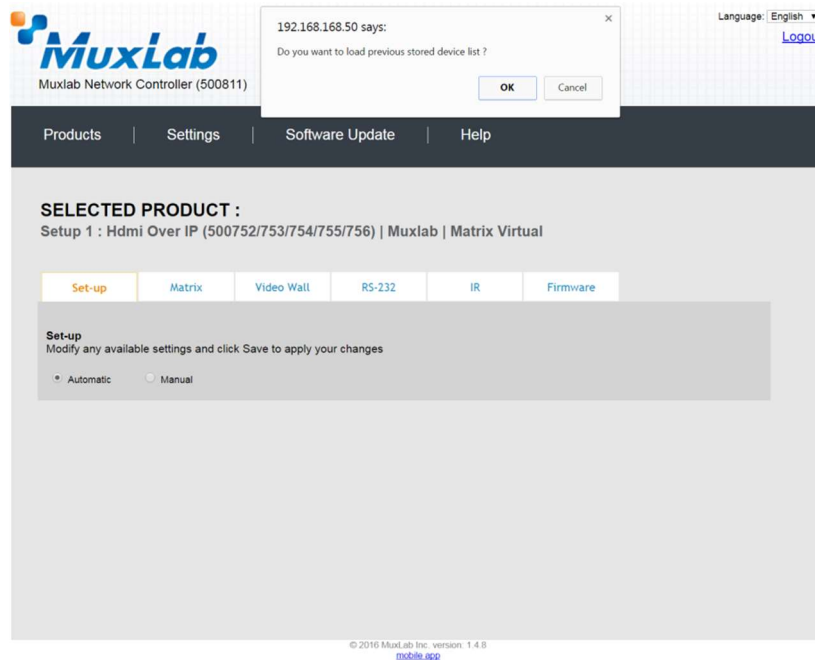


Figure 380: Products Screen – Load Dialog

By default, a dialog appears asking the user to load a previously saved device list (in case such a list has already been stored). This dialog will appear even if no device list has been previously saved.

Six tabs appear within the **Products** screen:

1. Set-up
2. Matrix
3. Video Wall
4. RS-232
5. IR
6. Firmware

1. Products Screen - Set-up Tab

The **Set-up** tab offers the user two options for the type of set-up allowed: **Automatic** or **Manual**.

Automatic means that the software will scan the system for every dip-switch enabled device. The software will then override its manual dip-switch address settings and place these units under software address control. (Automatic is recommended).

Manual means that the software will allow the manual dip-switch address settings of any found device to remain active.

After selecting **Automatic** or **Manual**, click on **Launch discovery** (Figure 382).

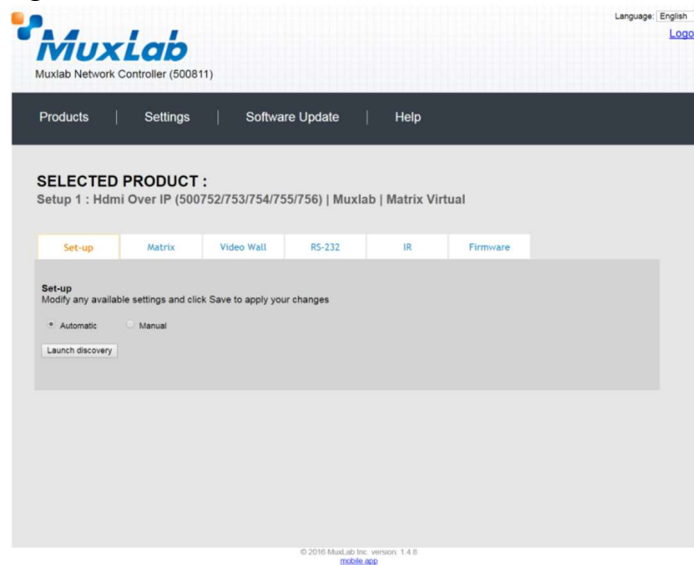


Figure 381: Products Screen – Set-up Tab

Note: The term “Display” is used in this 500755-AMP section to reference the sink side (RX), the actual sink devices are speakers.

The system will scan the network for all source side devices (500755-AMP “transmitters”) and display side devices (500755-AMP “receivers”), and will display the scan results in tabular form (Figure 383). Note that the 500755-AMP consists of a transmitter and receiver unit (supporting a 50W per channel amplifier), whereby one transmitter can connect with multiple receivers supporting a one-to-many architecture for a distributed system. One or more sources (via transmitters) can easily be distributed to multiple zoned locations with speakers (via receivers).

Each 500755-AMP transmitter and receiver can be assigned an arbitrary descriptive name, normally reflecting the end device that it is terminated to. To change the name of any speaker sink (RX) or audio source (TX) device, click the **Name** field to edit its contents. Several **Name** fields can be edited before saving changes, as shown in Figure 384 (orange highlighted fields).

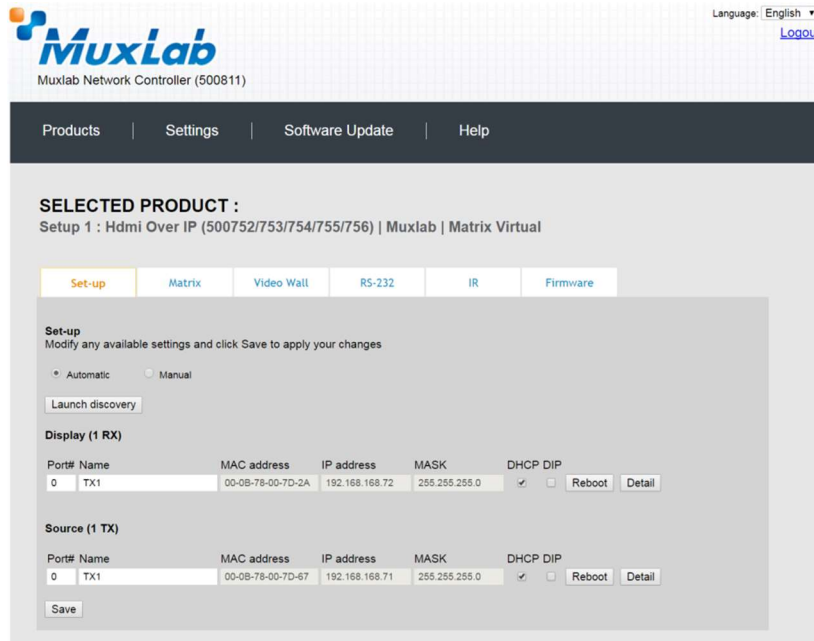


Figure 382: Products Screen – Set-up Tab

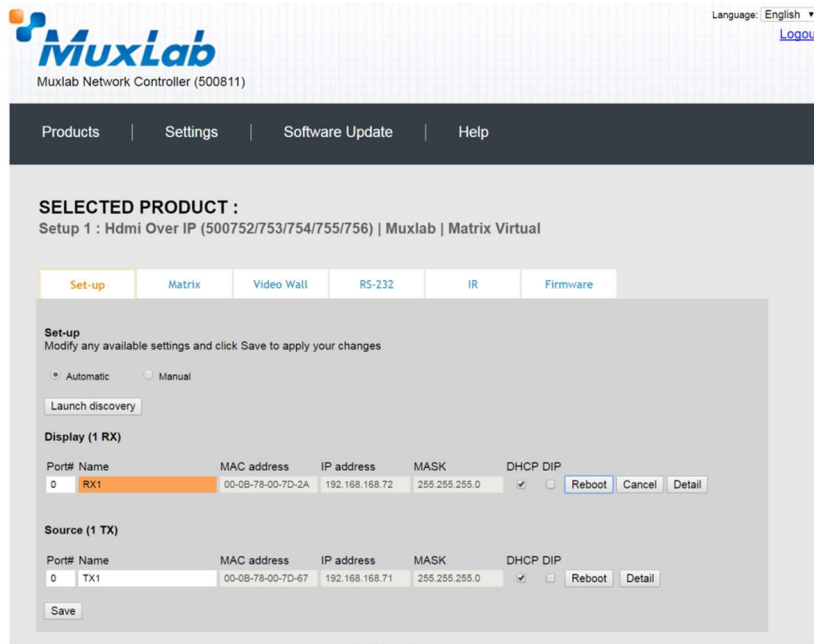


Figure 383: Name Editing

To save all name changes, click on **Save**. A green UPDATED tag will appear next to newly changed names (Figure 385).

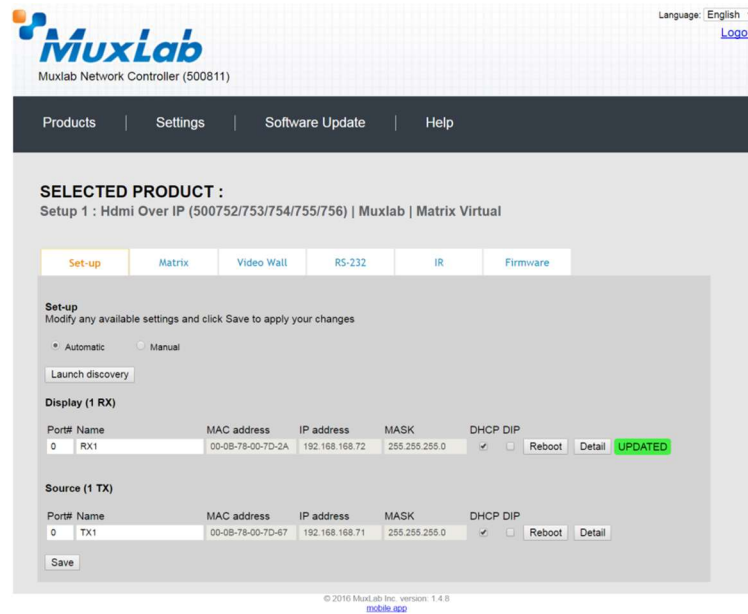


Figure 384: Saving Name Changes

To view and modify component parameters, click on the **Detail** button next to the given component. A dialog appears (Figure 386). This allows for control of TX settings for volume/volume attenuation (if mic is detected)/bass/treble/mic gain/mic bass/mic treble/mic auto detect level, and for selection of input port 1 or 2/mic type. It also allows for control of RX settings for volume/bass/treble within each zone.

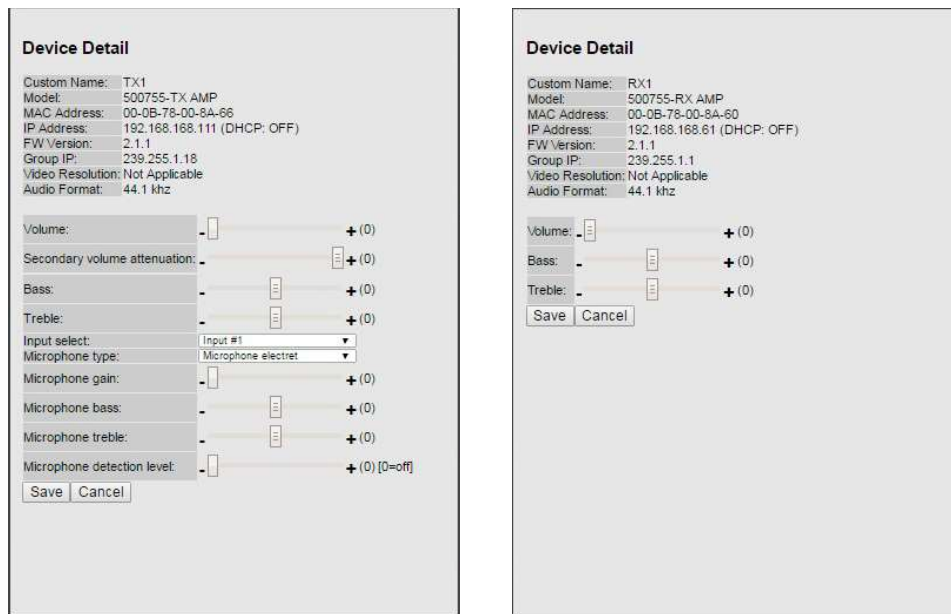


Figure 385: Device Detail Dialog for TX and RX

2. Products Screen - Matrix Tab

The **Matrix** tab of the **Products** screen allows the user to connect any Display (sink device) to any source. The user has the option of using **Presets** to save connection schemes (“Presets”), as well as to edit and delete existing presets (Figure 387).

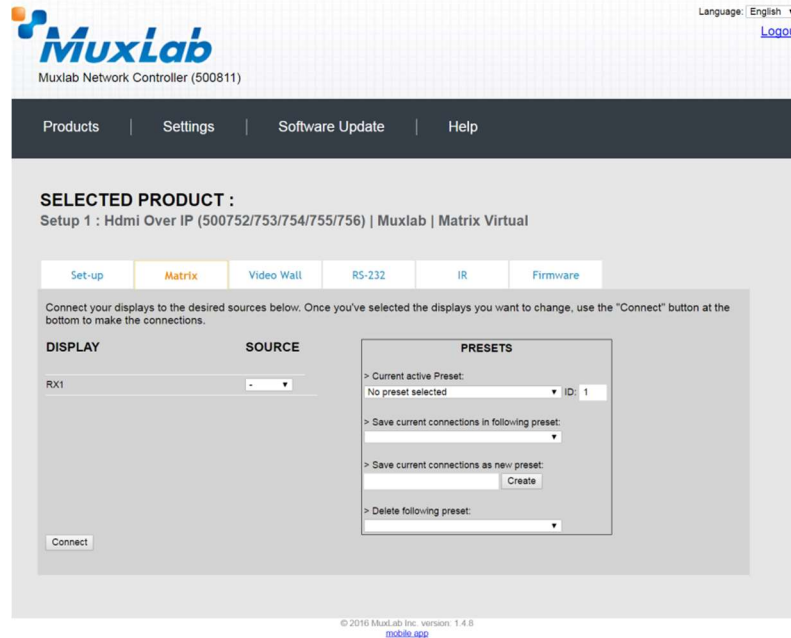


Figure 386: Matrix Tab

To connect a sink to a source, the user first clicks on the drop-down list next to the given sink (for example “RX1”) and selects which source to connect it to (Figure 388).

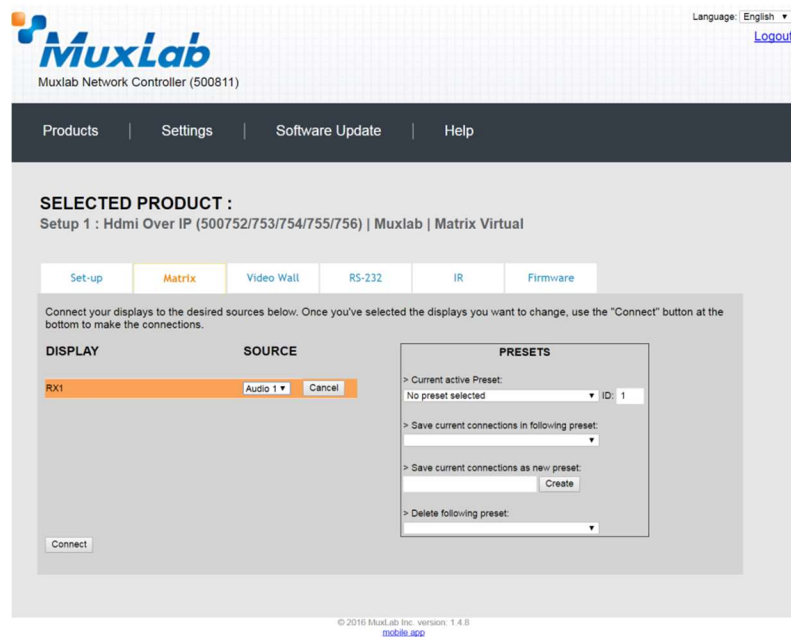


Figure 387: Change Connection

Once the selection is made (the user can change any or all connections between sinks and sources), the user clicks on **Connect** to finalize the change. A green SUCCESS tag will appear next to the new or changed connection (Figure 389).

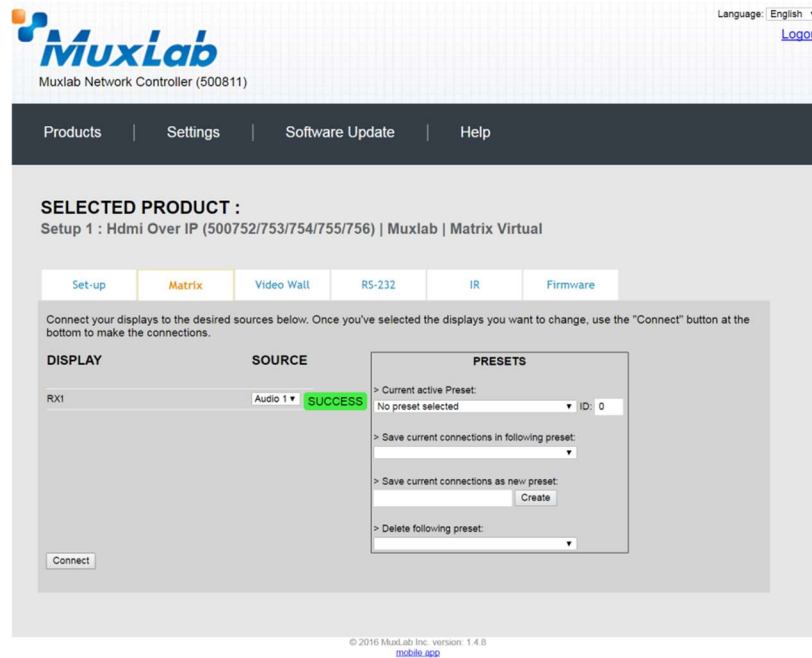


Figure 388: Change Successful

To create a new preset, the user clicks the > **Save current connections as new preset** field (Figure 390) and types a name. This assigned preset name will be linked to the existing connection scheme being shown within the **Matrix** tab.


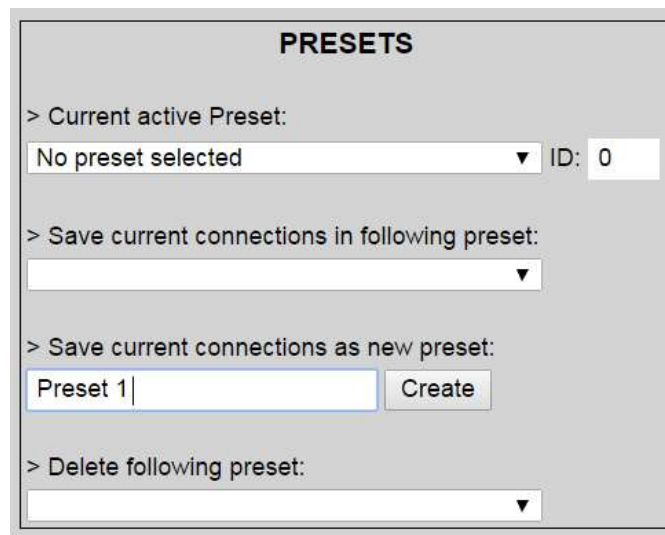


Figure 389: Create New Preset

To save this preset, the user clicks on **Create**. A green SUCCESS tag will appear next to the > **Save current connections as new preset** field and the newly created preset becomes the **Current active Preset** (Figure 391).

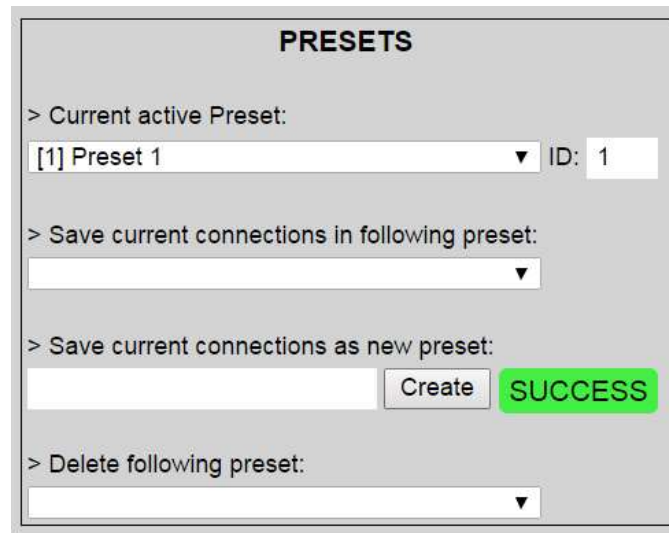


The screenshot shows a window titled "PRESETS" with the following elements:

- > Current active Preset: A dropdown menu showing "[1] Preset 1" and an "ID: 1" field.
- > Save current connections in following preset: An empty dropdown menu.
- > Save current connections as new preset: An empty text input field, a "Create" button, and a green "SUCCESS" tag.
- > Delete following preset: An empty dropdown menu.

Figure 390: Confirmation of New Preset

To delete a preset, the user clicks the > **Delete following preset** drop-down box and selects a preset name from the list shown (Figure 392).

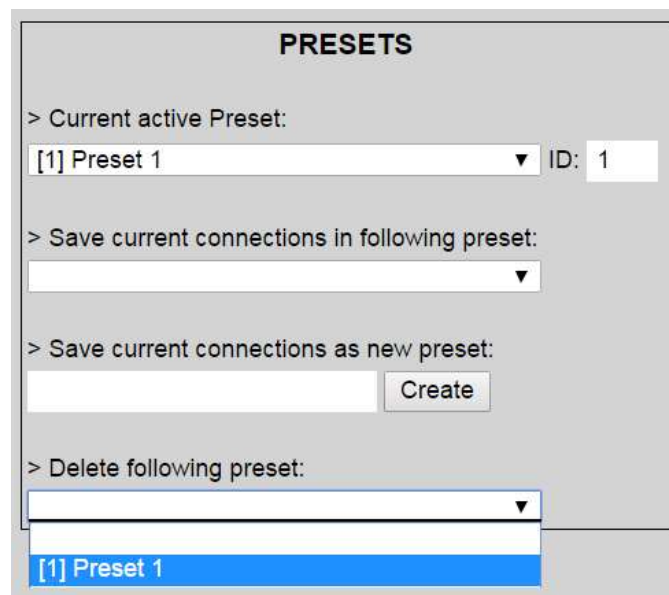

The screenshot shows the same "PRESETS" window as Figure 390, but with the "Delete following preset" dropdown menu open. The menu is currently empty, and the option "[1] Preset 1" is highlighted in blue at the bottom of the list. The "Create" button is visible but not active.

Figure 391: Delete Preset

Once selected, a dialog will appear asking the user to confirm the deletion request (Figure 393).

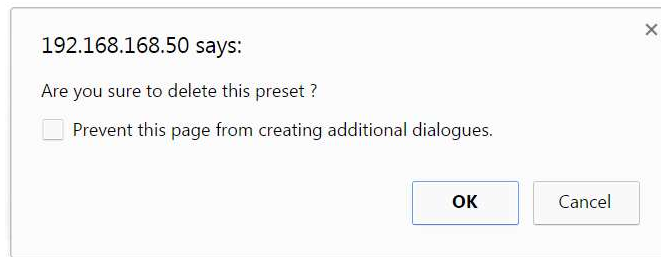


Figure 392: Confirmation of Deleted Preset

Click on **OK**. The preset will be deleted and a green SUCCESS tag will appear next to the **> Delete following preset** field (Figure 394).


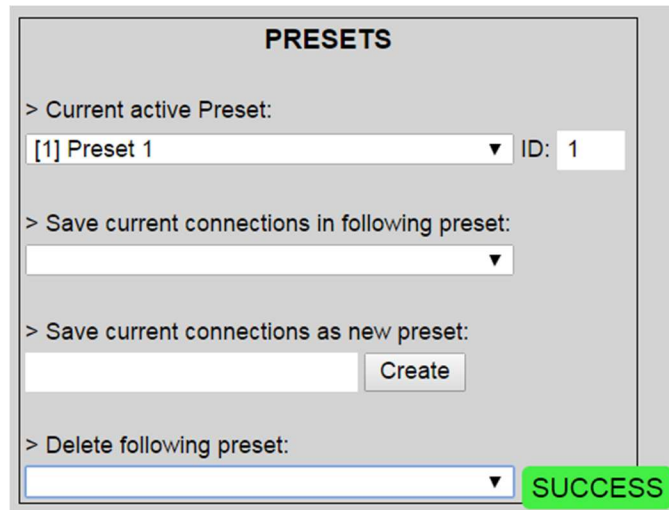


Figure 393: Confirmation of Deleted Preset

To save the current matrix configuration under an existing **Preset** name, click on > **Save current connection in following preset** drop-down box and selects a preset name (Figure 395).

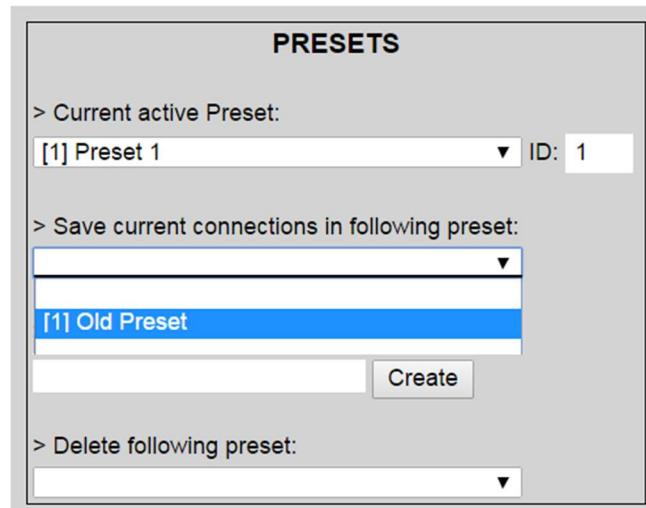


The screenshot shows a window titled "PRESETS". It contains three main sections:

- > Current active Preset:** A dropdown menu showing "[1] Preset 1" and an "ID: 1" field.
- > Save current connections in following preset:** A dropdown menu is open, showing a list of options. "[1] Old Preset" is highlighted in blue. Below the dropdown is a "Create" button.
- > Delete following preset:** A dropdown menu.

Figure 394: Change Current Active Preset

Once selected, the **Preset** will be saved and a green SUCCESS tag will appear next to the > **Save current connections in following preset** field (Figure 396).

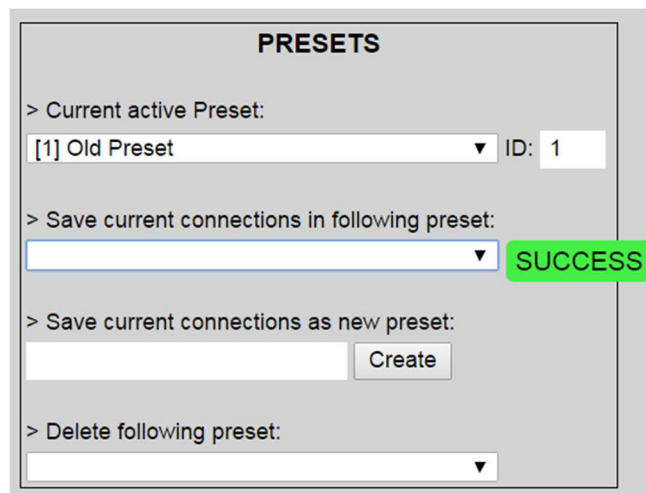

The screenshot shows the same "PRESETS" window as Figure 394, but with the following changes:

- > Current active Preset:** The dropdown menu now shows "[1] Old Preset".
- > Save current connections in following preset:** The dropdown menu is now empty. A green "SUCCESS" tag is displayed to the right of the dropdown.
- > Save current connections as new preset:** A new section with a text input field and a "Create" button.
- > Delete following preset:** The dropdown menu is now empty.

Figure 395: Confirmation of Changed Preset Name

In order to activate an existing **Preset**, select > **Current active Preset**, and select the **Preset** name from the drop-down box and the **Preset** will become active. The active **Preset** will also be displayed in the **Current active Preset** field.

3. Products Screen - Video Wall Tab

MuxLab's Extender 500755-AMP does not support the Video Wall feature. Clicking on this tab will display the following screen (Figure 397).

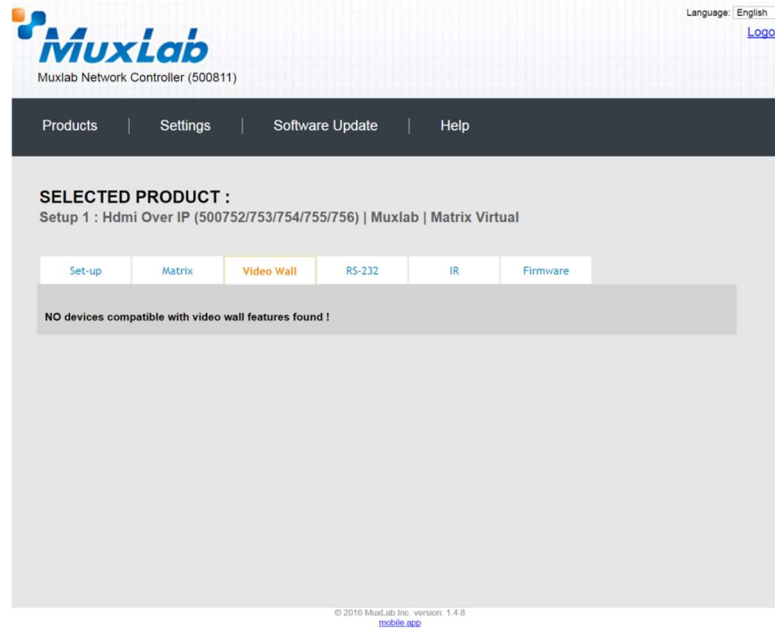


Figure 396: Video Wall Tab

For more information on the Video Wall tab and its features, refer to the section of this manual dealing with MuxLab Extender 500754 and MuxLab Extender 500759.

4. Products Screen - RS-232 Tab

The **RS-232** tab of the **Products** screen enables the user to send RS-232 commands to any MuxLab transmitter or receiver (Figure 398). This is done either through the Network Controller or directly by connecting a PC to the RS-232 port of any transmitter or receiver.

MuxLab
Muxlab Network Controller (500811)

Language: English [Logout](#)

Products | Settings | Software Update | Help

SELECTED PRODUCT :
Setup 1 : Hdmi Over IP (500752/753/754/755/756) | Muxlab | Matrix Virtual

Set-up | Matrix | Video Wall | **RS-232** | IR | Firmware

Update your device's RS-232 connection settings here.

Select a device:

- Baud rate: [Data bits: 8 | Stop bits: 1 | Parity : NONE]
 - IP header in data:
 - Feedback ON:
 - IP Feedback:

Save

Data to send in HEX (ex: A013B155C5)

Data feedback received in HEX

Send

© 2016 MuxLab Inc. version: 1.4.8
[mobile app](#)

Figure 397: RS-232 Tab

When sending RS-232 commands through the Network Controller, the user first selects the device that the RS-232 commands will be sent to. This is done by clicking on the **Select a device** drop-down list and making a selection (Figure 399). The IP Feedback field should also contain the IP address of the Network Controller.

MuxLab
Muxlab Network Controller (500811)

Language: English [Logout](#)

Products | Settings | Software Update | Help

SELECTED PRODUCT :
Setup 1 : Hdmi Over IP (500752/753/754/755/756) | Muxlab | Matrix Virtual

Set-up | Matrix | Video Wall | **RS-232** | IR | Firmware

Update your device's RS-232 connection settings here.

Select a device: Audio 1

- Baud rate: 9600 [Data bits: 8 | Stop bits: 1 | Parity : NONE]
 - IP header in data:
 - Feedback ON:
 - IP Feedback: 192.168.168.56

Save

Data to send in HEX (ex: A013B155C5)

Data feedback received in HEX

Send

© 2016 MuxLab Inc. version: 1.4.8
[mobile app](#)

Figure 398: RS-232 Tab - Selecting a Device

Once a device is selected, the **Data to send in HEX** field becomes enabled. In the above example, source “Audio 1” connected to the transmitter was chosen as the selected device (but a receiver connected to sink equipment could have also been selected), meaning that a command sent to source “Audio 1” will travel from the Network Controller to the Ethernet Switch, and from the Ethernet Switch to the transmitter connected to source “Audio 1”. The transmitter will then send the specified data command to source “Audio 1”.

The **Data feedback received in HEX** field displays the HEX version the feedback sent to the Network Controller by source “Audio 1”.

When sending RS-232 commands directly from a PC to any transmitter or receiver, the user must set up a pass-through system for RS-232 signals to be sent to and from devices. This requires two steps:

- (3) The user first tells the local device (the device connected directly to the PC) the IP address of the far device (where the RS-232 commands are being sent). This is done by first clicking on the **Select a device** drop-down list and selecting the local device from the list, and then inputting the IP address of the far device in the **IP Feedback** field. The user then clicks on **Save**.
- (4) The user then tells the far device the IP address of the local device (if feedback from the far device is required). This is done by first clicking on the **Select a device** drop-down list and selecting the far device from the list, and then inputting the IP address of the near device in the **IP Feedback** field. The user then clicks on **Save**.

5. Products Screen - IR Tab

The **IR** tab of the **Products** screen enables the user to send IR commands to a MuxLab transmitter or receiver IR port (Figure 400) via the Network Controller. IR pass-through mode is also supported using an IR handheld remote as the control source.

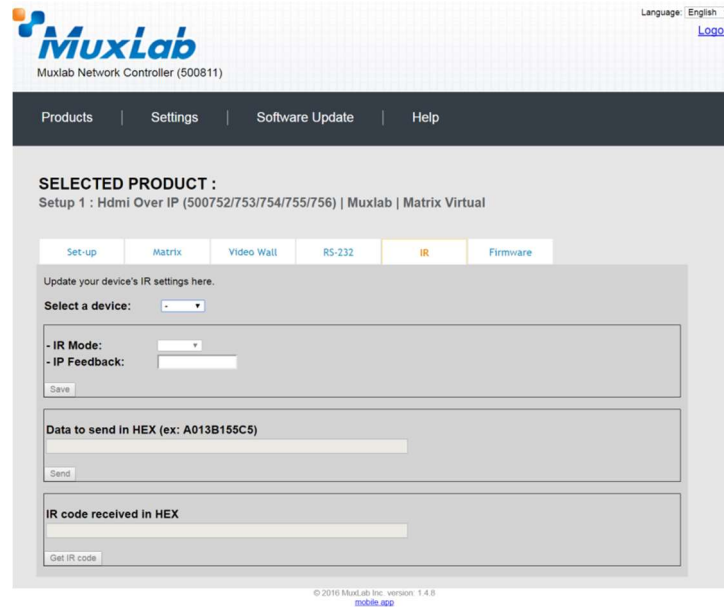


Figure 399: IR Tab

When sending IR commands through the Network Controller, the user first selects the device that the IR commands will be sent to. This is done by clicking on the **Select a device** drop-down list and making a selection (Figure 401).

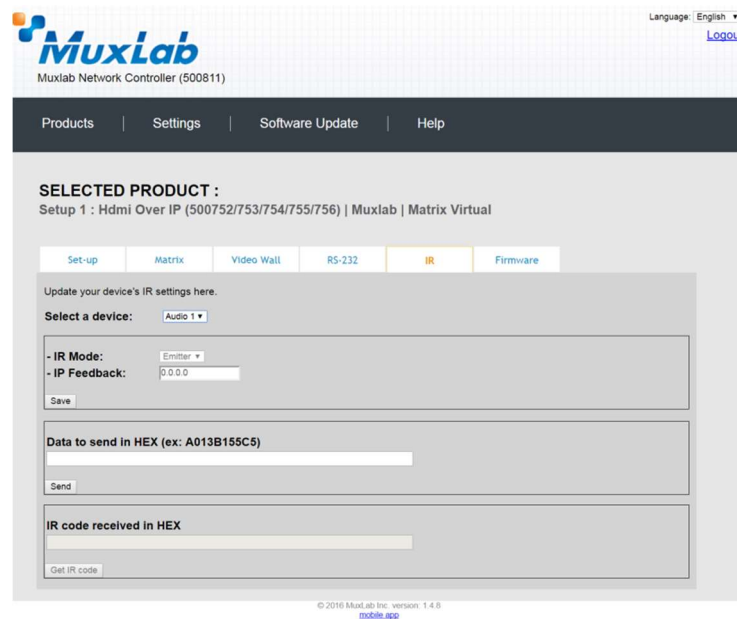


Figure 400: IR Tab – Selecting a Device

The 500755-AMP supports a bi-directional IR port. The below example is for transmitting IR from the sink side (display/speaker side) to the source side, but the 500755-AMP can be configured to transmit IR from the source to the sink side as well.

Once a device is selected, the **Data to send in HEX** field becomes enabled. In the above example, source “Audio 1” was chosen as the selected device, meaning that a command sent to source “Audio 1” will travel from the Network Controller to the Ethernet Switch, then from the Ethernet Switch to the transmitter connected to source “Audio 1”. The transmitter will then send the specified IR data command to source “Audio 1” via the IR Emitter connected to the transmitter IR out port.

The **IR code received in HEX** field displays the HEX version of an IR command send from a handheld remote to an IR receiver IR In port and attached IR Sensor.

When sending IR commands directly from an IR Source device, such as an IR handheld remote, from 500755-AMP receiver through to a transmitter, the user must set up a pass-through for IR signals to be sent to and from devices. This requires the following step:

The user must tell the 500755-AMP receiver (being the device near the IR handheld remote with an attached IR Sensor) the IP address of the 500755-AMP transmitter (where the IR commands are being sent, which has an attached IR Emitter). This is done by first clicking on the **Select a device** drop-down list and selecting the local device from the list, and then inputting the IP address of the far device in the **IP Feedback** field. The user then clicks on **Save**.

6. Products Screen - Firmware Tab

The **Firmware** tab of the Products screen enables the user to update the firmware for MuxLab transmitters and receiver (Figure 402).

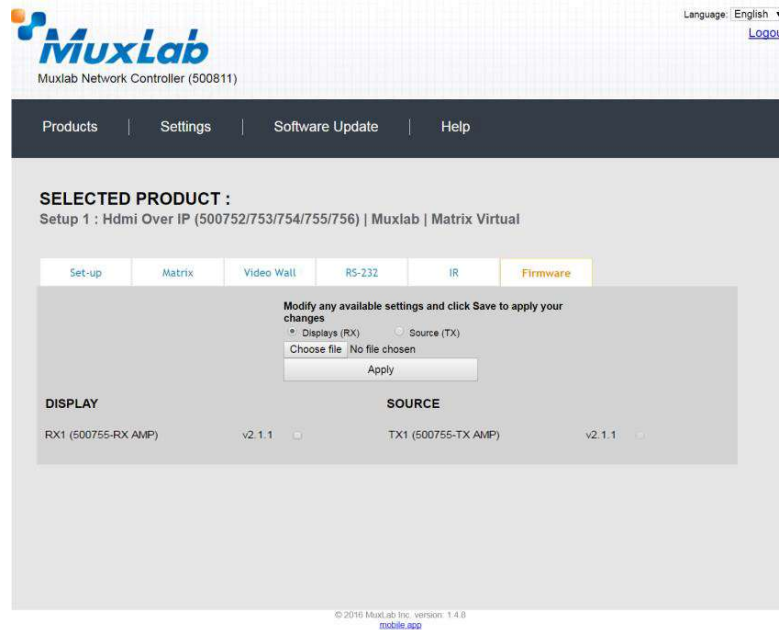


Figure 401: Firmware Tab

The user first selects either **Display (RX)** which is the sink unit (connected to speakers), or **Source (TX)**, then chooses the firmware update file to upload to the given device. Once the file is selected, the user checks the box next to the given device (listed under **DISPLAY** and **SOURCE**) targeted for firmware upgrade, and then clicks **Apply**.

Settings Screen

The **Settings** screen contains two tabs: **Network** and **Administration**.

The **Network** tab (Figure 403) is used to change the IP address of the MuxLab Network Controller, the network mask, as well as the router IP address. It also allows the user to enable or disable DHCP.

The screenshot shows the MuxLab Network Controller (500811) interface. The top navigation bar includes 'Products', 'Settings', 'Software Update', and 'Help'. The 'Settings' tab is active, and the 'Network' sub-tab is selected. The 'Network' section contains the following fields and controls:

- Use DHCP:** Radio buttons for 'Yes' and 'No'.
- IP address:** Input fields for 192, 168, 168, and 50.
- Network mask:** Input fields for 255, 255, 255, and 0.
- Router:** Input fields for 192, 168, 168, and 1.
- Save** button.

At the bottom, there is a copyright notice: © 2016 MuxLab Inc. version: 1.4.8 mobile.asp.

Figure 402: Settings Screen: Network Tab

The **Administration** tab is used to create or delete user accounts, change passwords, restore data, backup data, and retrieve logs (Figure 404).

The screenshot shows the MuxLab Network Controller (500811) interface. The top navigation bar includes 'Products', 'Settings', 'Software Update', and 'Help'. The 'Settings' tab is active, and the 'Administration' sub-tab is selected. The 'Administration' section contains the following fields and controls:

- User Accounts:**
 - Dropdown: 'Create a new User Account Or select a User to edit:'
 - Form fields for 'User Name', 'new password', and 'Confirm new password'.
 - Dropdown for 'User Type'.
 - Buttons: 'Create', 'Update', 'Delete'.
- Restore data:**
 - Text: 'Restore the unit with the selected data file'.
 - Text: 'Specify file: Choose file / No file chosen'.
 - WARNING ! You MUST FIRST set the IP address of this controller using the same as the controller this backup file come from !!!**
 - Button: 'Restore'.
- Backup data:**
 - Text: 'Backup the data and save it in a file'.
 - Button: 'Backup'.
- Get Logs:**
 - Text: 'Get all logs in a zip file'.
 - Buttons: 'Download Logs', 'Delete Logs'.

At the bottom, there is a copyright notice: © 2016 MuxLab Inc. version: 1.4.8 mobile.asp.

Figure 403: Settings Screen: Administration Tab

Software Update Screen

The **Software Update** enables the user to update MuxLab Network Controller software (Figure 405). This software is available on MuxLab's website (www.muxlab.com). Download the software to the local PC before performing the update.

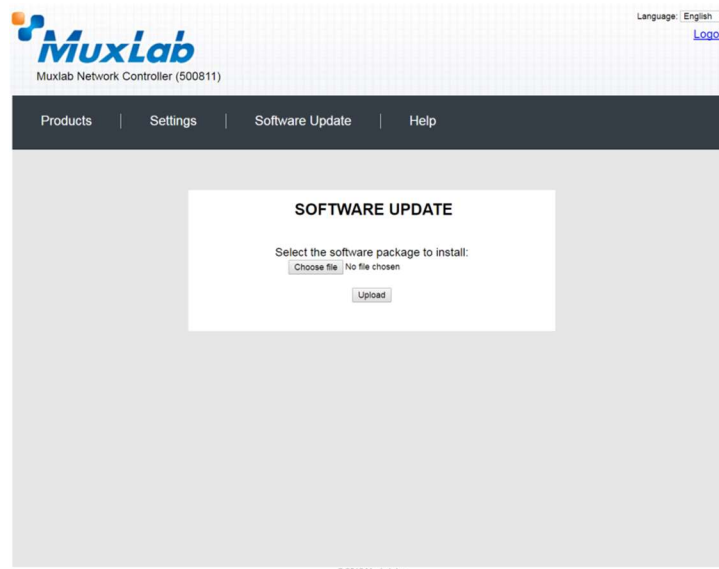


Figure 404: Software Update Screen

Help Screen

The **Help** screen offers quick contact information for customer support and all other inquiries (Figure 406).



Figure 405: Help Screen

Extender Model 500762

Products Screen

Once the user has logged in, the **Products** screen will appear (Figure 407).

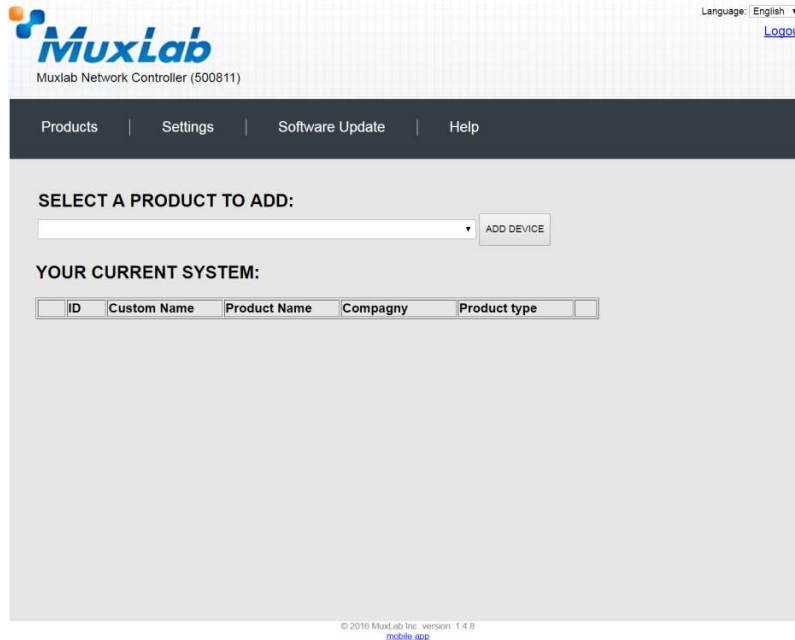


Figure 406: Products Screen – Initial View

In the **SELECT A PRODUCT TO ADD:** drop down box, select **Hdmi Over IP H264/H.265 (500762)** and then click on **ADD DEVICE** (Figure 408).

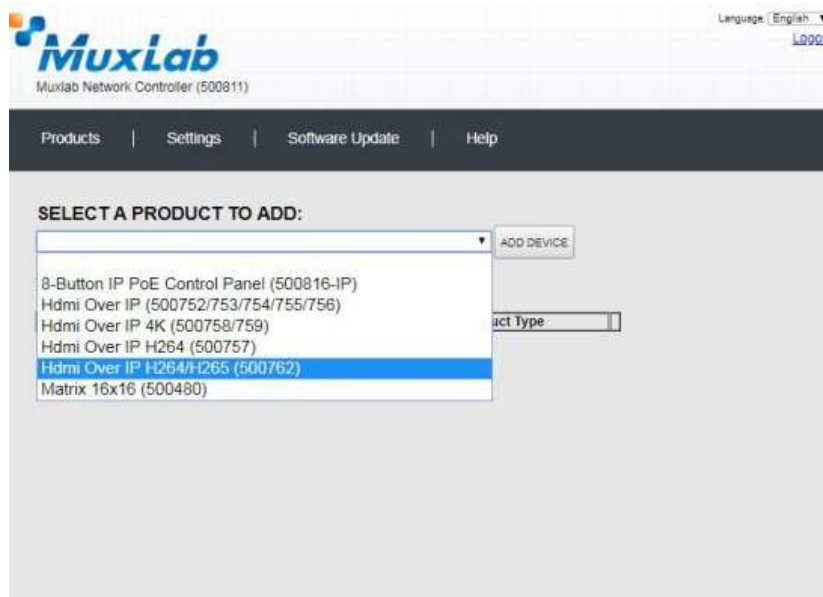


Figure 407: Products Screen – Selecting a Product

A dialog box appears asking the user to provide a custom name for the selected product (Figure 409). The user then types a name in the **Custom Name:** field and clicks **OK**. Note that if the user decides to click **CANCEL**, the previous screen appears (Figure 407), without a product being added.



Figure 408: Products Screen – Naming a Product

The custom name has been added to **YOUR CURRENT SYSTEM** (Figure 410).

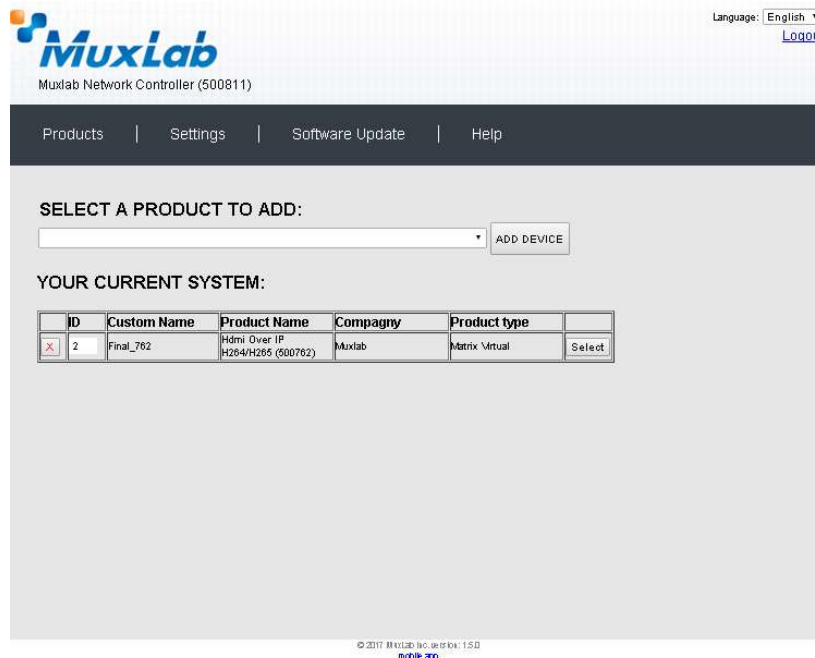


Figure 409: Products Screen – Your Current System Selection

The user can change the ID of each row by modifying the **ID** field. The user can also delete the entire row completely by clicking the **X** next to it.

To configure a given product, the user clicks on **Select**, which brings up a multi-tabbed screen (Figure 411).

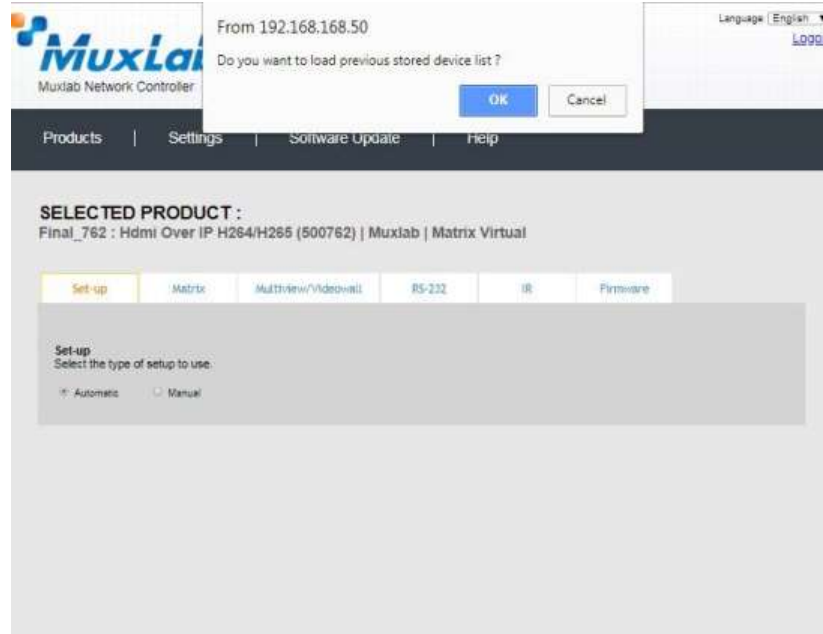


Figure 410: Products Screen – Load Dialog

By default, a dialog appears asking the user to load a previously saved device list (in case such a list has already been stored). This dialog will appear even if no device list has been previously saved. Select **OK** if appropriate.

Six tabs appear within the **Products** screen:

1. Set-up
2. Matrix
3. Multiview/Videowall
4. RS-232
5. IR
6. Firmware

1. Products Screen - Set-up Tab

The **Set-up** tab offers the user two options for the type of set-up allowed: **Automatic** or **Manual**.

Automatic means that the software will scan the system for every dip-switch enabled device. The software will then override its manual dip-switch address settings and place these units under software address control. (Automatic is recommended).

Manual means that the software will allow the manual dip-switch address settings of any found device to remain active.

After selecting **Automatic** or **Manual**, click on **Launch discovery** (Figure 412).

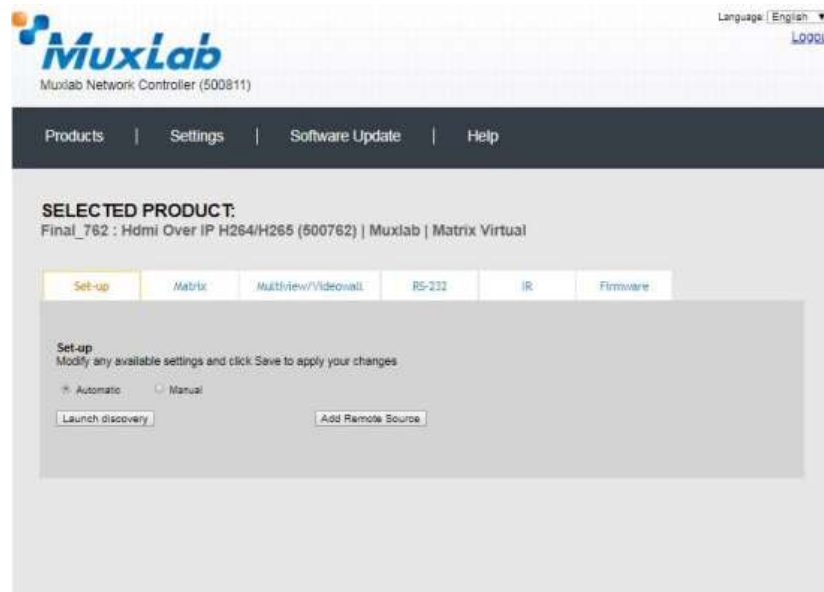


Figure 411: Products Screen – Set-up Tab

The system will scan the network for all source side devices (500762 transmitters) and display side devices (500762 receivers), and will display the scan results in tabular form (Figure 413).

Each 500762 transmitter and receiver can be assigned an arbitrary descriptive name, normally reflecting the end device that it is terminated to. To change the name of any Display (RX) or Source (TX) device, click the **Name** field to edit its contents. Several **Name** fields can be edited before saving changes, as shown in Figure 414 (orange highlighted fields).

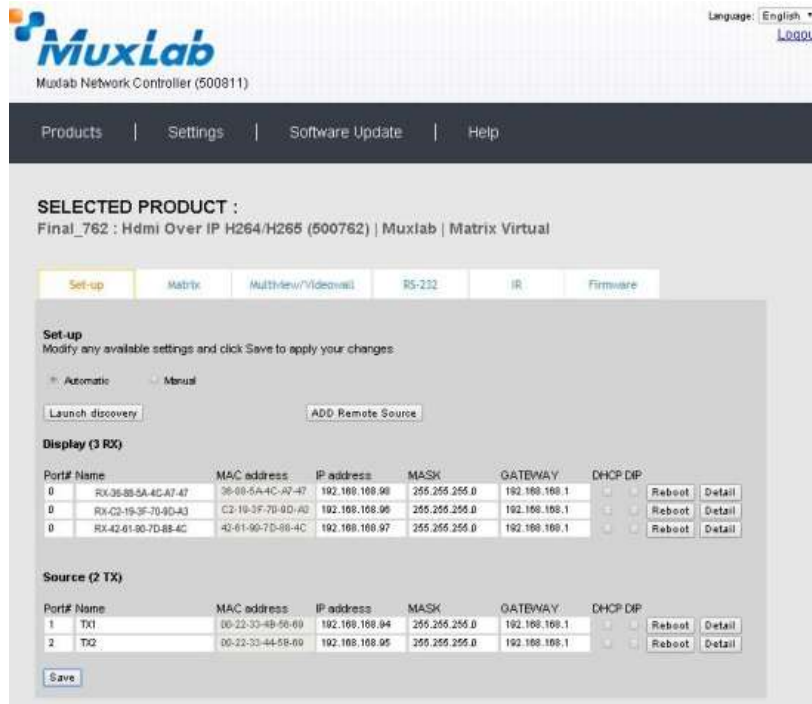


Figure 412: Products Screen – Set-up Tab

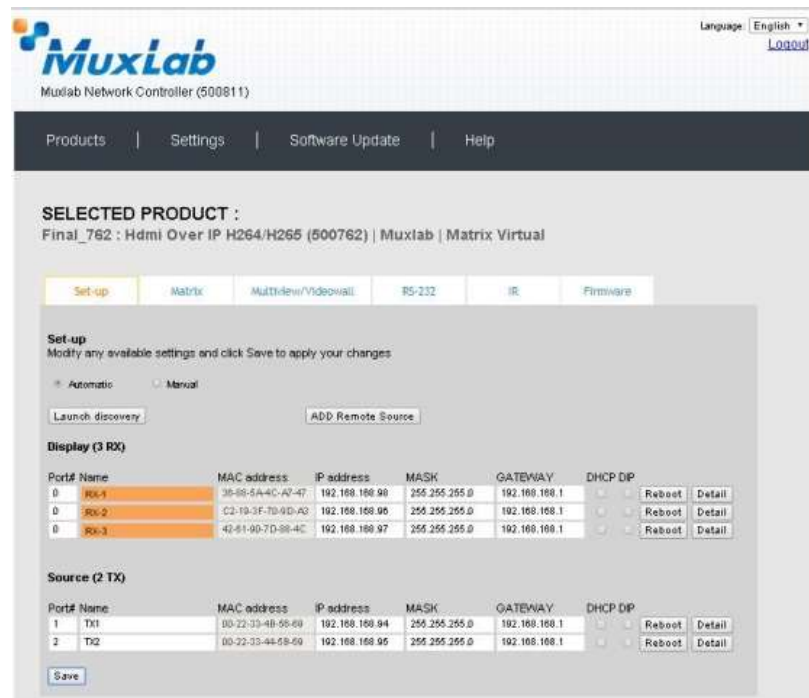


Figure 413: Name Editing

To save all name changes, click on **Save**. A green UPDATED tag will appear next to newly changed names (Figure 415).



Figure 414: Saving Name Changes

Remote sources may also be used with the 500762-RX decoder. Start by pressing on the “Add Remote Source” button in Figure 415. This will bring up a popup menu to fill-in relating to the remote source, as shown in Figure 416, and followed by Figure 417.

The 'ADD REMOTE SOURCE' form has the following fields: 'Model' (a dropdown menu with 'Select a product model' as the placeholder), 'Custom Name' (text input), 'MAC Address' (text input with placeholder 'Optional (Ex: 00-78-02-00-ab-5d)'), and 'IP Address' (text input with placeholder 'Optional (Ex: 192.168.168.99)'). At the bottom are 'SAVE' and 'CANCEL' buttons.

Figure 415: Add a remote source

The 'ADD REMOTE SOURCE' form also includes protocol settings: 'RTSP HLS TS FLV MULTICAST' (a group of radio buttons), 'RTSP' (a dropdown menu with 'Disabled' selected), 'URL' (text input with placeholder 'rtsp://<ip or domain name>:<port>/path_to_file'), and 'Port' (text input). At the bottom are 'SAVE' and 'CANCEL' buttons.

Figure 416: Add a remote source & protocol

Fill in the menu as follows:

- Select a product model, which may either be a 500762-TX or a different brand transmitter. This will display additional information as shown in Figure 310.
- Assign a name to this device.
- Enter the unit MAC address and IP address.
- Select the protocol to be used, enable it, and set the Port as needed.
- Save the settings.

To view and modify component parameters, click on the **Detail** button next to the given AV over IP device. A dialog appears (Figure 418 for TX, and 419 for RX).

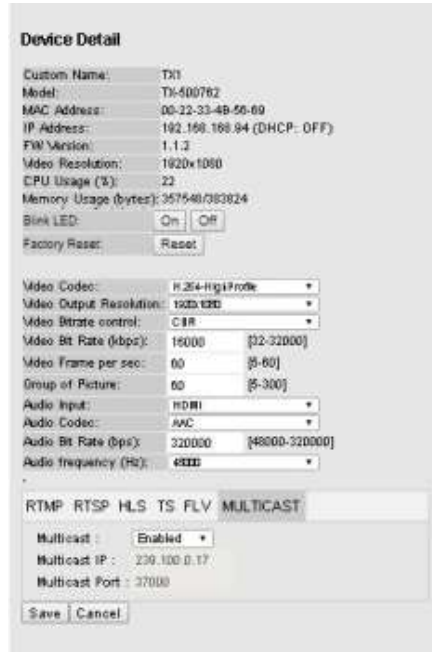


Figure 417: TX Device Detail Dialog

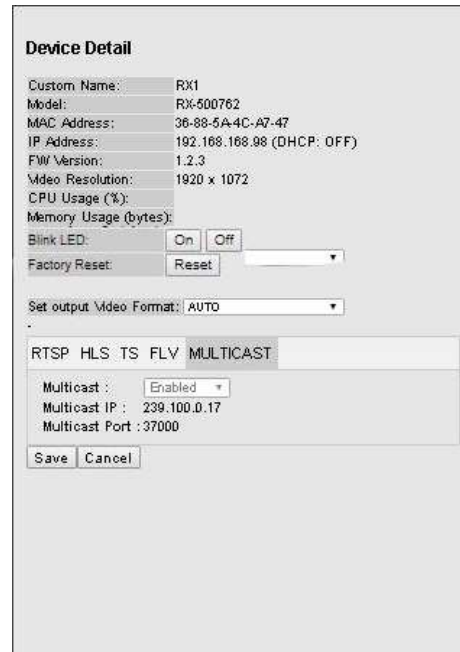


Figure 418: RX Device Detail Dialog

Transmitter (500762-TX) Parameters:

- Custom Name: Device name defined by user (info only)
- Model: Device model number (info only)
- Mac Address: Device MAC Address (info only)
- IP Address: Device IP Address (info only)
- FW Version: Installed firmware version (info only)
- Video Resolution: Video resolution at input (info only)
- CPU Usage: Device CPU usage in percentage (info only)
- Memory Usage: Device memory usage in bytes (info only)
- Blink LED: On / Off control to help to locate a device
- Factory Reset: Perform a Factory Reset of the device
- Video Codec: Allows for selection of video codec (to baseline, main or high profile for H.264, or main profile for H.265)
- Video Output Resolution: Allows for selection of output video resolution (to “Same as Input”, or from 176x144 to 1920x1080)
- Bit Rate Control: Allows for selection of bit rate control (to VBR - variable bit rate, or CBR - continuous bit rate)
- Video Bit Rate: Allows for selection is bit rate (from 32kbps to 32Mbps)
- Video Frames per Sec: Video refresh rate in frames per sec (from 5 to 60)
- Group of Picture: Set the GOP or Group of Pictures (from 5 to 300)
- Audio Input: Select embedded audio input source (to HDMI, or Analog via 3.5mm jack)
- Audio Codec: Select audio codec type (to AAC or MP3)
- Audio Bit Rate: Select audio bit rate (from 48Kbps to 320Kbps)
- Audio Frequency: Select audio frequency (to 44100Hz, or 48000Hz)
- Communication Protocol Selection: RTMP, RTSP, HLS, TS, FLV and Multicast
(**Note:** Only a limited selection should be made at a time. Do not enable all at the same time.)
- Multicast: Allows for enabling or disabling the multicast protocol
- Multicast IP: Shows the multicast IP (info only)
- Multicast Port: Shows the multicast port used (info only)

Receiver (500762-RX) Parameters:

- Custom Name: Device name defined by user (info only)
- Model: Device model number (info only)
- Mac Address: Device MAC Address (info only)
- IP Address: Device IP Address (info only)
- FW Version: Installed firmware version (info only)
- Video Resolution: Video resolution at input (info only)
- CPU Usage: Device CPU usage in percentage (info only)
- Memory Usage: Device memory usage in bytes (info only)
- Blink LED: On / Off control to help to locate a device
- Factory Reset: Perform a Factory Reset of the device
- Set Output Video Format: Allow for the selection of output video format (to Auto, or from 480p/60 to 3840x2160/60)
- Communication Protocol Selection: RTSP, HLS, TS, FLV and Multicast
- Multicast: Allows for enabling or disabling the multicast protocol
- Multicast IP: Shows the multicast IP (info only)
- Multicast Port: Shows the multicast port used (info only)

Note: In both cases above click on “Save” to accept any changes, or on “Cancel” to ignore them.

2. Products Screen - Matrix Tab

The **Matrix** tab of the **Products** screen allows the user to connect any Display to any Source. The user also has the option of using **Presets** to save connection schemes (“Presets”), as well as to edit and delete existing presets (Figure 420).

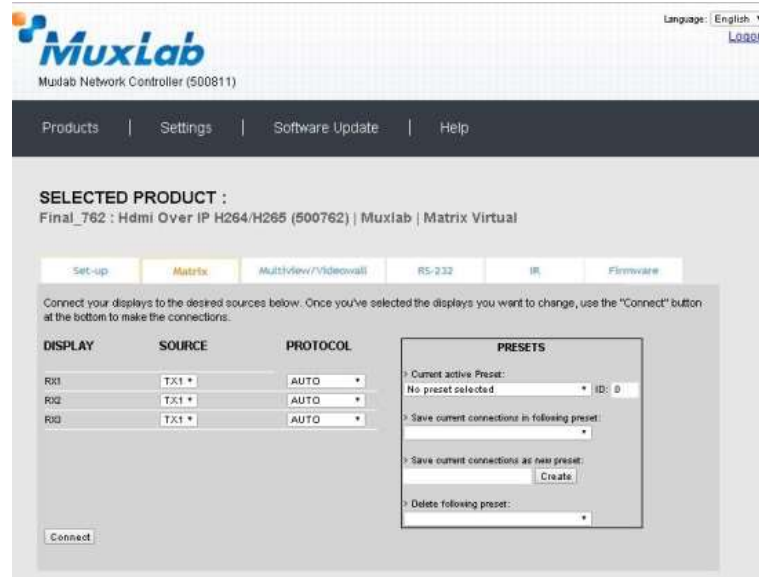


Figure 419: Matrix Tab

To connect a display to a source, the user first clicks on the drop-down list next to the given display (for example “RX-1”) and selects which source to connect it to (Figure 421).

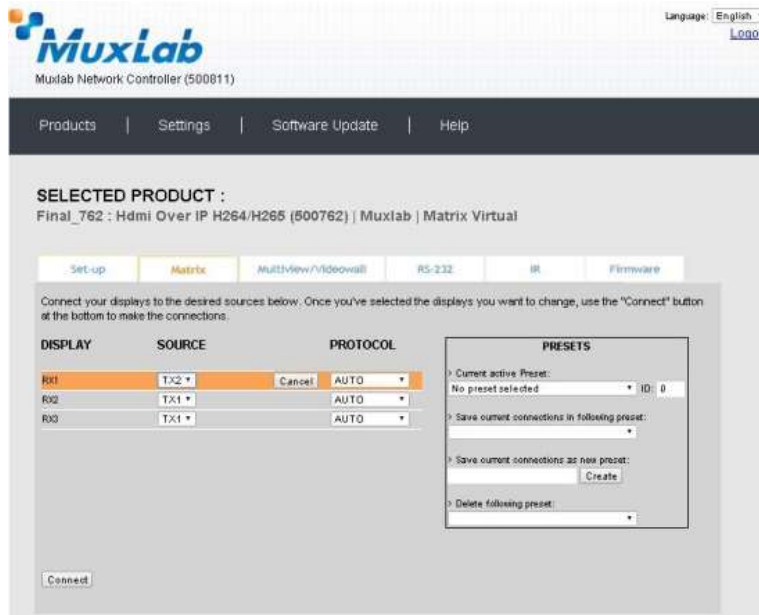


Figure 420: Change Connection

Once the selection is made (the user can change any or all connections between displays and sources), the user clicks on **Connect** to finalize the change. A green **SUCCESS** tag will appear next to the new or changed connection (Figure 422).

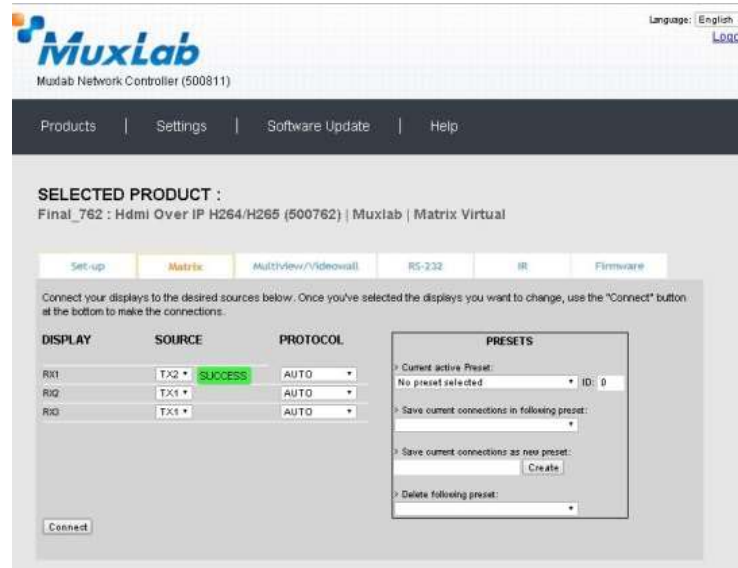


Figure 421: Change Successful

To create a new preset, the user clicks the > **Save current connections as new preset** field (Figure 423) and types a name. This assigned preset name will be linked to the existing connection scheme being shown within the **Matrix** tab.

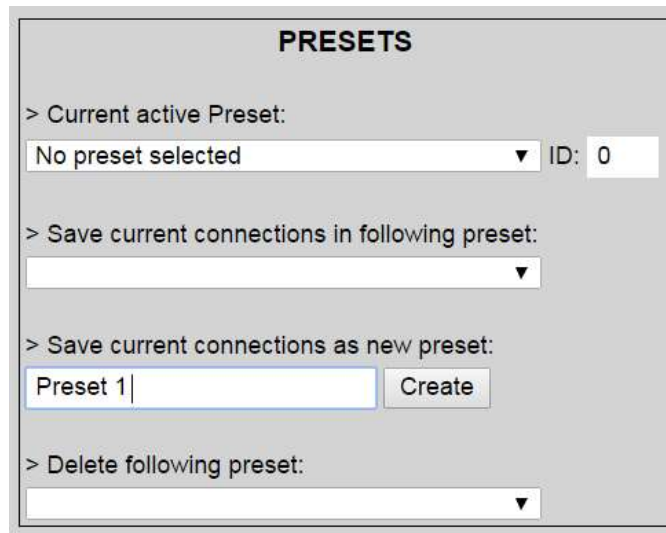


Figure 422: Create New Preset

To save this preset, the user clicks on **Create**. A green SUCCESS tag will appear next to the > **Save current connections as new preset** field and the newly created preset becomes the **Current active Preset** (Figure 424).

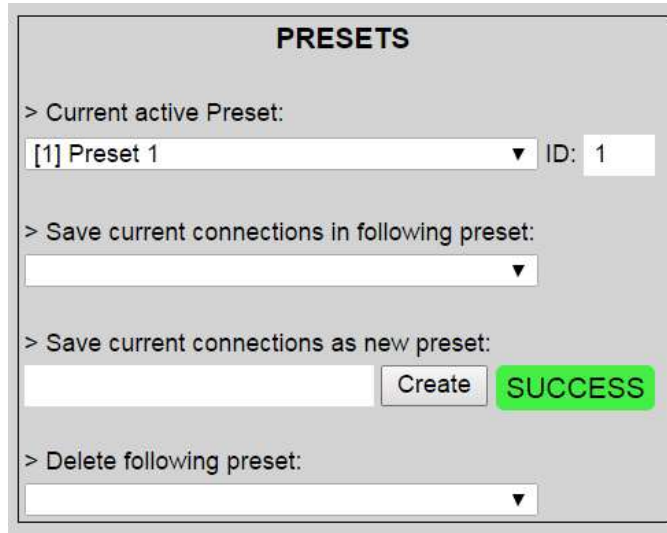


Figure 423: Confirmation of New Preset

To delete a preset, the user clicks the > **Delete following preset** drop-down box and selects a preset name from the list shown (Figure 425).

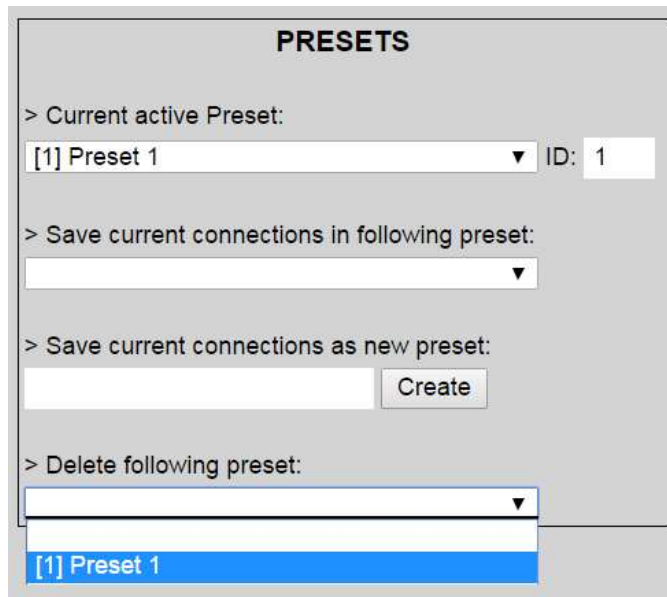


Figure 424: Delete Preset

Once selected, a dialog will appear asking the user to confirm the deletion request (Figure 426).

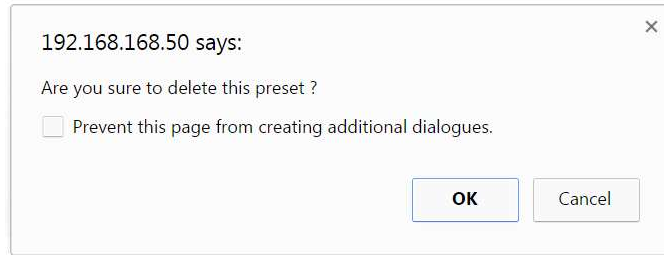


Figure 425: Confirmation of Deleted Preset

Click on **OK**. The preset will be deleted and a green SUCCESS tag will appear next to the **> Delete following preset** field (Figure 427).


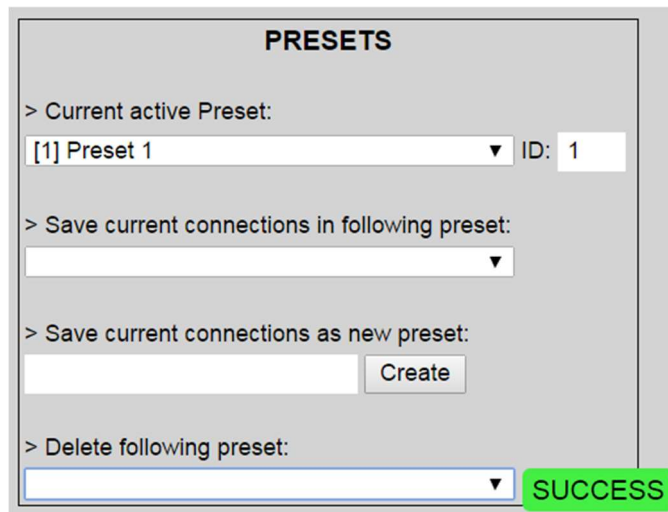


Figure 426: Confirmation of Deleted Preset

To save the current matrix configuration under an existing **Preset** name, click on > **Save current connection in following preset** drop-down box and selects a preset name (Figure 428).

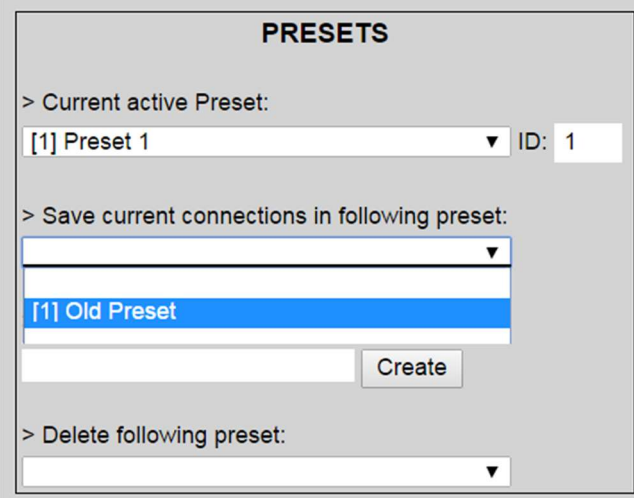


The screenshot shows a window titled "PRESETS". It contains three main sections:

- > Current active Preset:** A dropdown menu showing "[1] Preset 1" and an "ID: 1" field.
- > Save current connections in following preset:** A dropdown menu is open, showing a list of options. "[1] Old Preset" is highlighted in blue. Below the dropdown is a "Create" button.
- > Delete following preset:** A dropdown menu.

Figure 427: Change Current Active Preset

Once selected, the **Preset** will be saved and a green SUCCESS tag will appear next to the > **Save current connections in following preset** field (Figure 429).

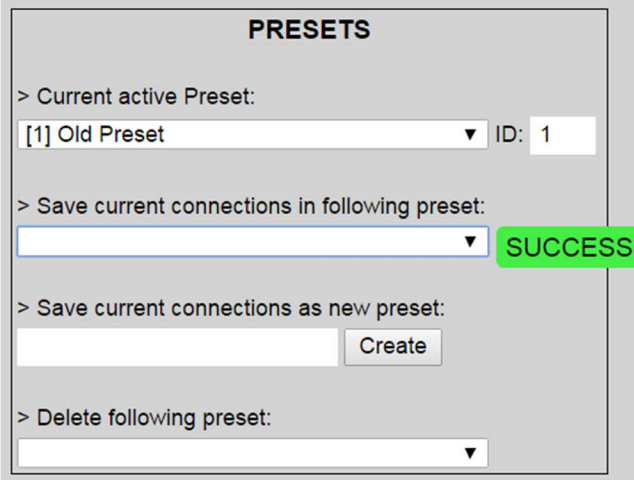

The screenshot shows the same "PRESETS" window as Figure 427. In this state:

- > Current active Preset:** The dropdown menu now shows "[1] Old Preset".
- > Save current connections in following preset:** The dropdown menu is closed. A green box with the word "SUCCESS" in white text is positioned to the right of the dropdown.
- > Save current connections as new preset:** A new section with a text input field and a "Create" button.
- > Delete following preset:** A dropdown menu.

Figure 428: Confirmation of Changed Preset Name

In order to activate an existing **Preset**, select > **Current active Preset**, and select the **Preset** name from the drop-down box and the **Preset** will become active. The active **Preset** will also be displayed in the **Current active Preset** field.

3. Products Screen – Multiview/Videowall Tab

The **Multiview/Videowall** tab of the **Products** screen enables the user to define, configure and manage the connectivity of Multiview screens and/or Video Walls.

Multiview enables the user to display multiple videos or images on a single display or on a Video Wall consisting of multiple displays. Video Wall enables the user to configure an NxM display array consisting of NxM monitors, all of the same size.

Figure 430 shows the main Multiview/Videowall screen. An example consisting of 4 displays and 2 sources is used here to illustrate how to setup and configure Multiviews and/or Video Walls.

Figure 430 allows the user to create and save various configurations and arrangements of display and source layouts, and their connectivity. It includes a grid which represents the main work space for placing and sizing displays and the visible portion of sources, such that any portion of a source overlapping a display will allow that portion of the video to be shown on the monitor once the two have been connected.

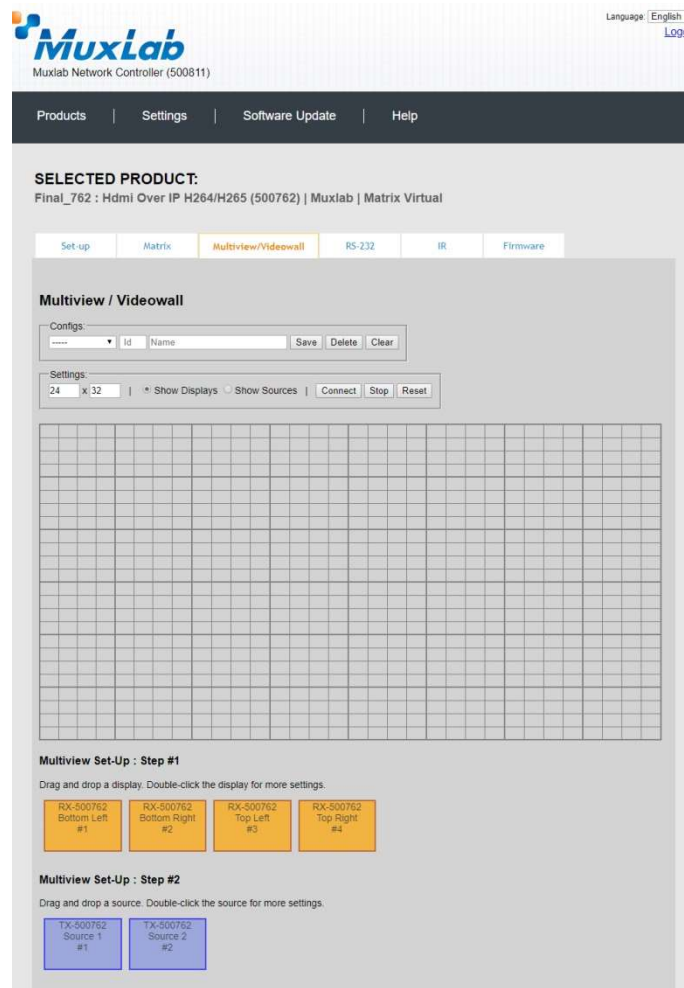


Figure 429: Multiview/Videowall Tab

The “**Config**” sub-section in Figure 430 allows the user to save, load, delete and clear configurations which have been created on the grid.

- The pull-down tab allows the user to load any saved configuration.
- The “ID” field sets a “Config ID” for any given saved configuration. This can be used to call up a configuration via third party control software offered by MuxLab partners (see the MuxLab website - Partners section).
- The “Name” field represents the configuration name assigned by the user for any saved configuration.
- The “Save” and “Delete” buttons allow quick access to these respective functions, in relation to a current configuration.
- The “Clear” button allows the user to create a new configuration from an existing one. Simply load an existing configuration, modify as needed, press the “Clear” button to clear the “Name” field, enter a new name in the “Name” field, and press “Save”.

In the “**Settings**” sub-section in Figure 430, the user can modify the grid size, set the focus on the displays, set the focus on the sources, connect sources to displays, disconnect sources from displays, and reset the grid which removes all sources and displays from the grid.

- The grid size can be altered from a 4 by 4 grid, up to a 32 by 32 (default is 24 by 32). This grid allows the user to place and size both displays and source content, and manage their connectivity. Displays can be a minimum size of 4 by 4 grids, while sources can be as little as a 1 by 1 grid, depending on the display size. Displays of large grid sizes will limit the minimum size of the source content size (this is automatically determined by the software).
- The “Show Displays” radio button brings all displays on the grid to the foreground, allowing for easy access to displays.
- The “Show Sources” radio button brings all sources on the grid to the foreground, allowing for easy access to sources.
- The “Connect” button connects sources to displays which are located on the grid. In order for source content to be displayed on a given monitor, the source content must either partially or completely overlap the display in question. The source content can overlap more than one display at a time. In addition one source can overlay another source, but no more than one overlap per display should be attempted.
- The “Stop” button disconnects all sources from all displays on the grid.
- The “Reset” button will clear all displays and sources from the grid, allowing the user to restart the process of placing monitors and sources.

The available displays and sources to be placed on the grid are located at the bottom of Figure 430. In this example there are 4 displays and 2 sources.

To setup the displays and source content on the grid, the user begins by clicking on the top left corner of a display and dragging it onto the grid (Figure 431). Each display can

be resized on the grid by clicking and dragging the bottom right corner of the display (Figures 432). Increasing the size of the display to cover multiple grids allows for finer placement of source material within a given display, offering more flexibility when assigning sources in a Multiview arrangement. Multiview allows for virtual windowing across one or more displays.

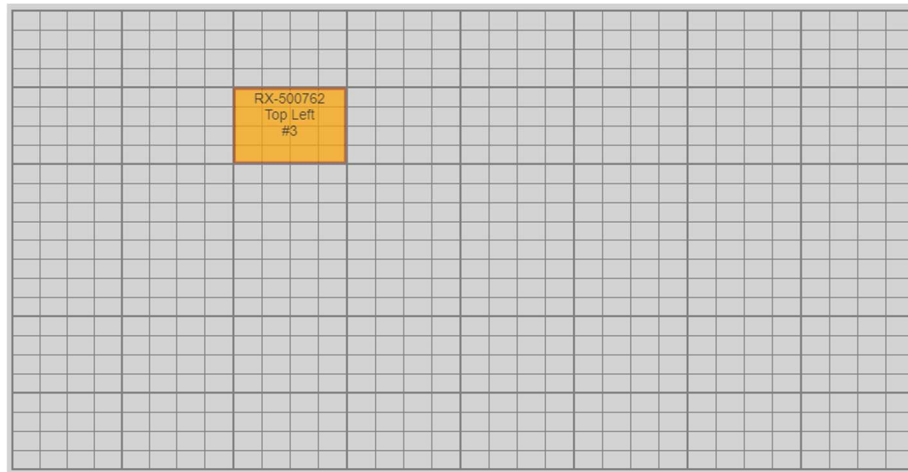


Figure 430 Placing displays

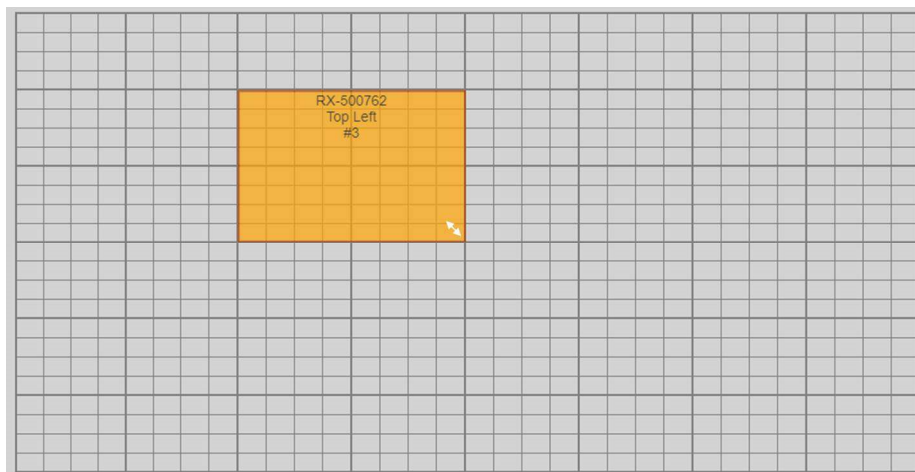


Figure 431 Sizing displays

Continue to place and size all displays on the grid. All displays should be sized equally. Once done, double click on one of the displays to configure it as shown in Figure 433. A “Display Settings” menu will pop up in order to configure the monitor settings.

- Start by setting the “Units” to either inches or centimeters
- Under “Screen Size” enter the screen diagonal dimension
- Enter the bezel size for the top, bottom, left and right bezel
- Save the above settings

Repeat the above steps for each display. When creating Video walls all the displays should be the same brand, size and model, and thus should have the same settings.

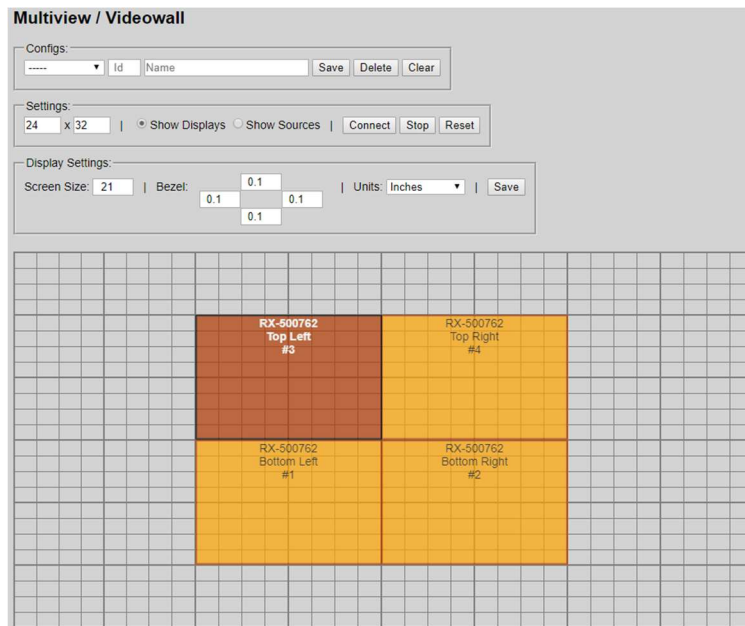


Figure 432 Configuring displays

Next add a source by clicking on the source and dragging it (via top left corner) on to the grid over one or more displays. The source content can be sized by clicking and dragging the bottom right corner. Make sure the source falls within the assigned display area as shown in Figure 433, to ensure that the video will be seen once connected. A source can be placed partially or completely cover one or more displays. Multiple sources can be added as appropriate, and in this example the second source can be added side-by-side or may even overlay the first video, see Figure 434. As mentioned previously up to two levels of source content can be overlapped within a single display, meaning one of the videos can be on the bottom level and the other on the top.

To configure a source, double click on it. This displays the “Source Settings” sub-section.

- The “Copy” button creates a copy of the currently selected source to be able to place two or more copies of a given source on the grid.
- When the “Audio” check-box is enabled, the audio from the selected source will be audible, and audio from all other sources on the grid will be automatically disabled.
- The “On Top” check-box is used in cases where content from two sources overlap, and sets which source is on top and which is on the bottom. To configure this, select the source for the top level (by double clicking on it) and make sure to check-mark the “On Top” box, and press “Save”. Then select the

other source and make sure to un-check the “On Top” box and press “Save”. This is not configured automatically, and must be set manually.

- The “Shift” buttons are used for fine shift adjustments for cases where a video is spread across more than one display and some alignment is required between displays. This step is generally not required, since the display diagonal dimension and bezel settings performed earlier, normally are sufficient for proper alignment.
- The “Scale” buttons are used for fine video scaling adjustments for cases where a video is spread across more than one display and some adjustment is required between displays. This step is generally not required, since the display diagonal dimension and bezel settings performed earlier, normally are sufficient for proper operation.
- The “Reset” button resets all settings in this sub-section for a given source.
- The “Save” button saves all settings configured in this sub-section for a given source.

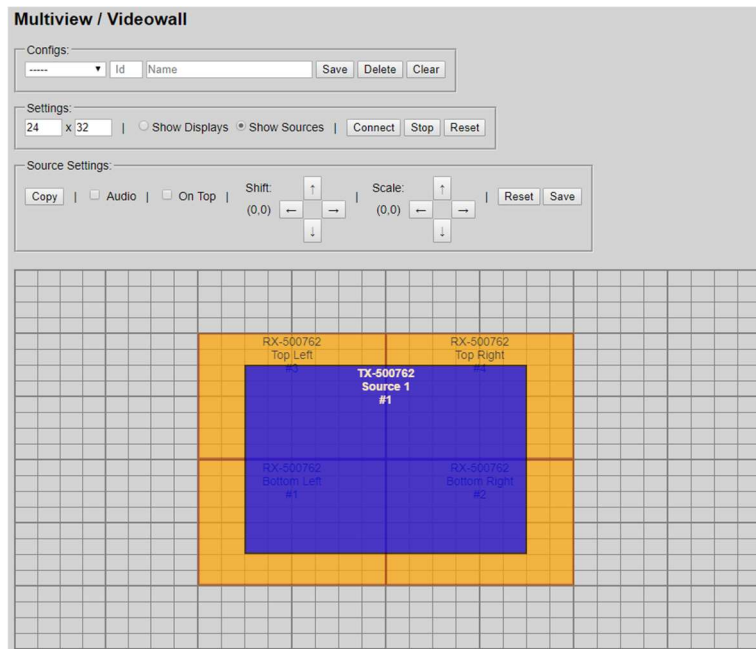


Figure 433 Adding Source Content to the Grid

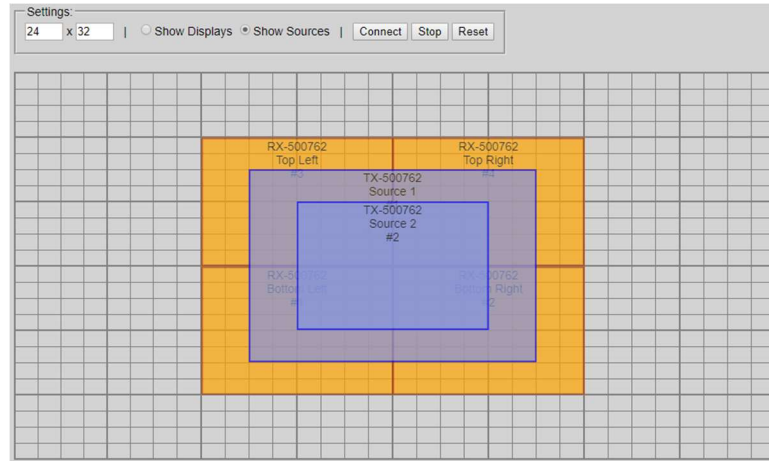


Figure 434 Adding more sources

It is important to note that the number of sources that can be displayed side-by-side simultaneously on one given display depends on the resolution of the sources.

For example:

- Only 1 windowed source can be shown on a given display at 4K
- Up to 2 windowed sources can be shown on a given display at 1080p/60
- Up to 4 windowed sources can be shown on a given display at 1080p/30
- Up to 5 windowed sources can be shown on a given display at 720p/60

Do not exceed the above limits, doing so may cause un-expected and un-intended behavior.

4. Products Screen - RS-232 Tab

The **RS-232** tab of the **Products** screen enables the user to send RS-232 commands from the Network Controller to a MuxLab 500762 transmitter or receiver (Figure 436).

Figure 435: RS-232 Tab

When sending RS-232 commands through the Network Controller, the user first selects the device that the RS-232 commands will be sent to. This is done by clicking on the **Select a device** drop-down list and making a selection (Figure 437).

Figure 436: RS-232 Tab - Selecting a Device

Once a device is selected, the **Data to send in HEX** field becomes enabled. Begin by setting the RS232 parameters as required and click on “Save”. Next enter the RS232 command in Hex in the **Data to send in HEX** field and click on “Send”. In the above example, TX2 was chosen as the selected device (but a receiver connected to sink equipment could have also been selected), meaning that a command sent to TX2 will


travel from the Network Controller to the Ethernet Switch, and from the Ethernet Switch to the transmitter connected to the TX2 port. That transmitter will then send the specified data command to the attached source device.

Note that any RS232 feedback data returned from the end device is automatically sent to the Network Controller and displayed in the Data Feedback Received field.

Note that RS232 pass-through mode is not currently supported.

4. Products Screen - IR Tab

The **IR** tab of the **Products** screen enables the user to send IR commands from the Network Controller to a MuxLab 500762 transmitter or receiver IR port (Figure 438).

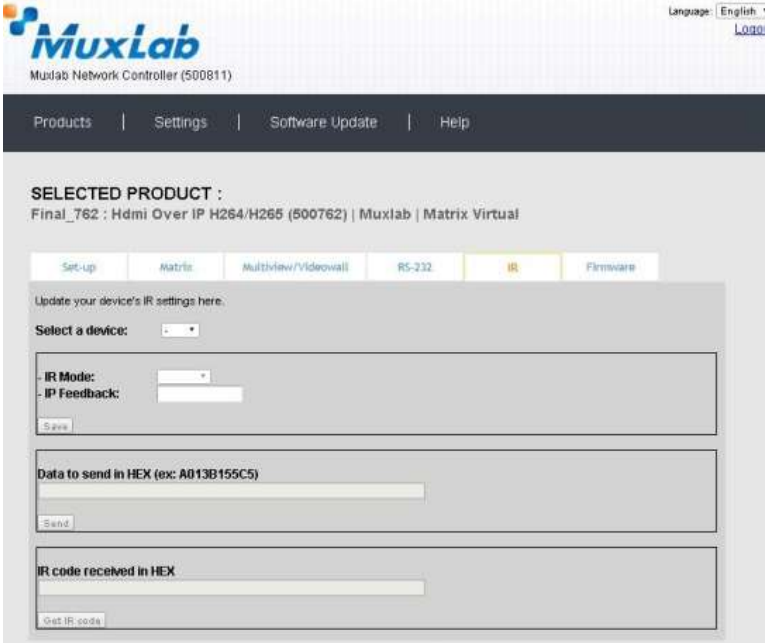

The screenshot displays the MuxLab Network Controller (500811) interface. At the top, there is a navigation bar with 'Products', 'Settings', 'Software Update', and 'Help'. Below this, the 'SELECTED PRODUCT' is identified as 'Final_762 : Hdmi Over IP H264/H265 (500762) | Muxlab | Matrix Virtual'. The 'IR' tab is active, showing a 'Select a device' dropdown menu. Below this, there are input fields for 'IR Mode' and 'IP Feedback', followed by a 'Save' button. The 'Data to send in HEX (ex: A013B155C5)' section includes a text input field and a 'Send' button. The 'IR code received in HEX' section includes a text input field and a 'Get IR code' button. The top right corner shows a language dropdown set to 'English' and a 'Logout' link.

Figure 437: IR Tab

The 500762 supports a bi-directional IR port. The 500762 can be set to transmit IR commands from the Network Controller to a transmitter or receiver and then to a source or sink device, and can also be configured to receive IR commands from a handheld IR Remote and sending these commands to the Network Controller for learning IR command purposes.

Transmitting IR Commands to Source and Sink Equipment:

When sending IR commands through the Network Controller, the user first selects the device that the IR commands will be sent to. This is done by clicking on the **Select a device** drop-down list and making a selection (Figure 439).

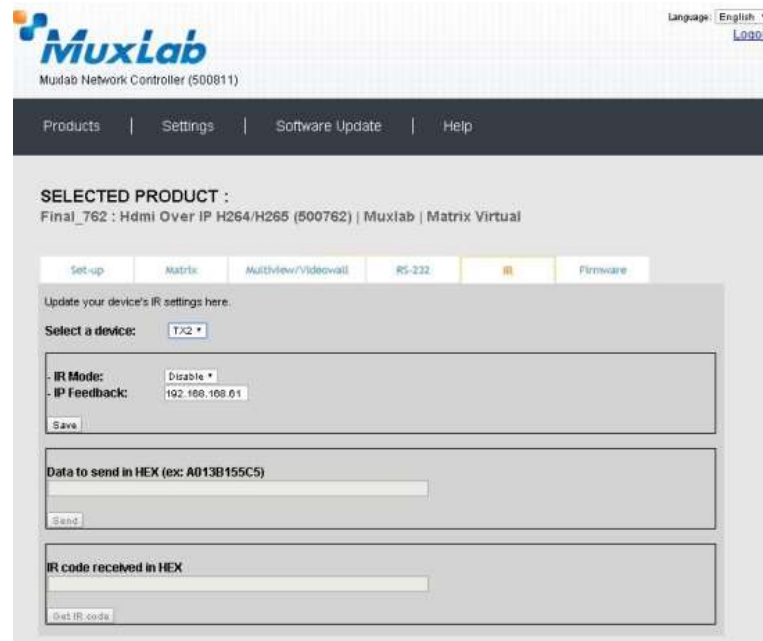


Figure 438: IR Tab – Selecting a Device

Once a device is selected, the **Data to send in HEX** field becomes enabled. Begin by setting the IR Mode to “Emitter” and click on “Save”. Next enter the IR command in Hex in the **Data to send in HEX** field and click on “Send”. In the above example, TX2 was chosen as the selected device (but a receiver connected to sink equipment could have also been selected), meaning that a command sent to TX2 will travel from the Network Controller to the Ethernet Switch, and from the Ethernet Switch to the transmitter connected to the TX2 port with an attached IR Emitter. That transmitter will then send the specified data command via the attached IR Emitter to the source device.

Note that IR pass-through mode is not currently supported.

Learning IR Commands from a Handheld IR Remote:

The Network Controller can learn IR Commands in combination with the 500762. To begin the process, select the 500762 device as indicated above, set the IR Mode to Sensor and click on “Save”, and attach an IR Sensor to the 500762 IR port. Click on “Get IR Code”, aim the handheld IR Remote at the Sensor while pressing on an IR command key on the IR Remote. The **IR code received in HEX** field will display the HEX version of an IR command sent from a handheld remote.

5. Products Screen - Firmware Tab

The **Firmware** tab of the Products screen enables the user to update the firmware for MuxLab transmitters and receiver (Figure 440).

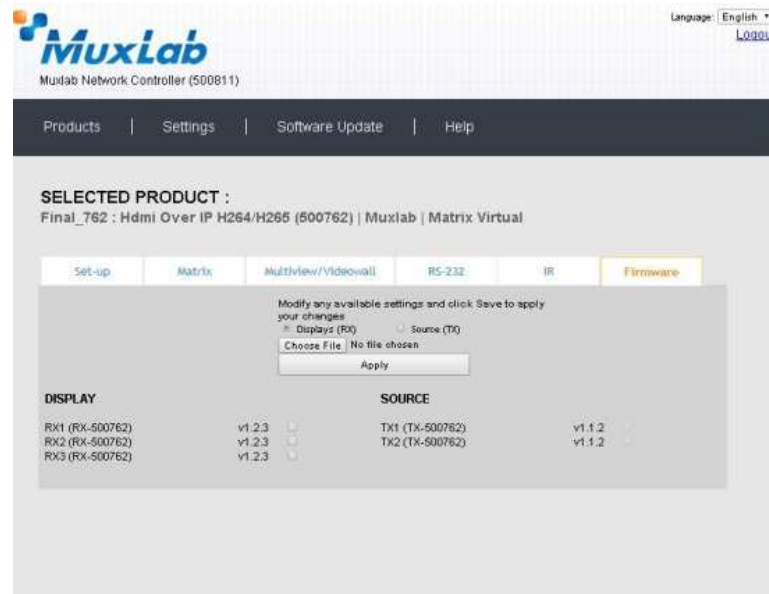


Figure 439: Firmware Tab

The user first selects either **Display (RX)** or **Source (TX)**, then chooses the firmware update file to upload to the given device. Once the file is selected, the user checks the box next to the given device (listed under **DISPLAY** and **SOURCE**) targeted for firmware upgrade, and then clicks **Apply**.

Settings Screen

The **Settings** screen contains two tabs: **Network** and **Administration**.

The **Network** tab (Figure 441) is used to change the IP address of the MuxLab Network Controller, the network mask, as well as the router IP address. It also allows the user to enable or disable DHCP.

The screenshot shows the MuxLab Network Controller (500811) interface. The top navigation bar includes 'Products', 'Settings', 'Software Update', and 'Help'. The 'Settings' tab is active, and the 'Network' sub-tab is selected. The 'Network' section contains the following fields and controls:

- Use DHCP:** Radio buttons for 'Yes' and 'No'.
- IP address:** Input field with value '192.168.168.60'.
- Network mask:** Input field with value '255.255.255.0'.
- Router:** Input field with value '192.168.168.1'.
- Save:** Button.

At the bottom, there is a copyright notice: © 2017 MuxLab Inc. All rights reserved. [mobile.asp](#)

Figure 440: Settings Screen: Network Tab

The **Administration** tab is used to create or delete user accounts, change passwords, restore data, backup data, and retrieve logs (Figure 442).

The screenshot shows the MuxLab Network Controller (500811) interface. The top navigation bar includes 'Products', 'Settings', 'Software Update', and 'Help'. The 'Settings' tab is active, and the 'Administration' sub-tab is selected. The 'Administration' section contains the following fields and controls:

- User Accounts:**
 - Create a new User Account Or select a User to edit:** Dropdown menu.
 - User Name:** Input field.
 - new password:** Input field.
 - Confirm new password:** Input field.
 - User Type:** Dropdown menu.
 - Create | Update | Delete:** Buttons.
- Restore data:**
 - Restore the unit with the selected data file.
 - Specify file:** 'Choose file' button, 'No file chosen' text.
 - WARNING ! You MUST FIRST set the IP address of this controller using the same as the controller this backup file come from !!!**
 - Restore:** Button.
- Backup data:**
 - Backup the data and save it in a file.
 - Backup:** Button.
- Get Logs:**
 - Get all logs in a zip file.
 - Download Logs | Delete Logs:** Buttons.

At the bottom, there is a copyright notice: © 2016 MuxLab Inc. version: 1.4.6 [mobile.asp](#)

Figure 441: Settings Screen: Administration Tab

Software Update Screen

The **Software Update** enables the user to update MuxLab Network Controller software (Figure 443). This software is available on MuxLab's website (www.muxlab.com). Download the software to the local PC before performing the update.

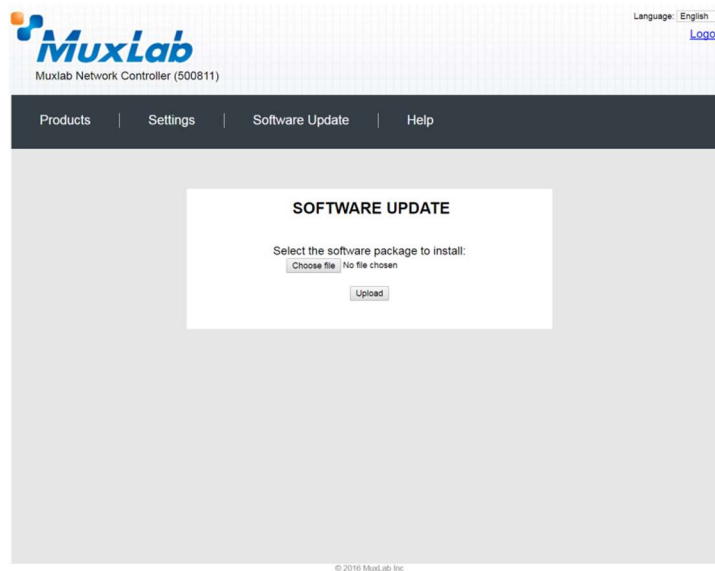


Figure 442: Software Update Screen

Help Screen

The **Help** screen offers quick contact information for customer support and all other inquiries (Figure 444).

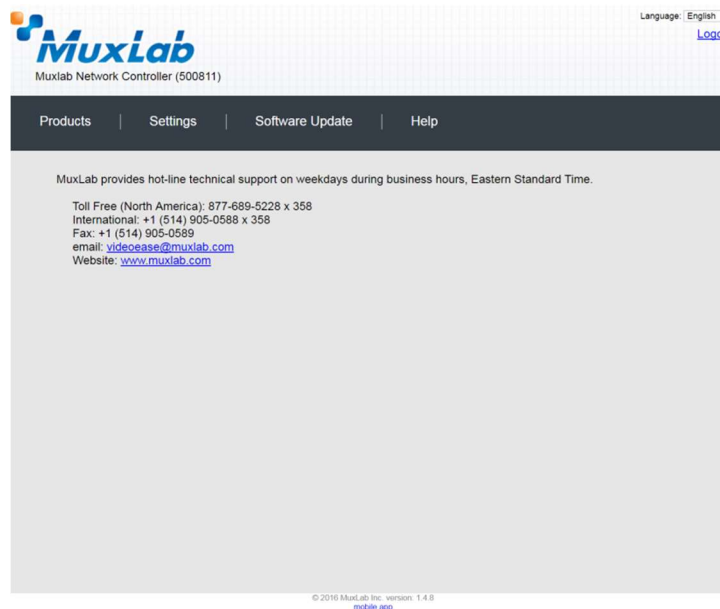


Figure 443: Help Screen

Extender Model 500763

Products Screen

Once the user has logged in, the **Products** screen will appear (Figure 445).

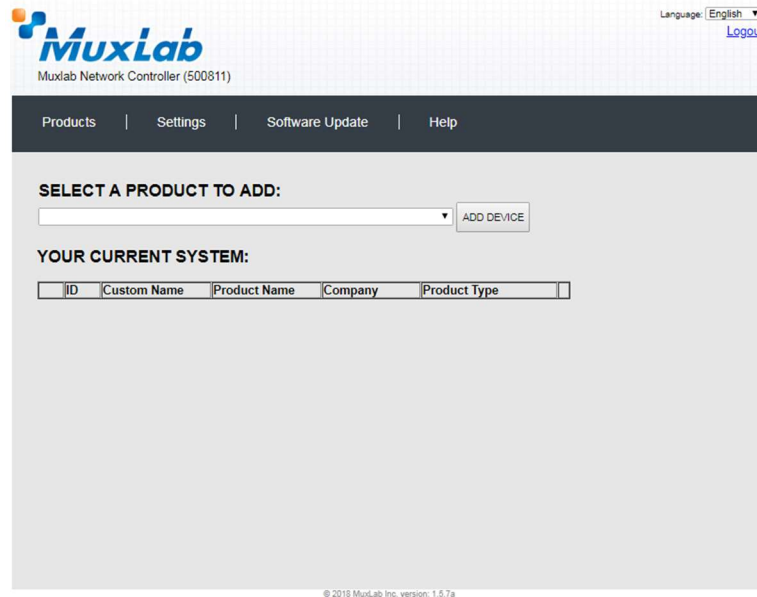


Figure 444: Products Screen – Initial View

In the **SELECT A PRODUCT TO ADD:** drop down box, select **Hdmi Over IP H264/H.265 (500762/763)** and then click on **ADD DEVICE** (Figure 446).

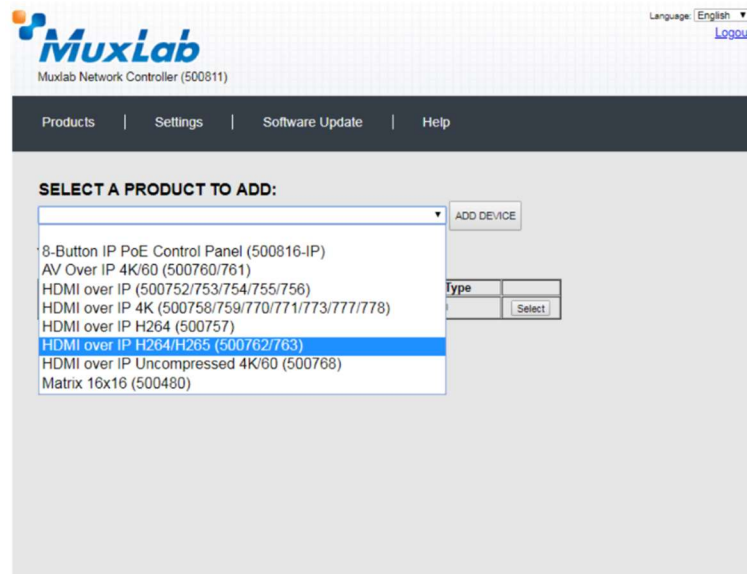


Figure 445: Products Screen – Selecting a Product

A dialog box appears asking the user to provide a custom name for the selected product (Figure 447). The user then types a name in the **Custom Name:** field and clicks **OK**. Note that if the user decides to click **CANCEL**, the previous screen appears (Figure 445), without a product being added.

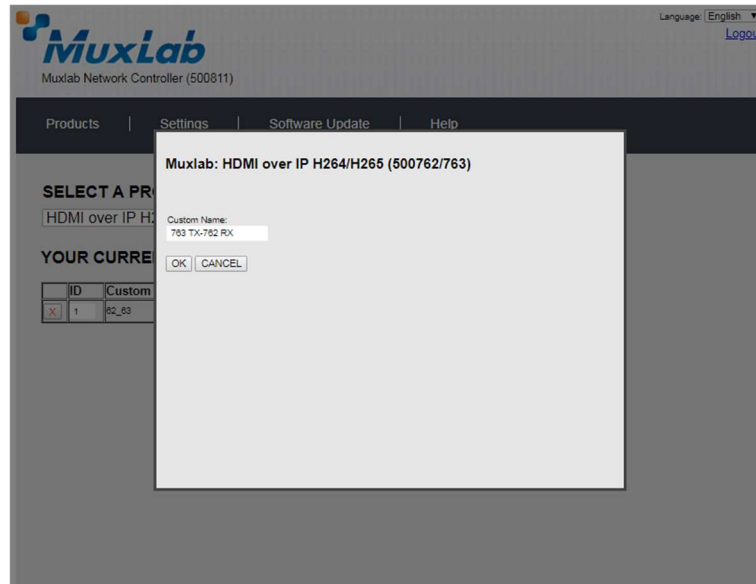


Figure 446: Products Screen – Naming a Product

The custom name has been added to **YOUR CURRENT SYSTEM** (Figure 448).

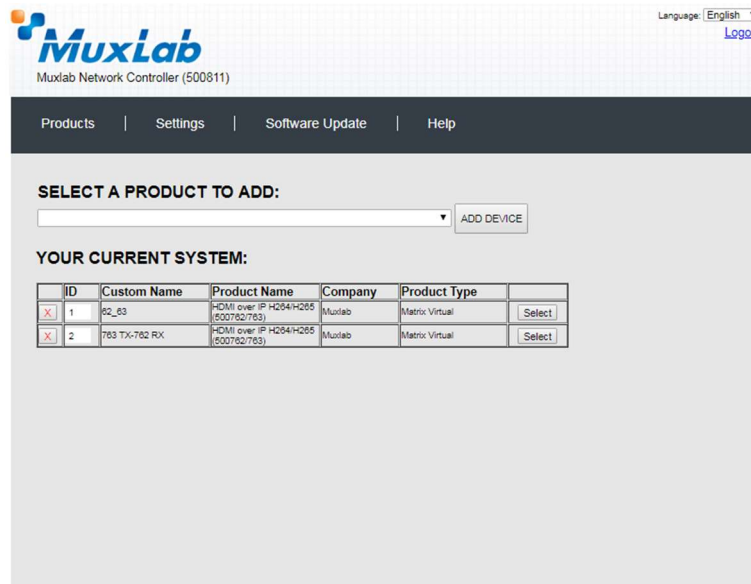


Figure 447: Products Screen – Your Current System Selection

The user can change the ID of each row by modifying the **ID** field. The user can also delete the entire row completely by clicking the **X** next to it.

To configure a given product, the user clicks on **Select**, which brings up a multi-tabbed screen (Figure 449).

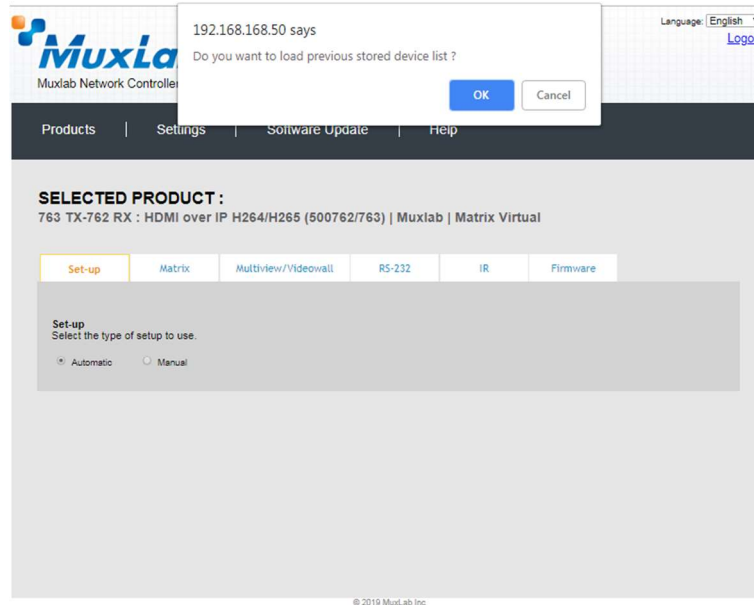


Figure 448: Products Screen – Load Dialog

By default, a dialog appears asking the user to load a previously saved device list (in case such a list has already been stored). This dialog will appear even if no device list has been previously saved. Select **OK** if appropriate.

Six tabs appear within the **Products** screen:

1. Set-up
2. Matrix
3. Multiview/Videowall
4. RS-232
5. IR
6. Firmware

1. Products Screen - Set-up Tab

The **Set-up** tab offers the user two options for the type of set-up allowed: **Automatic** or **Manual**.

Automatic means that the software will scan the system for every dip-switch enabled device. The software will then override its manual dip-switch address settings and place these units under software address control. (Automatic is recommended).

Manual means that the software will allow the manual dip-switch address settings of any found device to remain active.

After selecting **Automatic** or **Manual**, click on **Launch discovery** (Figure 450).

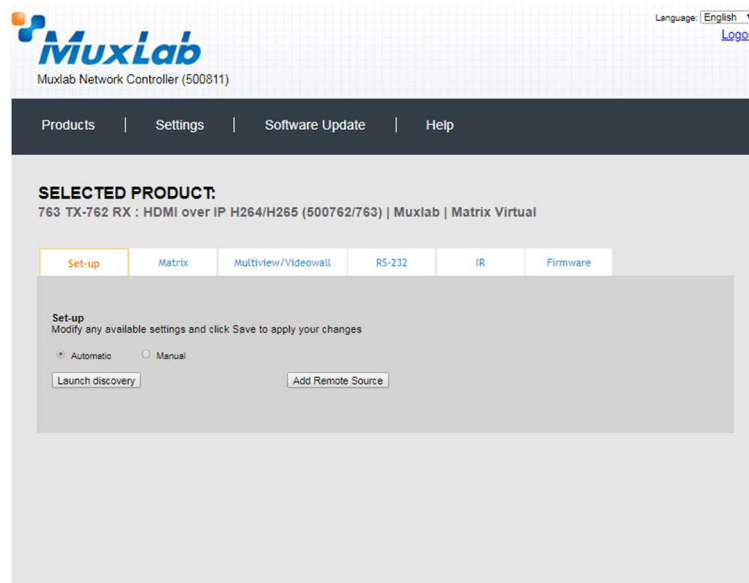


Figure 449: Products Screen – Set-up Tab

The system will scan the network for all source side devices (500763 transmitters) and display side devices (500762 receivers), and will display the scan results in tabular form (Figure 451).

Each 500763 transmitter can be assigned an arbitrary descriptive name, normally reflecting the end device that it is terminated to. To change the name of any Display (RX) or Source (TX) device, click the **Name** field to edit its contents. Several **Name** fields can be edited before saving changes, as shown in Figure 452 (orange highlighted fields).

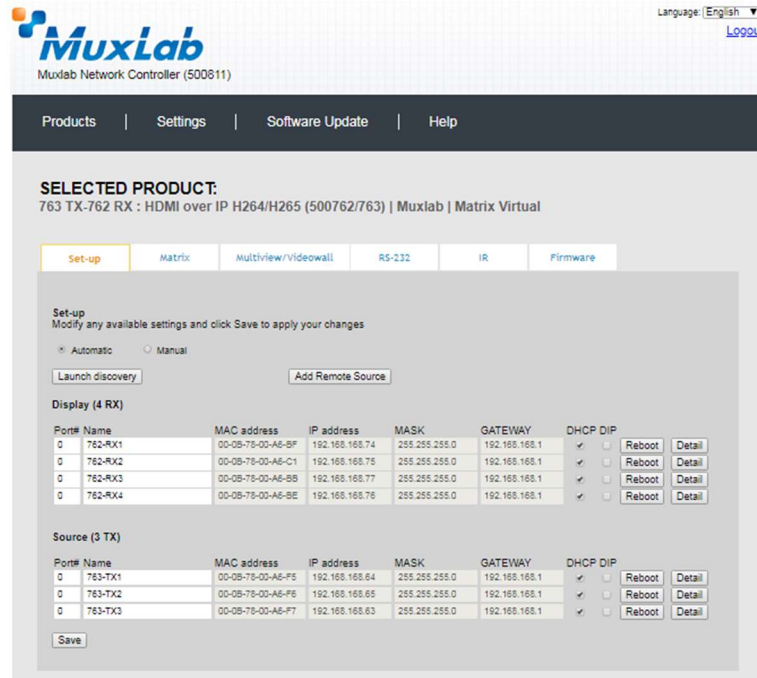


Figure 450: Products Screen – Set-up Tab

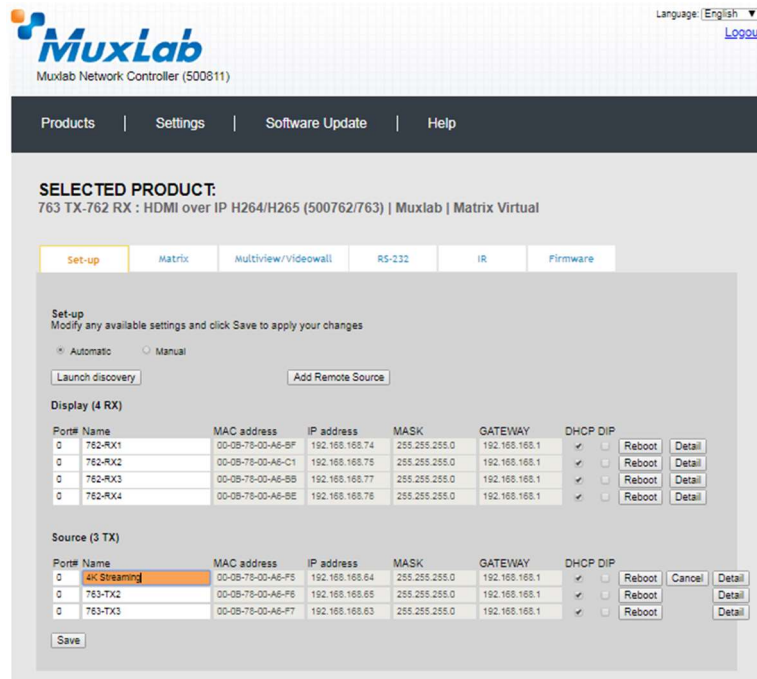


Figure 451: Name Editing

To save all name changes, click on **Save**. A green UPDATED tag will appear next to newly changed names (Figure 453).

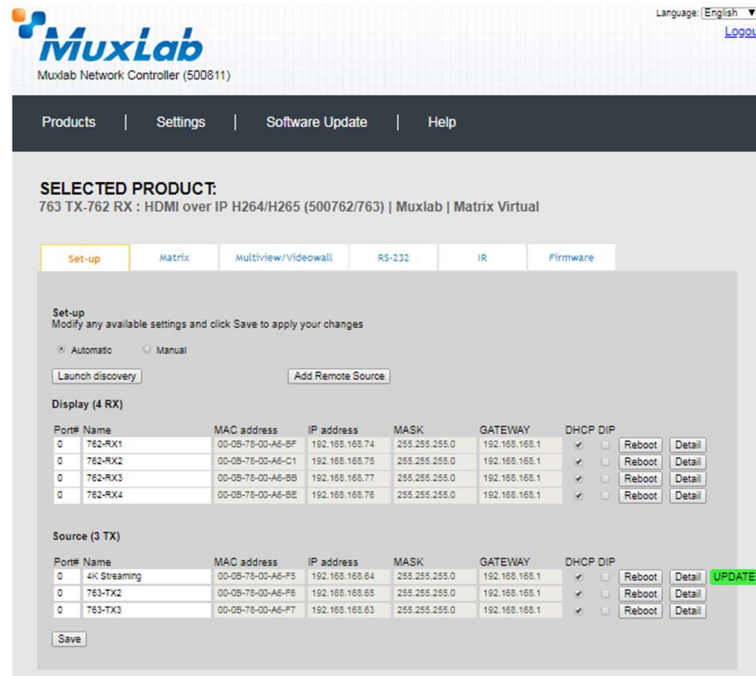


Figure 452: Saving Name Changes

To view and modify component parameters, click on the **Detail** button next to the given AV over IP device. A dialog appears (Figure 454).

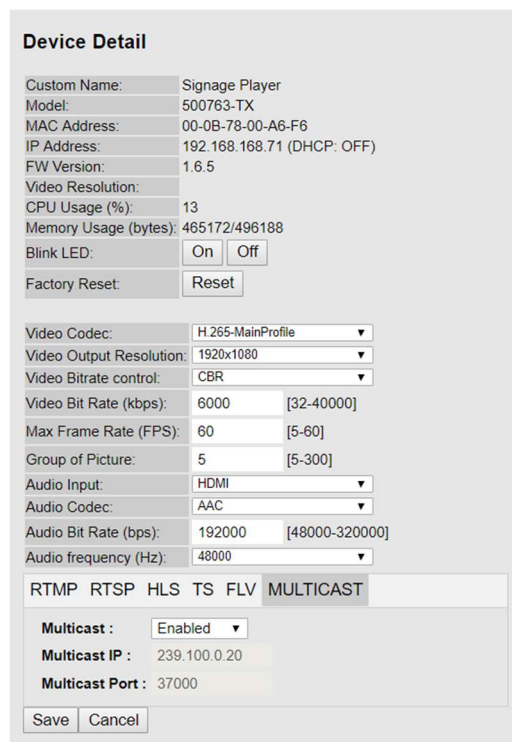


Figure 453: Device Detail Dialog

500763-TX Parameters:

- Custom Name: Device name defined by user (info only)
- Model: Device model number (info only)
- Mac Address: Device MAC Address (info only)
- IP Address: Device IP Address (info only)
- FW Version: Installed firmware version (info only)
- Video Resolution: Video resolution at input (info only)
- CPU Usage: Device CPU usage in percentage (info only)
- Memory Usage: Device memory usage in bytes (info only)
- Blink LED: On / Off control to help to locate a device
- Factory Reset: Perform a Factory Reset of the device
- Video Codec: Allows for selection of video codec (to baseline, main or high profile for H.264, or main profile for H.265)
- Video Output Resolution: Allows for selection of output video resolution (to “Same as Input”, or from 176x144 to 3840x2160)
- Bit Rate Control: Allows for selection of bit rate control (to VBR - variable bit rate, or CBR - continuous bit rate)
- Video Bit Rate: Allows for selection is bit rate (from 32kbps to 40Mbps)
- Video Frames per Sec: Video refresh rate in frames per sec (from 5 to 60)
- Group of Picture: Set the GOP or Group of Pictures (from 5 to 300)
- Audio Input: Select embedded audio input source (HDMI, or Analog via 3.5mm jack)
- Audio Codec: Select audio codec type (to AAC or MP3)
- Audio Bit Rate: Select audio bit rate (from 48Kbps to 320Kbps)
- Audio Frequency: Select audio frequency (to 44100Hz or 48000Hz)
- Communication Protocol Selection: RTMP, RTSP, HLS, TS, FLV and Multicast
(**Note:** Only a limited selection should be made at a time. Do not enable all at the same time.)
- Multicast: Allows for enabling or disabling the multicast protocol
- Multicast IP: Shows the multicast IP (info only)
- Multicast Port: Shows the multicast port used (info only)

Note: Click on “Save” to accept any changes, or on “Cancel” to ignore them.

2. Products Screen - Matrix Tab

The **Matrix** tab of the **Products** screen allows the user to connect any Display to any Source. The user also has the option of using **Presets** to save connection schemes (“Presets”), as well as to edit and delete existing presets (Figure 455)

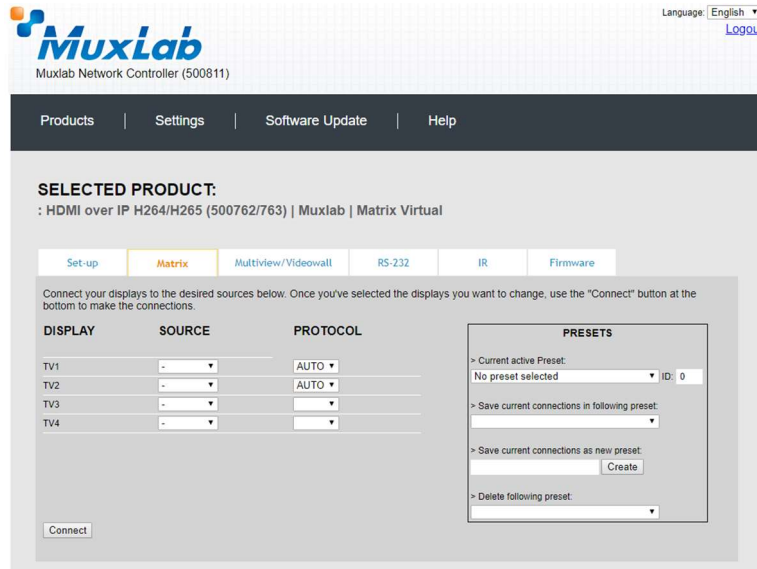


Figure 454: Matrix Tab

To connect a display to a source, the user first clicks on the drop-down list next to the given display (for example “TV1”) and selects which source to connect it to (Figure 456)

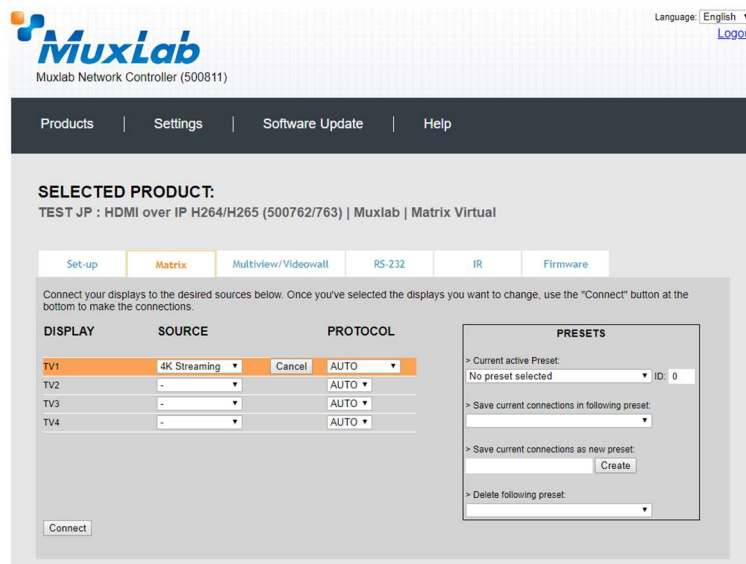


Figure 455: Change Connection

Once the selection is made (the user can change any or all connections between displays and sources), the user clicks on **Connect** to finalize the change. A green **SUCCESS** tag will appear next to the new or changed connection (Figure 457)

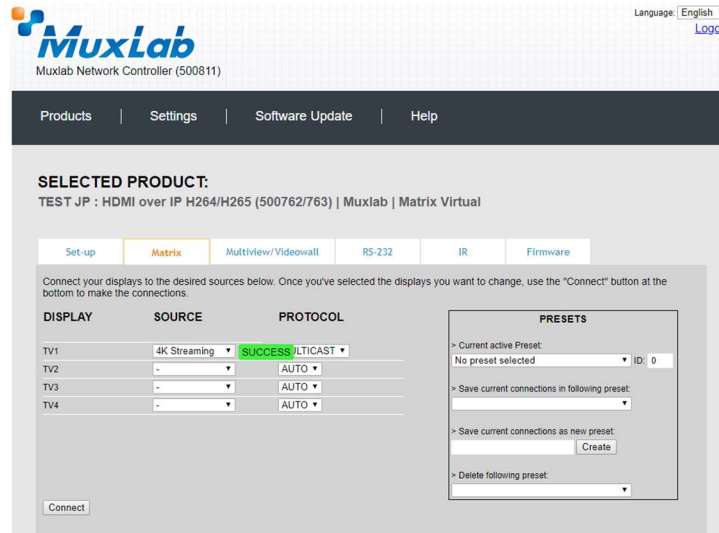


Figure 456: Change Successful

To create a new preset, the user clicks the **> Save current connections as new preset** field (Figure 458) and types a name. This assigned preset name will be linked to the existing connection scheme being shown within the **Matrix** tab.


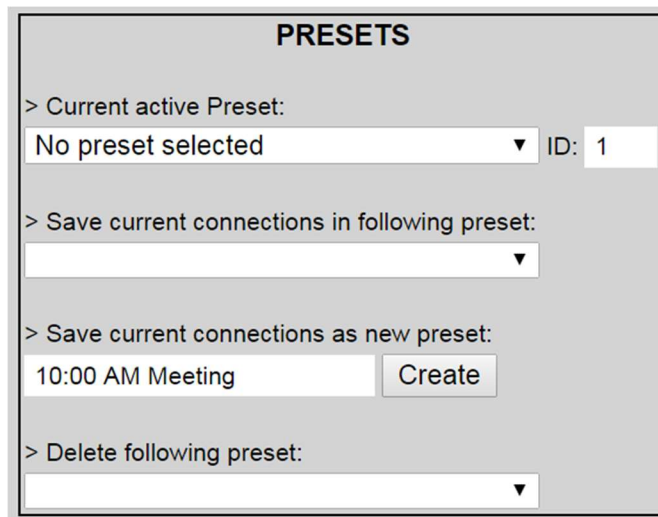


Figure 457: Create New Preset

To save this preset, the user clicks on **Create**. A green SUCCESS tag will appear next to the > **Save current connections as new preset** field and the newly created preset becomes the **Current active Preset** (Figure 459)

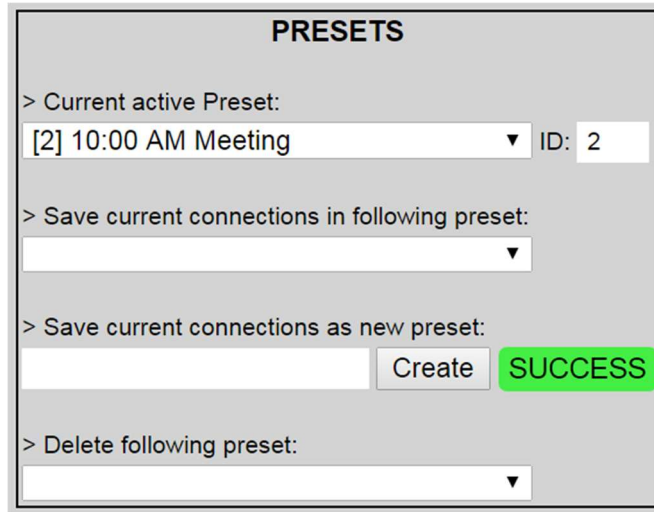


The screenshot shows a window titled "PRESETS" with a light gray background. It contains four sections, each starting with a right-pointing chevron (>):

- Current active Preset:** A dropdown menu showing "[2] 10:00 AM Meeting" and a small "ID: 2" box to its right.
- Save current connections in following preset:** An empty dropdown menu.
- Save current connections as new preset:** An empty text input field followed by a "Create" button and a green "SUCCESS" tag.
- Delete following preset:** An empty dropdown menu.

Figure 458: Confirmation of New Preset

To delete a preset, the user clicks the > **Delete following preset** drop-down box and selects a preset name from the list shown (Figure 460)

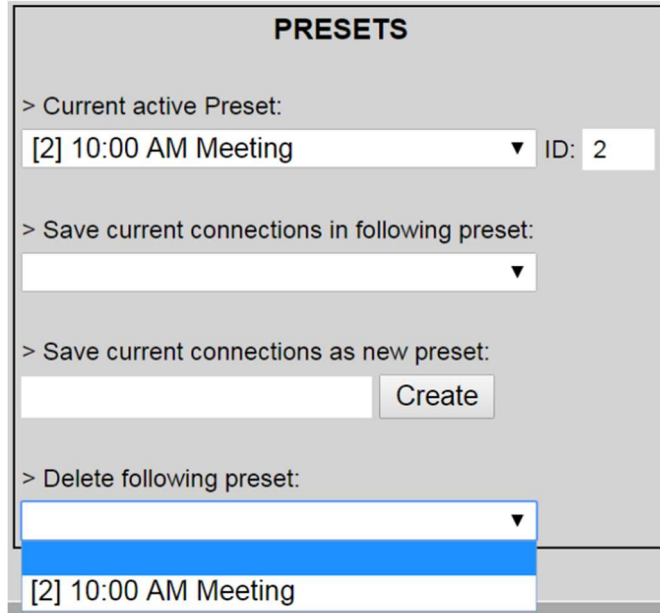

The screenshot shows the same "PRESETS" window as Figure 458. The "Delete following preset:" section's dropdown menu is open, displaying a list of preset options. The first option, "[2] 10:00 AM Meeting", is highlighted with a blue background. The other sections of the interface remain the same as in Figure 458.

Figure 459: Delete Preset

Once selected, a dialog will appear asking the user to confirm the deletion request (Figure 461).



Figure 460: Confirmation of Deleted Preset

Click on **OK**. The preset will be deleted and a green SUCCESS tag will appear next to the **> Delete following preset** field (Figure 462)


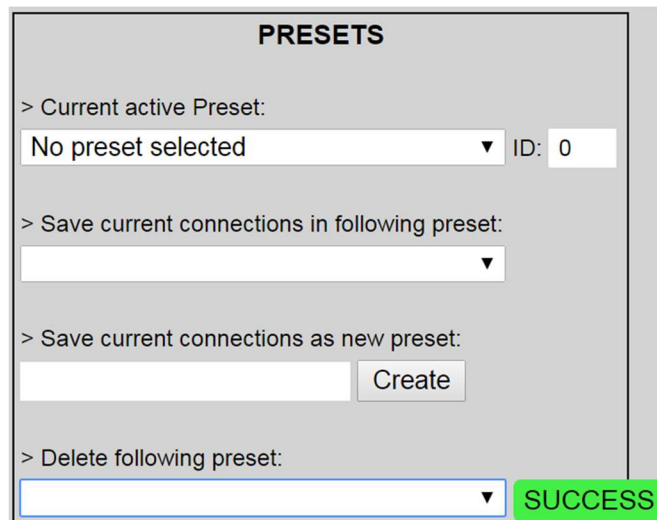


Figure 461: Confirmation of Deleted Preset

To save the current matrix configuration under an existing **Preset** name, click on > **Save current connection in following preset** drop-down box and selects a preset name (Figure 463)

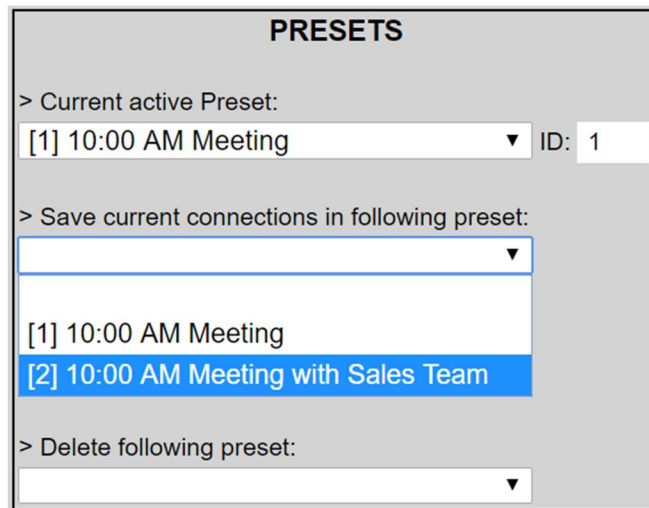


The screenshot shows a window titled "PRESETS". It contains three sections:

- > Current active Preset: A dropdown menu showing "[1] 10:00 AM Meeting" and "ID: 1".
- > Save current connections in following preset: A dropdown menu that is open, showing a list of options: "[1] 10:00 AM Meeting" and "[2] 10:00 AM Meeting with Sales Team". The second option is highlighted in blue.
- > Delete following preset: A dropdown menu.

Figure 462: Change Current Active Preset

Once selected, the **Preset** will be saved and a green SUCCESS tag will appear next to the > **Save current connections in following preset** field (Figure 464)

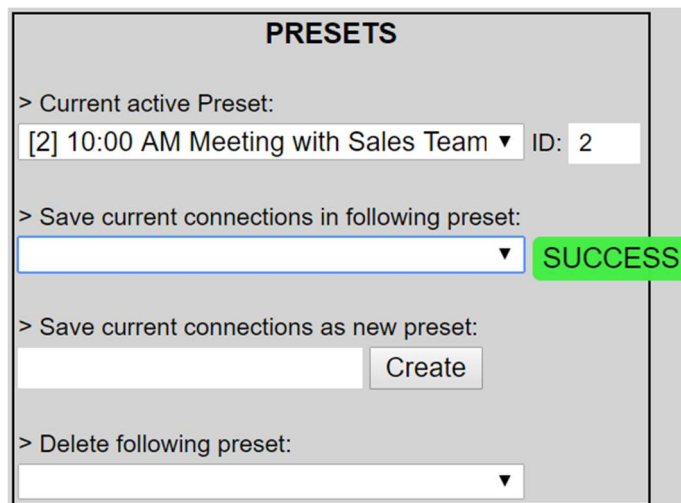

The screenshot shows the same "PRESETS" window. The "Current active Preset" dropdown now shows "[2] 10:00 AM Meeting with Sales Team" and "ID: 2". The "Save current connections in following preset" dropdown menu is still open, and a green "SUCCESS" tag is now visible to its right. The "Save current connections as new preset" section has a "Create" button next to an empty input field. The "Delete following preset" dropdown menu is also visible.

Figure 463: Confirmation of Changed Preset Name

In order to activate an existing **Preset**, select > **Current active Preset**, and select the **Preset** name from the drop-down box and the **Preset** will become active. The active **Preset** will also be displayed in the **Current active Preset** field.

3. Products Screen – Multiview/Videowall Tab

The 500763-TX can be utilized in conjunction with the 500762-RX to create Multiview/Videowall. Please refer to the 500762 Multiview/Videowall section for further details regarding the configuration.

4. Products Screen - RS-232 Tab

To send RS232 commands to the 500763 TX, you may use the 500762 RX. For further details on the settings, you may refer to the RS232 Section of the 500762.

5. Products Screen - IR Tab

The **IR** tab of the **Products** screen enables the user to send IR commands from the Network Controller to a MuxLab 500763 transmitter or receiver IR port (Figure 465)

Figure 464: IR Tab

The 500763 supports a bi-directional IR port. The 500763 can be set to transmit IR commands from the Network Controller to a transmitter or receiver and then to a source or sink device, and can also be configured to receive IR commands from a handheld IR Remote and sending these commands to the Network Controller for learning IR command purposes.

Transmitting IR Commands to Source and Sink Equipment:

When sending IR commands through the Network Controller, the user first selects the device that the IR commands will be sent to. This is done by clicking on the **Select a device** drop-down list and making a selection (Figure 466).

Figure 465: IR Tab – Selecting a Device

Once a device is selected, the **Data to send in HEX** field becomes enabled. Begin by setting the IR Mode to “Emitter” and click on “Save”. Next enter the IR command in Hex in the **Data to send in HEX** field and click on “Send”. In the above example, 4K Streaming was chosen as the selected device (but a receiver connected to sink equipment could have also been selected), meaning that a command sent to 4K Streaming will travel from the Network Controller to the Ethernet Switch, and from the Ethernet Switch to the transmitter connected to the 4K Streaming port with an attached IR Emitter. That transmitter will then send the specified data command via the attached IR Emitter to the source device.

Learning IR Commands from a Handheld IR Remote:

The Network Controller can learn IR Commands in combination with the 500763. To begin the process, select the 500763 device as indicated above, set the IR Mode to Sensor and click on “Save”, and attach an IR Sensor to the 500763 IR port. Click on “Get IR Code”, aim the handheld IR Remote at the Sensor while pressing on an IR command key on the IR Remote. The **IR code received in HEX** field will display the HEX version of an IR command sent from a handheld remote.

5. Products Screen - Firmware Tab

The Firmware tab of the Products screen enables the user to update the firmware for MuxLab transmitters and receiver (Figure 467)

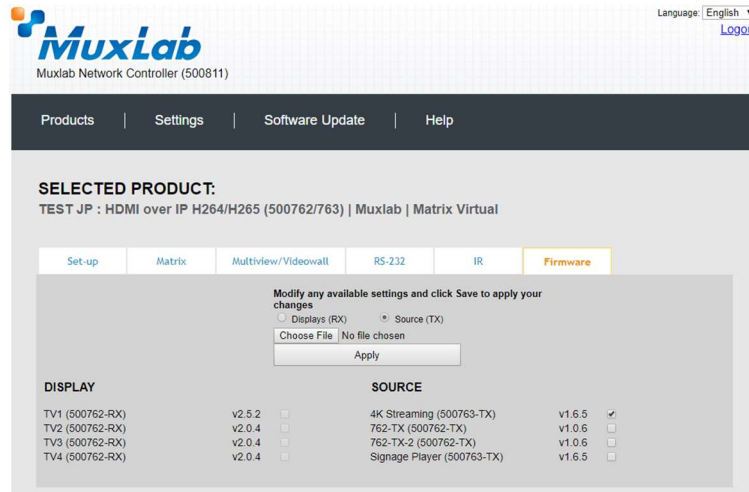



Figure 466: Firmware Tab

The user selects **Source (TX)**, then chooses the firmware update file to upload to the given device. Once the file is selected, the user checks the box next to the given device (listed under **DISPLAY** and **SOURCE**) targeted for firmware upgrade, and then clicks **Apply**.

Settings Screen

The **Settings** screen contains two tabs: **Network** and **Administration**.


The **Network** tab (Figure 468) is used to change the IP address of the MuxLab Network Controller, the network mask, as well as the router IP address. It also allows the user to enable or disable DHCP.

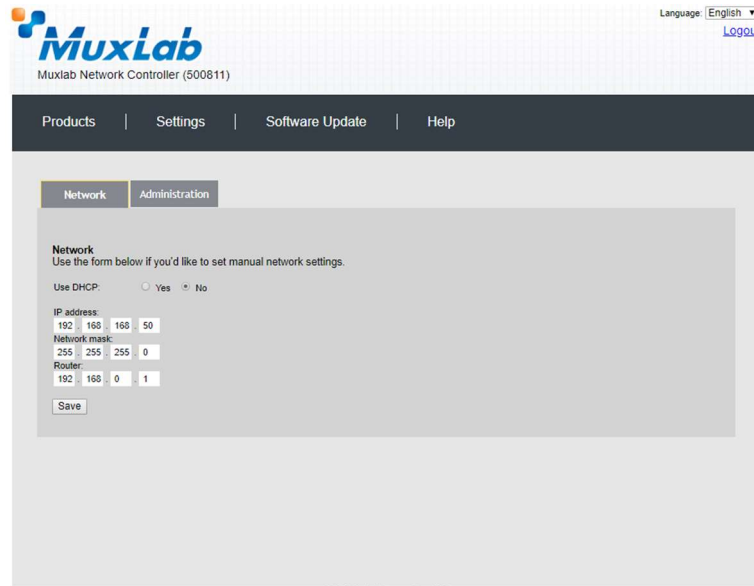

The screenshot shows the MuxLab Network Controller (500811) interface. The top navigation bar includes 'Products', 'Settings', 'Software Update', and 'Help'. The 'Settings' tab is active, and the 'Network' sub-tab is selected. The 'Network' section contains a form for manual network settings. It includes a 'Use DHCP' section with radio buttons for 'Yes' and 'No'. Below this are input fields for 'IP address' (192, 168, 50), 'Network mask' (255, 255, 0), and 'Router' (192, 168, 0, 1). A 'Save' button is located at the bottom of the form. The footer indicates the version is 1.5.7e.

Figure 467: Settings Screen: Network Tab

The **Administration** tab is used to create or delete user accounts, change passwords, restore data, backup data, and retrieve logs (Figure 469)

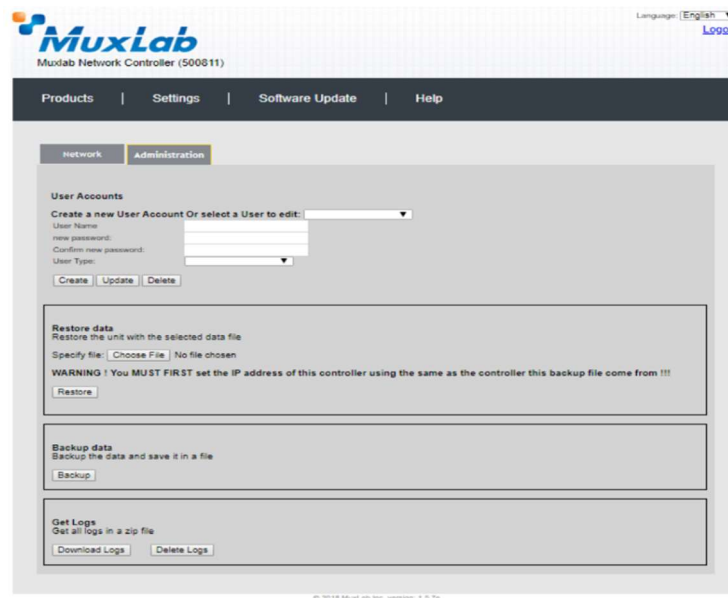

The screenshot shows the MuxLab Network Controller (500811) interface. The top navigation bar includes 'Products', 'Settings', 'Software Update', and 'Help'. The 'Settings' tab is active, and the 'Administration' sub-tab is selected. The 'Administration' section contains several sections: 'User Accounts' with a dropdown for 'Create a new User Account Or select a User to edit:', input fields for 'User Name', 'new password', and 'Confirm new password', and a 'User Type' dropdown; 'Restore data' with a 'Specify file:' dropdown and a 'Restore' button; 'Backup data' with a 'Backup' button; and 'Get Logs' with 'Download Logs' and 'Delete Logs' buttons. The footer indicates the version is 1.5.7e.

Figure 468: Settings Screen: Administration Tab

Software Update Screen

The **Software Update** enables the user to update MuxLab Network Controller software (Figure 470). This software is available on MuxLab's website (www.muxlab.com). Download the software to the local PC before performing the update.

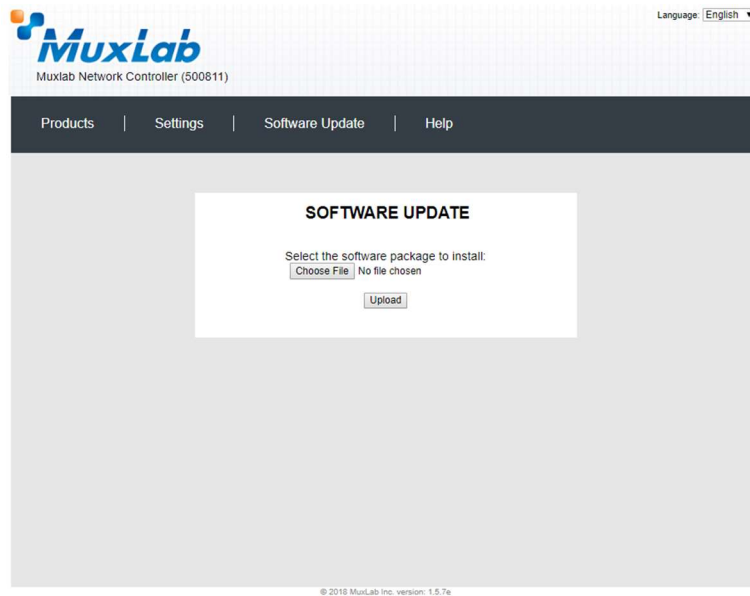


Figure 469: Software Update Screen

Help Screen

The **Help** screen offers quick contact information for customer support and all other inquiries (Figure 471)

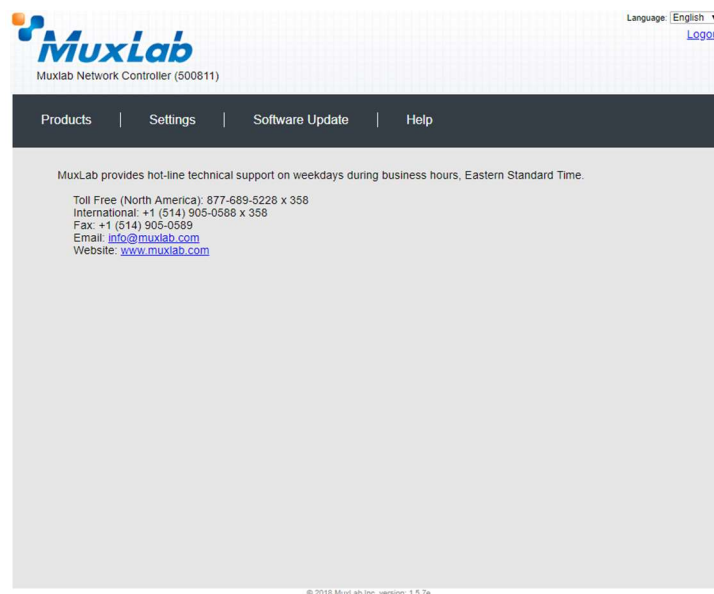


Figure 470: Help Screen

Controller Model 500816-IP

The 500816-IP 8 Button Control Panel may be used to send commands, at the press of a button, to the 500811 Network Controller. This section describes how to accomplish this.

Products Screen

Once the user has logged in, the **Products** screen will appear (Figure 472).

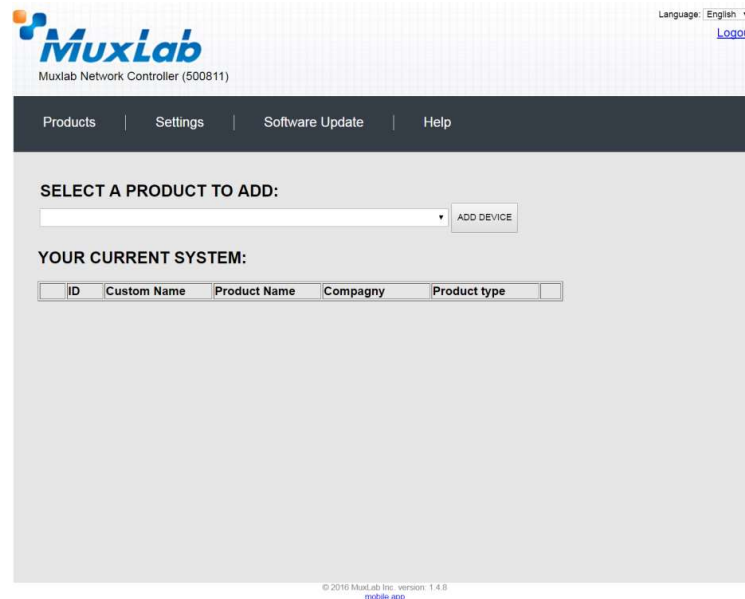


Figure 471: Products Screen – Initial View

In the **SELECT A PRODUCT TO ADD:** drop down box, select **8-Button IP PoE Control Panel (500816-IP)** and then click on **ADD DEVICE** (Figure 473).

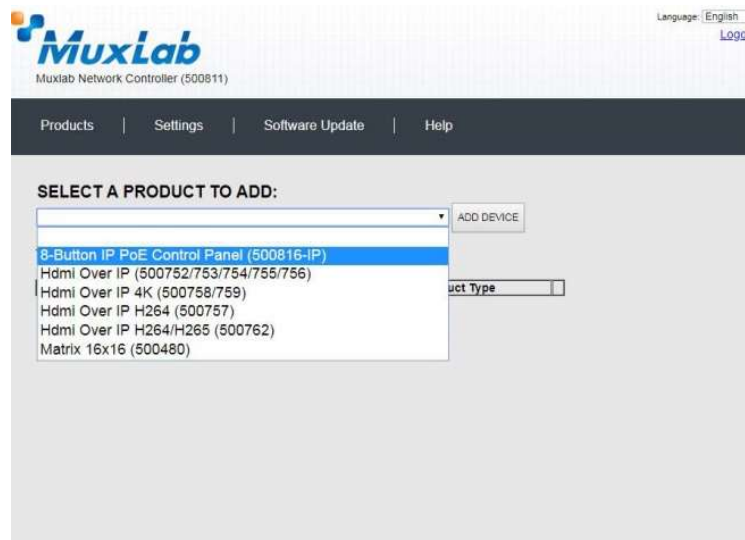


Figure 472: Products Screen – Selecting a Product

A dialog box appears asking the user to provide a custom name for the selected product, along with the Login Name and Password for the 500816-IP unit (Figure 340). The user then types a name in the **Custom Name** field, along with the unit **Login Name** and **Password** (default is admin, admin, see the 500816-IP Operation Manual for more details), and then clicks on **OK**. Note that if the user decides to click on **CANCEL**, the previous screen appears (Figure 474), without a product being added.

Figure 473: Naming and Login into the 500816-IP

The custom name has been added to **YOUR CURRENT SYSTEM** (Figure 475).


ID	Custom Name	Product Name	Company	Product Type	
X 12	Audio-Video Room	8-Button IP PoE Control Panel (500816-IP)	Muxlab	Controller	Select

Figure 474: Products Screen – Your Current System Selection

The user can change the ID of each row by modifying the **ID** field. The user can also delete the entire row completely by clicking the **X** next to it. Click on “**Select**” to setup the 8-Button IP PoE Control Panel (500816-IP).

1. Products Screen - Set-up Tab


Press the “Discovery” button to start the discovery process (Figure 476).

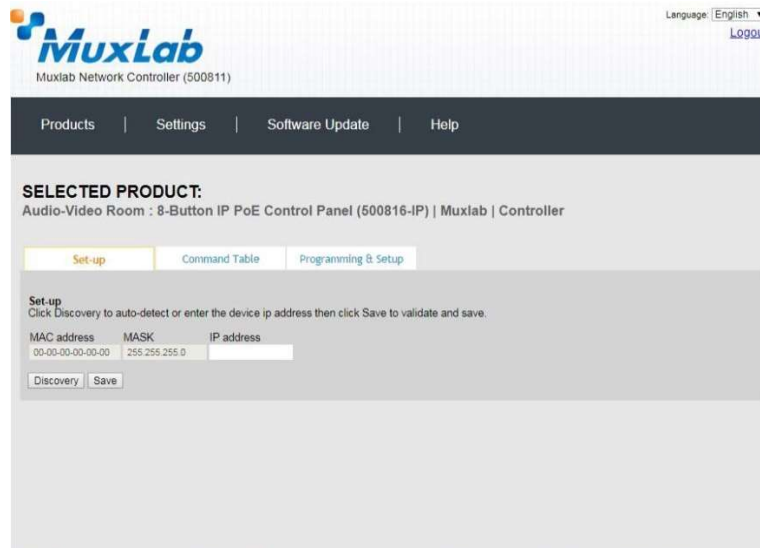

The screenshot shows the MuxLab Network Controller (500811) web interface. The top navigation bar includes "Products", "Settings", "Software Update", and "Help". The "SELECTED PRODUCT:" is "Audio-Video Room : 8-Button IP PoE Control Panel (500816-IP) | Muxlab | Controller". The "Set-up" tab is active, showing a "Set-up" section with instructions: "Click Discovery to auto-detect or enter the device ip address then click Save to validate and save." Below this, there are input fields for "MAC address" (00-00-00-00-00-00), "MASK" (255.255.255.0), and "IP address" (empty). "Discovery" and "Save" buttons are at the bottom.

Figure 475: Set-up Tab – Discovering the 500816-IP

Once the discovery is complete the screen will indicate that one or more units have been found. Click on the “IP Address” pull-down menu to view the units which have been discovered. Click on the appropriate unit IP Address to select it (Figure 477).

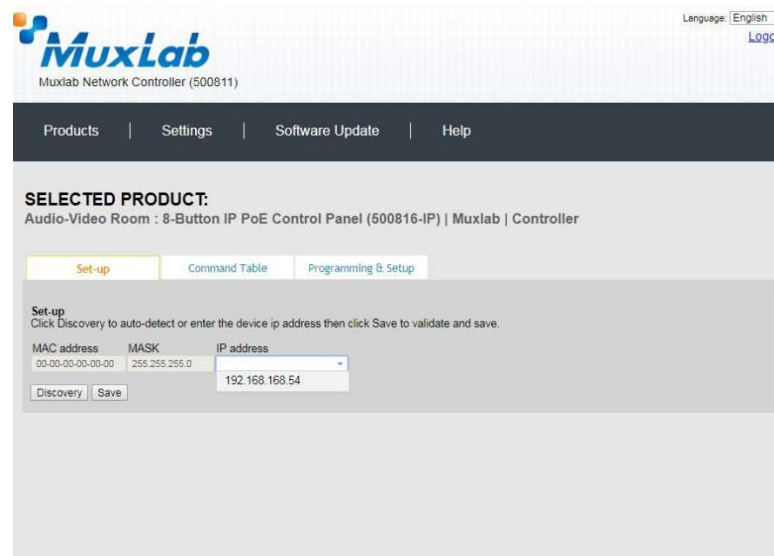

The screenshot shows the MuxLab Network Controller (500811) web interface. The top navigation bar includes "Products", "Settings", "Software Update", and "Help". The "SELECTED PRODUCT:" is "Audio-Video Room : 8-Button IP PoE Control Panel (500816-IP) | Muxlab | Controller". The "Set-up" tab is active, showing a "Set-up" section with instructions: "Click Discovery to auto-detect or enter the device ip address then click Save to validate and save." Below this, there are input fields for "MAC address" (00-00-00-00-00-00), "MASK" (255.255.255.0), and "IP address" (192.168.168.54). "Discovery" and "Save" buttons are at the bottom.

Figure 476: Set-up Tab – Set Unit IP Address

Press “Save” to record these settings. This will also automatically set the MAC Address and MASK (Figure 478).

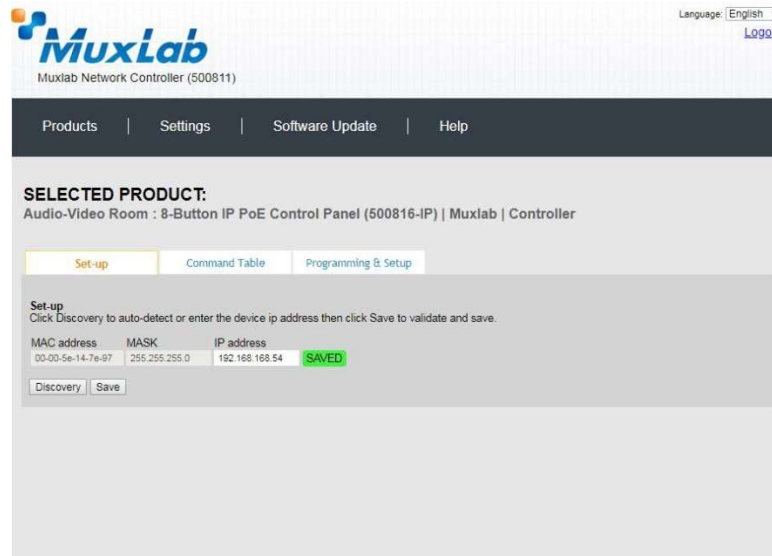


Figure 477: Set-up Tab – Save Unit IP and MAC Address and Mask

2. Products Screen – Command Table Tab

Under the Command table tab (Figure 479), the user can create a command cross-reference table between short commands sent from the 500816-IP 8 Button Control Panel, which will be received and translated by the 500811 Network Controller into longer 500811 API (Application Program Interface) commands. The API Command will then instruct the 500811 to perform a specific function. The function may be to connect or disconnect an AV over IP transmitter and receiver, or to send an IR, RS-S232 or CEC command to an end device via one of the AV over IP transmitters or receivers, etc.

Note that the 500816-IP is not able to send long native 500811 API commands directly. Therefore the 500816-IP sends shorter commands to the 500811 and the 500811 looks up the corresponding longer 500811 API command string to be executed. This adds an extra step in the decoding process of the API commands, but is necessary.

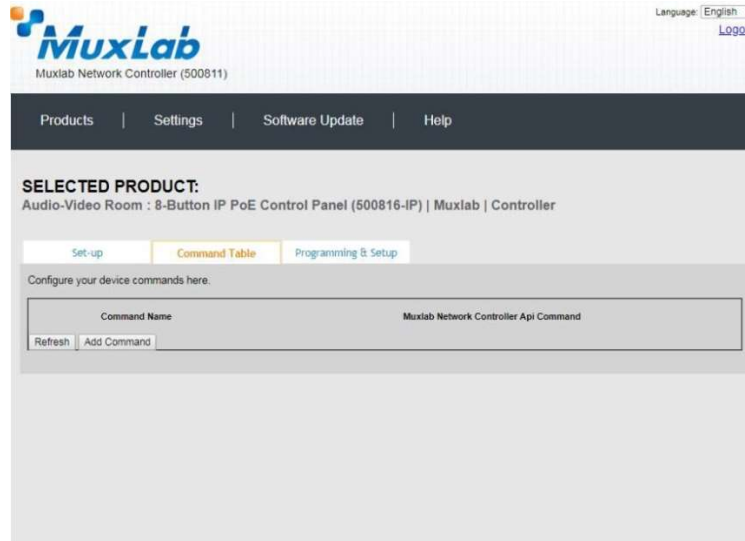


Figure 478: Command Table Tab

Pressing on the “**Add Command**” button, brings up a new cross-reference entry, see Figure 480. The “**Command Name**” field is used to enter a custom name that is used to reference the actual API command. The custom name is an arbitrary name, which will later be entered into the 500816-IP, and once received by the 500811 will be used to look up the replacement actual API Command to be executed. The “**MuxLab Network Controller API Command**” field in Figure 480, contains the actual API Command. Reference the MuxLab API Command Document (file: MNC_500810_811_IP_Commands.PDF) for a detailed listing of all Muxlab API Commands for the 500811 Network Controller. This document is available on the 500811 webpage of the MuxLab website. Each command from the 500816-IP 8 Button Control Panel to be sent to the 500811 Network Controller will require an entry in this cross reference table.

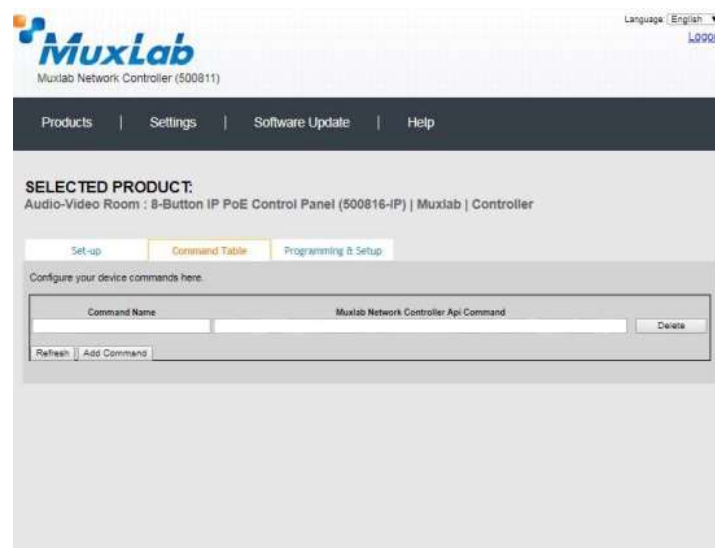


Figure 479: Command Table Tab – Entering Commands

3. Products Screen – Programming & Setup Tab

In the Programming and Setup Tab the user can setup the 500816-IP 8 Button Control Panel and program each button to send commands to the 500811 Network Controller. Each button will be assigned a custom “Command Name” as described in the previous section.

There are three main sub-screens for configuring and managing the 500816-IP.

- Keyboard: Allows the user to simulate a button press on the 500816-IP from a computer screen (Figure 481). This can be used to test a button that has just been programmed in “Actions”.
- Actions: Allows the user to program commands for all 8 buttons (Figure 482).
 - First select the button to program - Press on the corresponding button name, such as Button 1, Button 2, ... , Button 8.
 - Select an Event type - To send IP commands to the 500811, select type “IP_Send”.
 - Select the “Times” value - Each button press can execute up to 6 events. A time delay between each event can be set. Time(S) is the time delay set between 2 events (in seconds). As there is just one command in this example, select time = “0”.
 - Enter the Command Data – Type in the command to send to the 500811 using the short form custom command described above.
- Setting: Allows the user to setup the 500816-IP. This will not be covered here.

Please reference the 500816-IP Operation Manual for further instructions on how to setup and program the 500816-IP 8 button Control Panel.

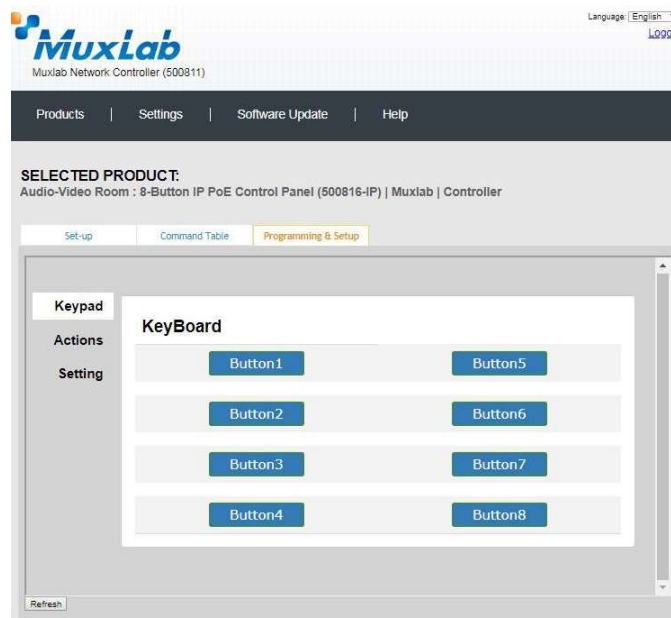


Figure 480: Programming & Setup Tab – Keyboard

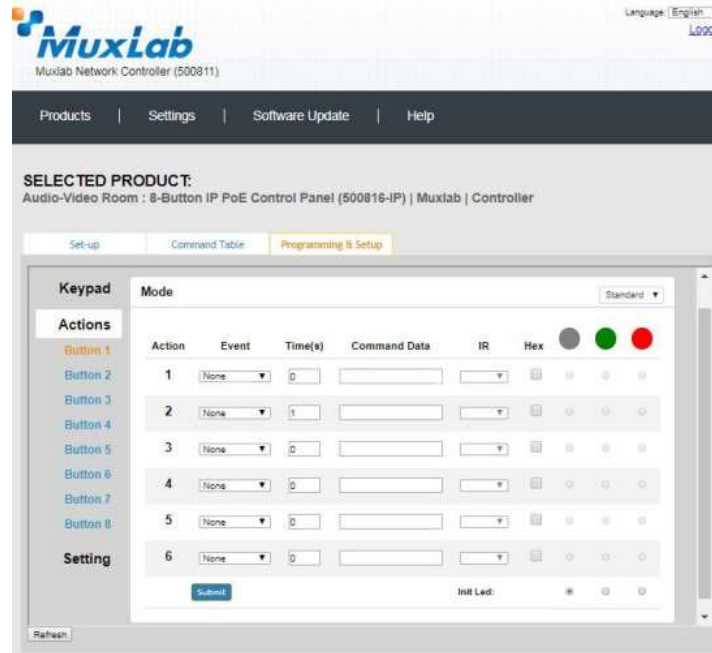


Figure 481: Programming & Setup Tab – Actions

Working example:

An example is shown here to turn off a TV (place it in StandBy mode) when Button 1 of the 500816-IP 8 Button Control Panel is pressed. The TV is connected to a MuxLab AV over IP Receiver, which in this example is the 500759-RX Video Wall 4K over IP PoE Receiver.

How the system will operate:

The process begins when Button 1 of the 500816-IP 8 Button Control Panel is pressed. This causes the 500816-IP to send a custom created command, which in this example will be called “poweroff”, to the 500811 Network Controller. The 500811 then looks up the custom “poweroff” command in the cross reference table and executes the corresponding actual API Command. The API Command in this example causes the 500811 to send a CEC command to the 500759-RX Video Wall 4K over IP PoE Receiver. The 500759-RX then sends the TV an actual CEC command to power off the TV. Note that the custom name “poweroff” used in this example is arbitrary, and need only match the name programmed into the 500816-IP.

It is assumed that the 500759-RX is already setup in the 500811 with product ID "13" and MAC address "00-0b-78-00-7c-fd". Reference the 500759 section in this manual on how to setup the 500759, in the 500811 Network Controller.

Begin by entering the custom command name “**poweroff**” into the “**Command Name**” field, see Figure 349. This command will later be programmed into the 500816-IP and sent to the 500811 when Button 1 is pressed on the 500816-IP device.

Next enter the actual API Command which will be executed by the 500811 into the “**MuxLab Network Controller API Command**” field in Figure 483, and then click on “**Add**”.

The **API Command** string is as follows:

```
{"p_targetId":13,"p_cmd":"send_hdmi_cec_command","p_password":"admin","p_userName":"admin","p_data":[{"mac":"00-0b-78-00-7c-fd","command":"standBy"}]}
```

Where;

"p_targetId":13 - is the ID of the product (500759-RX) to control.

"p_cmd":"send_hdmi_cec_command" – is the API Command to execute.

"p_password":"admin","p_userName":"admin","p_data" – is the 500811 username and password (default is admin, admin).

"p_data":[{"mac":"00-0b-78-00-7c-fd","command":"standBy"}]} – is the command data indicating the specific 500759-RX MAC to send the command, and the TV CEC power off command "standBy".

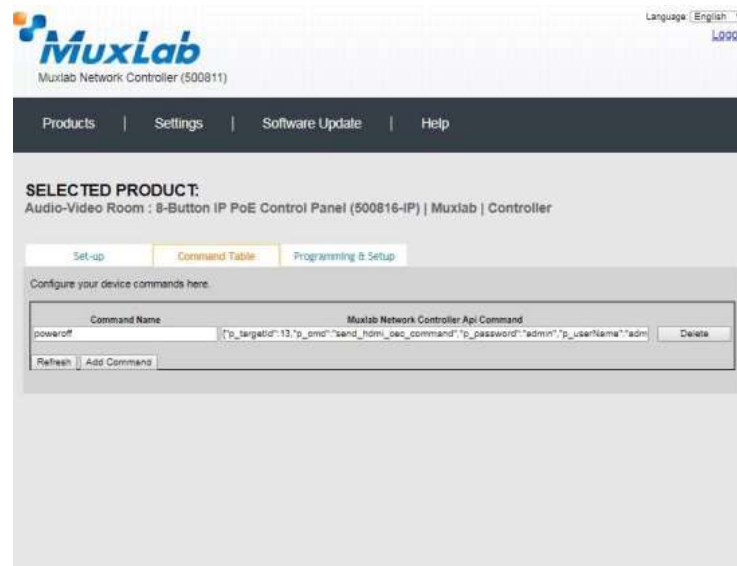


Figure 482: Command Table Tab – Entering Commands

Next program the 500816-IP device. Go to the “**Programming & Setup tab → Actions**” section, see Figure 484.

In the Actions section, select “**Button 1**”, and under “**Action 1**” set the “**Event**” to **IP_Send**. Set “**Time(s)**” to 0. Enter the “**Command Data**”, and then click on “**Submit**”.

The “**Command Data**” string is as follows:

```
192.168.168.50*31337*TCP*poweroff
```

Where;

192.168.168.50 - is the 500811 default IP address.

31337- is the 500811 port (this is a fixed value).

TCP - this is a required parameter to indicate the protocol.

poweroff – is the custom Command Name created in the Command Table Tab.

This terminates the setup procedure.

The user can now test the system by pressing on **Button 1** of the 500816_IP 8 button Control Panel. This will cause the TV to turn off (StandBy mode).

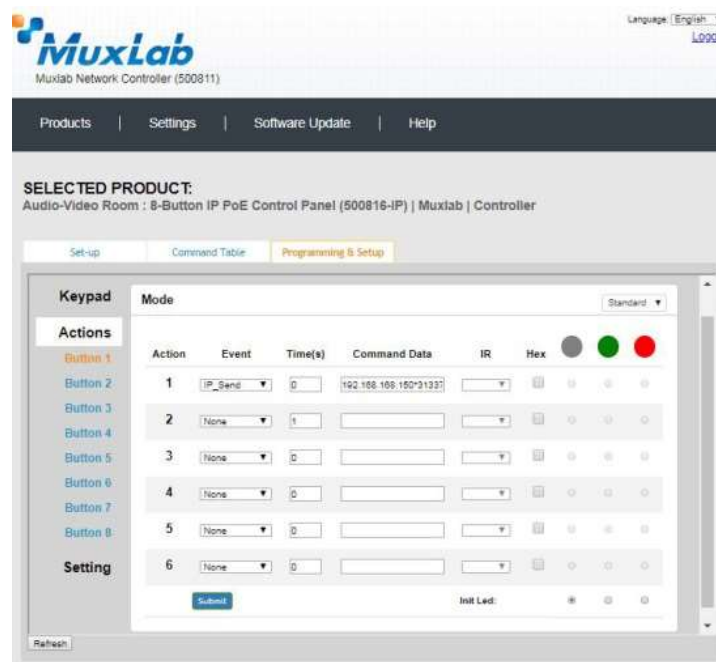


Figure 483: Programming & Setup Tab – Actions

Troubleshooting

Table 3 lists common problems, as well as their possible causes and solutions. If the information below does not solve the problem, technical support contact information can be found at the end of this section.

PROBLEM	POSSIBLE SOLUTIONS
Unable to connect computer to MNC	Ensure the computer IP subnet address matches the IP subnet address of the MNC
	Ensure that <code>http://192.168.168.50/mnc/</code> is written in lower case
Unable to connect computer to Ethernet Switch or to the Router	Ensure the computer IP subnet address matches the IP subnet address of the Ethernet Switch and Router.
General communication problem between devices	As a general rule, all devices required to communicate together on the same local network, must have an IP address in the same subnet
	Static IP address must be unique and in the same subnet.
	DHCP addresses must be assigned within the same subnet and configured at the DHCP server not to overlay with any assigned Static IP addresses.

Table 3: Troubleshooting

When contacting your nearest MuxLab dealer or MuxLab Technical Support at 877-689-5228 (toll free in North America) or (+1) 514-905-0588 (International), please have the following information ready:

- Unit model number.
- Description of problem.
- List of tests performed.

Appendix – IP Command API

The Muxlab API (Application Program Interface) Commands for the 500811 Network Controller are not covered in this document. They are covered in a separate document as follows:

File: MNC_500810_811_IP_Commands.PDF

which is available on the 500811 unit webpage of the MuxLab website.

6. Product Warranty Policy

Items Under Warranty - Company Policy

MuxLab guarantees its products to be free of defects in manufacturing and workmanship for the warranty period from the date of purchase. If this product fails to give satisfactory performance during this warranty period, MuxLab will either repair or replace this product at no additional charge, except as set forth below. Repair and replacement parts will be furnished on an exchange basis and will be either reconditioned or new. All replaced parts and products become the property of MuxLab. This limited warranty does not include repair services for damage to the product resulting from accident, disaster, misuse, abuse, or unauthorized modifications or normal decay of battery driven devices. Batteries, if included with the product, are not covered under this warranty.

Limited warranty service can be obtained by delivering the product during the warranty period to the authorized MuxLab dealer from whom you purchased the product, or by sending it to MuxLab. MuxLab will not accept any such product for repair without a Return Material Authorization number (RMA#) issued by its Customer Service Department and a proof of purchase date. If this product is delivered to MuxLab by mail, you agree to assume risk of loss or damage in transit, to prepay shipping charges to the warranty service location, and to use the original shipping container or equivalent.

THE ABOVE LIMITED WARRANTY IS THE ONLY WARRANTY COVERING YOUR MUXLAB PRODUCT. THERE ARE NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

IF THIS PRODUCT IS NOT IN GOOD WORKING ORDER, YOUR SOLE REMEDY SHALL BE REPAIR OR REPLACEMENT AS PROVIDED FOR ABOVE. IN NO EVENT SHALL MuxLab BE LIABLE TO YOU FOR ANY DAMAGES, INCLUDING ANY LOSS OF PROFITS, LOST SAVINGS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF OR INABILITY TO USE THIS PRODUCT, EVEN IF MUXLAB OR AN AUTHORIZED MuxLab DEALER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES; NOR WILL MUXLAB BE LIABLE FOR ANY CLAIM BY ANY OTHER PARTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR CONSUMER PRODUCTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

Warranty Periods

Any 500811 ProDigital Network Controller found to be defective within three (3) years of invoice, including one (1) month shelf life, may be returned for replacement by a new unit or a satisfactory repair within one (1) month of receiving any returned product. The customer must provide MuxLab with the serial number and proof of purchase of the defective unit being returned. All R.M.A.'s issued are subject to inspection by MuxLab, and will be returned to customer if not properly package – units must be returned in original container or equivalent. MuxLab will not accept any such product for repair without an authorization for its Technical Support department and without a return authorization number issued by MuxLab Customer Service department. For credit & replace R.M.A., customer will be liable to pay replacement invoice if defective products are not returned.

Product more than six months old, including shelf life.

The defective unit must be returned prepaid to MuxLab and then the unit will be repaired or if repair is not possible, replaced by an equivalent unit and returned to the customer within one (1) month of receiving any returned product. There is no charge for repair (parts and labor) during the full warranty period.

Items Defective and not under Warranty

For products which are no longer under warranty the policy is repair and return. An amount of 25% of the products published list price at the time of purchase will be charged. Customer must issue a purchase order to cover the cost of repair.

Each unit will be returned to the customer within one (1) month from receipt of the unit by MuxLab. The defective unit must be returned prepaid to MuxLab. The repaired unit will be returned to the customer FOB MuxLab. The repaired unit has a 90 day warranty.



MuxLab Inc.
2321 Cohen Street
Mount Royal, Quebec
Canada H4R 2N7
Tel.: +1 (514) 905-0588 Fax: +1 (514) 905-0589
Toll Free (North America): 877 689-5228
URL: www.muxlab.com
E-mail: info@muxlab.com