

Active VGA Managed Receiver

500174



Installation Guide

P/N: 94-000707-A SE-000707-A

MuxLab

Copyright Notice:

Copyright © 2011 MuxLab Inc. All rights reserved.

Printed in Canada. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without prior written permission of the author.

Trademarks:

MuxLab and VideoEase are registered trademarks of MuxLab Inc.

Table of Contents

1. System Overview	4
1.1. Description	4
1.2. System Features	6
2. Technical Specifications	7
3. Installation Procedure	8
3.1. Parts List	8
3.2. Product Overview	9
3.3. Pre-Installation Checklist	11
3.4. Physical Installation	12
3.5. Installation Procedure.....	14
3.6. Manual Image Control	17
3.7. Port Control Operations	18
3.8. Driver Setup	19
3.9. Cascadability	22
4. Troubleshooting	23
5. Appendix	25
6. Product Warranty Policy	30

1. System Overview

1.1. Description

MuxLab's family of Active VGA Managed products allows a single video source to be transmitted to various remote locations in a point-to-multipoint configuration for cost-efficient connectivity.

The Active VGA Managed family consists of three products:

- (1) Active VGA Managed Dispatcher
- (2) Active VGA Managed Receiver
- (3) Active VGA Managed Repeater Hub

A video source is connected to the Dispatcher, which in turn distributes the source signal to Receivers placed in locations as far as 1,000 feet (305 meters) away. Each Receiver then transmits this signal to as many as two display devices. Working alone, the Dispatcher (8 or 16 port) can distribute signals to as many as 8 or 16 remote locations.

A Repeater Hub is used whenever a source signal must be distributed to more than 8 or 16 remote locations, or over a distance of more than 1,000 feet. The Repeater Hub receives the source signal from the Dispatcher, amplifies and equalizes it, and then distributes it to as many as 8 Receivers located as far as 1,000 feet away.

Because the Repeater Hub itself can be located as far as 1,000 feet away from the Dispatcher, the effective distance from Dispatcher to Receiver is therefore doubled to 2,000 feet (610 meters). Furthermore, since the Dispatcher (8 or 16 port) can distribute signals to as many as 8 or 16 Repeater Hubs, each of which in turn can distribute signals to 8 Receivers, the number of remote locations that receive source signals increases by 7 with each Repeater Hub used.

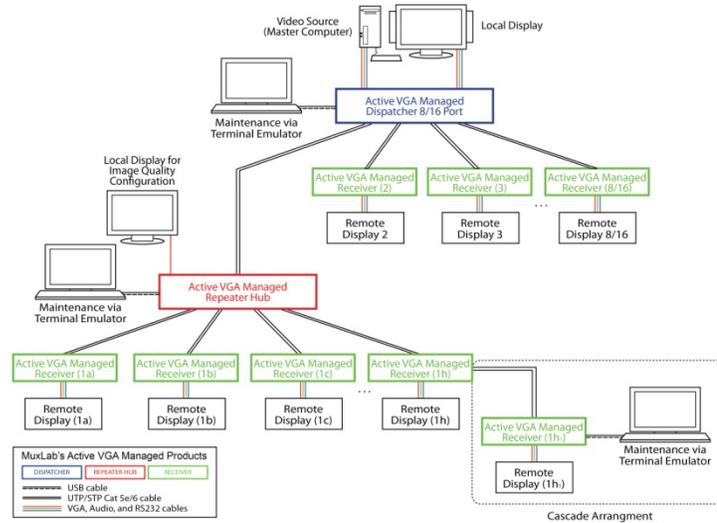


Figure 1: System Overview

MuxLab’s Active VGA Managed Receiver has Dual-Head capability. This means that each Receiver can relay signals to one or two displays. Receivers may also be cascaded up to three levels deep.

The Receiver supports up to 1920 x 1200 pixels and 1080p resolution, and is DDC compliant with all plug-and-play laptops, PCs, and displays.

1.2. System Features

- Supports VGA, Audio & RS232
- Support up to 1,000 ft (305 m)
- Support up to 1920 x 1200, 1080p (depending on cable length)
- Software and manual adjustments for brightness, sharpness & skew
- Additional 1,000 ft (305 m) via Repeater Hub
- Cascadability option from Receiver
- Dual head capability on Receiver
- Structured cabling approach: Repeater Hubs have RJ45 for signal distribution

2.

Technical Specifications

Active VGA Managed RECEIVER																															
Environment	VGA, Analog Stereo Audio, RS232																														
Devices	PC, laptops, projectors, plasma, switchers, distribution amps, touchscreen																														
Transmission	Transparent to the user																														
Maximum resolution	1080p; 1920 x 1200																														
Connections	<table border="0" style="width: 100%;"> <tr> <td style="width: 30%; vertical-align: top;">FRONT PANEL</td> <td style="width: 30%; vertical-align: top;">VGA 2 Out:</td> <td style="width: 40%; vertical-align: top;">One (1) HD15F</td> </tr> <tr> <td></td> <td>Audio 2 Out:</td> <td>One (1) 3.5 mm stereo jack</td> </tr> <tr> <td></td> <td>RS232 2 Out:</td> <td>One (1) DB9M</td> </tr> <tr> <td></td> <td>Maintenance:</td> <td>One (1) Mini USB</td> </tr> <tr> <td style="vertical-align: top;">BACK PANEL</td> <td style="vertical-align: top;">Power:</td> <td style="vertical-align: top;">One (1) power jack</td> </tr> <tr> <td></td> <td>Link In:</td> <td>One (1) RJ45S</td> </tr> <tr> <td></td> <td>VGA 1 Out:</td> <td>One (1) HD15F</td> </tr> <tr> <td></td> <td>Audio 1 Out:</td> <td>One (1) 3.5 mm stereo jack</td> </tr> <tr> <td></td> <td>RS232 1 Out:</td> <td>One (1) DB9M</td> </tr> <tr> <td></td> <td>Cascade Out:</td> <td>One (1) RJ45S</td> </tr> </table>	FRONT PANEL	VGA 2 Out:	One (1) HD15F		Audio 2 Out:	One (1) 3.5 mm stereo jack		RS232 2 Out:	One (1) DB9M		Maintenance:	One (1) Mini USB	BACK PANEL	Power:	One (1) power jack		Link In:	One (1) RJ45S		VGA 1 Out:	One (1) HD15F		Audio 1 Out:	One (1) 3.5 mm stereo jack		RS232 1 Out:	One (1) DB9M		Cascade Out:	One (1) RJ45S
FRONT PANEL	VGA 2 Out:	One (1) HD15F																													
	Audio 2 Out:	One (1) 3.5 mm stereo jack																													
	RS232 2 Out:	One (1) DB9M																													
	Maintenance:	One (1) Mini USB																													
BACK PANEL	Power:	One (1) power jack																													
	Link In:	One (1) RJ45S																													
	VGA 1 Out:	One (1) HD15F																													
	Audio 1 Out:	One (1) 3.5 mm stereo jack																													
	RS232 1 Out:	One (1) DB9M																													
	Cascade Out:	One (1) RJ45S																													
Maximum Distance: Dispatcher to Receiver, Repeater Hub to Receiver	Up to 1920 x 1200 @ 60Hz; 1080P (depending on cable length) Up to 1,000 feet (305 meters) <i>NOTE: STP cables must be used in an electrically noisy environment. Also, cross-connection reduces the effective distance depending on the grade of twisted cable used.</i>																														
RJ45 Pin Configuration	<table border="0" style="width: 100%;"> <tr> <td style="width: 30%;">Green:</td> <td style="width: 10%;">Pin 4 (R)</td> <td style="width: 10%;">Pin 5 (T)</td> <td rowspan="5" style="width: 40%; text-align: center;"> </td> </tr> <tr> <td>Blue:</td> <td>Pin 1 (R)</td> <td>Pin 2 (T)</td> </tr> <tr> <td>Red:</td> <td>Pin 7 (R)</td> <td>Pin 8 (T)</td> </tr> <tr> <td>COM:</td> <td>Pin 3 (R)</td> <td>Pin 6 (T)</td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	Green:	Pin 4 (R)	Pin 5 (T)		Blue:	Pin 1 (R)	Pin 2 (T)	Red:	Pin 7 (R)	Pin 8 (T)	COM:	Pin 3 (R)	Pin 6 (T)																	
Green:		Pin 4 (R)	Pin 5 (T)																												
Blue:	Pin 1 (R)	Pin 2 (T)																													
Red:	Pin 7 (R)	Pin 8 (T)																													
COM:	Pin 3 (R)	Pin 6 (T)																													
Reverse Polarity Sensitive <i>Use EIA/TIA 568A or 568B straight-through wiring</i>																															
LED Indicators	<table border="0" style="width: 100%;"> <tr> <td style="width: 30%;">Sync:</td> <td style="width: 30%;">One (1) green LED</td> </tr> <tr> <td>Power:</td> <td>One (1) green LED</td> </tr> <tr> <td>Sharpness</td> <td>One (1) green LED</td> </tr> <tr> <td>Gain</td> <td>One (1) green LED</td> </tr> <tr> <td>R</td> <td>One (1) green LED</td> </tr> <tr> <td>G</td> <td>One (1) green LED</td> </tr> <tr> <td>B</td> <td>One (1) green LED</td> </tr> </table>	Sync:	One (1) green LED	Power:	One (1) green LED	Sharpness	One (1) green LED	Gain	One (1) green LED	R	One (1) green LED	G	One (1) green LED	B	One (1) green LED																
Sync:	One (1) green LED																														
Power:	One (1) green LED																														
Sharpness	One (1) green LED																														
Gain	One (1) green LED																														
R	One (1) green LED																														
G	One (1) green LED																														
B	One (1) green LED																														
Cable	Cat 5e/6 unshielded twisted pair (or better)																														
Power Supply	110-240V/12VDC/0.5A power jacks Removable AC blades included for North America, Continental Europe & UK																														
Compatible Products	500170, 500171, 500172																														
Power Consumption	6 Watts																														
Temperature	Operating: 0°C to 40°C Storage: -20°C to 85°C Humidity: Up to 95% non-condensing																														
Dimensions	Hybrid VESA 75 mm and 100 mm Mounting Surface Enclosure Dimensions: 5.68" x 4.45" x 1.04" (14.42 cm x 11.30 cm x 2.64 cm)																														
Weight	2.0 lb (0.9 kg)																														
Regulatory	FCC, CE-EMC Directive 89/336/EE, RoHS, WEEE																														
Warranty	Two (2) years																														
Order Information	500174: Active VGA Managed Receiver (Dual Head)																														

3. **Installation Procedure**

3.1. Parts List

The Active VGA Managed Receiver (500174) comes with the following parts:

- Base Unit
- One (1) 110-240V/12VDC, 0.5A Power Supply with three interchangeable blades
- Quick Reference Support Sheet

Please verify that all parts are present before proceeding.

3.2. Product Overview

The external connections and connection indicators of the Active VGA Managed Receiver are detailed in Figures 2 and 3. Please familiarize yourself with them before installing the unit.

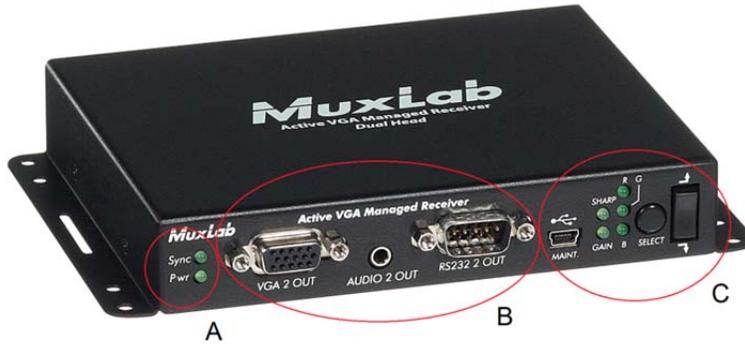



Figure 2: Front Panel of Receiver



Detail A
Status LEDs



Detail B (Head 2)
B₁ = VGA 2 Out
B₂ = Audio 2 Out
B₃ = RS232 2 Out

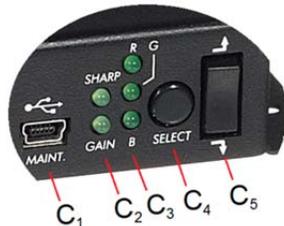

Detail C
C₁ = Maintenance Port (Mini USB)
C₂ = Gain & Sharpness LEDs
C₃ = Red, Green, Blue Skew LEDs
C₄ = Select Switch
C₅ = Rocker Switch



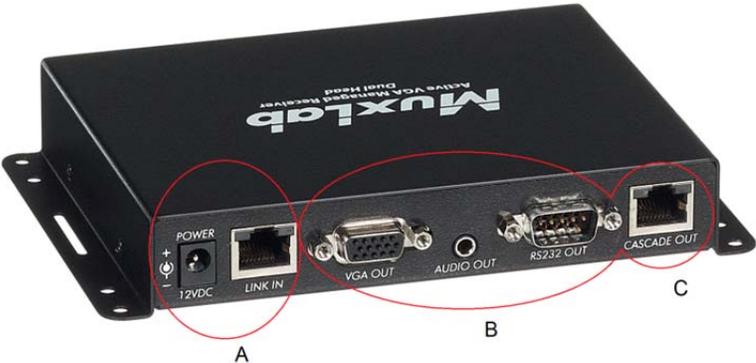


Figure 3: Back Panel of Receiver

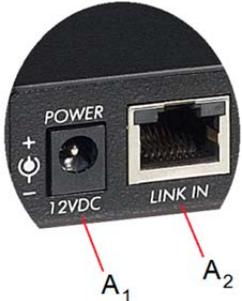

Detail A
A₁ = Power Supply Plug
A₂ = Link In (RJ45 Port)

Detail B (Head 1)
B₁ = VGA Out
B₂ = Audio Out
B₃ = RS232 Out

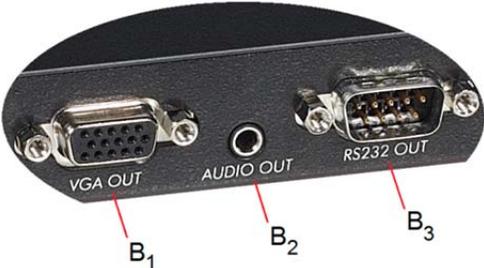

Detail C
Cascade Out (RJ45 Port)

3.3. Pre-Installation Checklist

Prior to installing the Active VGA Managed Receiver, please ensure that the maximum routing distance from Receiver to Dispatcher (or from Receiver to Repeater Hub) does not exceed 1,000 feet (305 meters).

When cascading Receivers, the maximum routing distance of all cascaded sections *combined* cannot exceed 1,000 feet (see Section 3.8)

3.4. Physical Installation

MuxLab's Active VGA Receiver can be physically installed anywhere near a display device. Typically, the Receiver is attached to the back of a display device's mounting system via threaded fasteners and/or tie-wraps.

Figure 4 demonstrates a typical installation. The Receiver is attached to the mounting system of a large-screen monitor via threaded fasteners (not included): Four (4) #6-32 screws, four (4) #6 lock washers, and four (4) #6-32 nuts (not shown).

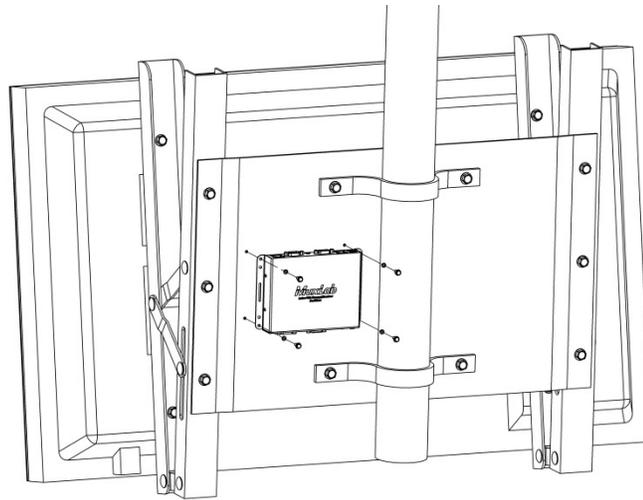


Figure 4: Typical Installation

Figure 5 illustrates the size and position of the mounting holes on the Receiver for the use of threaded fasteners.

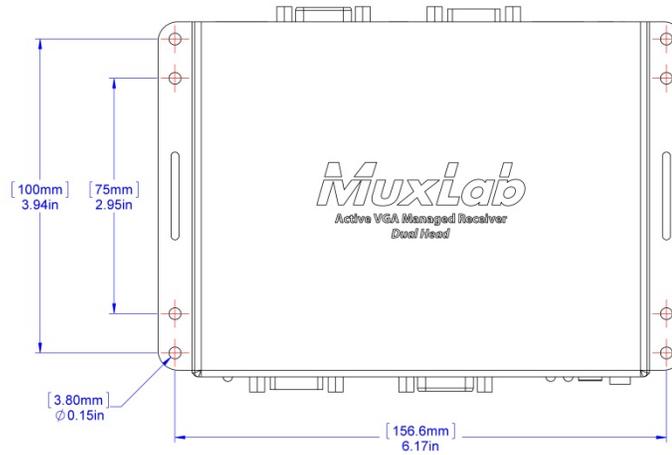


Figure 5: Receiver Mounting Holes

The vertical slots on either side of the Receiver are designed for the use of tie-wraps.

3.5. Installation Procedure

In order to install the product, please follow the steps below:

1. Place the Active VGA Managed Receiver in its final location (see Section 3.4 for physical installation details).
2. Connect the UTP/STP Cat 5e/6 cable from the Dispatcher (or Repeater Hub) to the LINK IN port located on the Receiver's back panel.
3. Connect RS232, Audio, and VGA cables from ports on the Receiver's back panel to the display device.

OPTIONAL: If the Receiver is being connected to *two* display devices, connect a second set of RS232, Audio, and VGA cables from ports on the Receiver's front panel to the second display device.

OPTIONAL: If cascading Receivers, connect a UTP/STP Cat 5e/6 cable from the upper-level Receiver's CASCADE OUT port (located on its back panel) to the lower-level Receiver's LINK IN port (located on its back panel).

4. Connect the Receiver's power supply and power up the display device(s).
5. Ensure that the source and appropriate display devices are on. Images should appear on the displays.
6. Optimize the image of each display by adjusting the Gain, Sharpness, and Color (R G B) controls located

on the Receiver's front panel. Use the SELECT button to cycle through controls, and the Up and Down rocker switch to adjust a given control.

- 7. If the image quality is unsatisfactory, please refer to the troubleshooting table in Section 4.
- 8. Figures 6 and 7 show some typical configurations:

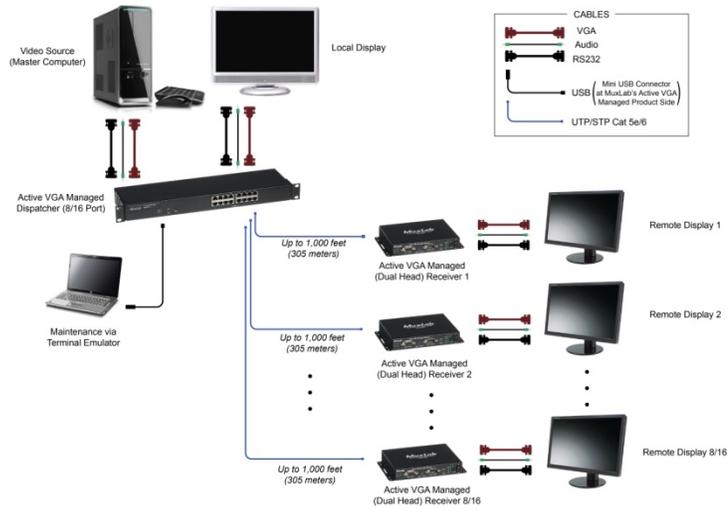


Figure 6: Simple Dispatcher/Receiver Configuration

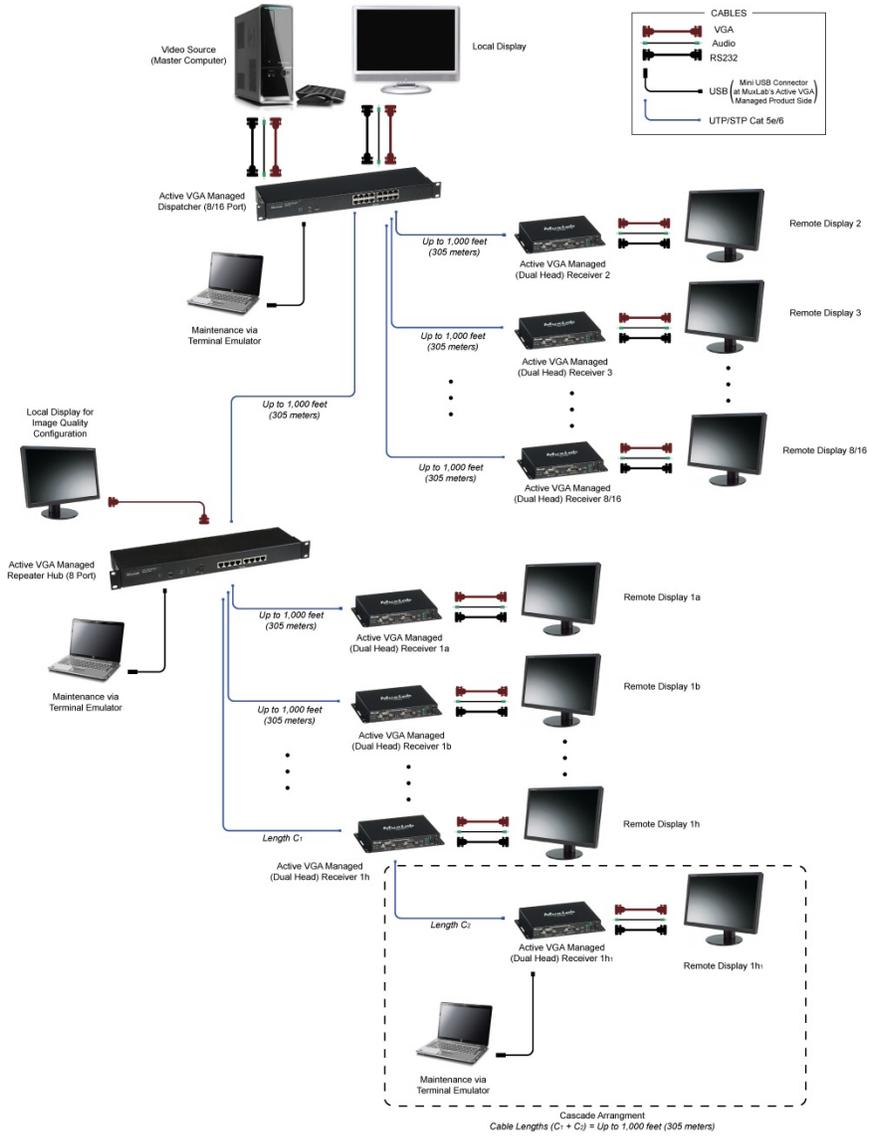


Figure 7: Dispatcher/Receiver & Repeater Hub Configuration

3.6. Manual Image Control

The image generated by MuxLab's Active VGA Managed Receiver may be manually controlled via the Select button and rocker switch (and their associated LEDs) located on the Receiver's front panel (Figure 8).



Figure 8: Manual Image Control Buttons and LEDs

To adjust the image, the user presses the Select button until the LED corresponding to the image adjustment category turns on. There are five categories possible: (1) Gain; (2) Sharpness; (3) Red Skew; (4) Green Skew; and (5) Blue Skew.

Once the user has selected a category, it can be adjusted by pressing the rocker switch up or down. When completed, the user can move to the next category by pressing the Select button again. The Select button cycles through all five adjustment categories, and the LED corresponding to the last adjustment made by the user will remain on.

When making an adjustment, the selected LED will flicker quickly, but will stop flicking once the minimum or maximum setting is reached. The rocker switch can be kept depressed for a faster adjustment.

3.7. Port Control Operations

MuxLab's Active VGA Managed Receiver features built-in firmware that allows commands from an ASCII terminal to be sent directly to the Receiver via a USB connection for maintenance purposes.

Maintenance is performed with a terminal emulator, such as the one available under Windows with the ASCII Command Set described in the Appendix.

3.8. Driver Setup

When interfacing a MuxLab device with Windows 2000 (or more recent) operating system, a driver setup file will be required.

To install the MuxLab Control Center software, go to www.muxlab.com and download the SC-000032-A USB to Serial Driver. Plug the USB cable between the device and the PC, and power up the device. The **Found New Hardware** wizard will open (Figure 9). Select **Locate and install driver software**.



Figure 9: Found New Hardware Wizard

A new dialog box will open (Figure 10). Select **Browse my computer for driver software**.

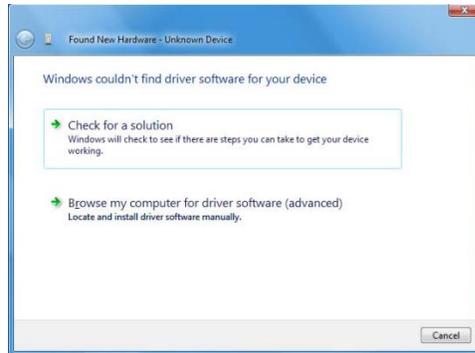


Figure 10: Found New Hardware Dialog Box

Another dialog box will open (Figure 11). Click **Browse** and locate the SC-000032-A file that you downloaded. Once found, click **Next**.



Figure 11: Browsing for Unknown Device

A security window will now appear, indicating that the driver software is unsigned (Figure 12). Select **Install this driver software anyway**.



Figure 12: Windows Security

A window will appear instructing that the software for the driver has been successfully installed (Figure 13). Click **Close**. You are now ready to launch the MuxLab Control Center software.



Figure 13: Successful Installation Dialog Box

3.9. Cascadability

MuxLab's Active VGA Managed Receivers may be cascaded up to three-levels deep. This means that a video source signal sent to one Receiver (and thus to a maximum of two remote displays) may be cascaded to two more Receivers, for a maximum of six remote displays (Figure 14).

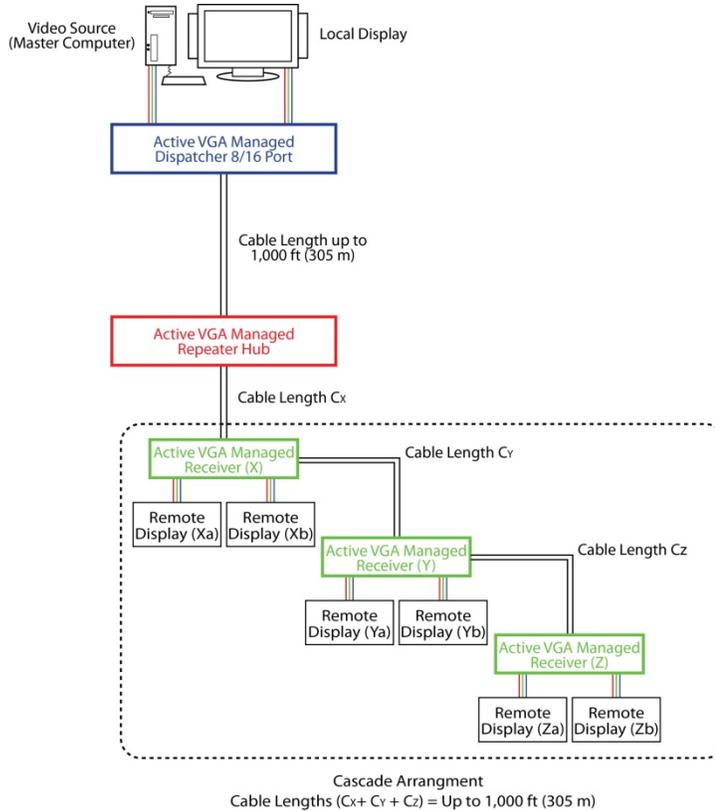


Figure 14: Cascading of Receivers (Maximum Number)

4. Troubleshooting

The following table describes some of the problem symptoms, the probable causes and possible solutions. If the information below does not solve the problem, the technical support contact information can be found at the end of this section.

Problem	Possible Solutions
No Image	<ul style="list-style-type: none"> • Check that the Power LED is ON. (If not, check the power supply.) • Check that the source PC is ON. • Check that the local monitor is ON.
No Image	<ul style="list-style-type: none"> • Check that the Sync LED of the Dispatcher is ON.
No Image	<ul style="list-style-type: none"> • Check that the Sync LED of the Receivers is ON. (Otherwise, check UTP/STP cables.)
No Image	<ul style="list-style-type: none"> • Check that the source is plugged into the Dispatcher's input, not into the local monitor out. • Power down, and then power up the Dispatcher.
No Image	<ul style="list-style-type: none"> • Check that the Receivers are powered up and that the Power LED is ON. • Check that the power supplies are not mixed up (Dispatcher & Repeater Hub require 1.25A power supply. Receiver requires 0.5A power supply).
Choppy Sound	<ul style="list-style-type: none"> • Check cable lengths. • Use STP cables if equipment is located in electrically noisy environment. • When cascading multiple Receivers, ensure that the combined cable length of all segments comprising the cascade does not exceed 1,000 feet (305 meters).
Smeared Picture	<ul style="list-style-type: none"> • Check cable lengths. • Adjust Sharp and Gain controls. • When cascading multiple Receivers, ensure that the combined cable length of all segments comprising the cascade does not exceed 1,000 feet (305 meters).
Not All Display Devices Work	<ul style="list-style-type: none"> • Check cable lengths. • Check that video source is outputting a signal that is compatible with all the display devices (try 480p or 720p).

When contacting your nearest MuxLab dealer or MuxLab Technical Support at 877-689-5228 (toll free in North America) or (+1) 514-905-0588 (International), please have the following information ready:

- Unit model number.
- Cabling layout. Please include the model of the video card and display monitor(s), as well as cable types and lengths.
- Description of problem.
- List of tests performed.

5. Appendix

ASCII Command Set

Ensure that the terminal emulation program parameters are set to the following:

BAUD Rate:	9600
Data bits:	8
Stop bits:	1
Parity:	None
Flow control:	None

It should be noted that commands are case sensitive and arguments must be separated by a single space. Characters that are not supported will be rejected by the response: **ILLEGAL CHARACTER**. Commands must be entered in the following way and ended with a carriage return:

version

<i>Description:</i>	Returns MuxLab product number & firmware version
<i>Example:</i>	version
<i>Arguments:</i>	[none]
<i>Response:</i>	500XXX Version Y.Y.Y 500XXX MuxLab part number Y.Y.Y Firmware version
<i>Example:</i>	500174 Version 1.0.0

get -a

Description: Returns complete device configuration

Example: get -a

Arguments: [none]

Response:

Device:	[YY..Y]
Sharpness:	[Z]
Brightness:	[Z]
Red Skew:	[Z]
Green Skew:	[Z]
Blue Skew:	[Z]
YY..Y	Name (up to 20 characters long)
Z	Value (percentage from 0 to 100%)

Example:

Device:	[RECEIVER]
Sharpness:	[2]
Brightness:	[100]
Red Skew:	[33]
Green Skew:	[56]
Blue Skew:	[78]

get -n

Description: Returns the name of the device

Example: get -n

Arguments: [none]

Response:

Device:	[YY..Y]
YY..Y	Name (up to 20 characters long)

Example: Device: [RECEIVER]

get -s

Description: Returns the sharpness value

Example: get -s

Arguments: [none]

Response:

Sharpness:	[Z]
Z	Value (percentage from 0 to 100%)

Example: Sharpness: [2]

get -t

Description: Returns the brightness value
Example: get -t
Arguments: [none]
Response: **Brightness:** [Z]
Z Value (percentage from 0 to 100%)
Example: Brightness: [100]

get -r

Description: Returns the red skew value
Example: get -r
Arguments: [none]
Response: **Red Skew:** [Z]
Z Value (percentage from 0 to 100%)
Example: Red Skew: [33]

get -g

Description: Returns the green skew value
Example: get -g
Arguments: [none]
Response: **Green Skew:** [Z]
Z Value (percentage from 0 to 100%)
Example: Green Skew: [56]

get -b

Description: Returns the blue skew value
Example: get -b
Arguments: [none]
Response: **Blue Skew:** [Z]
Z Value (percentage from 0 to 100%)
Example: Blue Skew: [78]

set -n {name}

Description: Sets a device's name to a new specified name

Example: set -n RECEIVER2

Arguments: **name** new specified name

Response: **Device:** [YY..Y]
YY.. Y Name (up to 20 characters)

Example: Device: [RECEIVER2]

set -s {sharpness}

Description: Sets a device's sharpness value

Example: set -s 26

Arguments: **sharpness** new sharpness value

Response: **Sharpness:** [Z]
Z Value (percentage from 0 to 100%)

Example: Sharpness: [26]

set -t {brightness}

Description: Sets a device's brightness value

Example: set -t 63

Arguments: **brightness** new brightness value

Response: **Brightness:** [Z]
Z Value (percentage from 0 to 100%)

Example: Brightness: [63]

set -r {redskew}

Description: Sets a device's red skew value

Example: set -r 47

Arguments: **redskew** new red skew value

Response: **Red Skew:** [Z]
Z Value (percentage from 0 to 100%)

Example: Red Skew: [47]

set -g {greenskew}

Description: Sets a device's green skew value
Example: set -t 88
Arguments: **greenskew** new green skew value
Response: **Green Skew:** [Z]
Z Value (percentage from 0 to 100%)
Example: Green Skew: [88]

set -b {blueskew}

Description: Sets a device's blue skew value
Example: set -t 11
Arguments: **blueskew** new blue skew value
Response: **Blue Skew:** [Z]
Z Value (percentage from 0 to 100%)
Example: Brightness: [11]

reset

Description: Resets the unit
Usage: reset
Options: -f Sets to factory default

help

Description: Get command list or command description
Usage: help <command>

<command> -?

Description: Get command list or command description
Usage: <command> -?
Example: get -?

6. Product Warranty Policy

Items Under Warranty – Company Policy

MuxLab guarantees its products to be free of defects in manufacturing and workmanship for the warranty period from the date of purchase. If this product fails to give satisfactory performance during this warranty period, MuxLab will either repair or replace this product at no additional charge, except as set forth below. Repair and replacement parts will be furnished on an exchange basis and will be either reconditioned or new. All replaced parts and products become the property of MuxLab. This limited warranty does not include repair services for damage to the product resulting from accident, disaster, misuse, abuse, or unauthorized modifications or normal decay of battery driven devices. Batteries, if included with the product, are not covered under this warranty.

Limited warranty service can be obtained by delivering the product during the warranty period to the authorized MuxLab dealer from whom you purchased the product, or by sending it to MuxLab. MuxLab will not accept any such product for repair without a Return Material Authorization (RMA) number issued by its Customer Service Department and a proof of purchase date. If this product is delivered to MuxLab by mail, you agree to assume risk of loss or damage in transit, to prepay shipping charges to the warranty service location, and to use the original shipping container or equivalent.

THE ABOVE LIMITED WARRANTY IS THE ONLY WARRANTY COVERING YOUR MUXLAB PRODUCT. THERE ARE NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

IF THIS PRODUCT IS NOT IN GOOD WORKING ORDER, YOUR SOLE REMEDY SHALL BE REPAIR OR REPLACEMENT AS PROVIDED FOR ABOVE. IN NO EVENT SHALL MUXLAB BE LIABLE TO YOU FOR ANY DAMAGES, INCLUDING ANY LOSS OF PROFITS, LOST SAVINGS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF OR INABILITY TO USE THIS PRODUCT, EVEN IF MUXLAB OR AN AUTHORIZED MUXLAB DEALER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES; NOR WILL MUXLAB BE LIABLE FOR ANY CLAIM BY ANY OTHER PARTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR CONSUMER PRODUCTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

Warranty Periods

Any product found to be defective within three (3) months of invoice, including one (1) month shelf life, may be returned for replacement by a new unit or a satisfactory repair within one (1) month of having been received by MuxLab. The customer must provide MuxLab with the serial number and proof of purchase of the defective unit being returned. All RMAs issued are subject to inspection by MuxLab, and will be returned to the customer if not properly packaged – units must be returned in their original container or equivalent. MuxLab will not accept any such product for repair without an authorization for its Technical Support department and without an RMA number issued by MuxLab's Customer Service department. For credit and replacement RMAs, the customer will be liable to pay the replacement invoice if defective products are not returned.

Products More than Six Months Old, Including Shelf Life

The defective unit must be returned prepaid to MuxLab, and the unit will be repaired. If repairing the unit is not possible, it will be replaced by an equivalent unit and returned to the customer within one (1) month of having been received by MuxLab. There is no charge for repair (parts and labor) during the full warranty period.

Products Defective and Not Under Warranty

MuxLab's policy is to repair and return any defective MuxLab products that are no longer under warranty. An amount of 25% of the unit's published list price at the time of purchase will be charged. The customer must issue a purchase order in order to cover repair costs.

Each unit will be returned to the customer within one (1) month of having been received by MuxLab. The defective unit must be returned prepaid to MuxLab. The repaired unit will be returned to the customer FOB MuxLab. The repaired unit has a 90-day warranty.

MuxLab

MuxLab Inc.
8495 Dalton Road
Mount Royal, Quebec
Canada H4T 1V5
Tel.: +1 (514) 905-0588 Fax: +1 (514) 905-0589
Toll Free (North America): 877 689-5228
URL: www.muxlab.com
E-mail: videoease@muxlab.com