


Specifications

Environment	Infrared (IR) control
Devices	TV Sets, STB, DVD, DVR, PVR, satellite receivers.
Supported IR Data Formats	NEC code, RC5 code, RC6 code, Grounding code, RCA Code, Zenith code and Sony 12-bit code.
Carrier Frequency	38 to 56KHz
IR Wavelength	940nm
Emitting Distance	5cm
Connectors	IR Emitter: 3.5mm (stereo) jack
Pin Configuration	Tip: +5VDC Ring: Data Sleeve: N.C. 
Cable Length	63" (1.6m)
Temperature	Operating: 0° to 40°C Storage: -25° to 80°C Humidity: Up to 95% non-condensing
Enclosure	Plastic
Dimensions	0.64" x 0.79" x 0.32" (16 x 20 x 8mm)
Weight	1oz (28g)
Regulatory	RoHS
Warranty	Two (2) years
Order Information	500990 IR Emitter, 1.6M

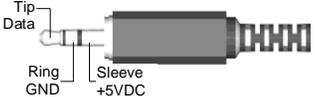

IR Emitter, 1.6M

500990

Quick Installation Guide

Overview

When installing an audio-video source device (DVD, satellite receiver, etc.) in a different location than the display device to which it is connected (TV, projector, etc.), it will often be useful to control that source remotely. For example, if a TV is located in one room, but the DVD to which it is connected is installed in another room (or even another floor), it will be difficult to control the DVD remotely.

To solve this problem, MuxLab has created an Infrared (IR) Emitter and Sensor pair that provides users with precisely this kind of remote control capability on select MuxLab products.

When used in conjunction with certain MuxLab products, including select MuxLab over IP Products that support IR functions, the IR Emitter (500990) provides source control

MuxLab

8495 Dalton Road, Mount Royal, Quebec, Canada. H4T 1V5

Tel: (514) 905-0588 Fax: (514) 905-0589

Toll Free (North America): (877) 689-5228

E-mail: videoease@muxlab.com URL: www.muxlab.com


by sending the IR signals to control the source. The Emitter is connected to the Active Transmitter and receives IR control signals from an Active Receiver device with a connected IR Sensor (500991) to receive IR control signals from a handheld remote control device.

Note: Not all MuxLab products supporting IR functionality are compatible with this particular sensor. MuxLab offers several IR sensor models, depending on the MuxLab product being used. Please reference the manual of the MuxLab product you are using to determine which IR Sensor is compatible.

Installation

Attaching an Emitter

Each Emitter has an adhesive layer on the bottom flat surface of the shell.

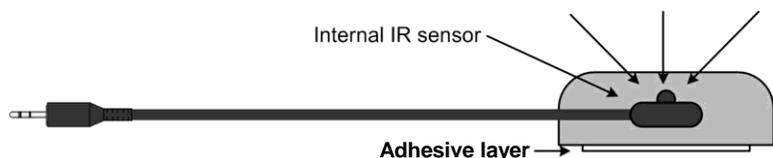


Simply peel off the adhesive protective cover and stick the IR Emitter to a stable surface, such as a cabinet. The IR sensor window is on the top shell of the IR Emitter. If you remove the Emitter for any reason, it may be necessary to replace the adhesive with a fresh piece of 2-sided tape to ensure proper adhesion.

The IR Emitter must be aligned with the IR Sensor of the equipment that will be control, and it cannot be farther than the maximum receiving distance (see specifications for more details).

Connecting a Sensor

Simply insert the stereo mini plug of the IR Emitter into the “IR Emitter” jack of a compatible MuxLab product that supports IR functions or IR transmission.

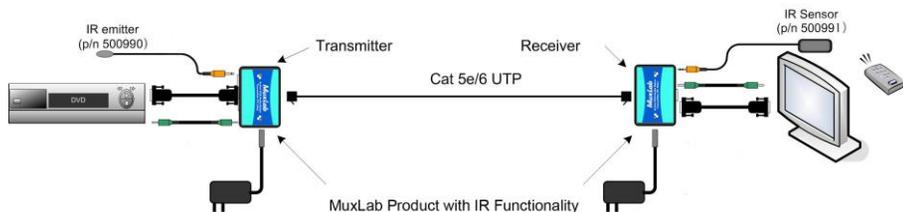

Troubleshooting

The following table describes some of the symptoms, probable causes and possible solutions in respect to the installation of the IR Emitter:

Symptom	Probable Cause	Possible Solutions
IR Not Functioning	Remote control not directed towards the IR Sensor	Make sure the IR Sensor is directed towards the remote
IR Not Functioning	IR Emitter not properly pointing at the source device	Make sure the IR Emitter is directed towards the sensor of the source device
IR Not Functioning	Interference from sunlight, fluorescent, neon or halogen lights	Place the IR equipment away from the interfering light
IR Not Functioning	Interference from RF radiation of television	Place the IR equipment away from the RF radiation

If you still cannot diagnose the problem, please call MuxLab Customer Technical Support at 877-689-5228 (toll-free in North America) or (+1) 514-905-0588 (International).